

## ADF pickup roller

- 1 Open the ADF cover (callout 1).
- 2 Pull the plastic tab (callout 2) to release the lower edge of the roller shield.

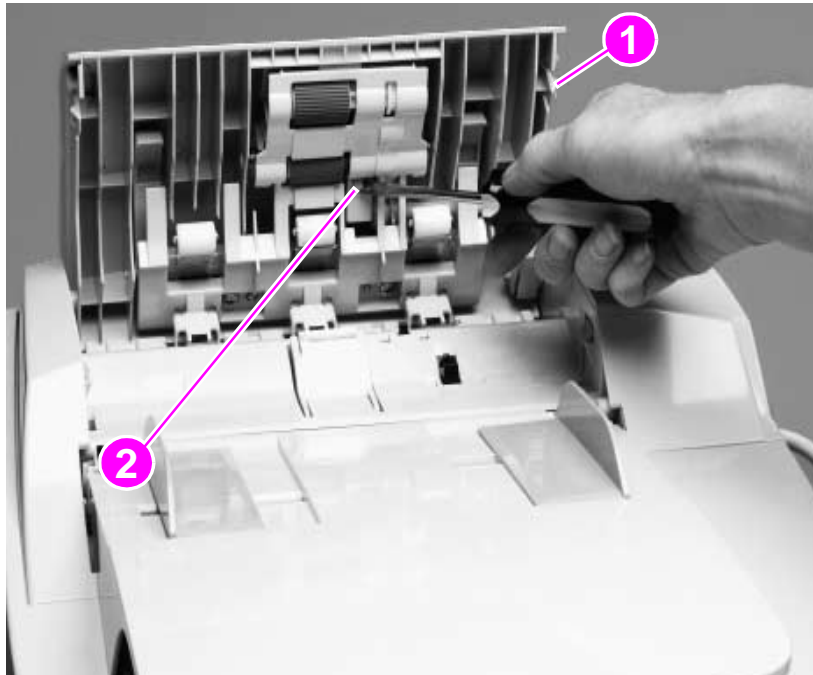


Figure 31.

### Release the roller shield

- 3 Release the roller shield from the two small pins (callout 3), and remove it from the product.


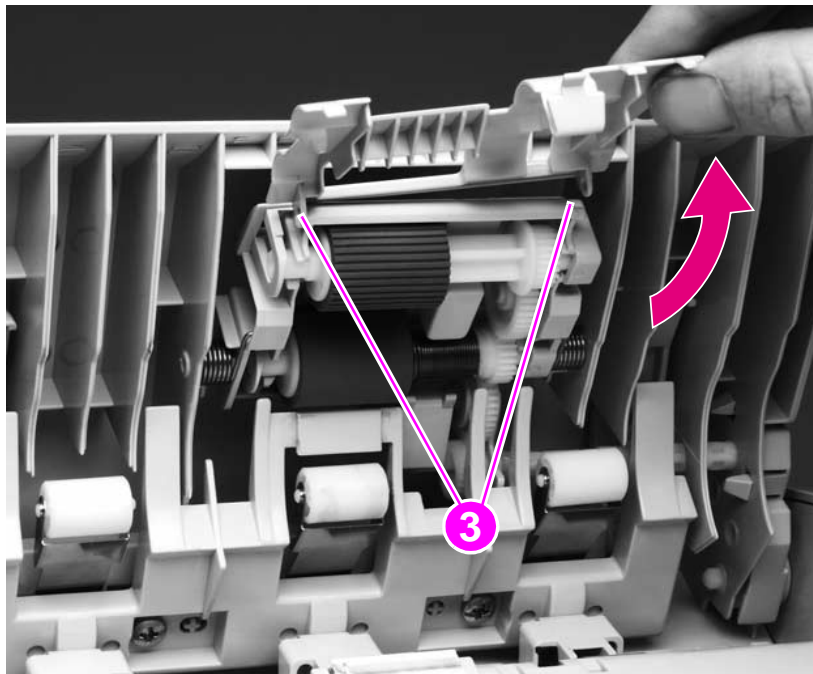


Figure 32.

### Remove the roller shield

- 4 Slide the roller toward the gear end. Gently pry the roller-shaft locking tab (callout 4) away from the roller. Remove the ADF pickup roller.

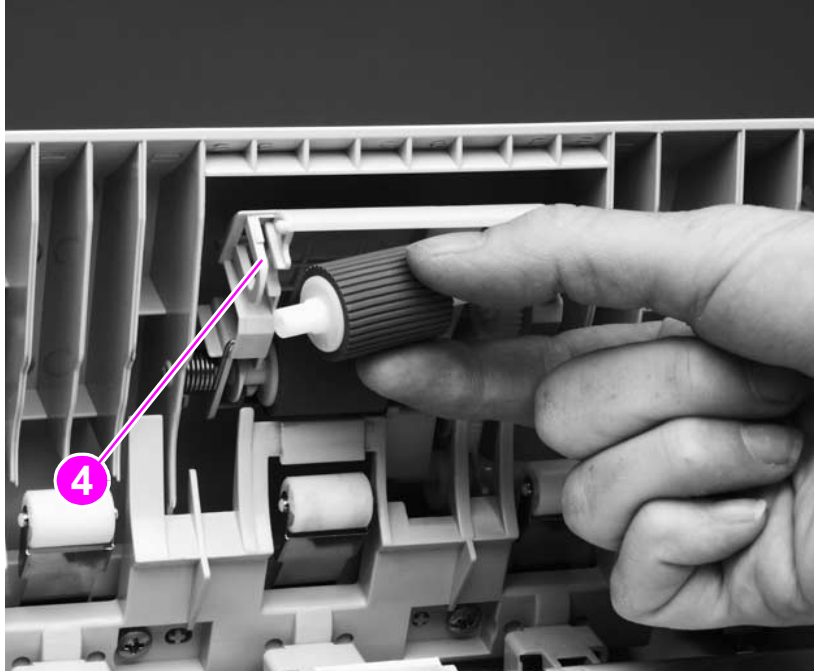


**Figure 33.** Remove the ADF pickup roller

**Hint** When replacing the roller, verify that the roller gear and drive gear are properly meshed.


## ADF separation pad

- 1 Open the ADF cover.
- 2 Press and release two separation locking tabs (callout 1; shown already released).
- 3 Rotate the separation pad until it is perpendicular to the product.
- 4 Release the separation-pad arms (callout 2) by gently pressing them toward the ADF cover.

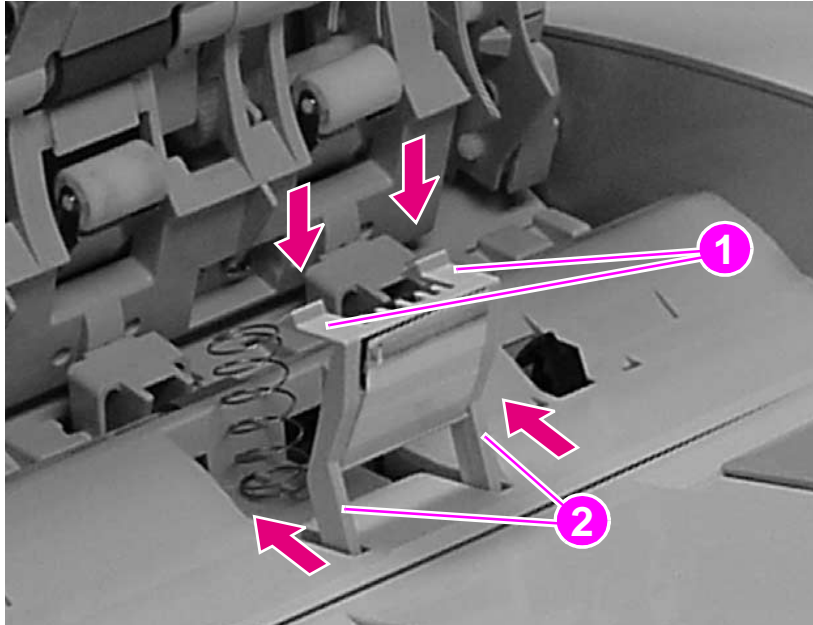

**Figure 35.** Remove the ADF separation pad


**Note** When replacing the separation pad, verify that the spring is firmly seated on its pedestal (callout 3).

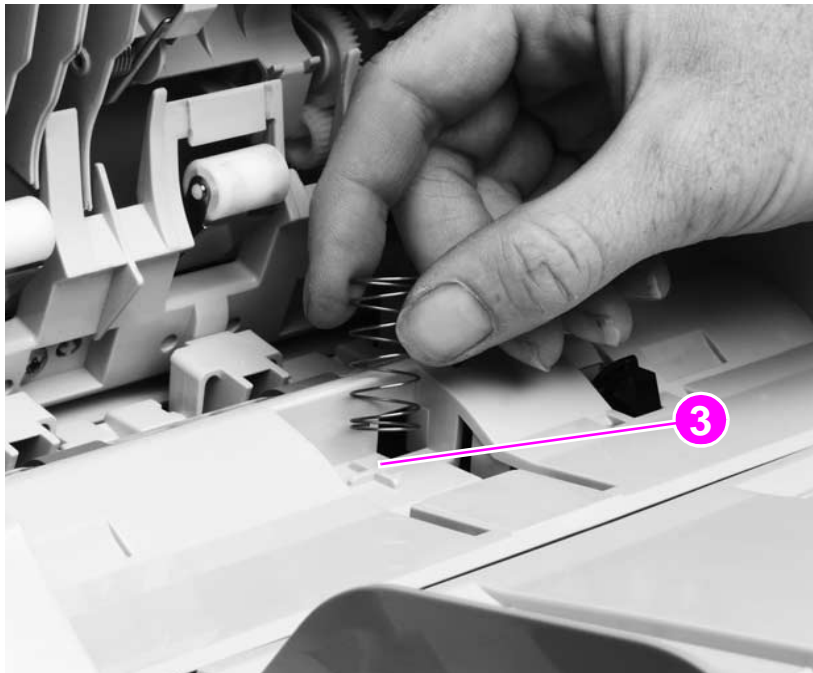

**Figure 36.** Replace the ADF separation pad spring

## ADF separation roller

- 1 Open the ADF cover, and remove the roller shield. See “ADF pickup roller” on page 74.
- 2 Slide the roller toward the gear end. Gently pry the roller-shaft locking tab (callout 1) away from the roller. Remove the ADF separation roller.

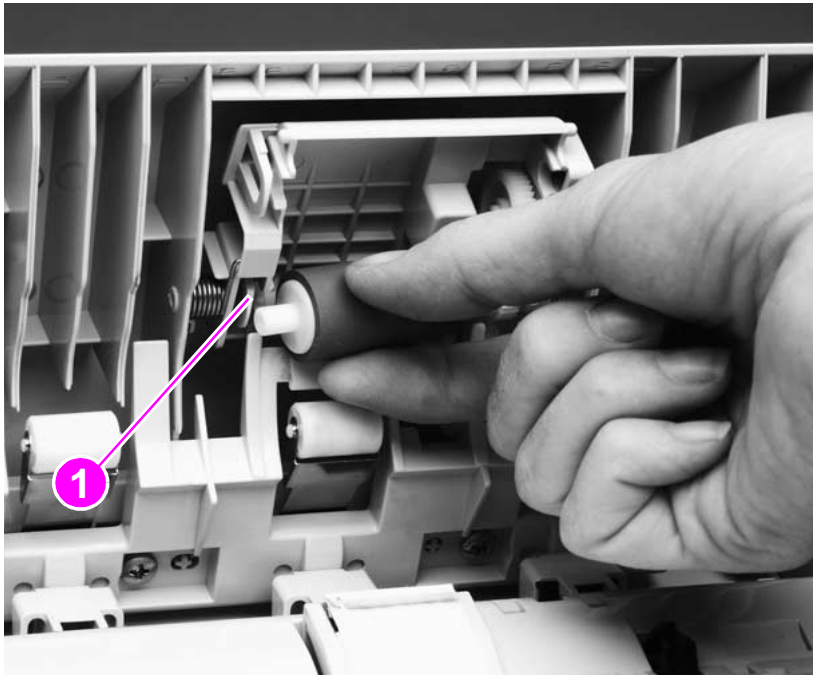

**Figure 34.** Remove the ADF separation roller

**Hint** When replacing the roller, verify that the roller gear and drive gear are properly meshed.