Internal components (4 of 7)

Figure 4-7 Internal components 4 of 7 18 (SR9) (J19) 20. (J78) *A02-Paper delivery assembly See Figure 4-16 20 20 *A04 *A01 20 (J63) 20 *A03 (FM2) (J65) Fuser assembly See Figure 4-17

Table 4-11 Internal components (4 of 7)

Ref	Description	Part number	Qty
4	Spring, tension	RU6-2235-000CN	4
5	Spring, tension	RU6-2376-000CN	1
6	Cartridge fan assembly	RM1-5499-000CN	1
8	Waste toner motor assembly	RM1-5605-000CN	1
9	Laser scanner kit (includes instructions and one scanner assy.)	CC493-67914	2
10	Position detect assembly	RM1-5500-000CN	1
11	Front light guide assembly	RM1-5492-000CN	1
12	Intermediate transfer belt kit (includes instructions, ITB, and T2 roller)	CC493-67909	1
18	Photo interrupter	WG8-5696-000CN	1

ENWW Internal components 445