



Figure 8-7 Internal components (2 of 3)

Table 8-9 Internal components (2 of 3)

Ref	Description	Part number	Qty
1	Rod, switch	RC1-0268-000CN	1
2	Guide, scanner cable	RC1-0340-020CN	1
3	Guide, scanner cable	RC1-0385-000CN	1
4	Gear, 18t	RU5-0045-020CN	1
5	Shaft, retard drive	RL1-0264-000CN	1
6	Sensor, top-bin-full/stack (PS 104/PS 107), LJ 4200/4300	WG8-5362-000CN	1
6	Sensor, stack (PS 107), LJ 4250/4350	WG8-5624-000CN	1
7	Gear, 23t	RU5-0040-000CN	1
8	Bushing	RC1-0206-000CN	1
9	Laser/scanner assembly (LJ 4200)	RM1-0045-000CN	1
9	Laser/scanner assembly (LJ 4250/4350)	RM1-1067-000CN	1
9	Laser/scanner assembly (LJ 4300)	RM1-0113-000CN	1
10	Bushing, feed shaft	RC1-0264-000CN	1
12	Cable, laser (LJ 4200/4300)	RG1-4212-000CN	1
12	Cable, laser (LJ 4250/4350)	RM1-1198-000CN	1
13	Screw, s, m3x8	XA9-1500-000CN	20
14	E-ring	XD9-0232-000CN	1
15	Screw, rs, m3x10	XA9-1559-000CN	6
16	Solenoid, tray 2 pickup (LJ 4200/4300)	RH7-5355-000CN	1
16	Solenoid, tray 2 pickup (LJ 4250/4350)	RK2-0269-000CN	1
17	Pickup-sensor cable assembly (LJ4200/4300)	RG1-4221-000CN	1
17	Pickup-sensor cable assembly (LJ4250/4350)	RM1-1181-000CN	1
18	Roller, paper-pickup	RM1-0036-000CN	1
19	Roller, paper-feed	RM1-0037-020CN	1
20	Holder, paper sensing	RC1-0208-030CN	1
21	Flag, paper sensing	RC1-0209-000CN	1
22	Guide, power-supply, front	RC1-0243-000CN	1
23	Arm, paper pickup (LJ 4200/4300)	RC1-0211-000CN	1
23	Arm, paper pickup (LJ 4250/4350)	RC1-3352-000CN	1
24	Holder, paper pickup arm	RC1-0212-000CN	1
25	Gear, 23t	RC1-0371-000CN	1
26	Plate, swing	RL1-0013-000CN	1
27	Spring, compression	RC1-0213-000CN	1
29	Guide, tray 2	RC1-0153-030CN	1

Ref	Description	Part number	Qty
31	Sheet, solenoid damper	RC1-0330-020CN	1
32A	Cable, feeder connector (LJ 4200/4300)	RG1-4223-000CN	1
32A	Cable, feeder connector (LJ 4250/4350)	RM1-1192-000CN	1
33	Kicker assembly	RL1-0015-000CN	1
35	Size-sensing assembly, tray 2	RM1-0041-020CN	1
36	Foot	RB1-8107-000CN	2
37	Guard, right-edge	RC1-0242-000CN	1
38	Guide, ECU, rear	RC1-0244-000CN	1
39	Guard, left-edge	RC1-0247-000CN	1
41	Screw, tapping, m3x6	XA9-1503-000CN	3
42	Cable, accessory interface	RM1-0042-000CN	1
43	Swing plate assembly	RM1-0043-020CN	1
44	Cable, sensor, top-bin-full (LJ 4200/4300)	RG1-4214-000CN	1
44	Cable, sensor, top-bin-full (LJ 4250/4350)	RM1-1189-000CN	1
45	Cable, envelope- feeder-connecting (LJ 4200/4300)	RG1-4224-000CN	1
45	Cable, envelope-feeder-connecting (LJ 4250/4350)	RM1-1193-000CN	1
49	Spring, torsion	RC1-0254-000CN	1
50	Spring, torsion	RC1-1923-000CN	1
51	Sensor, top-bin-full (PS104) (LJ 4200/4300)	WG8-5362-000CN	1
51	Sensor, stack (PS104) (LJ 4250/4350)	WG8-5624-000CN	1
52	Pickup drive assembly	RM1-0034-040CN	1
501	Screw, tapping, pan head, m4x10	XB4-7401-007CN	2
502	Screw, tapping, truss head, m3x8	XB4-7300-809CN	1
503	Screw, tapping, truss head, m4x8	XB4-7400-809CN	2