

Internal components

Internal components (1 of 5)

Figure 4-8 Internal components (1 of 5)

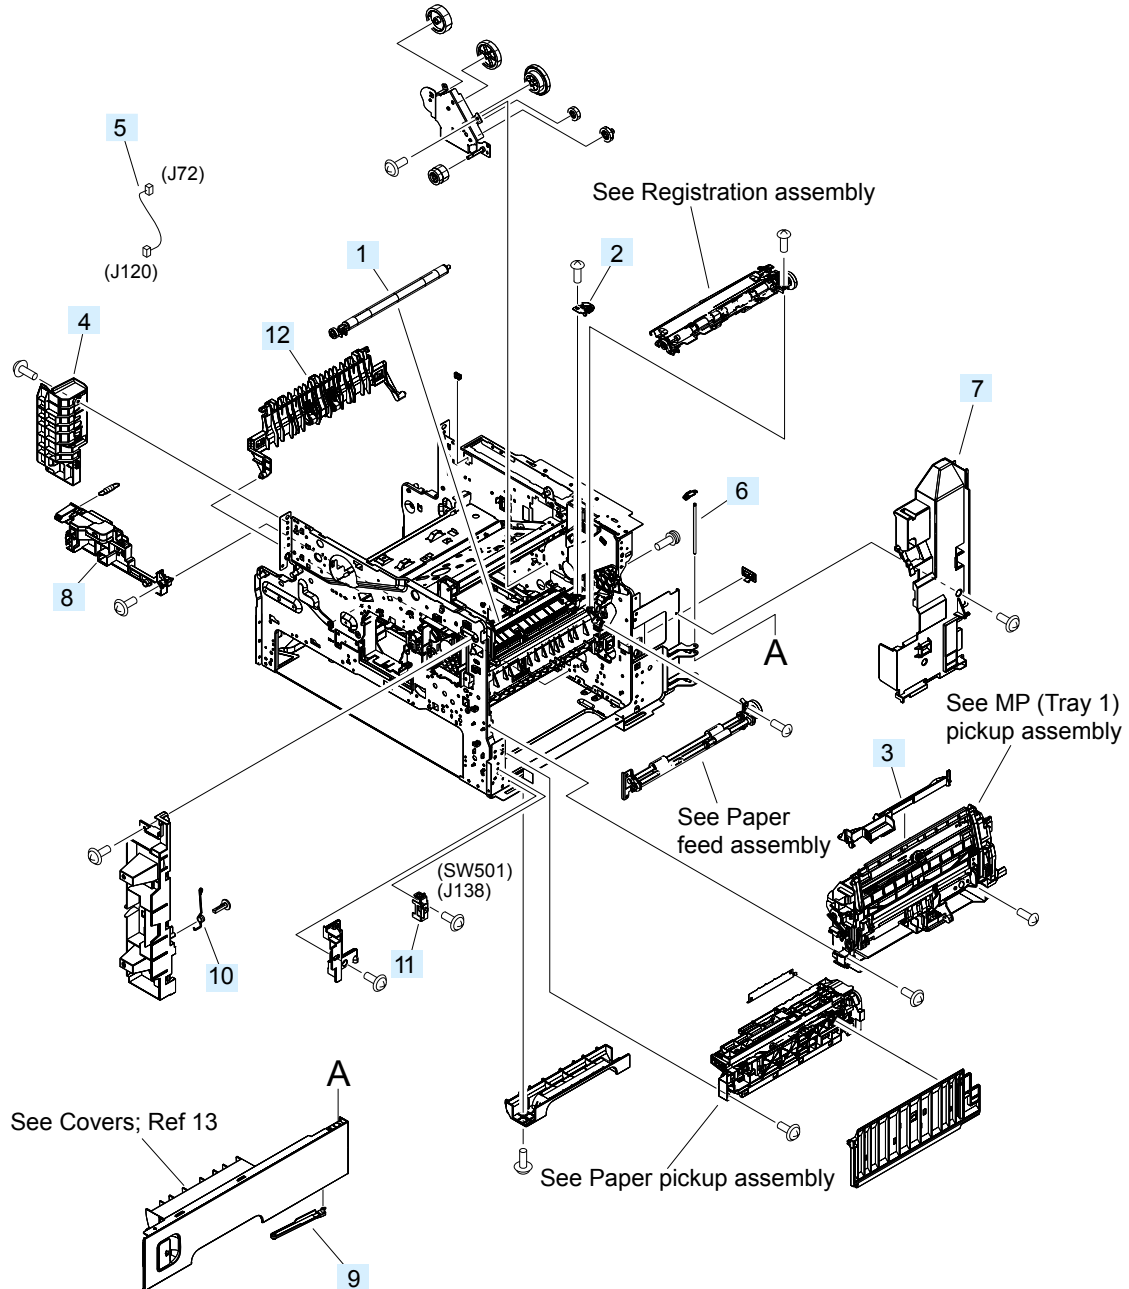


Table 4-8 Internal components (1 of 5)

Ref	Description	Part number	Qty
1	Transfer roller assembly	RM1-5462-000CN	1
2	Ground plate assembly	RM1-5461-000CN	1
3	Cover, environment	RL1-2831-000CN	1
4	Cover, front inner	RC2-7979-000CN	1
5	Cable, size detect	RM1-7179-000CN	1
6	Shaft, right-lower access door hinge	RU5-4142-000CN	1
7	Cover, MP (Tray 1) gear	RC2-7987-000CN	1
8	Lifter base assembly	RM1-5913-000CN	1
9	Link rod, lower-access door	RC1-2902-000CN	1
10	Spring, torsion	RC2-8085-000CN	1
11	Sensor, assembly right door	RM1-1045-000CN	1
12	Face-up open guide assembly	RM1-7389-000CN	1