



Clearing RFU Error Message

NOTE: Menu options vary between models - select all and only that apply.

1. Turn the printer power off.
2. Power on the printer and watch for the memory count to begin.
3. Hold down the **STOP** button when you see the memory counts begin. Continue holding down the STOP button until all three printer control-panel lights flash once and then remain on. This might take up to 10 seconds.
4. Press the **SELECT** (Checkmark/ OK) button and then the **MENU** Button.
5. Scroll down until you see "Clear All RFU Errors".
6. Press the Select (Checkmark/OK) button twice until the highlighted cursor is on the letter "C" in the word "Clear".
7. Scroll down until you see "Set Runmode to Manual".
8. Press the Select (Checkmark/OK) button once until the highlighted cursor is on the letter "R" in the word "Runmode".
9. Scroll down until you see "Set RFU Error Off"
10. Press the Select (Checkmark/OK) button twice until the highlighted cursor is on the letter "S" in the word "Set"
11. Power cycle the printer (off/on).