



Control panel calibration

HP M3027MFP/M3035MFP/M4345MFP/CM3530MFP CM4730MFP/M5035MFP/CM6030MFP/CM6040MFP/M9040MFP M9050MFP/HP 9250C Digital Sender

If the touch screen on the control panel is unresponsive or failing to in specific areas, follow these steps to calibrate it:

1. Turn the product Off.
2. Press and hold the number key (#) and the Clear key (©) while turning the product on. A dot will display in the upper left corner of the screen.
3. Release the # and C keys.
4. Touch the dot with a blunt object, such as a pencil eraser, and another dot will display in the lower right corner.
5. Touch that dot and wait for the product to continue the startup sequence.
6. If after performing a control panel calibration the issue persists, replace the control panel.

