



Photoconductor Kit Reset
E23x/E24x/E33x/E310/E460

Whenever you replace the photoconductor unit, you will also need to reset its page count. Failure to do this will cause the printer to display, or continue to display, a **Replace Photoconductor Kit** message and possibly stop printing.

IMPORTANT! The photoconductor page count should be reset **only** when a brand-new photoconductor kit installed. Resetting the page count without replacing the photoconductor kit could cause the photoconductor to operate beyond its intended life and thus create print quality issues.

1. With printer ON and READY
2. Open front cover
3. Press and Hold CANCEL button until the lights flash in a line sequence
4. Release the CANCEL button
5. Close front cover