

HP LaserJet M601/M602/M603/M604/M605/M606 Printer Perform preventive maintenance

To ensure optimum performance from the product, replace certain parts when the "Replace Maintenance Kit" message appears on the control-panel display. This message will appear every 225,000 prints.

The kit includes the following items:

- Fuser
- Transfer roller
- Plastic tool for removing the old transfer roller
- Eight feed rollers and four pickup rollers
- Installation instructions

The maintenance kit is a consumable item and is not covered under the original product warranty or under most extended warranties. Installing the maintenance kit is the customer's responsibility.

After a maintenance kit is installed, the maintenance-kit counter must be reset.

Reset the maintenance-kit counter

Perform this procedure only after a maintenance kit has been installed. Do not use this procedure to temporarily clear the "Replace Maintenance Kit" message.

- 1. At the product control panel, press the Home D button.
- 2. Open the following menus:
 - \circ Administration
 - Manage Supplies
 - Reset Supplies
 - New Maintenance Kit
- 3. Select the Yes option to reset the maintenance-kit counter.