



Lexmark™

# MB3442, MX331, MX431, XM1342 MFPs

---

**7019-235, -4xx**

## Service Manual

- [Start diagnostics](#)
- [Maintenance](#)
- [Safety and notices](#)
- [Index](#)

May 17, 2022

[www.lexmark.com](http://www.lexmark.com)

---

## Product information

Product name:

Lexmark MB3442dw, Lexmark MB3442i, Lexmark MX331adn, Lexmark MX431adn, Lexmark MX431adw, Lexmark XM1342 MFPs

Machine type:

7019

Model(s):

235, 4a6, 4b6, 486, 489

## Edition notice

May 17, 2022

**The following paragraph does not apply to any country where such provisions are inconsistent with local law:** LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

## Trademarks

Lexmark and the Lexmark logo are trademarks or registered trademarks of Lexmark International, Inc. in the United States and/or other countries.

All other trademarks are the property of their respective owners.

© 2020 Lexmark International, Inc.

All rights reserved.

P/N

# Table of contents

<b>Product information.....</b>	<b>2</b>
<b>Edition notice.....</b>	<b>2</b>
<b>Notices, conventions, and safety information.....</b>	<b>9</b>
Laser notice.....	9
Conventions.....	10
Safety information.....	11
<b>Change history.....</b>	<b>15</b>
Change history.....	15
<b>General information.....</b>	<b>19</b>
Printer model configurations.....	19
Supported paper sizes, types, and weights.....	19
Supported paper sizes.....	19
Supported paper types.....	22
Supported paper weights.....	22
Supported fax.....	23
Finding the printer serial number.....	24
Tools required for service.....	25
<b>Diagnostics and troubleshooting.....</b>	<b>27</b>
Troubleshooting precautions.....	27
Troubleshooting overview.....	29
Performing the initial troubleshooting check.....	29
Using Safe Mode.....	29
Fixing print quality issues.....	30
Gray background or toner fog check.....	30
Blank page check.....	31
Print is too dark check.....	33
Print is too light check.....	34
Paper curl check.....	37
Folded or wrinkled paper check.....	38
Solid black pages check.....	39
Skewed print check.....	41
Streaked vertical lines appear on prints during a print job check.....	43
Streaked vertical lines appear on prints during a copy job check.....	44

Horizontal light bands check.....	46
Vertical light bands check.....	47
Vertical dark bands check.....	48
Vertical dark streaks with print missing check .....	49
White streaks and voided areas check .....	50
Clipped pages or images check.....	51
Incorrect margins on prints check .....	53
Toner rubs off check.....	53
Toner specks appear on prints during a print job check .....	54
Toner specks appear on prints during a copy job check.....	56
Repeating defects check.....	57
Paper jams.....	58
200 paper jams.....	58
202 paper jams.....	65
232 paper jams .....	71
242 paper jams .....	73
280–295 paper jams.....	73
User attendance messages.....	77
29-33 user attendance messages .....	77
4y user attendance messages.....	79
8y user attendance messages.....	83
Printer hardware errors.....	85
111 errors .....	85
121 errors.....	87
126 errors.....	89
140 errors.....	90
162 errors.....	91
6yy errors.....	93
84y errors .....	97
Procedure before starting the 9yy service checks .....	103
900 errors .....	104
912 errors.....	108
938–992 errors.....	111
Other symptoms.....	112
Base printer symptoms .....	112
Fax symptoms .....	114
<b>Service menus.....</b>	<b>127</b>
Understanding the printer control panel.....	127
Using the control panel .....	127
Understanding the status of the indicator light.....	127
Diagnostics menu.....	128
Entering the Diagnostics Menu .....	128

Reports .....	128
Advanced Print Quality Samples .....	129
Format Fax Storage .....	129
Event Log .....	129
Input tray quick print .....	130
Output bin quick feed .....	130
Printer Setup .....	130
Printer diagnostics & adjustments .....	132
Scanner Diagnostics .....	134
Config Menu .....	135
Entering the Config Menu .....	135
Config Menu .....	136
Service Engineer (SE) menu .....	139
Entering the SE Menu .....	139
General SE Menu .....	139
Network SE Menu .....	139
Scanner SE Menu .....	140
Fax SE Menu .....	140
EWS SE Menu .....	141
Entering invalid engine mode .....	141
Entering Recovery mode .....	142
<b>Parts removal .....</b>	<b>145</b>
Data security notice .....	145
Removal precautions .....	145
Handling ESD-sensitive parts .....	147
Critical information for controller board or control panel replacement .....	148
Restoring the printer configuration .....	149
Updating the printer firmware .....	151
Ribbon cable connectors .....	152
Low insertion force (LIF) connector .....	152
Removal procedures .....	153
Left side removals .....	154
Left cover removal .....	154
Main drive gears removal .....	155
Imaging unit coupling removal .....	159
Pick roller clutch removal .....	160
Left front door link removal .....	161
Right side removals .....	163
Right cover removal .....	163
Controller board removal .....	165
LVPS removal .....	167
HVPS removal .....	168

Sensor (MPF paper present) removal .....	170
Right front door link removal.....	171
MPF solenoid cable removal.....	171
Main fan removal.....	172
Speaker removal .....	174
<b>Front removals.....</b>	<b>174</b>
Control panel removal.....	174
Upper front cover removal.....	175
Front door removal .....	176
Transfer roller removal.....	177
MPF pick roller removal.....	178
Pick separator roller removal .....	179
Sensor (input) removal .....	179
<b>Rear removals.....</b>	<b>181</b>
Rear door removal.....	181
Fuser removal.....	182
<b>Top removals.....</b>	<b>182</b>
Printhead removal .....	182
Redrive removal.....	184
Bin full sensor actuator removal.....	185
<b>Bottom removals.....</b>	<b>187</b>
Duplex guide removal.....	187
<b>ADF and scanner removals.....</b>	<b>188</b>
ADF cover removal .....	188
ADF tray removal.....	189
ADF separator pad removal .....	189
ADF and scanner removal .....	189
Scanner pivot arm removal.....	194
Fax card removal.....	195
<b>Component locations.....</b>	<b>197</b>
Printer configuration.....	197
Controller board connectors.....	197
<b>Maintenance.....</b>	<b>205</b>
Cleaning printer parts.....	205
Cleaning the printer .....	205
Cleaning the scanner .....	205
<b>Parts catalog.....</b>	<b>208</b>
Legend.....	208
Assembly 1: Covers.....	209

Assembly 2: Control panel.....	211
Assembly 3: Electronics.....	213
Assembly 4: Gears.....	217
Assembly 5: Paper path.....	219
Assembly 6: 550-sheet optional tray.....	221
Assembly 7: ADF and scanner.....	223
Assembly 8: Miscellaneous.....	225
<b>Printer specifications.....</b>	<b>227</b>
Power consumption.....	227
Product power consumption .....	227
Sleep Mode.....	227
Hibernate Mode.....	228
Off mode .....	228
Total energy usage .....	228
Applicability of Regulation (EU) 2019/2015 and (EU) 2019/2020.....	228
Selecting a location for the printer.....	228
Noise emission levels.....	229
Temperature information.....	229
<b>Theory of operation.....</b>	<b>231</b>
POR sequence.....	231
Print cycle operation.....	231
Print engine layout .....	231
Print cycle .....	232
Printer operation.....	238
Printer sections .....	238
Printer paper path .....	239
Printer paper path sensors .....	241
Main drive .....	242
Tray drive .....	243
ADF theory.....	244
ADF paper path.....	244
<b>Index.....</b>	<b>245</b>
<b>Part number index.....</b>	<b>249</b>
<b>Part name index.....</b>	<b>251</b>





# Notices, conventions, and safety information

## Laser notice

The printer is certified in the U.S. to conform to the requirements of DHHS 21 CFR, Chapter I, Subchapter J for Class I (1) laser products, and elsewhere is certified as a Class I laser product conforming to the requirements of IEC 60825-1: 2014.

Class I laser products are not considered to be hazardous. The laser system and printer are designed so there is never any human access to laser radiation above a Class I level during normal operation, user maintenance, or prescribed service conditions. The printer has a non-serviceable printhead assembly that contains a laser with the following specifications:

Class: IIIb (3b) AlGaInP

Nominal output power (milliwatts): 25

Wavelength (nanometers): 775–800

## Avis relatif à l'utilisation du laser

Cette imprimante est certifiée conforme aux exigences de la réglementation des Etats-Unis relative aux produits laser de classe I (1) (DHHS 21 CFR, Chapitre I, Sous-chapitre J). Pour les autres pays, elle est certifiée conforme aux exigences des normes CEI 60825-1:2014 relatives aux produits laser de classe I.

Les produits laser de classe I ne sont pas considérés comme dangereux. Le système laser ainsi que l'imprimante ont été conçus de manière à ce que personne ne soit jamais exposé à des radiations laser dépassant le niveau de classe I dans le cadre d'un fonctionnement normal, de l'entretien par l'utilisateur ou de la maintenance. L'imprimante dispose d'un ensemble de têtes d'impression non réparable contenant un laser doté des caractéristiques suivantes :

Class: IIIb (3b) AlGaInP

Nominal output power (milliwatts): 25

Wavelength (nanometers): 775–800

## Aviso de láser

Esta impresora se ha certificado en EE.UU. cumpliendo con los requisitos de DHHS 21 CFR, capítulo I, subcapítulo J para los productos láser de Clase I (1) y en otros países está certificada como un producto láser de Clase I de acuerdo con los requisitos de IEC 60825-1: 2014.

Los productos láser de Clase I no se consideran peligrosos. El sistema láser y la impresora se han diseñado para que el ser humano no acceda nunca a las radiaciones láser por encima del nivel de Clase I durante su uso normal, ni en tareas de mantenimiento o intervenciones de servicio técnico prescritas. El conjunto de cabezal de impresión de la impresora no se puede reparar y contiene un láser con las siguientes especificaciones:

Class: IIIb (3b) AlGaInP

Nominal output power (milliwatts): 25

Wavelength (nanometers): 775–800

## Laser-Hinweis

Der Drucker wurde in den USA zertifiziert und entspricht den Anforderungen der Vorschriften DHHS 21 CFR Kapitel I für Laserprodukte der Klasse I (1), andernorts ist er als Laserprodukt der Klasse I zertifiziert, das den Anforderungen von IEC 60825-1 entspricht: 2014.

Laserprodukte der Klasse I werden nicht als gefährlich betrachtet. Das Lasersystem und der Drucker sind so konstruiert, dass unter normalen Betriebsbedingungen, bei der Wartung durch den Benutzer oder bei den vorgeschriebenen Wartungsbedingungen Menschen keiner Laserstrahlung ausgesetzt sind, die die Werte für Klasse I überschreitet. Der Drucker verfügt über eine Druckkopfeinheit, die nicht gewartet werden kann und mit einem Laser mit den folgenden Spezifikationen ausgestattet ist.

Class: IIIb (3b) AlGaInP

Nominal output power (milliwatts): 25

Wavelength (nanometers): 775–800






## Conventions

**Note:** A *note* identifies information that could help you.

**Warning:** A *warning* identifies something that could damage the product hardware or software.

**CAUTION:** A *caution* indicates a potentially hazardous situation that could injure you.

Different types of caution statements include:

-  **CAUTION—POTENTIAL INJURY:** Indicates a risk of injury.
-  **CAUTION—SHOCK HAZARD:** Indicates a risk of electrical shock.
-  **CAUTION—HOT SURFACE:** Indicates a risk of burn if touched.
-  **CAUTION—TIPPING HAZARD:** Indicates a crush hazard.
-  **CAUTION—PINCH HAZARD:** Indicates a risk of being caught between moving parts.





## Conventions


**Remarque :** Une *Remarque* fournit des informations pouvant vous être utiles.

**Avertissement :** Un *Avertissement* signale un danger susceptible d'endommager le logiciel ou le matériel.

**ATTENTION :** La mention *Attention* vous signale un risque de blessure corporelle.

Il existe différentes mises en garde :

-  **ATTENTION—RISQUE DE BLESSURE :** Signale un risque de blessure.
-  **ATTENTION—RISQUE D'ELECTROCUTION :** Signale un risque d'électrocution.
-  **ATTENTION—SURFACE CHAUDE :** Signale un risque de brûlure de contact.
-  **ATTENTION—RISQUE DE BASCULEMENT :** Signale un risque d'écrasement.

 **ATTENTION : RISQUE DE PINCEMENT :** Signale un risque de pincement entre des pièces mobiles.

## Convenciones

**Nota:** Las *notas* señalan información que puede serle útil.


**Aviso:** Las *advertencias* indican algo que podría dañar el software o el hardware del producto.


**PRECAUCIÓN:** Las *precauciones* indican una situación de posible peligro que puede implicar lesiones para el usuario.

Estos son los tipos de avisos de precaución que existen:

 **PRECAUCIÓN: POSIBLES DAÑOS PERSONALES:** Indica que existe riesgo de lesiones.

 **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Indica que existe riesgo de descarga eléctrica.

 **PRECAUCIÓN: SUPERFICIE CALIENTE:** Indica que existe riesgo de sufrir quemaduras por contacto.

 **PRECAUCIÓN: RIESGO DE CAÍDA:** Indica que existe peligro de aplastamiento.

 **PRECAUCIÓN: PELIGRO DE ATRAPAMIENTO:** Existe riesgo de atrapamiento entre las piezas en movimiento.

## Konventionen

**Hinweis:** Ein *Hinweis* enthält nützliche Informationen.


**Warnung:** Durch eine *Warnung* werden Sie auf einen Umstand hingewiesen, durch den die Produkthardware oder -software beschädigt werden könnte.

**VORSICHT:** *Vorsicht* weist auf eine mögliche gefährliche Situation hin, die ein Verletzungsrisiko birgt.


Verschiedene Vorsichtshinweise:

 **VORSICHT – MÖGLICHE VERLETZUNGSGEFAHR** Weist auf ein Verletzungsrisiko hin.

 **VORSICHT – STROMSCHLAGGEFAHR:** Weist auf das Risiko eines elektrischen Schlags hin.

 **VORSICHT – HEISSE OBERFLÄCHE:** Weist auf das Risiko von Verbrennungen bei Berührung hin.


 **VORSICHT – KIPPGEFAHR:** Weist auf Quetschgefahr hin.


 **VORSICHT – QUETSCHGEFAHR:** Weist auf das Risiko hin, zwischen beweglichen Komponenten eingequetscht zu werden.


## Safety information


- The safety of this product is based on testing and approvals of the original design and specific components. The manufacturer is not responsible for safety in the event of use of unauthorized replacement parts.
- The maintenance information for this product has been prepared for use by a professional service person and is not intended to be used by others.


- There may be an increased risk of electrical shock and personal injury during disassembly and servicing of this product. Professional service personnel should understand this risk and take necessary precautions.


 **CAUTION—SHOCK HAZARD:** When you see this symbol on the product, there is a danger from hazardous voltage in the area of the product where you are working. Unplug the product before you begin, or use caution if the product must receive power in order to perform the task.


 **CAUTION—POTENTIAL INJURY:** The lithium battery in this product is not intended to be replaced. There is a danger of explosion if a lithium battery is incorrectly replaced. Do not recharge, disassemble, or incinerate a lithium battery. Discard used lithium batteries according to the manufacturer's instructions and local regulations.

 **CAUTION—POTENTIAL INJURY:** To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

 **CAUTION—POTENTIAL INJURY:** To avoid the risk of fire or electrical shock, use only the power cord provided with this product or the manufacturer's authorized replacement.


 **CAUTION—POTENTIAL INJURY:** Do not use this product with extension cords, multioutlet power strips, multioutlet extenders, or UPS devices. The power capacity of these types of accessories can be easily overloaded by a laser printer and may result in a risk of fire, property damage, or poor printer performance.


 **CAUTION—POTENTIAL INJURY:** Only a Lexmark Inline Surge Protector that is properly connected between the printer and the power cord provided with the printer may be used with this product. The use of non-Lexmark surge protection devices may result in a risk of fire, property damage, or poor printer performance.


 **CAUTION—POTENTIAL INJURY:** If the printer weight is greater than 20 kg (44 lb), then it may require two or more people to lift it safely.





## Consignes de sécurité

- La sécurité de ce produit est basée sur des tests et certifications de sa conception d'origine et de ses composants spécifiques. Le fabricant décline toute responsabilité en cas d'utilisation de pièces de rechange non autorisées.
- Les informations de maintenance de ce produit sont destinées à des professionnels qualifiés et ne sont pas conçues pour être utilisées par d'autres personnes.
- Il existe un risque potentiel de choc électrique et de blessures lors du démontage et de la maintenance de ce produit. Le personnel professionnel de maintenance doit comprendre les risques et prendre les précautions nécessaires.






 **ATTENTION—RISQUE D'ELECTROCUTION :** Ce symbole indique un danger lié à des niveaux de tension dangereux dans la zone du produit à manipuler. Débranchez le produit avant de commencer, ou agissez avec prudence si le produit doit être alimenté pour effectuer l'opération.


 **ATTENTION—RISQUE DE BLESSURE :** La batterie lithium de ce produit n'est pas destinée à être remplacée. Si vous ne respectez pas les instructions de remplacement de la batterie, vous risquez de provoquer une explosion. Ne rechargez pas, ne désassemblez pas et ne brûlez pas la batterie au lithium. Mettez les batteries lithium usagées au rebut selon les instructions du fabricant et les réglementations locales.

 **ATTENTION—RISQUE DE BLESSURE :** Pour éviter tout risque d'électrocution ou d'incendie, branchez le câble d'alimentation directement à une prise électrique répondant aux exigences requises et correctement mise à la terre, proche du produit et facile d'accès.

-  **ATTENTION—RISQUE DE BLESSURE** : Pour éviter tout risque d'incendie ou d'électrocution, utilisez uniquement le câble d'alimentation fourni avec ce produit ou un câble de remplacement autorisé par le fabricant.
-  **ATTENTION—RISQUE DE BLESSURE** : Ce produit ne doit pas être utilisé avec des rallonges, des barres multiprises, des rallonges multiprises ou des périphériques UPS. La capacité de ces types d'accessoires peut être facilement dépassée par une imprimante laser, d'où un risque de dégâts matériels, d'incendie ou de performances d'impression amoindries.
-  **ATTENTION—RISQUE DE BLESSURE** : Utilisez uniquement un parasurtenseur correctement raccordé à l'imprimante et au câble d'alimentation fourni avec la machine. L'utilisation de parasurtenseurs non fabriqués par Lexmark comporte un risque d'incendie et de dégâts matériels, et peut amoindrir les performances de l'imprimante.
-  **ATTENTION—RISQUE DE BLESSURE** : Si votre imprimante pèse plus de 20 kg (44 lb), l'intervention d'au moins deux personnes est nécessaire pour la soulever sans risque.

## Información de seguridad


- La seguridad de este producto se basa en las pruebas y comprobaciones del diseño original y los componentes específicos. El fabricante no se hace responsable de la seguridad en caso de uso de piezas de repuesto no autorizadas.
  - La información de mantenimiento de este producto se ha preparado para su uso por parte de un profesional de asistencia técnica y no está diseñada para su uso por parte de otros usuarios.
  - Es posible que haya un mayor riesgo de descarga eléctrica y daños personales durante el desmontaje y el mantenimiento de este producto. El personal de asistencia profesional debe conocer este riesgo y tomar las precauciones necesarias.
-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Cuando vea este símbolo en el producto, existe peligro de tensiones peligrosas en el área del producto en la que está trabajando. Desconecte el producto antes de empezar o tenga cuidado si el producto debe recibir alimentación a fin de realizar la tarea.
  -  **PRECAUCIÓN: POSIBLES DAÑOS PERSONALES:** La batería de litio de este producto no debe reemplazarse. Existe riesgo de explosión si se sustituye incorrectamente una batería de litio. No recargue, desmonte ni incinere una batería de litio. Deseche las baterías de litio usadas según las instrucciones del fabricante y las normativas locales.
  -  **PRECAUCIÓN: POSIBLES DAÑOS PERSONALES:** Para evitar el riesgo de incendio o descarga eléctrica, conecte el cable de alimentación a una toma de corriente debidamente conectada a tierra con la potencia adecuada que se encuentre cerca del dispositivo y resulte fácilmente accesible.
  -  **PRECAUCIÓN: POSIBLES DAÑOS PERSONALES:** Para evitar el riesgo de incendio o descarga eléctrica, utilice exclusivamente el cable de alimentación que se suministra junto con este producto o el repuesto autorizado por el fabricante.
  -  **PRECAUCIÓN: POSIBLES DAÑOS PERSONALES:** No utilice este producto con cables alargadores, regletas de varias tomas, cables alargadores de varias tomas o sistemas de alimentación ininterrumpida. La potencia de este tipo de accesorios puede sobrecargarse fácilmente si se utiliza una impresora láser, lo que puede dar lugar a que el rendimiento de la impresora sea bajo, a daños materiales o a posibles incendios.


 **PRECAUCIÓN: POSIBLES DAÑOS PERSONALES:** Solo debe usarse con este producto un protector de sobretensión insertable Lexmark debidamente conectado entre la impresora y el cable de alimentación que con ella se suministra. El uso de protectores de sobretensión de marcas distintas a Lexmark puede dar lugar a que el rendimiento de la impresora sea bajo, a daños materiales o a posibles incendios.


 **PRECAUCIÓN: POSIBLES DAÑOS PERSONALES:** si el peso de la impresora es superior a 20 kg (44 lb), pueden ser necesarias dos o más personas para levantarla de forma segura.


## Sicherheitshinweise


- Die Sicherheit dieses Produkts basiert auf Tests und Zulassungen des Originaldesigns und der spezifischen Komponenten. Sofern nicht autorisierte Ersatzteile eingesetzt werden, übernimmt der Hersteller keinerlei Verantwortung in Bezug auf die Sicherheit dieses Produkts.
- Die Wartungsinformationen für dieses Produkt wurden für ausgebildete Servicemitarbeiter zusammengestellt und dürfen nicht von anderen verwendet werden.
- Möglicherweise besteht bei der Demontage und Wartung dieses Produkts eine erhöhte Stromschlag- und Verletzungsgefahr. Ausgebildete Servicemitarbeiter sollten sich dieser Gefahr bewusst sein und die notwendigen Vorsichtsmaßnahmen ergreifen.


 **VORSICHT – STROMSCHLAGGEFAHR:** Wenn Sie dieses Symbol sehen, besteht eine Gefahr durch gefährliche Spannungen in dem Produktbereich, in dem Sie arbeiten. Trennen Sie das Produkt von seiner Stromverbindung, bevor Sie beginnen, oder gehen Sie vorsichtig vor, wenn das Produkt für die Durchführung der Aufgabe mit Strom versorgt werden muss.

 **VORSICHT – MÖGLICHE VERLETZUNGSGEFAHR** Die Lithiumbatterie in diesem Produkt darf nicht ausgetauscht werden. Wird eine Lithiumbatterie nicht ordnungsgemäß ausgetauscht, besteht Explosionsgefahr. Lithiumbatterien dürfen auf keinen Fall wieder aufgeladen, auseinander genommen oder verbrannt werden. Befolgen Sie zum Entsorgen verbrauchter Lithiumbatterien die Anweisungen des Herstellers und die örtlichen Bestimmungen.

 **VORSICHT – MÖGLICHE VERLETZUNGSGEFAHR** Um Feuer- und Stromschlaggefahr zu vermeiden, schließen Sie das Netzkabel direkt an eine ordnungsgemäß geerdete Steckdose an, die sich in der Nähe des Geräts befindet und leicht zugänglich ist.

 **VORSICHT – MÖGLICHE VERLETZUNGSGEFAHR** Um das Risiko eines Feuers oder elektrischen Schlags zu vermeiden, verwenden Sie ausschließlich das diesem Produkt beiliegende Netzkabel bzw. ein durch den Hersteller zugelassenes Ersatzkabel.

 **VORSICHT – MÖGLICHE VERLETZUNGSGEFAHR** Verwenden Sie das Produkt nicht mit Verlängerungskabeln, Mehrfachsteckdosen, Mehrfachverlängerungen oder Geräten für unterbrechungsfreie Stromversorgung. Die Belastbarkeit solcher Zubehörteile kann durch Laserdrucker schnell überschritten werden, was zu Brandgefahr, Beschädigung von Eigentum oder einer eingeschränkten Druckerleistung führen kann.

 **VORSICHT – MÖGLICHE VERLETZUNGSGEFAHR** Mit diesem Produkt darf nur ein Lexmark Inline Surge Protector verwendet werden, der vorschriftsgemäß zwischen dem Drucker und dem mitgelieferten Netzkabel angeschlossen ist. Die Verwendung von nicht von Lexmark stammenden Überspannungsschutzgeräten kann zu Brandgefahr, Beschädigung von Eigentum oder einer eingeschränkten Druckerleistung führen.

 **VORSICHT – MÖGLICHE VERLETZUNGSGEFAHR** Wenn der Drucker mehr als 20 kg wiegt, sind zum sicheren Anheben mindestens zwei Personen notwendig.

# Change history

## Change history

### May 17, 2022

- Updated the following topics in the Diagnostics and troubleshooting chapter:
  - 29-33 user attendance messages. See [“29–33 user attendance messages” on page 77](#).
  - 4y user attendance messages. See [“41-43 user attendance messages” on page 79](#).
  - 8y user attendance messages. See [“80-88 user attendance messages” on page 83](#).
- Added the Restoring the printer configuration topic in the Parts removal chapter. See [“Restoring the printer configuration” on page 149](#).
- Updated the description of PN 41X2597 to Scanner with fax card (MX331) (simplex ADF) in the Parts catalog chapter. See [“ADF and scanner” on page 223](#).

### April 6, 2022

- Added PN 41X4471 in the Gears assembly and illustration of the Parts catalog chapter. See [“Gears” on page 217](#).

### February 3, 2022

- Updated the Controller board removal topic in the Parts removal chapter. See [“Controller board removal” on page 165](#).

### November 18, 2021

- Added PN 41X4273 in the Electronics assembly of the Parts catalog chapter. See [“Electronics” on page 213](#).

### October 26, 2021

- Updated the 900 error service check topic in the Diagnostics and troubleshooting chapter. See [“900 error service check” on page 104](#).
- Updated the description of PN 41X2580 and added PN 41X4207 in the Parts catalog chapter. See [“Covers” on page 209](#).
- Added the Applicability of Regulation (EU) 2019/2015 and (EU) 2019/2020 topic in the Printer specifications chapter.

### September 14, 2021

- Added the Sensor (input) removal topic in the Parts removal chapter. See [“Sensor \(input\) removal” on page 179](#).
- Added PN 41X1083 in the Electronics assembly of the Parts catalog chapter. See [“Electronics” on page 213](#).

## August 25, 2021

- Updated the illustration and added the following PNs in the Paper path assembly of Parts catalog chapter. See [“Paper path” on page 219](#).
  - 41X4195
  - 41X4196

## July 21, 2021

- Changed PN 41X2589 to PN 41X2598 in the notes in assembly 7 of the Parts catalog chapter. See [“ADF and scanner” on page 223](#).

## June 24, 2021

- Added the 900 error messages topic in the Diagnostics and troubleshooting chapter. See [“900 error messages” on page 104](#).
- Added the 900 error service check topic in the Diagnostics and troubleshooting chapter. See [“900 error service check” on page 104](#).

## May 3, 2021

- Updated the following removal topics in the Parts removal chapter:
  - Controller board removal
  - ADF and scanner removal
- Removed the Sensor (front door interlock) removal topic in the Parts removal chapter.
- Replaced PN 41X2391 with PN 41X2425 in the Parts catalog chapter. See [“Gears” on page 217](#).
- Updated the description for the following PNs in the Parts catalog chapter. See [“Electronics” on page 213](#) and [“ADF and scanner” on page 223](#).
  - 41X2975
  - 41X2660
  - 41X2976
  - 41X2661
  - 41X2977
  - 41X2598
  - 41X2980

## March 23, 2021

- Added the XM1342 printer model.
- Updated the Fax card removal topic in the Parts removal chapter.
- Updated the following assembly topics in the Parts catalog chapter:
  - Covers
  - Electronics
  - ADF and scanner
  - Miscellaneous
- Updated the Controller board connectors topic in the Component locations chapter.
- Added PN 41X2929 in the Parts catalog chapter.



## February 16, 2021

- Added the MB3442i printer model in the Printer model configurations topic of the General information chapter.
- Added the following topics in the General information chapter:
  - Supported fax
  - Finding the printer serial number
- Added the following topics in the Diagnostics and troubleshooting chapter:
  - Fax symptoms
  - Fax error log codes
  - Modem/fax card service check
  - Cannot set up etherFAX
  - Cannot send or receive faxes using etherFAX
  - Fax transmission service check
  - Fax reception service check
  - Lost connection to HTTPS fax server when using etherFAX service check
  - Fax station error service check
  - Fax failure service check
- Updated the User attendance messages topic in the Diagnostics and troubleshooting chapter.
- Updated the Config Menu topic in the Service menus chapter.
- Added the following topics in the Service menus chapter:
  - Fax SE Menu
  - EWS SE Menu
- Added the Speaker removal topic in the Parts removal chapter.
- Updated the Controller board connectors topic in the Component locations chapter.
- Added PN 41X2978 in the Parts catalog chapter.
- Updated the Wiring diagram

## October 23, 2020

- Added the following Base printer symptoms topics in the Diagnostics and troubleshooting chapter:
  - Tray near empty service check
  - False bin full error service check
- Added the Bin full sensor actuator removal topic in the Parts removal chapter.

## September 29, 2020

- Updated the Using Safe Mode topic in the Diagnostics and troubleshooting chapter.
- Updated the ADF and scanner assembly topic in the Parts catalog chapter.
- Removed PN 41X2664 in the Parts catalog chapter.

## September 7, 2020

- Updated the Critical information for controller board or control panel replacement topic in the Parts removal chapter.
- Updated the 938–992 error messages table in the Diagnostics and troubleshooting chapter.

- Added the NVRAM mismatch failure service check topic in the Diagnostics and troubleshooting chapter.

### **August 3, 2020**

- Removed the following topics in the Parts removal chapter:
  - Restoring the printer configuration after replacing the controller board
  - Restoring solutions, licenses, and configuration settings

### **July 15, 2020**

- Added the 280–295 paper jam messages in the Diagnostics and troubleshooting chapter.
- Added the 840–845 error messages topic in the Diagnostics and troubleshooting chapter.
- Updated the 600–680 error messages topic in the Diagnostics and troubleshooting chapter.
- Added the following topics in the Diagnostics and troubleshooting chapter:
  - ADF jam service check
  - ADF failure service check
  - Scanner communication error service check
  - Scanner communication failure service check
  - Scanner noise service check
  - Duplex scan error service check
- Updated the Config menu topic in the Service menus chapter.
- Added PN 41X2664 in the Parts catalog chapter.

### **June 8, 2020**

- Added the Entering Recovery Mode topic in the Service menus chapter.

### **May 12, 2020**

- Updated the description of the following parts in the Electronics topic in the Parts catalog chapter:
  - PN 41X2659
  - PN 41X2660
  - PN 41X2661

### **April 14, 2020**

- First release.

## General information

### Printer model configurations

The Lexmark MX331, Lexmark MB3442, Lexmark MX431, and Lexmark XM1342 MFPs are small, monochrome, network-capable, laser printers.

Model	Configurations	Machine type/model
MX331adn	Network-ready monochrome laser four-in-one MFP with 2.8-inch touch screen, 40 ppm, 10/100 Ethernet, front USB, internal duplex printing, and simplex scanning for small workgroups.	7019-235
MB3442adw	Network-ready monochrome laser four-in-one MFP with 2.8-inch touch screen, 42 ppm, wireless, 10/100 Ethernet, front USB, internal duplex printing, and duplex scanning for small workgroups.	7019-486
MB3442i	Network-ready monochrome laser three-in-one MFP with 2.8-inch touch screen, 42 ppm, wireless, 10/100 Ethernet, front USB, internal duplex printing, and duplex scanning for small workgroups.	7019-486
MX431adn	Network-ready monochrome laser four-in-one MFP with 2.8-inch touch screen, 42 ppm, Gigabit Ethernet, front USB, internal duplex printing, and duplex scanning for small workgroups.	7019-4a6
MX431adw	Network-ready monochrome laser four-in-one MFP with 2.8-inch touch screen, 42 ppm, wireless, Gigabit Ethernet, front USB, internal duplex printing, and duplex scanning for small workgroups.	7019-4b6
XM1342		7019-489

### Supported paper sizes, types, and weights

#### Supported paper sizes

Paper size	Standard 250-sheet tray	Optional 550-sheet tray	Multipurpose feeder	Two-sided printing	Scanner	ADF
<b>A4</b> 210 x 297 mm (8.27 x 11.7 in.)	✓	✓	✓	✓	✓	✓
<p><sup>1</sup> The default support is long-edge feed.</p> <p><sup>2</sup> Paper must at least be 210 mm (8.27 in.) wide and 279.4 mm (11 in.) long for two-sided printing.</p> <p><sup>3</sup> When Universal is selected, the page is formatted for 215.90 x 355.60 mm (8.5 x 14 in.) unless specified by the application.</p>						

Paper size	Standard 250-sheet tray	Optional 550-sheet tray	Multipurpose feeder	Two-sided printing	Scanner	ADF
<b>A5 Portrait (SEF)</b> 148 x 210 mm (5.83 x 8.27 in.)	✓	✓	✓	X	✓	✓
<b>A5 Landscape (LEF)<sup>1</sup></b> 210 x 148 mm (8.27 x 5.83 in.)	✓	✓	✓	X	✓	✓
<b>A6</b> 105 x 148 mm (4.13 x 5.83 in.)	✓	✓	✓	X	✓	✓
<b>JIS B5</b> 182 x 257 mm (7.17 x 10.1 in.)	✓	✓	✓	X	✓	✓
<b>Oficio (Mexico)</b> 215.9 x 340.4 mm (8.5 x 13.4 in.)	✓	✓	✓	✓	X	✓
<b>Hagaki</b> 100 x 148 mm (3.94 x 5.83 in.)	✓	X	✓	X	✓	X
<b>Statement</b> 139.7 x 215.9 mm (5.5 x 8.5 in.)	✓	✓	✓	X	✓	✓
<b>Executive</b> 184.2 x 266.7 mm (7.25 x 10.5 in.)	✓	✓	✓	X	✓	✓
<b>Letter</b> 215.9 x 279.4 mm (8.5 x 11 in.)	✓	✓	✓	✓	✓	✓
<b>Legal</b> 215.9 x 355.6 mm (8.5 x 14 in.)	✓	✓	✓	✓	X	✓
<b>Folio</b> 215.9 x 330.2 mm (8.5 x 13 in.)	✓	✓	✓	✓	X	✓

<sup>1</sup> The default support is long-edge feed.

<sup>2</sup> Paper must at least be 210 mm (8.27 in.) wide and 279.4 mm (11 in.) long for two-sided printing.

<sup>3</sup> When Universal is selected, the page is formatted for 215.90 x 355.60 mm (8.5 x 14 in.) unless specified by the application.

Paper size	Standard 250-sheet tray	Optional 550-sheet tray	Multipurpose feeder	Two-sided printing	Scanner	ADF
<b>Universal<sup>3</sup></b> 99 x 148 mm to 215.9 x 359.92 mm (3.9 x 5.83 in. to 8.5 x 14.17 in.)	✓	✓	✓	✓ <sup>2</sup>	X	✓
<b>7 3/4 Envelope</b> 98.4 x 190.5 mm (3.875 x 7.5 in.)	X	X	✓	X	✓	X
<b>9 Envelope</b> 98.4 x 225.4 mm (3.875 x 8.9 in.)	X	X	✓	X	✓	X
<b>10 Envelope</b> 104.8 x 241.3 mm (4.12 x 9.5 in.)	X	X	✓	X	✓	X
<b>DL Envelope</b> 110 x 220 mm (4.33 x 8.66 in.)	X	X	✓	X	✓	X
<b>C5 Envelope</b> 162 x 229 mm (6.38 x 9.01 in.)	X	X	✓	X	✓	X
<b>B5 Envelope</b> 176 x 250 mm (6.93 x 9.84 in.)	X	X	✓	X	✓	X
<b>Other Envelope</b> 98.4 x 162 mm to 176 x 250 mm (3.87 x 6.38 in. to 6.93 x 9.84 in.)	X	X	✓	X	✓	X

<sup>1</sup> The default support is long-edge feed.

<sup>2</sup> Paper must at least be 210 mm (8.27 in.) wide and 279.4 mm (11 in.) long for two-sided printing.

<sup>3</sup> When Universal is selected, the page is formatted for 215.90 x 355.60 mm (8.5 x 14 in.) unless specified by the application.

## Supported paper types

Paper type	Standard 250-sheet tray	Optional 550-sheet tray	Multipurpose feeder	Two-sided printing	Automatic document feeder
Plain paper	✓	✓	✓	✓	✓
Card stock	X	X	✓	X	X
Recycled	✓	✓	✓	✓	X
Paper labels*	✓	✓	✓	X	X
Bond	✓	✓	✓	✓	X
Letterhead	✓	✓	✓	✓	X
Preprinted	✓	✓	✓	✓	X
Colored Paper	✓	✓	✓	✓	X
Light Paper	✓	✓	✓	✓	X
Heavy Paper	✓	✓	✓	✓	X
Rough/Cotton	✓	✓	✓	✓	X
Envelope	X	X	✓	X	X
Rough envelope	X	X	✓	X	X

\* One-sided paper labels are supported for occasional use of less than 20 pages per month. Vinyl, pharmacy, or two-sided labels are not supported.

## Supported paper weights

	Standard 250-sheet tray	Optional 550-sheet tray	Multipurpose feeder	Two-sided printing	Automatic document feeder
Paper weight	60–120 g/m <sup>2</sup> (16–32 lb)	60–120 g/m <sup>2</sup> (16–32 lb)	60–217 g/m <sup>2</sup> (16–58 lb)	60–90 g/m <sup>2</sup> (16–24 lb)	60–90 g/m <sup>2</sup> (16–24 lb)

## Supported fax

Printer model	Analog fax	etherFAX <sup>1</sup>	Fax server	Fax over IP (FoIP) <sup>2</sup>
MB3442adw	✓	✓	✓	✓
MB3442i	x	✓	✓	✓
MX331adn	✓	✓	✓	✓
MX331dn	x	✓	✓	✓
MX431adn	✓	✓	✓	✓
MX431adw	✓	✓	✓	✓
MX431dn	x	✓	✓	✓
XM1342	✓	✓	✓	✓

<sup>1</sup> Needs a subscription. For more information, go to <https://www.etherfax.net/lexmark> or contact the place where you purchased the printer.

<sup>2</sup> Needs an installed license bundle. For more information, contact the place where you purchased the printer.

## Finding the printer serial number

- 1 Open the front door.



- 2 Locate the printer serial number behind the front door.











## Tools required for service

- Flat-blade screwdrivers, various sizes
- #1 Phillips screwdriver, magnetic
- #2 Phillips screwdriver, magnetic
- #2 Phillips screwdriver, magnetic short-blade
- Torx screwdriver (T20 head)
- Needle-nose pliers
- Diagonal side cutters
- Spring hook
- Feeler gauges
- Analog or digital multimeter
- 3-mm ball hex wrench
- Toner vacuum
- Flashlight









# Diagnostics and troubleshooting







## Troubleshooting precautions

-  **CAUTION—SHOCK HAZARD:** When you see this symbol on the product, there is a danger from hazardous voltage in the area of the product where you are working. Unplug the product before you begin, or use caution if the product must receive power in order to perform the task.
-  **CAUTION—SHOCK HAZARD:** This product uses an electronic power switch. It does not physically disconnect the input AC voltage. To avoid the risk of electrical shock, always remove the power cord from the printer when removal of the input AC voltage is required.
-  **CAUTION—SHOCK HAZARD:** To avoid the risk of electrical shock while troubleshooting with covers removed or doors open, do not touch the exposed wires or circuits while the printer is connected to an electrical outlet.
-  **CAUTION—SHOCK HAZARD:** To avoid the risk of electrical shock and to prevent damage to the printer, remove the power cord from the electrical outlet and disconnect all connections to any external devices before you connect or disconnect any cable, electronic board, or assembly.
-  **CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.
-  **CAUTION—PINCH HAZARD:** To avoid the risk of a pinch injury, use caution in areas marked with this label. Pinch injuries may occur around moving parts, such as gears, doors, trays, and covers.






## Précautions de dépannage

-  **ATTENTION—RISQUE D'ELECTROCUTION :** Ce symbole indique un danger lié à des niveaux de tension dangereux dans la zone du produit à manipuler. Débranchez le produit avant de commencer, ou agissez avec prudence si le produit doit être alimenté pour effectuer l'opération.
-  **ATTENTION—RISQUE D'ELECTROCUTION :** Ce produit utilise un commutateur d'alimentation électronique. Il ne déconnecte pas physiquement la tension d'alimentation CA. Pour éviter tout risque d'électrocution, débranchez toujours le cordon d'alimentation de l'imprimante lorsque vous devez déconnecter la tension d'alimentation CA.
-  **ATTENTION—RISQUE D'ELECTROCUTION :** Pour éviter tout risque d'électrocution lors du dépannage de l'imprimante avec les capots retirés ou les portes ouvertes, prenez garde de ne pas toucher les fils ou circuits dénudés si l'imprimante est connectée à une prise électrique.
-  **ATTENTION—RISQUE D'ELECTROCUTION :** Pour éviter tout risque d'électrocution et éviter d'endommager l'imprimante, débranchez le cordon d'alimentation de la prise électrique et déconnectez toute connexion à tout périphérique externe avant de brancher ou débrancher des câbles ou circuits et assemblages électroniques.
-  **ATTENTION—SURFACE CHAUDE :** L'intérieur de l'imprimante risque d'être brûlant. Pour réduire le risque de brûlure, laissez la surface ou le composant refroidir avant d'y toucher.
-  **ATTENTION : RISQUE DE PINCEMENT :** Pour éviter tout risque de blessure par pincement, agissez avec précaution au niveau des zones signalées par cette étiquette. Les blessures par pincement peuvent se produire autour des pièces mobiles telles que les engrenages, portes, tiroirs et capots.

## Precauciones durante la solución de problemas

-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Cuando vea este símbolo en el producto, existe peligro de tensiones peligrosas en el área del producto en la que está trabajando. Desconecte el producto antes de empezar o tenga cuidado si el producto debe recibir alimentación a fin de realizar la tarea.
-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Este producto utiliza un interruptor de corriente electrónico. No desconecta físicamente la entrada de voltaje de CA. Para evitar el riesgo de descarga eléctrica, desenchufe siempre el cable de alimentación de la impresora cuando sea necesario retirar la entrada de voltaje de CA.
-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Para evitar el riesgo de descarga eléctrica al solucionar problemas sin las cubiertas o con las puertas abiertas, no toque los cables ni los circuitos expuestos mientras la impresora está conectada a una toma de corriente.
-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Para evitar el riesgo de descargas eléctricas y daños en la impresora, retire el cable de alimentación de la toma eléctrica y desconecte todas las conexiones a dispositivos externos antes de conectar o desconectar cualquier cable, placa electrónica o conjunto.
-  **PRECAUCIÓN: SUPERFICIE CALIENTE:** El interior de la impresora podría estar caliente. Para evitar el riesgo de heridas producidas por el contacto con un componente caliente, deje que la superficie se enfríe antes de tocarlo.
-  **PRECAUCIÓN: PELIGRO DE ATRAPAMIENTO:** Para evitar el riesgo de lesión por atrapamiento, preste atención en las áreas marcadas con esta etiqueta. Las lesiones por atrapamiento se pueden producir en torno a partes móviles, tales como engranajes, puertas, bandejas y cubiertas.

## Vorsichtsmaßnahmen bei der Fehlerbehebung

-  **VORSICHT – STROMSCHLAGGEFAHR:** Wenn Sie dieses Symbol sehen, besteht eine Gefahr durch gefährliche Spannungen in dem Produktbereich, in dem Sie arbeiten. Trennen Sie das Produkt von seiner Stromverbindung, bevor Sie beginnen, oder gehen Sie vorsichtig vor, wenn das Produkt für die Durchführung der Aufgabe mit Strom versorgt werden muss.
-  **VORSICHT – STROMSCHLAGGEFAHR:** Dieses Produkt verwendet einen elektronischen Leistungsschalter. Er trennt die Eingangswchselspannung nicht physikalisch. Um das Risiko eines elektrischen Schlags zu vermeiden, ziehen Sie stets das Netzkabel vom Drucker ab, wenn eine Abtrennung der Eingangswchselspannung erforderlich ist.
-  **VORSICHT – STROMSCHLAGGEFAHR:** Um die Gefahr eines Stromschlags während der Fehlerbehebung bei entfernten Abdeckungen oder offenen Klappen zu vermeiden, berühren Sie die freiliegenden Drähte oder Stromkreise nicht, wenn der Drucker an eine Steckdose angeschlossen ist.
-  **VORSICHT – STROMSCHLAGGEFAHR:** Um das Risiko eines elektrischen Schlags und Schäden am Drucker zu vermeiden, ziehen Sie das Netzkabel aus der Steckdose und trennen Sie alle Verbindungen zu jeglichen externen Geräten, bevor Sie Kabel, Elektronikplatinen oder Baugruppen einstecken oder abziehen.
-  **VORSICHT – HEISSE OBERFLÄCHE:** Das Innere des Druckers kann sehr heiß sein. Vermeiden Sie Verletzungen, indem Sie heiße Komponenten stets abkühlen lassen, bevor Sie ihre Oberfläche berühren.



**VORSICHT – QUETSCHGEFAHR:** Um das Risiko einer Quetschung zu vermeiden, gehen Sie in Bereichen, die mit diesem Etikett gekennzeichnet sind, mit Vorsicht vor. Quetschungen können im Bereich von beweglichen Komponenten auftreten, wie z. B. Zahnrädern, Klappen, Fächern und Abdeckungen.

## Troubleshooting overview

### Performing the initial troubleshooting check

- With the power cord unplugged from the electrical outlet, check if the cord is free from breakage, short circuits, disconnected wires, or incorrect connections.
- Make sure that the printer is properly grounded.
- Make sure that the power supply line voltage is within 10% of the rated line voltage.
- Make sure that the printer is securely installed on a level surface in a well-ventilated area.
- Make sure that the temperature and relative humidity are within the specifications. See [“Temperature information” on page 229](#).
- Avoid locations that:
  - Generate ammonia gas
  - Are exposed to direct sunlight
  - Are near open flames
  - Are dusty
- Make sure that the recommended paper for this printer is used.
- Do a test print with paper from a newly opened package, and then check the result.

### Using Safe Mode

Safe Mode lets the printer continue to operate in a special limited mode in which it attempts to continue offering as much functionality as possible despite known issues.

#### Notes:

- When in Safe Mode, the printer only prints in simplex mode from tray 1 at the slowest operating point.
- This setting cannot be used if the sensor (tray present) is damaged.

**Warning—Potential Damage:** Safe Mode is intended as a short-term workaround and must be used only in the case of a non-critical error when a print job must be completed before service can be arranged to repair the printer. The printer must be returned to standard operating mode before diagnostics can be run or full-function printing can continue.

Enter Safe Mode from the Configuration menu, and then POR the printer. See [“Config Menu” on page 136](#).

Return the printer to standard operating mode to service the printer and return to full-function printing.

# Fixing print quality issues

## Gray background or toner fog check

 


**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b></p> <p><b>a</b> Remove any packing material left on the imaging unit.</p> <p><b>Note:</b> You may need a pair of pliers to remove pieces of plastic inside the imaging unit.</p> <p><b>b</b> Make sure that there are no obstructions between the charge roller and photoconductor drum.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b></p> <p><b>a</b> Turn off the printer, wait for 10 seconds, and then turn on the printer.</p> <p><b>b</b> Set the toner darkness to a lighter setting.</p> <p>From the control panel, navigate to <b>Settings &gt; Print &gt; Quality &gt; Toner Darkness</b>.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p>Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p><b>Note:</b> If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 5.	Go to step 4.
<p><b>Step 4</b></p> <p>Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.

Action	Yes	No
<p><b>Step 5</b> Remove any packing material left on the imaging unit.</p> <p><b>Note:</b> You may need a pair of pliers to remove pieces of plastic inside the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b> Replace the toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a></p> <p><b>b</b> Make sure that the HVPS1 cable on the controller board and HVPS is properly connected.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p><b>Step 8</b> Replace the HVPS. See <a href="#">“HVPS removal” on page 168.</a></p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Blank page check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29.](#)

Action	Yes	No
<p><b>Step 1</b> Verify that the toner cartridge is not empty.</p> <p>Is the toner cartridge empty?</p>	Go to step 2.	Go to step 3.
<p><b>Step 2</b> Replace the toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b> Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p><b>Note:</b> If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 5.	Go to step 4.
<p><b>Step 4</b> Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <p><b>a</b> Remove any packing material left on the imaging unit.</p> <p><b>Note:</b> You may need a pair of pliers to remove pieces of plastic inside the imaging unit.</p> <p><b>b</b> Firmly shake the imaging unit to redistribute the toner, and then insert it.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b></p> <p><b>a</b> Make sure that the transfer roller is properly installed.</p> <p><b>b</b> Check the transfer roller for contamination and damage.</p> <p>Is the transfer roller free of contamination and damage?</p>	Go to step 9.	Go to step 7.
<p><b>Step 7</b> Remove, and then install the transfer roller. See <a href="#">“Transfer roller removal” on page 177</a>.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p><b>Step 8</b> Replace the transfer roller.</p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.



Action	Yes	No
<p><b>Step 9</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a></p> <p><b>b</b> Make sure that the HVPS1 cable on the controller board and HVPS is properly connected.</p> <p>Does the problem remain?</p>	Go to step 10.	The problem is solved.
<p><b>Step 10</b></p> <p>Replace the HVPS. See <a href="#">“HVPS removal” on page 168.</a></p> <p>Does the problem remain?</p>	Go to step 11.	The problem is solved.
<p><b>Step 11</b></p> <p>Replace the printhead. See <a href="#">“Printhead removal” on page 182.</a></p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Print is too dark check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29.](#)

Action	Yes	No
<p><b>Step 1</b></p> <p>Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p><b>Note:</b> If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.

Action	Yes	No
<p><b>Step 3</b></p> <p><b>a</b> Remove any packing material left on the imaging unit.</p> <p><b>Note:</b> You may need a pair of pliers to remove pieces of plastic inside the imaging unit.</p> <p><b>b</b> Make sure that there are no obstructions between the charge roller and photoconductor drum.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b></p> <p><b>a</b> Turn off the printer, wait for 10 seconds, and then turn on the printer.</p> <p><b>b</b> Set the toner darkness to a lighter setting.</p> <p>From the control panel, navigate to <b>Settings &gt; Print &gt; Quality &gt; Toner Darkness</b>.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163</a>.</p> <p><b>b</b> Make sure that the HVPS1 cable on the controller board and HVPS is properly connected.</p> <p>Does the problem?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b></p> <p>Replace the HVPS. See <a href="#">“HVPS removal” on page 168</a>.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Print is too light check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b> Check if the toner cartridge is empty or if it has reached its end of life.</p> <p>Is the toner cartridge empty or has reached its end of life?</p>	Go to step 2.	Go to step 3.
<p><b>Step 2</b> Replace the toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b> Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p><b>Note:</b> If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 5.	Go to step 4.
<p><b>Step 4</b> Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <p><b>a</b> Turn off the printer, wait for 10 seconds, and then turn on the printer.</p> <p><b>b</b> Do the following:</p> <ol style="list-style-type: none"> <li><b>1</b> Set the toner darkness to a darker setting. From the control panel, navigate to <b>Settings &gt; Print &gt; Quality &gt; Toner Darkness</b>.</li> <li><b>2</b> Set the paper type, texture, and weight to match the paper loaded. From the control panel, navigate to <b>Settings &gt; Paper &gt; Media Configuration &gt; Media Types</b>.</li> </ol> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.

Action	Yes	No
<p><b>Step 6</b></p> <p><b>a</b> Remove the imaging unit.</p> <p><b>b</b> Push either side of the transfer roller, and then check if it depresses and bounces back into place.</p> <p><b>c</b> If the transfer roller does not depress and bounce back into place, then reinstall the transfer roller.</p> <p><b>d</b> Firmly shake the toner cartridge to redistribute the toner, and then insert it.</p> <p><b>e</b> Turn off the printer, wait for 10 seconds, and then turn on the printer.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b></p> <p><b>a</b> Make sure that the transfer roller is properly installed.</p> <p><b>b</b> Check the transfer roller for contamination and damage.</p> <p>Is the transfer roller free of contamination and damage?</p>	Go to step 9.	Go to step 8.
<p><b>Step 8</b></p> <p>Reinstall or replace the transfer roller. See <a href="#">“Transfer roller removal” on page 177</a>.</p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.
<p><b>Step 9</b></p> <p>Replace the imaging unit. See <a href="#">“Transfer roller removal” on page 177</a>.</p> <p>Does the problem remain?</p>	Go to step 10.	The problem is solved.
<p><b>Step 10</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163</a>.</p> <p><b>b</b> Make sure that the HVPS1 cable on the controller board and HVPS is properly connected.</p> <p>Does the problem remain?</p>	Go to step 11.	The problem is solved.
<p><b>Step 11</b></p> <p>Replace the HVPS. See <a href="#">“HVPS removal” on page 168</a>.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Paper curl check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b> Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p><b>Note:</b> If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b> Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b> Check if the printer is using a genuine and supported Lexmark fuser.</p> <p>Is the printer using a genuine and supported Lexmark fuser?</p>	Go to step 5.	Go to step 4.
<p><b>Step 4</b> Insert a genuine and supported Lexmark fuser.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b> Make sure that the paper guide setting matches the size of the paper loaded.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.

Action	Yes	No
<p><b>Step 6</b></p> <p>Set the paper type, texture, and weight to match the paper loaded.</p> <p>From the control panel, navigate to <b>Settings &gt; Paper &gt; Media Configuration &gt; Media Types</b>.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b></p> <p><b>a</b> Make sure that the paper loaded is from a fresh package.</p> <p><b>Note:</b> Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it.</p> <p><b>b</b> Make sure that the printer supports the paper loaded.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Folded or wrinkled paper check




**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).


Action	Yes	No
<p><b>Step 1</b></p> <p><b>a</b> Check if the printer is using a non-Lexmark toner cartridge.</p> <p><b>Note:</b> If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p><b>b</b> Make sure that the toner cartridge is compatible with the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b></p> <p><b>a</b> Check if the paper loaded is from a fresh package.</p> <p><b>Note:</b> Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it.</p> <p><b>b</b> Make sure that the printer supports the paper loaded.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.

Action	Yes	No
<p><b>Step 3</b></p> <p><b>a</b> Check the toner cartridge for leaks.</p> <p><b>b</b> Using an approved toner vacuum, completely remove the stray toner from the printer, toner cartridge, and imaging unit.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b></p> <p><b>a</b> Remove the fuser. See <a href="#">“Fuser removal” on page 182.</a></p> <p><b>b</b> Make sure that the fuser entry guide is free of waste toner and dust.</p> <p><b>Warning—Potential Damage:</b> Clean the fuser entry guide with a toner vacuum and cloth. Do not use compressed air.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <p>Replace the fuser.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Solid black pages check

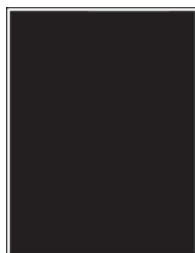

**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29.](#)

Action	Yes	No
<p><b>Step 1</b></p> <p>Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p><b>Note:</b> If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p><b>a</b> Remove any packing material left on the imaging unit.</p> <p><b>Note:</b> You may need a pair of pliers to remove pieces of plastic inside the imaging unit.</p> <p><b>b</b> Check the charge roller contact on the right side of the imaging unit for damage and contamination.</p>  <p>Is the charge roller contact free of damage and contamination?</p>	Go to step 6.	Go to step 4.
<p><b>Step 4</b></p> <p><b>a</b> Perform a POR.</p> <p><b>b</b> Perform a print test.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.



Action	Yes	No
<p><b>Step 6</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163</a>.</p> <p><b>b</b> Make sure that the HVPS1 cable on the controller board and HVPS is properly connected.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b></p> <p>Replace the HVPS. See <a href="#">“HVPS removal” on page 168</a>.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Skewed print check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b></p> <p>Check the guides in the tray where the skewed prints are printed from.</p> <p><b>Note:</b> If the paper source is the MPF, then proceed to <a href="#">step 6</a>.</p> <p>Does the position of the guides match the paper loaded?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Adjust the guides to match the paper loaded.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p>Check if the printer supports the paper loaded.</p> <p>Is the paper supported?</p>	Go to step 5.	Go to step 4.

Action	Yes	No
<p><b>Step 4</b> Remove the paper, and then load a supported one.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b> Perform a print test.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b> Check the guides in the MPF tray.</p> <p>Does the position of the guides match the paper loaded?</p>	Go to step 8.	Go to step 7.
<p><b>Step 7</b> Adjust the guides to match the paper loaded.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p><b>Step 8</b> Make sure that the printer supports the paper loaded.</p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.
<p><b>Step 9</b> Check the MPF pick roller for excess wear and contamination.</p> <p>Is the MPF pick roller free from excess wear and contamination?</p>	Go to step 11.	Go to step 10.
<p><b>Step 10</b> Replace the front door with MPF pick roller. See <a href="#">“Front door removal” on page 176</a>.</p> <p>Does the problem remain?</p>	Go to step 11.	The problem is solved.
<p><b>Step 11</b> Reinstall or replace the transfer roller. See <a href="#">“Transfer roller removal” on page 177</a>.</p> <p>Does the problem remain?</p>	Go to step 12.	The problem is solved.
<p><b>Step 12</b> Replace the imaging unit.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Streaked vertical lines appear on prints during a print job check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b></p> <p><b>a</b> Make sure that the printer is not placed in a cold and damp area.</p> <p><b>b</b> Print 15 simplex pages to dry the transfer roller.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b></p> <p>Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p><b>Note:</b> If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 4.	Go to step 3.
<p><b>Step 3</b></p> <p>Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b></p> <p>Check the status of the imaging unit.</p> <p>Is the imaging unit near its end of life?</p>	Go to step 6.	Go to step 5.
<p><b>Step 5</b></p> <p>Remove, and then insert the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b></p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Streaked vertical lines appear on prints during a copy job check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b></p> <p><b>a</b> Make sure that the printer is not placed in a cold and damp area.</p> <p><b>b</b> Print 15 simplex pages to dry the transfer roller.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b></p> <p>Clean the scanner. See <a href="#">“Cleaning the scanner” on page 205</a>.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p>Open the scanner cover, and then check if it closes properly.</p> <p>Does the cover close properly?</p>	Go to step 5.	Go to step 4.
<p><b>Step 4</b></p> <p>Make sure that the scanner glass pad is clean and properly installed.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <p>With the scanner cover open, perform a copy job to check the scanner lamp.</p> <p><b>Note:</b> The scanner lamp must light up and move along the scan area.</p> <p>Is the scanner lamp functional?</p>	Go to step 7.	Go to step 6.

Action	Yes	No
<p><b>Step 6</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a></p> <p><b>b</b> Reseat the scanner cables.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b></p> <p>Check the scanner and its components for damage.</p> <ul style="list-style-type: none"> <li>• Scanner lamp</li> <li>• Motor (scanner)</li> <li>• Scanner belt</li> <li>• Glass panes</li> <li>• Cables</li> </ul> <p>Are the scanner and its components free of damage?</p>	Go to step 9.	Go to step 8.
<p><b>Step 8</b></p> <p>Replace the ADF and scanner. See <a href="#">“ADF and scanner removal” on page 189.</a></p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.
<p><b>Step 9</b></p> <p>Check the firmware version.</p> <p>Is the firmware updated to the latest version?</p>	Go to step 11.	Go to step 10.
<p><b>Step 10</b></p> <p>Update the firmware.</p> <p>Does the problem remain?</p>	Go to step 11.	The problem is solved.
<p><b>Step 11</b></p> <p><b>a</b> Make sure that the controller board is properly installed.</p> <p><b>b</b> Reseat all the cables on the controller board.</p> <p>Does the problem remain?</p>	Go to step 12.	The problem is solved.
<p><b>Step 12</b></p> <p>Replace the controller board. See <a href="#">“Controller board removal” on page 165.</a></p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Horizontal light bands check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b> Check if the banding is along the edge of the paper.</p> <p>Is the banding along the edge of the paper?</p>	Go to step 2.	Go to step 3.
<p><b>Step 2</b> Replace the fuser. See <a href="#">“Fuser removal” on page 182</a>.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b> Check if the toner cartridge is empty or if it has reached its end of life.</p> <p>Is the toner cartridge empty or has reached its end of life?</p>	Go to step 4.	Go to step 5
<p><b>Step 4</b> Replace the toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b> Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p><b>Note:</b> If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Contact the next level of support.	Go to step 6.
<p><b>Step 6</b> Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Vertical light bands check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b> Check if the banding is along the edge of the paper.</p> <p>Is the banding along the edge of the paper?</p>	Go to step 2.	Go to step 3.
<p><b>Step 2</b> Replace the fuser. See <a href="#">“Fuser removal” on page 182</a>.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b> Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p><b>Note:</b> If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 5.	Go to step 4.
<p><b>Step 4</b> Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <ul style="list-style-type: none"> <li><b>a</b> Remove the imaging unit.</li> <li><b>b</b> Clean the printhead laser glass window with a soft cloth.</li> </ul> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Vertical dark bands check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b> Check if the banding is along the edge of the paper.</p> <p>Is the banding along the edge of the paper?</p>	Go to step 2.	Go to step 3.
<p><b>Step 2</b> Replace the fuser. See <a href="#">“Fuser removal” on page 182</a>.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p><b>a</b> Remove any packing material left on the imaging unit.</p> <p><b>Note:</b> You may need a pair of pliers to remove pieces of plastic inside the imaging unit.</p> <p><b>b</b> Make sure that there are no obstructions between the charge roller and photoconductor drum.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b> Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p><b>Note:</b> If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 6.	Go to step 5.
<p><b>Step 5</b> Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.




Action	Yes	No
<p><b>Step 6</b> Remove, and then insert the imaging unit.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Vertical dark streaks with print missing check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b> Check if the toner cartridge is empty or if it has reached its end of life.</p> <p>Is the toner cartridge empty or has reached its end of life?</p>	Go to step 2.	Go to step 3.
<p><b>Step 2</b> Replace the toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b> Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p><b>Note:</b> If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 5.	Go to step 4.
<p><b>Step 4</b> Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.

Action	Yes	No
<p><b>Step 5</b></p> <p><b>a</b> Remove any packing material left on the imaging unit.</p> <p><b>Note:</b> You may need a pair of pliers to remove pieces of plastic inside the imaging unit.</p> <p><b>b</b> Check the charge roller contact on the right side of the imaging unit for damage and contamination.</p>  <p>Is the charge roller contact free of damage and contamination?</p>	Contact the next level of support.	Go to step 6.
<p><b>Step 6</b></p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## White streaks and voided areas check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b></p> <p>Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p><b>Note:</b> If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p><b>a</b> Perform a POR.</p> <p><b>b</b> Perform a print test.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b></p> <p>Check the status of the imaging unit.</p> <p>Is the imaging unit near its end of life?</p>	Go to step 5.	Contact the next level of support.
<p><b>Step 5</b></p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Clipped pages or images check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b></p> <p><b>a</b> Remove any packing material left on the imaging unit.</p> <p><b>Note:</b> You may need a pair of pliers to remove pieces of plastic inside the imaging unit.</p> <p><b>b</b> Make sure that there are no obstructions between the charge roller and photoconductor drum.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b></p> <p>Remove, and then insert the toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p>Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p><b>Note:</b> If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 5.	Go to step 4.
<p><b>Step 4</b></p> <p>Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <p>Remove, and then insert the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b></p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b></p> <p><b>a</b> Remove the imaging unit.</p> <p><b>b</b> Clean the printhead laser glass window with a soft cloth.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Incorrect margins on prints check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b></p> <p>Adjust the guides in the tray to match the size of the paper loaded.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b></p> <p>Do either of the following:</p> <ul style="list-style-type: none"> <li>Set the paper size to match the paper loaded in the tray. Enter the Diagnostics menu, and then navigate to: <b>Printer diagnostics &amp; adjustments &gt; Printer registration adjustments</b></li> <li>Change the paper loaded in the tray to match the paper size set in the tray.</li> </ul> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Toner rubs off check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b></p> <p>Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p><b>Note:</b> If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p>Set the paper type, texture, and weight to match the paper loaded.</p> <p>From the control panel, navigate to <b>Settings &gt; Paper &gt; Media Configuration &gt; Media Types</b>.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b></p> <p>Remove, and then install the fuser. See <a href="#">“Fuser removal” on page 182</a>.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <p>Replace the fuser.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Toner specks appear on prints during a print job check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b></p> <p>Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p><b>Note:</b> If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p><b>a</b> From the control panel, navigate to <b>Status/Supplies &gt; Supplies</b>.</p> <p><b>b</b> Check the status of the imaging unit.</p> <p>Is the imaging unit near its end of life or showing signs of toner leakage?</p>	Go to step 4.	Go to step 5.
<p><b>Step 4</b></p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <p>Check if toner specks appear only on the edges or back side of the paper.</p> <p>Do toner specks appear only on the edges or back side of the paper?</p>	Go to step 6.	Go to step 7.
<p><b>Step 6</b></p> <p>Replace the transfer roller. See <a href="#">“Transfer roller removal” on page 177</a>.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b></p> <p>Check the printer for stray toner contamination.</p> <p>Is the printer contaminated with stray toner?</p>	Go to step 8.	Contact the next level of support.
<p><b>Step 8</b></p> <p>Using an approved toner vacuum, completely remove the stray toner from the printer, toner cartridge, and imaging unit.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Toner specks appear on prints during a copy job check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b> Clean the scanner. See <a href="#">“Cleaning the scanner” on page 205</a>.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b> Check the firmware version.</p> <p>Is the firmware updated to the latest version?</p>	Go to step 4.	Go to step 3.
<p><b>Step 3</b> Update the firmware.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b> Replace the ADF and scanner. See <a href="#">“ADF and scanner removal” on page 189</a>.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <ul style="list-style-type: none"> <li><b>a</b> Make sure that the controller board is properly installed.</li> <li><b>b</b> Reseat all the cables on the controller board.</li> </ul> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b> Replace the controller board. See <a href="#">“Controller board removal” on page 165</a>.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.



## Repeating defects check



**Note:** Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 29](#).

Action	Yes	No
<p><b>Step 1</b></p> <p>Using the Print Quality Test Pages, check if the distance between the repeating defects is equal to any of the following:</p> <ul style="list-style-type: none"> <li>• 37.7 mm (1.48 in.)</li> <li>• 96 mm (3.78 in.)</li> </ul> <p>Does the distance between the repeating defects match any of the measurements?</p>	Go to step 2.	Go to step 3.
<p><b>Step 2</b></p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p>Check if the distance between the repeating defects is equal to any of the following:</p> <ul style="list-style-type: none"> <li>• 37.5 mm (1.48 in.)</li> <li>• 43.5 mm (1.71 in.)</li> </ul> <p>Does the distance between the repeating defects match any of the measurements?</p>	Go to step 4.	Go to step 5.
<p><b>Step 4</b></p> <p>Replace the toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <p>Check if the distance between the repeating defects is equal to 52 mm (2.05 in.).</p> <p>Does the distance between the repeating defects match the measurement?</p>	Go to step 6.	Go to step 7.

Action	Yes	No
<p><b>Step 6</b> Replace the transfer roller. See <a href="#">“Transfer roller removal” on page 177</a>.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b> Check if the distance between the repeating defects is equal to any of the following:</p> <ul style="list-style-type: none"> <li>• 62.5 mm (2.46 in.)</li> <li>• 79.8 mm (3.14 in.)</li> </ul> <p>Does the distance between the repeating defects match any of the measurements?</p>	Go to step 8.	Contact the next level of support.
<p><b>Step 8</b> Replace the fuser. See <a href="#">“Fuser removal” on page 182</a>.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Paper jams

### 200 paper jams

#### 200 paper jam messages

Error code	Description	Action
200.02	Paper fed from the MPF was detected earlier than expected at the sensor (input).	See <a href="#">“Sensor (input): Paper arrived too early jam service check” on page 59</a> .
200.04	Paper fed from the MPF cleared the sensor (input) earlier than expected.	See <a href="#">“Sensor (input): Paper cleared too early jam service check” on page 60</a> .
200.05	Paper fed from the MPF never cleared the sensor (input).	See <a href="#">“Sensor (input): Paper failed to clear jam service check” on page 63</a> .
200.06	Paper fed from the MPF was detected later than expected or was never detected at the sensor (input).	See <a href="#">“Sensor (input): Paper failed to arrive jam service check” on page 61</a> .
200.12	Paper fed from tray 1 was detected earlier than expected at the sensor (input).	See <a href="#">“Sensor (input): Paper arrived too early jam service check” on page 59</a> .
200.13	Paper fed from tray 1 was detected later than expected or was never detected at the sensor (input).	See <a href="#">“Sensor (input): Paper failed to arrive jam service check” on page 61</a> .
200.14	Paper fed from tray 1 cleared the sensor (input) earlier than expected.	See <a href="#">“Sensor (input): Paper cleared too early jam service check” on page 60</a> .

Error code	Description	Action
200.15	Paper fed from tray 1 never cleared the sensor (input).	See <a href="#">“Sensor (input): Paper failed to clear jam service check” on page 63.</a>
200.22	Paper fed from tray 2 was detected earlier than expected at the sensor (input).	See <a href="#">“Sensor (input): Paper arrived too early jam service check” on page 59.</a>
200.23	Paper fed from tray 2 was detected later than expected or was never detected at the sensor (input).	See <a href="#">“Sensor (input): Paper failed to arrive jam service check” on page 61.</a>
200.24	Paper fed from tray 2 cleared the sensor (input) earlier than expected.	See <a href="#">“Sensor (input): Paper cleared too early jam service check” on page 60.</a>
200.25	Paper fed from tray 2 never cleared the sensor (input).	See <a href="#">“Sensor (input): Paper failed to clear jam service check” on page 63.</a>
200.91	Paper remains detected at the sensor (input) after the printer is turned on.	See <a href="#">“Sensor (input): Static jam service check” on page 65.</a>

### Sensor (input): Paper arrived too early jam service check

Action	Yes	No
<p><b>Step 1</b> Identify the source tray.</p> <p>Is MPF the source tray?</p>	Go to step 2.	Go to step 4.
<p><b>Step 2</b>  <ul style="list-style-type: none"> <li>a Make sure that the MPF pick roller is free of contamination.</li> <li>b Clean the MPF pick roller.</li> </ul> </p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b> Replace the front door. See <a href="#">“Front door removal” on page 176.</a></p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.
<p><b>Step 4</b> Make sure that the paper is properly loaded in the tray.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b> Make sure that each tray is free of paper fragments and partially fed paper.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.

Action	Yes	No
<p><b>Step 6</b></p> <p><b>a</b> Make sure that the pick roller and separator roller are free from contamination.</p> <p><b>b</b> Clean the pick roller and separator roller.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b></p> <p><b>a</b> Enter the Diagnostics menu, and then navigate to: <b>Printer diagnostics &amp; adjustments &gt; Sensor tests</b></p> <p><b>b</b> Find the sensor (input).</p> <p><b>c</b> Make sure that the sensor actuator freely moves and is not stuck.</p> <p>Does the sensor status change while toggling the sensor?</p>	Go to step 9.	Go to step 8.
<p><b>Step 8</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163</a>.</p> <p><b>b</b> Make sure that the JMTR1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.
<p><b>Step 9</b></p> <p>Perform a print test.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

### Sensor (input): Paper cleared too early jam service check

Action	Yes	No
<p><b>Step 1</b></p> <p><b>a</b> Remove the tray insert.</p> <p><b>b</b> Make sure that the paper is properly loaded in the tray.</p> <p><b>c</b> From the printer control panel or Printing Preferences or Print dialog, verify the paper size settings.</p> <p><b>Note:</b> The tray has no size sensing mechanism. Manually set the paper size through the printer control panel or Printing Preferences or Print dialog.</p> <p>Does the paper size match the settings that you want?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Change the paper size or adjust the size setting in the tray.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.

Action	Yes	No
<p><b>Step 3</b></p> <p><b>a</b> Make sure that the tray is not overfilled.</p> <p><b>b</b> Make sure that the paper guides are not set too tight against the paper.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b></p> <p>Check the tray for crumpled, damaged, or deformed paper.</p> <p>Are there crumpled, damaged, or deformed paper in the tray?</p>	Go to step 5.	Go to step 6.
<p><b>Step 5</b></p> <p>Replace the crumpled, damaged, or deformed paper.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b></p> <p><b>a</b> Enter theDiagnostics menu, and then navigate to: <b>Printer diagnostics &amp; adjustments &gt; Sensor tests</b></p> <p><b>b</b> Find the sensor (input).</p> <p><b>c</b> Make sure that the sensor actuator freely moves and is not stuck.</p> <p>Does the sensor status change while toggling the sensor?</p>	Go to step 8.	Go to step 7.
<p><b>Step 7</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a></p> <p><b>b</b> Make sure that the JMTR1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p><b>Step 8</b></p> <p>Perform a print test.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

### Sensor (input): Paper failed to arrive jam service check

**Note:** This service check is not applicable to tray 2.

Action	Yes	No
<p><b>Step 1</b></p> <p><b>a</b> Remove the tray insert.</p> <p><b>b</b> Make sure that the paper is properly loaded in the tray.</p> <p><b>c</b> From the printer control panel or Printing Preferences or Print dialog, verify the paper size settings.</p> <p><b>Note:</b> The tray has no size sensing mechanism. Manually set the paper size through the printer control panel or Printing Preferences or Print dialog.</p> <p>Does the paper size match the settings that you want?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Change the paper size or adjust the size setting in the tray.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p><b>a</b> Make sure that the tray is not overfilled.</p> <p><b>b</b> Make sure that the paper guides are not set too tight against the paper.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b></p> <p>Check the tray for crumpled, damaged, or deformed paper.</p> <p>Are there crumpled, damaged, or deformed paper in the tray?</p>	Go to step 5.	Go to step 6.
<p><b>Step 5</b></p> <p>Replace the crumpled, damaged, or deformed paper.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b></p> <p><b>a</b> Enter theDiagnostics menu, and then navigate to: <b>Printer diagnostics &amp; adjustments &gt; Sensor tests</b></p> <p><b>b</b> Find the sensor (input).</p> <p><b>c</b> Make sure that the sensor actuator freely moves and is not stuck.</p> <p>Does the sensor status change while toggling the sensor?</p>	Go to step 8.	Go to step 7.
<p><b>Step 7</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163</a>.</p> <p><b>b</b> Make sure that the JMTR1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.

Action	Yes	No
<p><b>Step 8</b> Perform a print test.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

### Sensor (input): Paper failed to clear jam service check

Action	Yes	No
<p><b>Step 1</b></p> <p><b>a</b> Remove the tray insert.</p> <p><b>b</b> Make sure that the paper is properly loaded in the tray.</p> <p><b>c</b> From the printer control panel or Printing Preferences or Print dialog, verify the paper size settings.</p> <p><b>Note:</b> The tray has no size sensing mechanism. Manually set the paper size through the printer control panel or Printing Preferences or Print dialog.</p> <p>Does the paper size match the settings that you want?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Change the paper size or adjust the size setting in the tray.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p><b>a</b> Make sure that the tray is not overfilled.</p> <p><b>b</b> Make sure that the paper guides are not set too tight against the paper.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b></p> <p>Check the tray for crumpled, damaged, or deformed paper.</p> <p>Are there crumpled, damaged, or deformed paper in the tray?</p>	Go to step 5.	Go to step 6.
<p><b>Step 5</b></p> <p>Replace the crumpled, damaged, or deformed paper.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b></p> <p>Identify the source tray.</p> <p>Is MPF the source tray?</p>	Go to step 7.	Go to step 9.

Action	Yes	No
<p><b>Step 7</b> Make sure that the MPF pick roller is free of contamination.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p><b>Step 8</b> Replace the front door. See <a href="#">“Front door removal” on page 176.</a></p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.
<p><b>Step 9</b> Make sure that the pick roller is free of contamination.</p> <p>Does the problem remain?</p>	Go to step 10.	The problem is solved.
<p><b>Step 10</b></p> <ul style="list-style-type: none"> <li>a Replace the pick roller.</li> <li>b Replace the separator roller.</li> </ul> <p>Does the problem remain?</p>	Go to step 11.	The problem is solved.
<p><b>Step 11</b></p> <ul style="list-style-type: none"> <li>a Enter the Diagnostics menu, and then navigate to: <b>Printer diagnostics &amp; adjustments &gt; Sensor tests</b></li> <li>b Find the sensor (input).</li> <li>c Make sure that the sensor actuator freely moves and is not stuck.</li> </ul> <p>Does the sensor status change while toggling the sensor?</p>	Go to step 13.	Go to step 12.
<p><b>Step 12</b></p> <ul style="list-style-type: none"> <li>a Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a></li> <li>b Make sure that the JMTR1 sensor cable is properly connected to the controller board.</li> </ul> <p>Does the problem remain?</p>	Go to step 13.	The problem is solved.
<p><b>Step 13</b> Perform a print test.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.



## Sensor (input): Static jam service check

Action	Yes	No
<b>Step 1</b> Check the paper path for paper fragments and partially fed paper.  Is the paper path free of paper fragments and partially fed paper?	Go to step 3.	Go to step 2.
<b>Step 2</b> Remove the paper fragments and partially fed paper.  Does the problem remain?	Go to step 3.	The problem is solved.
<b>Step 3</b> <b>a</b> Enter the Diagnostics menu, and then navigate to: <b>Printer diagnostics &amp; adjustments &gt; Sensor tests</b> <b>b</b> Find the sensor (input). <b>c</b> Make sure that the sensor actuator freely moves and is not stuck.  Does the sensor status change while toggling the sensor?	Go to step 5.	Go to step 4.
<b>Step 4</b> <b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a> <b>b</b> Make sure that the JMTR1 sensor cable is properly connected to the controller board.  Does the problem remain?	Go to step 5.	The problem is solved.
<b>Step 5</b> Perform a print test.  Does the problem remain?	Contact the next level of support.	The problem is solved.

## 202 paper jams

### 202 paper jam messages

Error code	Description	Action
202.03	Paper fed from the MPF never arrived at the sensor (fuser exit).	See <a href="#">“Sensor (fuser exit): Paper failed to arrive jam service check” on page 66.</a>
202.13	Paper fed from tray 1 never arrived at the sensor (fuser exit).	
202.23	Paper fed from tray 2 never arrived at the sensor (fuser exit).	
202.x4	Paper cleared the sensor (fuser exit) too soon.	See <a href="#">“Sensor (fuser exit): Paper cleared too early jam service check” on page 68.</a>

Error code	Description	Action
202.05	Paper fed from the MPF never cleared the sensor (fuser exit).	See <a href="#">“Sensor (fuser exit): Paper failed to clear jam service check” on page 68.</a>
202.15	Paper fed from tray 1 never cleared the sensor (fuser exit).	
202.25	Paper fed from tray 2 never cleared the sensor (fuser exit).	
202.91	Paper remains detected at the sensor (fuser exit) after the printer is turned on.	See <a href="#">“Sensor (fuser exit): Static jam service check” on page 70.</a>
202.93	The sensor (fuser exit) detected a jam during or after a flush action.	
202.95	Paper fed from an unknown tray never cleared the sensor (fuser exit).	

### Sensor (fuser exit): Paper failed to arrive jam service check

Action	Yes	No
<p><b>Step 1</b></p> <p>Check the fuser paper path for paper fragments and partially fed paper.</p> <p>Is the fuser paper path free of paper fragments and partially fed paper?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Remove the paper fragments and partially fed paper.</p> <p><b>Warning—Potential Damage:</b> Do not remove any paper or paper fragments from the fuser using tools.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p><b>a</b> Remove paper in the tray, flip it over, and then reload paper.</p> <p><b>b</b> Resend the print job.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b></p> <p>Replace the paper in the tray, and then resend the print job.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.

Action	Yes	No
<p><b>Step 5</b></p> <p><b>a</b> Enter the Diagnostics menu, and then navigate to: <b>Printer diagnostics &amp; adjustments &gt; Sensor tests</b></p> <p><b>b</b> Find the sensor (fuser exit).</p> <p><b>c</b> Make sure that the sensor actuator freely moves and is not stuck.</p> <p>Does the sensor status change while toggling the sensor?</p>	Go to step 7.	Go to step 6.
<p><b>Step 6</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a></p> <p><b>b</b> Make sure that the JEXIT1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b></p> <p><b>a</b> Enter the Diagnostics menu, and then navigate to: <b>Printer diagnostics &amp; adjustments &gt; Motor tests</b></p> <p><b>b</b> Find the main motor (forward).</p> <p><b>c</b> Open the front door, remove the imaging unit, and then close the front door.</p> <p><b>d</b> Activate the motor test.</p> <p><b>e</b> Open the rear door, and then check if the fuser belt is properly rotating.</p> <p>Is the fuser belt properly rotating?</p>	Go to step 9.	Go to step 8.
<p><b>Step 8</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a></p> <p><b>b</b> Make sure that the JMTR1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.
<p><b>Step 9</b></p> <p>Replace the fuser. See <a href="#">“Fuser removal” on page 182.</a></p> <p>Does the problem remain?</p>	Go to step 10.	The problem is solved.
<p><b>Step 10</b></p> <p>Perform a print job.</p> <p>Does the problem remain?</p>	Go to step 11.	The problem is solved.

Action	Yes	No
<p><b>Step 11</b> Replace the main drive gears. See <a href="#">“Main drive gears removal” on page 155</a>.</p> <p>Does the problem remain?</p>	Go to step 12.	The problem is solved.
<p><b>Step 12</b> <b>a</b> Make sure that the metal shutter in the printer frame is not stuck. <b>b</b> Check the metal shutter for fuser entry.</p> <p>Does the metal shutter freely move?</p>	Contact the next level of support.	The problem is solved.

### Sensor (fuser exit): Paper cleared too early jam service check

Action	Yes	No
<p><b>Step 1</b> Remove all paper from the bin.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b> Check the fuser exit area, rear door, and redrive area for jammed paper or paper fragments.</p> <p>Are there jammed paper or paper fragments?</p>	Go to step 3.	Contact the next level of support.
<p><b>Step 3</b> Remove the jammed paper or paper fragments.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

### Sensor (fuser exit): Paper failed to clear jam service check

Action	Yes	No
<p><b>Step 1</b> <b>a</b> Make sure that the fuser exit area, rear door, and redrive area are free of jammed paper or paper fragments <b>b</b> Make sure that the rear door can properly close. <b>c</b> Check the rear door for damage.</p> <p>Is the rear door functional and free of damage?</p>	Go to step 3.	Go to step 2.

Action	Yes	No
<p><b>Step 2</b></p> <p><b>a</b> Enter the Diagnostics menu, and then navigate to: <b>Printer diagnostics &amp; adjustments &gt; Sensor tests</b></p> <p><b>b</b> Find the sensor (fuser exit).</p> <p><b>c</b> Make sure that the sensor actuator freely moves and is not stuck.</p> <p>Does the sensor status change while toggling the sensor?</p>	Go to step 5.	Go to step 3.
<p><b>Step 3</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a></p> <p><b>b</b> Make sure that the JEXIT1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b></p> <p>Replace the rear door. See <a href="#">“Rear door removal” on page 181.</a></p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <p>Replace the fuser. See <a href="#">“Fuser removal” on page 182.</a></p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b></p> <p>Check the redrive for damage.</p> <p>Is the redrive free of damage?</p>	Go to step 8.	Go to step 7.
<p><b>Step 7</b></p> <p>Replace the redrive. See <a href="#">“Redrive removal” on page 184.</a></p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p><b>Step 8</b></p> <p>Perform a print test.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Sensor (fuser exit): Static jam service check

Action	Yes	No
<p><b>Step 1</b> Remove paper fragments and partially fed paper.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b> <b>a</b> Enter the Diagnostics menu, and then navigate to: <b>Printer diagnostics &amp; adjustments &gt; Sensor tests</b> <b>b</b> Find the sensor (fuser exit). <b>c</b> Make sure that the sensor actuator freely moves and is not stuck.</p> <p>Does the sensor status change while toggling the sensor?</p>	Go to step 4.	Go to step 3.
<p><b>Step 3</b> <b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163</a>. <b>b</b> Make sure that the JEXIT1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b> Perform a print test.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## 232 paper jams

### 232 paper jam messages

Error code	Description	Action
232.03	Paper fed from MPF was detected later than expected or was never detected at the sensor (input) during a duplex print job.	See <a href="#">“Sensor (input): Paper (duplex job) failed to arrive jam service check”</a> on page 71.
232.13	Paper fed from tray 1 was detected later than expected or was never detected at the sensor (input) during a duplex print job.	
232.23	Paper fed from tray 2 was detected later than expected or was never detected at the sensor (input) during a duplex print job.	
232.05	Paper fed from the MPF never cleared the sensor (input) during a duplex print job.	
232.15	Paper fed from tray 1 never cleared the sensor (input) during a duplex print job.	
232.25	Paper fed from tray 2 never cleared the sensor (input) during a duplex print job.	
232.93	Paper fed from an unknown tray was detected later than expected or was never detected at the sensor (input) during a duplex print job.	
232.95	Paper fed from an unknown tray never cleared the sensor (input) during a duplex print job.	

### Sensor (input): Paper (duplex job) failed to arrive jam service check

Action	Yes	No
<p><b>Step 1</b></p> <p>Remove all paper from the bin, and then resend the print job.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b></p> <p>Check the fuser access area for jammed paper and obstructions.</p> <p>Is the fuser access area free of jammed paper and obstructions?</p>	Go to step 4.	Go to step 3.
<p><b>Step 3</b></p> <p>Remove the jammed paper and obstructions.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.

Action	Yes	No
<p><b>Step 4</b> Check the duplex path area for jammed paper and obstructions.</p> <p>Is the duplex path area free of jammed paper and obstructions?</p>	Go to step 6.	Go to step 5.
<p><b>Step 5</b> Remove the jammed paper and obstructions.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b> Check the duplex guide for proper installation.</p> <p>Is the duplex guide properly installed?</p>	Go to step 8.	Go to step 7.
<p><b>Step 7</b> Reseat the duplex guide, and then make sure that it is properly closed.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p><b>Step 8</b> Check the duplex guide for damage.</p> <p>Is the duplex guide free of damage?</p>	Go to step 10.	Go to step 9.
<p><b>Step 9</b> Replace the duplex guide. See <a href="#">“Duplex guide removal” on page 187.</a></p> <p>Does the problem remain?</p>	Go to step 10.	The problem is solved.
<p><b>Step 10</b></p> <p><b>a</b> Enter the Diagnostics menu, and then navigate to: <b>Printer diagnostics &amp; adjustments &gt; Sensor tests</b></p> <p><b>b</b> Find the sensor (input).</p> <p><b>c</b> Make sure that the sensor actuator freely moves and is not stuck.</p> <p>Does the sensor status change while toggling the sensor?</p>	Go to step 12.	Go to step 11.
<p><b>Step 11</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a></p> <p><b>b</b> Make sure that the JMTR1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 12.	The problem is solved.



Action	Yes	No
<p><b>Step 12</b> Perform a print test.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## 242 paper jams

### 242 paper jam messages

Error code	Description	Action
242.26	Paper fed from tray 2 was picked but it never reached the sensor (input).	See <a href="#">“Optional tray pick drive failure service check” on page 92.</a>
242.80	Paper jam caused by the motor (tray 2) not turning on.	
242.81	Paper jam caused by the motor (tray 2) not turning off.	
242.82	Paper jam caused by the motor (tray 2) speed not ramping up to the required level.	
242.83	Paper jam caused by the motor (tray 2) stalling.	
242.84	Paper jam caused by the motor (tray 2) running too slow.	
242.85	Paper jam caused by the motor (tray 2) running too fast.	
242.86	Paper jam caused by the motor (tray 2) running too long.	

## 280–295 paper jams

### 280–295 paper jam messages

Error code	Description	Action
280.11	Paper remains detected at the sensor (ADF scan) after the printer is turned on.	See <a href="#">“ADF jam service check” on page 74.</a>
280.13	Paper never arrived at the sensor (ADF scan).	
280.15	Paper never cleared the sensor (ADF scan).	
295.01	An imagepipe error occurred. Gap between scanned pages is too small.	

## ADF jam service check

Action	Yes	No
<p><b>Step 1</b></p> <p>Check the ADF paper path for paper fragments, partially fed paper, and obstructions.</p> <ul style="list-style-type: none"> <li>• Under the ADF cover</li> <li>• Under the ADF</li> <li>• ADF bin</li> </ul> <p>Is the paper path free of paper fragments, partially fed paper, and obstructions?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Remove the paper fragments, partially fed paper, and obstructions.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p><b>a</b> Open the ADF cover, and then check if it closes properly.</p> <p><b>b</b> Check the cover for improper installation.</p> <p>Is the ADF cover functional and properly installed?</p>	Go to step 5.	Go to step 4.
<p><b>Step 4</b></p> <p><b>a</b> Reinstall the ADF cover.</p> <p><b>b</b> Check the ADF cover for damage.</p> <p>Is the ADF cover free of damage?</p>	Go to step 5.	Go to step 6.
<p><b>Step 5</b></p> <p><b>a</b> Check the ADF cover pick mechanism for improper operation.</p> <p><b>b</b> Check the ADF pick roller and feed roller for wear, damage, and contamination.</p> <p>Are the pick components functional and free of wear, damage, and contamination?</p>	Go to step 7.	Go to step 6.
<p><b>Step 6</b></p> <p>Clean the affected components or replace the ADF cover. See <a href="#">“ADF cover removal” on page 188</a>.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b></p> <p><b>a</b> Check the ADF separator pad for improper installation.</p> <p><b>b</b> Check the separator pad for wear, damage, and contamination.</p> <p>Is the ADF separator pad properly installed and free of wear, damage, and contamination?</p>	Go to step 9.	Go to step 8.

Action	Yes	No
<p><b>Step 8</b> Reinstall, clean, or replace the ADF separator pad. See <a href="#">“ADF separator pad removal” on page 189</a>.</p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.
<p><b>Step 9</b> <b>a</b> Enter the Diagnostics menu, and then navigate to: <b>Scanner diagnostics &gt; Motor tests</b> <b>b</b> Select <b>ADF transport</b>, and then start the test.</p> <p>Does the motor run?</p>	Go to step 11.	Go to step 10.
<p><b>Step 10</b> <b>a</b> Make sure that the ADF is properly installed. Lift the ADF, and then check if it closes properly. <b>b</b> Check the ADF for damage.</p> <p>Is the ADF free of damage?</p>	Go to step 11.	Go to step 16.
<p><b>Step 11</b> <b>a</b> Enter the Diagnostics menu, and then navigate to: <b>Scanner diagnostics &gt; Sensor tests</b> <b>b</b> Run the test on the following sensors:</p> <ul style="list-style-type: none"> <li>• ADF paper present</li> <li>• ADF scan</li> </ul> <p>Do the status of the sensors change while toggling the sensors?</p>	Go to step 13.	Go to step 12.
<p><b>Step 12</b> Check the affected sensor and its flag for damage.</p> <p>Is the sensor free of damage?</p>	Go to step 13.	Go to step 16.
<p><b>Step 13</b> <b>a</b> Enter the Diagnostics menu, and then navigate to: <b>Scanner diagnostics &gt; Motor tests</b> <b>b</b> Select <b>Scanner</b>, and then start the test.</p> <p>Does the motor run?</p>	Go to step 17.	Go to step 14.

Action	Yes	No
<p><b>Step 14</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a></p> <p><b>b</b> Reseat the following cables on the controller board:</p> <ul style="list-style-type: none"> <li>• JADFM1</li> <li>• JFBM1</li> <li>• JSCANSNS1</li> <li>• scanner ground cable</li> </ul> <p>Does the problem remain?</p>	Go to step 15.	The problem is solved.
<p><b>Step 15</b></p> <p>Check the scanner and its components for damage.</p> <ul style="list-style-type: none"> <li>• Belt</li> <li>• Cables</li> </ul> <p>Is the scanner free of damage?</p>	Go to step 17.	Go to step 16.
<p><b>Step 16</b></p> <p>Replace the ADF and scanner. See <a href="#">“ADF and scanner removal” on page 189.</a></p> <p>Does the problem remain?</p>	Go to step 17.	The problem is solved.
<p><b>Step 17</b></p> <p>Make sure that the controller board is properly installed. Reseat all the cables on the controller board.</p> <p>Does the problem remain?</p>	Go to step 18.	The problem is solved.
<p><b>Step 18</b></p> <p>Check the controller board and its connector pins for damage.</p> <p>Are the controller board and its connectors free of damage?</p>	Contact the next level of support.	Go to step 19.
<p><b>Step 19</b></p> <p>Replace the controller board. See <a href="#">“Controller board removal” on page 165.</a></p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

# User attendance messages

## 29-33 user attendance messages

### 29–33 user attendance messages

Error code	Description	Action
29.xx	Packing material present on supplies.	Remove the packing material from the supplies.
31.40	The toner cartridge is missing or unresponsive.	See <a href="#">“Unsupported or unresponsive toner cartridge service check” on page 78.</a>
31.60	The imaging unit is missing or unresponsive.	See <a href="#">“Unsupported or unresponsive imaging unit service check” on page 77.</a>
32.40	The toner cartridge is unsupported.	See <a href="#">“Unsupported or unresponsive toner cartridge service check” on page 78.</a>
32.60	The imaging unit is unsupported.	See <a href="#">“Unsupported or unresponsive imaging unit service check” on page 77.</a>
33.40	A non-Lexmark black toner cartridge was detected.	See <a href="#">“Unsupported or unresponsive toner cartridge service check” on page 78.</a>
33.60		

### Unsupported or unresponsive imaging unit service check

Action	Yes	No
<p><b>Step 1</b></p> <p>Check whether the imaging unit installed is genuine and supported by the printer model.</p> <p>Is the imaging unit a genuine and supported Lexmark unit?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Install a genuine and supported Lexmark imaging unit.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p><b>a</b> Check the imaging unit contacts for contamination. <b>b</b> Check the imaging unit for leaks and damage.</p> <p>Are the imaging unit and its contacts free of contamination and damage?</p>	Go to step 5.	Go to step 4.
<p><b>Step 4</b></p> <p>Clean or replace the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.

Action	Yes	No
<p><b>Step 5</b></p> <p><b>a</b> Check the imaging unit smart chip contacts for contamination. <b>b</b> Check if the contacts are bent or damaged.</p> <p>Are the contacts free of contamination and damage?</p>	Go to step 7.	Go to step 6.
<p><b>Step 6</b></p> <p>Clean or repair the smart chip contact.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b></p> <p>Reseat the smart chip contact cable on the controller board.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

### Unsupported or unresponsive toner cartridge service check

Action	Yes	No
<p><b>Step 1</b></p> <p>Check whether the toner cartridge installed is genuine.</p> <p>Is the cartridge a genuine and supported Lexmark unit?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Install a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p><b>a</b> Check the toner cartridge contacts for contamination. <b>b</b> Check the toner cartridge for leaks and damage.</p> <p>Are the toner cartridge and its contacts free of contamination and damage?</p>	Go to step 5.	Go to step 4.
<p><b>Step 4</b></p> <p>Clean or replace the toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <p>Check the toner cartridge smart chip contacts for contamination.</p> <p>Are the contacts free of contamination?</p>	Go to step 7.	Go to step 6.

Action	Yes	No
<b>Step 6</b> Clean the smart chip contact.  Does the problem remain?	Go to step 7.	The problem is solved.
<b>Step 7</b> Reseat the smart chip contact cable on the controller board.  Does the problem remain?	Contact the next level of support.	The problem is solved.

## 4y user attendance messages

### 41-43 user attendance messages

**Note:** The .xy in the error code after 42 indicates the printer and cartridge regions. Where x is the printer region and y is the cartridge region. The numeric value is from 0 to 6. See the following table for the xy definitions:

#### Printer and toner cartridge regions

Region	Numeric code
The printer is not regionalized and matches any regionalized cartridge.	0y
The cartridge is not regionalized and only matches with printer region 0.	x0
North America (United States, Canada)	1
European Economic Area, Western Europe, Nordic countries, Switzerland	2
Asia Pacific	3
Latin America	4
Rest of Europe, Middle East, Africa	5
Australia, New Zealand	6
Invalid region	9

Error code	Description	Action
41.60	The imaging unit and toner cartridge are mismatched or incompatible.	See <a href="#">“Mismatched supplies error service check” on page 81.</a>
42.10	Toner cartridge region does not match the printer region.	See <a href="#">“Toner cartridge service check” on page 82.</a>
42.02		
42.03		
42.04		
42.05		
42.09		
42.10		
42.12		
42.13		
42.14		
42.15		
42.19		
42.20		
42.21		
42.23		
42.24		
42.25		
42.29		
42.30		



Error code	Description	Action
42.31	Toner cartridge region does not match the printer region.	See <a href="#">“Toner cartridge service check” on page 82.</a>
42.32		
42.34		
42.35		
42.39		
42.40		
42.41		
42.42		
42.43		
42.45		
42.49		
42.50		
42.51		
42.52		
42.53		
42.54		
42.59		
42.90		
42.91		
42.92		
42.93		
42.94		
42.95		
43.40	A toner cartridge sensor error was detected.	

### Mismatched supplies error service check

Action	Yes	No
<p><b>Step 1</b></p> <p>Check whether the supplies installed are genuine and supported by the printer model.</p> <p>Are the supplies genuine and supported Lexmark units?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Install genuine and supported Lexmark units.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.

Action	Yes	No
<p><b>Step 3</b> Replace the affected supply with the correct unit.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

### Toner cartridge service check

Action	Yes	No
<p><b>Step 1</b> Make sure that the imaging unit and toner cartridge are genuine Lexmark supplies.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b></p> <ul style="list-style-type: none"> <li><b>a</b> Shake the toner cartridge.</li> <li><b>b</b> Clean the toner cartridge smart chip contacts, and then check the contacts for damage.</li> <li><b>c</b> Clean the toner cartridge spring contacts, and then check the contacts for damage.</li> <li><b>d</b> Perform a print test.</li> </ul> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b> Reset the printer configuration. See <a href="#">“Restoring the printer configuration” on page 149</a>.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## 8y user attendance messages

### 80-88 user attendance messages

Error code	Description	Action
80.0x	The remaining life of the fuser, pick roller, or transfer roller are nearly low.	See <a href="#">“Supplies low service check” on page 84.</a>
80.1x	The remaining life of the fuser, pick roller, or transfer roller are low.	
80.2x	The remaining life of the fuser, pick roller, or transfer roller are very low.	
80.3x	The life of the fuser, pick roller, or transfer roller has ended.	
84.0x	The remaining life of the imaging unit is nearly low.	
84.1x	The remaining life of the imaging unit is low.	
84.2x	The remaining life of the imaging unit is very low.	
84.3x	The imaging unit life has ended.	
84.4x	The imaging unit life has ended. The printer forces a hard stop on the imaging unit.	
88.0x	The remaining life of the toner cartridge is nearly low.	
88.1x	The remaining life of the toner cartridge is low.	
88.2x	The remaining life of the toner cartridge is very low.	
88.3x	The toner cartridge life has ended.	
88.4x	The toner cartridge life has ended. The printer forces a hard stop on the toner cartridge.	

## Supplies low service check

Action	Yes	No
<p><b>Step 1</b> Perform a print test on paper from a fresh package, and then check the result.</p> <p>Are there print quality defects on the test page?</p>	Go to step 2.	Go to step 3.
<p><b>Step 2</b> Identify, and then resolve the print quality defects. See <a href="#">“Fixing print quality issues” on page 30</a>.</p> <p><b>Note:</b> If a supply was replaced, then make sure that the maintenance kit counter is reset.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b> Perform a feed test to check if the printer has paper feed problems.</p> <p>Does the printer have a problem feeding paper during the test?</p>	Go to step 4.	Go to step 5.
<p><b>Step 4</b> Resolve the feed problem.</p> <p><b>Note:</b> If a transfer roller was replaced, then make sure that the maintenance kit counter is reset.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b> Replace the affected part with a new one.</p> <ul style="list-style-type: none"> <li>• Fuser</li> <li>• Pick roller</li> <li>• Transfer roller</li> </ul> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

# Printer hardware errors

## 111 errors

### 111 error messages

Error code	Description	Action
111.20	Printhead error (mirror motor lock) was detected before the motor was turned on.	See <a href="#">“Printhead service check” on page 85</a> .
111.21	No printhead power (+5 V) when the laser servo started.	
111.30	The printhead failed during power-on tests.	
111.31	Printhead error (no first HSYNC) was detected.	
111.32	Printhead error (lost HSYNC) was detected.	
111.33	Printhead error (lost HSYNC) was detected during servo.	
111.34	Printhead error (mirror motor lost lock) was detected.	
111.35	Printhead error (mirror motor never got first lock) was detected.	
111.36	Printhead error (mirror motor lock never stabilized) was detected.	
111.37	Paper reached the sensor but the mirror motor was not locked.	
111.38	Paper reached the sensor (input) but the printhead startup was not complete.	
111.40	The wrong printhead is installed.	
111.91	Printhead error (bad facet time reading).	

### Printhead service check

Action	Yes	No
<p><b>Step 1</b></p> <p>Perform a POR.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b></p> <p><b>a</b> Make sure that the JVD01 and JMIR1 cables are properly connected on the controller board.</p> <p><b>b</b> Check the cables for damage.</p> <p>Are the cables properly connected and free of damage?</p>	Go to step 4.	Go to step 3.

Action	Yes	No
<p><b>Step 3</b>            Replace the printhead. See <a href="#">“Printhead removal” on page 182.</a></p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b>            Perform a POR.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b>            Replace the controller board. See <a href="#">“Controller board removal” on page 165.</a></p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## 121 errors

### 121 error messages

Error code	Description	Action
121.00	Fuser did not reach the required temperature.	See <a href="#">“Fuser service check” on page 88.</a>
121.02	Fuser went over the required temperature during EWC/line voltage detection.	
121.04	During an attempt to heat up, the fuser relay was open and the micro-controller was not reporting an error.	
121.05	During an attempt to heat up, the fuser relay was open and the micro-controller was reporting an error.	
121.10	Fuser did not reach the required temperature during the start of EWC/line voltage detection.	
121.11	Fuser reached the required temperature too late during the final EWC/line voltage detection.	
121.12	Fuser did not reach the required temperature during the final EWC/line voltage detection.	
121.13	Fuser reached the required temperature too fast during the final EWC/line voltage detection.	
121.14	Fuser is heating too fast.	
121.20	Fuser did not reach the required temperature during steady state control. This can occur during printing or in standby mode.	
121.22	Open fuser relay was detected.	
121.23	Fuser relay was turned off, but the feedback to the engine code indicated that it was still open.	
121.24	Fuser did not reach the required temperature during the final EWC/line voltage detection.	
121.28	Fuser did not reach the required temperature during EP warm-up.	
121.32	Fuser did not reach the required temperature at 100% power.	
121.33	Fuser did not reach the required temperature while page is in the fuser).	
121.34	Fuser did not reach the required temperature during steady state control.	
121.50	Fuser went over the required temperature during global over-temp check.	
121.52	Main thermistor temperature is out of range.	
121.53	Main thermistor temperature change rate is out of range.	
121.71	Open fuser main heater thermistor was detected.	

## Fuser service check

Action	Yes	No
<p><b>Step 1</b> Make sure that the fuser is properly installed.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b> Check whether the fuser installed is genuine and supported by the printer model.</p> <p>Is the fuser a genuine and supported Lexmark unit?</p>	Go to step 3.	Go to step 5.
<p><b>Step 3</b> Check if the fuser type is compatible with the printer model.</p> <p>Are the fuser and printer compatible?</p>	Go to step 4.	Go to step 5.
<p><b>Step 4</b> Check the fuser life.</p> <p>Has the fuser reached its end of life?</p>	Go to step 5.	Go to step 6.
<p><b>Step 5</b> Replace the fuser. See <a href="#">“Fuser removal” on page 182</a>.</p> <p><b>Note:</b> Make sure that the new fuser is supported by the printer model.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b> Make sure that the voltage output of the electrical outlet matches the voltage rating of the printer.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b> Make sure that the JFUSER1 and JEXIT1 cables are properly connected on the controller board.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p><b>Step 8</b> Make sure that the high voltage cable is properly connected to the LVPS.</p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.
<p><b>Step 9</b> Perform a POR.</p> <p>Does the problem remain?</p>	Go to step 10.	The problem is solved.



Action	Yes	No
<b>Step 10</b> Replace the LVPS. See <a href="#">“LVPS removal” on page 167.</a>  Does the problem remain?	Go to step 11.	The problem is solved.
<b>Step 11</b> Replace the fuser. See <a href="#">“Fuser removal” on page 182.</a>  Does the problem remain?	Contact the next level of support.	The problem is solved.

## 126 errors

### 126 error messages

Error code	Description	Action
126.01	Line frequency has gone outside the operating range.	See <a href="#">“LVPS service check” on page 89.</a>
126.02	No line frequency was detected.	
126.05	The LVPS power dropped but the printer was not in sleep mode.	
126.06	LVPS 25 V line error was detected.	
126.07	LVPS 5 V rail was down during power-on.	
126.10	No line frequency was detected.	
126.11	Line frequency exceeded the operating range.	
126.14	LVPS relay is stuck or closed.	

### LVPS service check

Action	Yes	No
<b>Step 1</b> Make sure that the printer is directly plugged into the electrical outlet.  Does the problem remain?	Go to step 2.	The problem is solved.
<b>Step 2</b> Make sure that the voltage output of the electrical outlet matches the voltage rating of the printer.  Does the problem remain?	Go to step 3.	The problem is solved.

Action	Yes	No
<p><b>Step 3</b></p> <p><b>a</b> Make sure that the PCN1 cable on the LVPS is properly connected.</p> <p><b>b</b> Make sure that the JLVPS1 cable on the controller board is properly connected.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b></p> <p>Make sure that the voltage output of the electrical outlet matches the voltage rating of the LVPS.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <p>Perform a POR.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b></p> <p>Replace the LVPS. See <a href="#">“LVPS removal” on page 167</a>.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b></p> <p>Perform a POR.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## 140 errors

### 140 error messages

Error code	Description	Action
140.80	Motor (main drive) does not turn on.	See <a href="#">“Motor (main drive) service check” on page 91</a> .
140.81	Motor (main drive) does not turn off.	
140.82	Motor (main drive) speed did not ramp up to the required level.	
140.83	Motor (main drive) stalled.	
140.85	Motor (main drive) ran too fast.	
140.86	Motor (main drive) ran too long.	

## Motor (main drive) service check

Action	Yes	No
<p><b>Step 1</b></p> <p><b>a</b> Remove the imaging unit.</p> <p><b>b</b> Manually turn the photoconductor gear, and then check the cleaning blade for damage or failure.</p> <p>Does the photoconductor drum rotate?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p><b>a</b> Make sure that the JMTR1 cable is properly connected to the controller board.</p> <p><b>b</b> Check the cable for damage.</p> <p>Is the cable free of damage?</p>	Go to step 5.	Go to step 4.
<p><b>Step 4</b></p> <p>Replace the JMTR1 cable.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <p>Perform a POR.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## 162 errors

### 162 error messages

Error code	Description	Action
162.80	The motor (tray 2 pick) does not turn on.	See <a href="#">“Optional tray pick drive failure service check” on page 92.</a>
162.81	The motor (tray 2 pick) does not turn off.	
162.82	The motor (tray 2 pick) speed did not ramp up to the required level.	
162.83	The motor (tray 2 pick) stalled.	
162.84	The motor (tray 2 pick) ran too slow.	
162.85	The motor (tray 2 pick) ran too fast.	
162.86	The motor (tray 2 pick) ran too long.	

## Optional tray pick drive failure service check

Action	Yes	No
<p><b>Step 1</b> Check if the optional tray motor (pick) runs.</p> <p>Does the motor run?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b> Reseat the motor cable, and then reseat the cable on the optional tray controller board.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b> <b>a</b> Remove the optional tray. <b>b</b> Under the printer, check the interconnect cable for damage.</p> <p>Is the cable free of damage?</p>	Go to step 5.	Go to step 4.
<p><b>Step 4</b> Insert the optional tray.</p> <p><b>Note:</b> Make sure that the interconnect cable properly fits with the socket on the optional tray.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b> <b>a</b> Remove the tray insert from the optional tray. <b>b</b> Check if the lift plate moves properly. <b>c</b> Check the lift plate gears for damage.</p> <p>Is the tray insert functional and free of damage?</p>	Contact the next level of support.	Go to step 6.
<p><b>Step 6</b> Replace the tray insert.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## 6yy errors

### 600-680 error messages

Error code	Description	Action	
600.01	Toner tally from the RIP was not received.	Resend the print job. If the problem remains, then contact the next level of support.	
600.02	Video did not start.		
600.04	Duplex page was not picked.		
600.05	Invalid PH NVRAM Type error was detected.		
600.06	Paper port driver is unresponsive.		
600.07	Page is at image point before EP is ready.		
600.09	EP update error was detected.		
600.10	EP late run-in error was detected.		
600.11	Packing material was detected by the sensor (toner density).		Remove the imaging unit and toner cartridge, and then make sure that all packing material are properly removed.
600.95	RIP intentionally declared a jam error, usually to prevent a kiosk user from printing free pages.		Resend the print job. If the problem remains, then contact the next level of support.
602.29	Tray 2 was not ready for picking.	See <a href="#">“Optional tray pick drive failure service check” on page 92.</a>	
611.02	An Input ISR error occurred and the printhead was not ready.	See <a href="#">“Printhead service check” on page 85.</a>	
611.32	Lost Hsync errors were detected. Laser safety interlock system may be the cause.		
611.33	Lost Hsync errors were detected during servo.		
611.34	A mirror motor lock error was detected.		
611.35	Mirror motor never got first lock.		
611.36	Mirror motor lock never stabilized.		
611.37	Paper reached the sensor (input) but the mirror motor was not locked.		
611.38	Paper reached the sensor (input) but the printhead startup was not complete.		
621.01	Fuser heater was too cold when paper entered the fuser nip.	Resend the print job. If the problem remains, then contact the next level of support.	
640.84	The motor (main drive) stalled or ran too slow.	See <a href="#">“Motor (main drive) service check” on page 91.</a>	

Error code	Description	Action
662.23	The tray 2 lift plate failed to lift.	See <a href="#">“Optional tray pick drive failure service check” on page 92.</a>
662.80	Jam detection caused by motor (tray 2) not turning on.	
662.81	Jam detection caused by motor (tray 2) not turning off.	
662.82	Jam detection caused by motor (tray 2) speed not ramping up to the required level.	
662.83	Jam detection caused by motor (tray 2) stalling.	
662.84	Jam detection caused by motor (tray 2) running too slow.	
662.85	Jam detection caused by motor (tray 2) running too fast.	
662.86	Jam detection caused by motor (tray 2) running too long.	
680.20	During an ADF job, there was no paper detected on the ADF tray.	See <a href="#">“ADF failure service check” on page 95.</a>
680.40	During a scan job, a communication error occurred.	See <a href="#">“Scanner communication error service check” on page 96.</a>

### Fuser overheated service check

Action	Yes	No
<p><b>Step 1</b></p> <p><b>a</b> Allow fuser to cool for three minutes.</p> <p><b>b</b> Resend the print job.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b></p> <p>Replace the fuser. See <a href="#">“Fuser removal” on page 182.</a></p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## ADF failure service check

Action	Yes	No
<p><b>Step 1</b></p> <p>Check the ADF paper path for paper fragments, partially fed paper, and obstructions.</p> <ul style="list-style-type: none"> <li>• Under the ADF cover</li> <li>• Under the ADF</li> <li>• ADF bin</li> </ul> <p>Is the paper path free of paper fragments, partially fed paper, and obstructions?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Remove the paper fragments, partially fed paper, and obstructions.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p><b>a</b> Enter the Diagnostics menu, and then navigate to: <b>Scanner diagnostics &gt; Motor tests</b></p> <p><b>b</b> Select <b>ADF transport</b>, and then start the test.</p> <p>Does the motor run?</p>	Go to step 5.	Go to step 4.
<p><b>Step 4</b></p> <p><b>a</b> Make sure that the ADF is properly installed. Lift the ADF, and then check if it closes properly.</p> <p><b>b</b> Check the ADF for damage.</p> <p>Is the ADF free of damage?</p>	Go to step 5.	Go to step 9.
<p><b>Step 5</b></p> <p><b>a</b> Enter the Diagnostics menu, and then navigate to: <b>Scanner diagnostics &gt; Sensor tests</b></p> <p><b>b</b> Run the test on the following sensors:</p> <ul style="list-style-type: none"> <li>• ADF paper present</li> <li>• ADF scan</li> </ul> <p>Does the sensor status change while toggling the sensors?</p>	Go to step 10.	Go to step 6.
<p><b>Step 6</b></p> <p>Check the affected sensor and its flag for damage.</p> <p>Is the sensor free of damage?</p>	Go to step 7.	Go to step 9.

Action	Yes	No
<p><b>Step 7</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a></p> <p><b>b</b> Reseat the scanner cables.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p><b>Step 8</b></p> <p>Check the cable for damage.</p> <p>Is the cable free of damage?</p>	Go to step 10.	Go to step 9.
<p><b>Step 9</b></p> <p>Replace the ADF and scanner. See <a href="#">“ADF and scanner removal” on page 189.</a></p> <p>Does the problem remain?</p>	Go to step 10.	The problem is solved.
<p><b>Step 10</b></p> <p>Make sure that the controller board is properly installed. Reseat all the cables on the controller board.</p> <p>Does the problem remain?</p>	Go to step 11.	The problem is solved.
<p><b>Step 11</b></p> <p>Check the controller board and its connector pins for damage.</p> <p>Are the controller board and its connectors free of damage?</p>	Contact the next level of support.	Go to step 12.
<p><b>Step 12</b></p> <p>Replace the controller board. See <a href="#">“Controller board removal” on page 165.</a></p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

### Scanner communication error service check

Action	Yes	No
<p><b>Step 1</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a></p> <p><b>b</b> Reseat the following cables on the controller board:</p> <ul style="list-style-type: none"> <li>• JADFM1</li> <li>• JFBM1</li> <li>• JSCANSNS1</li> <li>• scanner ground cable</li> </ul> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.



Action	Yes	No
<p><b>Step 2</b></p> <p>Make sure that the scanner ground cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p>Replace the ADF and scanner. See <a href="#">“ADF and scanner removal” on page 189</a>.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b></p> <p>Replace the controller board. See <a href="#">“Controller board removal” on page 165</a>.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## 84y errors

### 840–845 error messages

Error code	Description	Action
840.01	The scanner was manually disabled by the user.	See <a href="#">“Scanner communication failure service check” on page 98</a> .
840.02	The scanner was automatically disabled by the printer after two consecutive hardware failures.	
842.00	A scanner communication error (no response) was detected.	
842.01	A scanner communication error (HW protocol) was detected.	
842.02	A scanner communication error (logical protocol) was detected.	
843.00	The scanner CIS failed to reach its home position.	See <a href="#">“Scanner noise service check” on page 100</a> .
845.03	A back side scan error occurred.	See <a href="#">“Duplex scan error service check” on page 101</a> .

## Scanner communication failure service check

Action	Yes	No
<p><b>Step 1</b></p> <p>Check the ADF paper path for paper fragments, partially fed paper, and obstructions.</p> <ul style="list-style-type: none"> <li>• Under the ADF cover</li> <li>• Under the ADF</li> <li>• ADF bin</li> </ul> <p>Is the paper path free of paper fragments, partially fed paper, and obstructions?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p>Remove the paper fragments, partially fed paper, and obstructions.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a></p> <p><b>b</b> Reseat the scanner cables on the controller board.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b></p> <p>Check the cables for damage.</p> <p>Is the cable free of damage?</p>	Go to step 5.	Go to step 12.
<p><b>Step 5</b></p> <p><b>a</b> From the control panel, navigate to:  <b>Settings &gt; Device &gt; Maintenance &gt; Config Menu &gt; Scanner Configuration &gt; Disable Scanner</b></p> <p><b>b</b> Select <b>Enable</b>.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b></p> <p><b>a</b> Enter the Diagnostics menu, and then navigate to:  <b>Scanner diagnostics &gt; Motor tests</b></p> <p><b>b</b> Select <b>ADF transport</b>, and then start the test.</p> <p>Does the motor run?</p>	Go to step 8.	Go to step 7.
<p><b>Step 7</b></p> <p><b>a</b> Make sure that the ADF is properly installed. Lift the ADF, and then check if it closes properly.</p> <p><b>b</b> Check the ADF for damage.</p> <p>Is the ADF free of damage?</p>	Go to step 8.	Go to step 13.

Action	Yes	No
<p><b>Step 8</b></p> <p><b>a</b> Enter the Diagnostics menu, and then navigate to: <b>Scanner diagnostics &gt; Sensor tests</b></p> <p><b>b</b> Run the test on the following sensors:</p> <ul style="list-style-type: none"> <li>• ADF paper present</li> <li>• ADF scan</li> </ul> <p>Does the sensor status change while toggling the sensors?</p>	Go to step 10.	Go to step 9.
<p><b>Step 9</b></p> <p>Check the affected sensor and its flag for damage.</p> <p>Is the sensor free of damage?</p>	Go to step 10.	Go to step 13.
<p><b>Step 10</b></p> <p><b>a</b> Enter the Diagnostics menu, and then navigate to: <b>Scanner diagnostics &gt; Motor tests</b></p> <p><b>b</b> Select <b>Scanner</b>, and then start the test.</p> <p>Does the motor run?</p>	Go to step 14.	Go to step 11.
<p><b>Step 11</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a></p> <p><b>b</b> Reseat the scanner cables.</p> <p>Does the problem remain?</p>	Go to step 12.	The problem is solved.
<p><b>Step 12</b></p> <p>Check the scanner and its components for damage.</p> <ul style="list-style-type: none"> <li>• CIS</li> <li>• Belt</li> <li>• Cables</li> </ul> <p>Is the scanner free of damage?</p>	Go to step 14.	Go to step 13.
<p><b>Step 13</b></p> <p>Replace the ADF and scanner. See <a href="#">“ADF and scanner removal” on page 189.</a></p> <p>Does the problem remain?</p>	Go to step 14.	The problem is solved.
<p><b>Step 14</b></p> <p>Make sure that the controller board is properly installed. Reseat all the cables on the controller board.</p> <p>Does the problem remain?</p>	Go to step 15.	The problem is solved.

Action	Yes	No
<p><b>Step 15</b> Check the controller board and its connector pins for damage.</p> <p>Are the controller board and its connectors free of damage?</p>	Contact the next level of support.	Go to step 16.
<p><b>Step 16</b> Replace the controller board. See <a href="#">“Controller board removal” on page 165.</a></p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

### Scanner noise service check

Action	Yes	No
<p><b>Step 1</b> With the scanner cover open, do a copy job to check the scanner lamp.</p> <p><b>Note:</b> The scanner lamp must light up and move along the scan area.</p> <p>Is the scanner lamp functional?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a></p> <p><b>b</b> Reseat the scanner cables on the controller board.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b> Check the scanner and its components for damage.</p> <ul style="list-style-type: none"> <li>• Scanner lamp</li> <li>• Motor (scanner)</li> <li>• Scanner belt</li> <li>• Glass panes</li> <li>• Cables</li> </ul> <p>Are the scanner and its components free of damage?</p>	Go to step 5.	Go to step 4.
<p><b>Step 4</b> Replace the ADF and scanner. See <a href="#">“ADF and scanner removal” on page 189.</a></p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.

Action	Yes	No
<p><b>Step 5</b> Check the firmware version.</p> <p>Is the firmware updated to the latest version?</p>	Go to step 7.	Go to step 6.
<p><b>Step 6</b> Update the firmware.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b> Make sure that the controller board is properly installed. Reseat all the cables on the controller board.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p><b>Step 8</b> Replace the controller board. See <a href="#">“Controller board removal” on page 165</a>.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

### Duplex scan error service check

Action	Yes	No
<p><b>Step 1</b> Check the ADF paper path for paper fragments, partially fed paper, and obstructions.</p> <ul style="list-style-type: none"> <li>• Under the ADF cover</li> <li>• Under the ADF</li> <li>• ADF bin</li> </ul> <p>Is the paper path free of paper fragments, partially fed paper, and obstructions?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b> Remove the paper fragments, partially fed paper, and obstructions.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p><b>a</b> Enter the Diagnostics menu, and then navigate to: <b>Scanner diagnostics &gt; Motor tests</b></p> <p><b>b</b> Select <b>ADF transport</b>, and then start the test.</p> <p>Does the motor run?</p>	Go to step 5.	Go to step 4.

Action	Yes	No
<p><b>Step 4</b></p> <p><b>a</b> Make sure that the ADF is properly installed. Lift the ADF, and then check if it closes properly.</p> <p><b>b</b> Check the ADF for damage.</p> <p>Is the ADF free of damage?</p>	Go to step 5.	Go to step 7.
<p><b>Step 5</b></p> <p><b>a</b> Enter the Diagnostics menu, and then navigate to: <b>Scanner diagnostics &gt; Sensor tests</b></p> <p><b>b</b> Run the test on the following sensors:</p> <ul style="list-style-type: none"> <li>• ADF paper present</li> <li>• ADF scan</li> </ul> <p>Does the sensor status change while toggling the sensors?</p>	Go to step 8.	Go to step 6.
<p><b>Step 6</b></p> <p>Check the affected sensor and its flag for damage.</p> <p>Is the sensor free of damage?</p>	Go to step 8.	Go to step 7.
<p><b>Step 7</b></p> <p><b>a</b> Remove the right cover. See <a href="#">“Right cover removal” on page 163.</a></p> <p><b>b</b> Reseat the scanner cables on the controller board.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p><b>Step 8</b></p> <p>Check the cable for damage.</p> <p>Is the cable free of damage?</p>	Go to step 9.	Go to step 10.
<p><b>Step 9</b></p> <p>With the scanner cover open, do a duplex copy job to check the ADF scanner lamp.</p> <p><b>Note:</b> The scanner lamp must light up.</p> <p>Is the scanner lamp functional?</p>	Contact the next level of support.	Go to step 10.
<p><b>Step 10</b></p> <p>Replace the ADF and scanner. See <a href="#">“ADF and scanner removal” on page 189.</a></p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Procedure before starting the 9yy service checks

Retrieve certain information that helps your next level of support in diagnosing the problem before replacing the controller board.

**Warning—Potential Damage:** Do not replace the controller board unless instructed by your next level of support.

- 1 Collect the history information and firmware logs (Fwdebug and logs.tar.gz) from the SE menu.
- 2 Collect the settings from the Menu Settings Page.
- 3 Collect information from the user.

**Note:** Not all of the items are retrievable from the printer that you are working on.

### A. Collecting the history information from the SE menu

**Note:** Make sure that your printer is connected to a network or to a print server.

- 1 Open a web browser, type `http://printer_IP_address/se`, and then press **Enter**.

**Notes:**

- `printer_IP_address` is the TCP/IP address of the printer.
- `se` is required to access the printer diagnostic information.

- 2 Click **History Information**, copy all information, and then save it as a text file.
- 3 E-mail the text file to your next level of support.

### B. Collecting the firmware logs (Fwdebug and logs.tar.gz) from the SE menu

**Notes:**

- Make sure that your printer is connected to a network or to a print server.
- Some printers are designed to restart automatically after a 9yy error. On these printers, you can retrieve the secondary crash code information using the SE menu.

- 1 Open a web browser, type `http://printer_IP_address/se`, and then press **Enter**.
- 2 Click **Logs Gzip Compressed**.

**Note:** A logs.tar.gz file is saved to the Downloads folder. The file may take several minutes to save. You may rename the file if a logs.tar.gz already exists in the Downloads folder.

- 3 E-mail the logs to your next level of support.

**Note:** To download the FWdebug log to a flash drive, see [“General SE Menu” on page 139](#).

### C. Collecting the settings from the Menu Settings Page

**Note:** The Menu Settings Page is different for each printer. For more information, see the printer *User's Guide*. Your next level of support will tell you which page they want to see.

## Copying the Menu Settings Page from the Embedded Web Server (EWS)

**Note:** Make sure that your printer is connected to a network or to a print server.

- 1 Open a web browser, type **http://printer\_IP\_address**, and then press **Enter**.
- 2 Click Settings, and then select one of the settings pages from the links shown on the page.
- 3 Copy all the information, and then save it as a text file.
- 4 E-mail the text file to your next level of support.

## Printing the Menu Settings Page

- 1 From the home screen, navigate to:  
**Settings > Reports > Menu Settings Page**
- 2 E-mail the report to your next level of support.

## D. Collecting information from the user

Ask the user for information about the following:

- Print job being run
- Operating system being used
- Print driver being used
- Other information on what was happening when the 9yy error occurred

## 900 errors

### 900 error messages

Error code	Description	Action
900.xx	Unrecoverable RIP software error/illegal trap.	See <a href="#">“900 error service check” on page 104</a> .

### 900 error service check

Action	Yes	No
<b>Step 1</b> <b>a</b> Perform a POR. <b>b</b> Check if a 900.xx error code appears on the display.  Does a 900.xx error code appear?	Go to step 4.	Go to step 2.
<b>Step 2</b> Check if another type of error code appears instead of the 900.xx error code.  Does a different error code appear?	Go to step 3.	Go to step 4.



Action	Yes	No
<p><b>Step 3</b> See the error code and its service instructions in the printer <i>Service Manual</i>.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b></p> <ul style="list-style-type: none"> <li>a Turn off the printer.</li> <li>b At the rear of the printer, disconnect the network cable, USB cable, and fax line.</li> <li>c Turn on the printer.</li> </ul> <p>Does the problem remain?</p>	Go to step 12.	Go to step 5.
<p><b>Step 5</b></p> <ul style="list-style-type: none"> <li>a From the control panel, navigate to the <b>Reports</b> menu.</li> <li>b Select <b>Device Statistics</b> and <b>Device Settings</b>.</li> </ul> <p>Does the problem remain?</p>	Go to step 12.	Go to step 6.
<p><b>Step 6</b> Check if the printer has a scanner.</p> <p>Does the printer have a scanner?</p>	Go to step 7.	Go to step 8.
<p><b>Step 7</b> Using the scanner, perform a one-page copy job in color.</p> <p>Does the problem remain?</p>	Go to step 12.	Go to step 8.
<p><b>Step 8</b></p> <ul style="list-style-type: none"> <li>a Turn off the printer.</li> <li>b At the rear of the printer, connect the network cable, USB cable, and fax line.</li> <li>c Turn on the printer.</li> </ul> <p>Does the problem remain?</p>	Go to step 9.	Go to step 10.
<p><b>Step 9</b></p> <ul style="list-style-type: none"> <li>a Start the printer in <b>Invalid engine mode</b>. See <a href="#">“Entering invalid engine mode” on page 141</a>.</li> <li>b Check if an <b>Invalid Engine Code</b> message appears.</li> </ul> <p>Does an <b>Invalid Engine Code</b> message appear?</p>	Go to step 10.	Contact the next level of support.

Action	Yes	No
<p><b>Step 10</b></p> <p>Using the Device Settings report that is printed in step 5, check if the firmware level is older than the latest available version.</p> <p>Is the firmware version older, and does the customer agree to update the firmware?</p>	Go to step 11.	Contact the next level of support.
<p><b>Step 11</b></p> <p>Update the firmware to the latest version.</p> <p>Does the problem remain?</p>	Go to step 12.	The problem is solved.
<p><b>Step 12</b></p> <p><b>a</b> Turn off the printer.</p> <p><b>b</b> Reseat all FFC type cables on the controller board, and then make sure that the cables are properly connected.</p> <p><b>c</b> Make sure that all the cables on the controller board and scanner are properly connected.</p> <p><b>d</b> Turn on the printer.</p> <p><b>e</b> From the control panel, navigate to the <b>Reports</b> menu, and then select <b>Device Statistics</b> and <b>Device Settings</b>.</p> <p><b>f</b> For MFPs, perform a one-page copy and scan job in color.</p> <p>Does the problem remain?</p>	Go to step 13.	The problem is solved.
<p><b>Step 13</b></p> <p>Check if a hard disk is installed.</p> <p>Is a hard disk installed?</p>	Go to step 14.	Go to step 17.
<p><b>Step 14</b></p> <p><b>a</b> Check for buffered print jobs, and then delete them.</p> <p><b>b</b> Perform a POR.</p> <p>Does the problem remain?</p>	Go to step 15.	The problem is solved.
<p><b>Step 15</b></p> <p><b>a</b> Turn off the printer.</p> <p><b>b</b> Uninstall the hard disk.</p> <p><b>c</b> Perform a POR.</p> <p>Does the problem remain?</p>	Go to step 17.	Go to step 16.
<p><b>Step 16</b></p> <p>Replace the hard disk.</p> <p>Does the problem remain?</p>	Go to step 17.	The problem is solved.

Action	Yes	No
<p><b>Step 17</b></p> <p>Check if the printer has any of the following components installed:</p> <ul style="list-style-type: none"> <li>• Memory options</li> <li>• Fax card</li> <li>• Modem</li> <li>• Wireless and network option cards</li> </ul> <p>Is any of the components installed?</p>	Go to step 18.	Go to step 21.
<p><b>Step 18</b></p> <p><b>a</b> Turn off the printer.</p> <p><b>b</b> Remove all the installed components.</p> <p><b>c</b> Turn on the printer.</p> <p>Does the problem remain?</p>	Go to step 21.	Go to step 19.
<p><b>Step 19</b></p> <p><b>a</b> Turn off the printer.</p> <p><b>b</b> Install the following components one at a time:</p> <ul style="list-style-type: none"> <li>• Memory options</li> <li>• Fax card</li> <li>• Modem</li> <li>• Wireless and network option cards</li> </ul> <p><b>Note:</b> Make sure to perform a POR after installing each component.</p> <p>Does the problem remain?</p>	Go to step 20.	The problem is solved.
<p><b>Step 20</b></p> <p><b>a</b> Turn off the printer.</p> <p><b>b</b> Replace the components that caused the error.</p> <p><b>c</b> Turn on the printer.</p> <p>Does the problem remain?</p>	Go to step 21.	The problem is solved.
<p><b>Step 21</b></p> <p>Replace the controller board. See <a href="#">“Controller board removal” on page 165</a>.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## 912 errors

### 912 error messages

Error code	Description	Action
912.01	An engine error occurred.	Resend the print job. If the problem remains, then contact the next level of support.
912.02	An engine error occurred.	
912.04	An engine error occurred.	
912.05	An engine error occurred.	
912.06	An engine error occurred.	
912.07	An engine error occurred.	See <a href="#">“Optional tray communication error service check” on page 110.</a>
912.08	An engine error occurred.	Resend the print job. If the problem remains, then contact the next level of support.
912.09	An engine error occurred.	
912.10	An engine error occurred.	
912.13	An engine error occurred.	
912.14	An engine error occurred.	
912.15	An engine error occurred.	
912.16	An engine error occurred.	
912.17	An engine error occurred.	
912.18	An engine error occurred.	
912.19	An engine error occurred.	
912.20	An engine error occurred.	
912.21	An engine error occurred.	
912.28	An engine error occurred.	
912.30	An engine error occurred.	
912.31	An engine error occurred.	
912.32	An engine error occurred.	
912.33	An engine error occurred.	
912.34	An engine error occurred.	
912.35	An engine error occurred.	
912.36	An engine error occurred.	
912.38	An engine error occurred.	See <a href="#">“Optional tray communication error service check” on page 110.</a>

Error code	Description	Action
912.39	An engine error occurred.	Resend the print job. If the problem remains, then contact the next level of support.
912.40	An engine error occurred.	
912.42	An engine error occurred.	
912.43	An engine error occurred.	
912.44	An engine error occurred.	
912.45	An engine error occurred.	
912.46	An engine error occurred.	
912.48	An engine error occurred.	
912.49	An engine error occurred.	
912.51	An engine error occurred.	
912.52	An engine error occurred.	
912.53	An engine error occurred.	
912.54	An engine error occurred.	
912.55	An engine error occurred.	
912.56	An engine error occurred.	
912.57	An engine error occurred.	
912.58	An engine error occurred.	
912.60	An engine error occurred.	
912.61	An engine error occurred.	
912.64	An engine error occurred.	
912.65	An engine error occurred.	
912.66	An engine error occurred.	
912.69	An engine error occurred.	
912.70	An engine error occurred.	
912.72	An engine error occurred.	
912.73	An engine error occurred.	
912.74	An engine error occurred.	
912.75	An engine error occurred.	
912.77	An engine error occurred.	
912.86	An engine error occurred.	

## Optional tray communication error service check

Action	Yes	No
<p><b>Step 1</b> Check the paper path and trays for paper fragments and partially fed paper.</p> <p>Is the paper path free of paper fragments and partially fed paper?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b> Remove the paper fragments and partially fed paper.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b> Make sure that all the trays and tray inserts are properly inserted.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b> Enter the Diagnostics menu, and then select <b>Input tray quick print</b>. Perform a print test on the optional tray.</p> <p>Does the error occur in the optional tray?</p>	Go to step 5.	Contact the next level of support.
<p><b>Step 5</b></p> <ul style="list-style-type: none"> <li><b>a</b> Remove the optional tray.</li> <li><b>b</b> Make sure that the interconnect cable of the tray is properly installed.</li> <li><b>c</b> Check the interconnect cable and its connector pins for damage.</li> <li><b>d</b> Make sure that the tray controller board is properly installed.</li> <li><b>e</b> Reseat all the cables on the tray controller board.</li> <li><b>f</b> Check the optional tray controller board and its connector pins for damage.</li> </ul> <p>Are the tray interconnect cable and controller board free of damage?</p>	Contact the next level of support.	Go to step 6.
<p><b>Step 6</b> Replace the optional tray.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## 938–992 errors

### 938–992 error messages

Error code	Description	Action
938.yy	Supplies security is not enabled.	Restart the printer. If the problem remains, then contact the next level of support.
950.10	Non-Generic FRU installed. Mismatch between system NVRAM part and mirror NVRAM part. <b>Note:</b> .xx points to the setting that does not match.	See <a href="#">“NVRAM mismatch failure service check” on page 111.</a>
953.99	NVRAM chip failure with mirror part.	
980.yy	An option communication error occurred.	See <a href="#">“Optional tray communication error service check” on page 110.</a>
981.yy	An invalid paper port protocol error occurred.	
982.yy	A paper port error occurred.	
983.yy	An unsupported paper port command error occurred.	
984.yy	An invalid paper port parameter error occurred.	
992.yy	An option device software error occurred.	

### NVRAM mismatch failure service check

**Warning—Potential Damage:** To avoid NVRAM mismatch issues, replace only one of the following components at a time:

- Control panel
- Controller board

To replace a component and to test whether the problem is resolved:

- 1 Replace the affected component.

**Warning—Potential Damage:** Do not perform a Power-On Reset (POR) until the problem is resolved. If a POR is performed at this point, then the replacement part can no longer be used in another printer and must be returned to the manufacturer.

- 2 Enter the Diagnostics menu. The Diagnostics menu allows you to use temporarily the replacement part.

**Warning—Potential Damage:** Some printers perform automatically a POR if the Diagnostics menu is not opened within five seconds. If a POR is performed at this point, then the replacement part can no longer be used in another printer and must be returned to the manufacturer.

- 3 Use the Diagnostics menu to test the replacement part. Perform a feed test to check if the problem is resolved.
  - If the problem is not resolved—Turn off the printer, and then install the old part.
  - If the problem is resolved—Perform a POR.

Action	Yes	No
<p><b>Step 1</b></p> <p>Check if the control panel was recently replaced.</p> <p>Was the control panel recently replaced?</p>	Go to step 2.	Go to step 4.
<p><b>Step 2</b></p> <p>Replace the current control panel with the original control panel. See <a href="#">“Control panel removal” on page 174.</a></p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p>Replace the original control panel with a new control panel.</p> <p><b>Note:</b> Make sure that the new control panel is not previously installed from another printer.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.
<p><b>Step 4</b></p> <p>Check if the controller board was recently replaced.</p> <p>Was the controller board recently replaced?</p>	Go to step 5.	Contact the next level of support.
<p><b>Step 5</b></p> <p>Replace the current controller board with the original controller board. See <a href="#">“Controller board removal” on page 165.</a></p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b></p> <p>Replace the original controller board with a new controller board.</p> <p><b>Note:</b> Make sure that the new controller board is not previously installed from another printer.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Other symptoms

### Base printer symptoms

#### Base printer symptoms

Symptom	Action
A false tray paper low message appears.	See <a href="#">“Tray near empty service check” on page 113.</a>
A false bin full message appears	See <a href="#">“False bin full error service check” on page 114.</a>



## Tray near empty service check

Action	Yes	No
<p><b>Step 1</b> Check the actuator in the tray insert for damage.</p> <p>Is the actuator free of damage?</p>	Go to step 3.	Go to step 2.
<p><b>Step 2</b> Replace the tray insert.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b> <b>a</b> Make sure that the sensor (tray near empty) is properly installed. <b>b</b> Check the sensor for damage.</p> <p>Is the sensor free of damage?</p>	Go to step 5.	Go to step 4.
<p><b>Step 4</b> Replace the sensor (tray near empty) assembly.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b> <b>a</b> Make sure that the sensor cable is properly connected to the controller board. <b>b</b> Check the sensor cable for damage.</p> <p>Is the sensor cable free of damage?</p>	Go to step 7.	Go to step 6.
<p><b>Step 6</b> Replace the sensor cable.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b> Perform a POR.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## False bin full error service check

Action	Yes	No
<p><b>Step 1</b> Remove, and then install the bin full sensor actuator. See <a href="#">“Bin full sensor actuator removal” on page 185.</a></p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b> Check the bin full sensor actuator for damage, and replace if necessary</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b> Check the sensor (bin full) for damage, and replace if necessary.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Fax symptoms

### Fax symptoms

Symptom	Action
No dial tone.	See <a href="#">“Modem/fax card service check” on page 118.</a>
The printer does not transmit faxes.	See <a href="#">“Fax transmission service check” on page 121.</a>
The printer does not receive faxes.	See <a href="#">“Fax reception service check” on page 123.</a>
Cannot set up etherFAX.	See <a href="#">“Cannot set up etherFAX” on page 119.</a>
Cannot send or receive faxes using Etherfax.	See <a href="#">“Cannot send or receive faxes using etherFAX” on page 120.</a>
A <b>Lost connection to HTTPS Fax Server</b> error message appears.	See <a href="#">“Lost connection to HTTPS fax server when using etherFAX service check” on page 126.</a>

### Fax error log codes

Error code	Description	Action
000	No error occurred during a fax transmission.	No action is needed.
200	An error occurred when transmitting training.	<ul style="list-style-type: none"> <li>• Check the line quality.</li> <li>• Select a lower Max Speed value under the Fax Send settings.</li> <li>• Adjust the transmit level.</li> </ul>

Error code	Description	Action
3XX	An error occurred when receiving an image data.	<ul style="list-style-type: none"> <li>• Check the line quality.</li> <li>• Adjust the Receive Threshold.</li> <li>• Select a lower Max Speed value under the r Fax Receive settings.</li> </ul>
4XX	An error occurred when sending an image data.	<ul style="list-style-type: none"> <li>• Check the line quality.</li> <li>• Adjust the Transmit Level.</li> <li>• Select a lower Max Speed value under the Fax Receive settings.</li> </ul>
5XX	An unknown response is received from a remote fax device.	No action is needed. The issue is with the other device.
6XX	An error occurred when receiving a frame.	<ul style="list-style-type: none"> <li>• Check the line quality.</li> <li>• Adjust the Receive Threshold.</li> </ul>
7XX	An error occurred when sending a frame.	<ul style="list-style-type: none"> <li>• Check the line quality.</li> <li>• Adjust the Transmit Level.</li> <li>• Select a lower Max Speed value under the Fax Send settings.</li> </ul>
800	An EOT was unexpectedly received from the modem in V34 mode.	If the error persists, then disable the V34 modulation scheme.
802	Too many time-outs occurred during ECM reception.	If the error persists, then disable the ECM mode.
803	Fax cancelled by the user.	No action is needed.
804	Unexpectedly received a disconnect command from the remote end.	<ul style="list-style-type: none"> <li>• Check the line quality.</li> <li>• Adjust the Transmit Level or Receive Threshold setting.</li> <li>• The remote device could be requesting an unsupported feature.</li> </ul>
805	The remote fax device failed to respond to the DCS command.	<ul style="list-style-type: none"> <li>• Adjust the Transmit Level or Receive Threshold setting.</li> <li>• The remote device could be malfunctioning.</li> </ul>
808	T1 timeout occurred when trying to establish a connection with a remote fax device.	Adjust the Transmit Level or Receive Threshold setting.
809	T2 Timeout occurred due to loss of command/response synchronization.	Adjust the Transmit Level or Receive Threshold setting.
80A	T5 Timeout occurred when transmitting image data to remote fax device.	<ul style="list-style-type: none"> <li>• Check line quality.</li> <li>• Adjust the Transmit Level setting</li> <li>• Decrease the Max Speed setting under Fax Send settings.</li> </ul>

Error code	Description	Action
80B	Too many errors when transmitting in ECM mode.	<ul style="list-style-type: none"> <li>• Check line quality.</li> <li>• Adjust the Transmit Level setting</li> <li>• Select a lower 'Max Speed' value under Fax Send settings.</li> </ul>
80C	Remote device failed to respond to the CTC command.	<ul style="list-style-type: none"> <li>• Decrease the Max Speed setting under Fax Send settings.</li> <li>• Adjust the Transmit Level setting</li> </ul>
80D	Received too many requests from remote end to repeat the previous command sent.	<ul style="list-style-type: none"> <li>• Check line quality.</li> <li>• Adjust the Transmit Level setting</li> <li>• Check if line conditions on remote end will facilitate a good connection.</li> </ul>
80E	Functional limitation-Remote fax device does not support G3 receive capability.	No action needed. Issue with the remote device.
811	Failed to detect a fax device at the remote end.	<ul style="list-style-type: none"> <li>• Verify MFD is answering to fax call and not a voice call.</li> <li>• Decrease the Rings To Answer setting.</li> </ul>
812	No more data rates available in V34 modulation scheme.	Decrease the modulation scheme.
813	Timeout occurred after waiting too long to receive a good frame.	Adjust the Receive Threshold setting.
814	Tried too many times at selected speed using V34 modulation scheme.	<ul style="list-style-type: none"> <li>• Adjust the Transmit Level setting.</li> <li>• Decrease the modulation scheme.</li> </ul>
815	Fax transmission was interrupted due to power failure.	Troubleshoot MFP if error persists. See <a href="#">“Modem/fax card service check” on page 118.</a>
818	Fax transmission failed due to insufficient memory to store scanned image.	Adjust the Memory Use setting to allocate more memory for send jobs.
819	Fax transmission failed due to insufficient memory to store received image.	Adjust the Memory Use setting to allocate more memory for receive jobs.
81A	A timeout occurred during transmission of a page in ECM mode.	Decrease the Max Speed setting under Fax Send settings.
880	Failure to transmit training successfully in V17, V29, V27 terminal modulation schemes.	<ul style="list-style-type: none"> <li>• Decrease the Max Speed setting under Fax Send settings.</li> <li>• Adjust the Transmit Level setting.</li> <li>• Check line quality.</li> </ul>
881	Failure to transmit training successfully in V33, V29, V27 terminal modulation schemes.	<ul style="list-style-type: none"> <li>• Decrease the Max Speed setting under Fax Send settings.</li> <li>• Adjust the Transmit Level setting.</li> <li>• Check line quality.</li> </ul>

Error code	Description	Action
882	Failure to transmit training successfully in V17, V29 terminal modulation schemes.	<ul style="list-style-type: none"> <li>• Decrease the Max Speed setting under Fax Send settings.</li> <li>• Adjust the Transmit Level setting.</li> <li>• Check line quality.</li> </ul>
883	Failure to transmit training successfully in V17, V27 terminal modulation schemes.	<ul style="list-style-type: none"> <li>• Decrease the Max Speed setting under Fax Send settings.</li> <li>• Adjust the Transmit Level setting.</li> <li>• Check line quality.</li> </ul>
884	Failure to transmit training successfully in V29, V27 terminal modulation schemes.	<ul style="list-style-type: none"> <li>• Decrease the Max Speed setting under Fax Send settings.</li> <li>• Adjust the Transmit Level setting.</li> <li>• Check line quality.</li> </ul>
885	Failure to transmit training successfully in V17 terminal modulation scheme.	<ul style="list-style-type: none"> <li>• Decrease the Max Speed setting under Fax Send settings.</li> <li>• Adjust the Transmit Level setting.</li> <li>• Check line quality.</li> </ul>
886	Failure to transmit training successfully in V29 terminal modulation scheme.	<ul style="list-style-type: none"> <li>• Decrease the Max Speed setting under Fax Send settings.</li> <li>• Adjust the Transmit Level setting.</li> <li>• Check line quality.</li> </ul>
887	Failure to transmit training successfully in V27 terminal modulation scheme.	<ul style="list-style-type: none"> <li>• Decrease the Max Speed setting under Fax Send settings.</li> <li>• Adjust the Transmit Level setting.</li> <li>• Check line quality.</li> </ul>
888	Failure to transmit training successfully at 2400 bps in V27 terminal modulation scheme.	<ul style="list-style-type: none"> <li>• Adjust the Transmit Level setting.</li> <li>• Check line quality.</li> </ul>
889	Failed to connect at the minimum speed supported by the MFP.	<ul style="list-style-type: none"> <li>• Adjust the Transmit Level setting.</li> <li>• Incompatible connection.</li> </ul>
88A	Failed to connect using V.34 modulation scheme.	<ul style="list-style-type: none"> <li>• Check line quality.</li> <li>• Decrease the modulation scheme.</li> <li>• Adjust the Transmit Level or Receive Threshold settings.</li> </ul>
901	No fax tones detected from remote end.	<ul style="list-style-type: none"> <li>• Verify destination phone number.</li> <li>• Verify that the remote fax is authorized to receive faxes.</li> </ul>
902	No dial tone detected.	<ul style="list-style-type: none"> <li>• Check by enabling Behind a PABX setting.</li> <li>• Check phone line.</li> <li>• Check MFD modem hardware.</li> </ul>

Error code	Description	Action
903	Busy tone detected.	Check with remote end if successive attempts fail.
904	Hardware error detected.	See <a href="#">“Modem/fax card service check” on page 118.</a>
905	A timeout occurred after dialing the number and waiting for a response.	Check with remote end if successive attempts fail.
906	Fax cancelled by user.	No action needed.
907	Modem detected a digital line connection.	Verify that the MFP is connected to an analog line. See <a href="#">“Fax transmission service check” on page 121.</a>
908	Phone line was disconnected	Restore phone line connection.
A00	Received request for unsupported function from remote fax device.	No action needed.
A01	Received request for unsupported image width from remote fax device.	No action needed.
A02	Received request for unsupported image resolution from remote fax device.	No action needed.
A03	Received request for unsupported compression type from remote fax device.	No action needed.
A04	Received request for unsupported image length from remote fax device.	No action needed.
F00	Unknown error occurred.	No action needed.

### Modem/fax card service check

Action	Yes	No
<p><b>Step 1</b></p> <p>Check if the telephone cable is properly connected to the modem card and electrical outlet.</p> <p>Is the cable properly connected to the modem card and electrical outlet?</p>	Go to step 2.	Go to step 3.
<p><b>Step 2</b></p> <p>Connect the telephone cable to the modem card and electrical outlet.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p>Check if the telephone cable can make and receive calls.</p> <p>Is the phone line properly working?</p>	Go to step 5.	Go to step 4.

Action	Yes	No
<p><b>Step 4</b> Connect the printer to a properly functioning telephone jack.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b> Make sure that the modem cable is properly connected to the modem card and to the JFAX2 connector on the controller board.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b> Replace the fax card.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b> Check the voltages values of the following pins on the JFAX1 connector on the controller board:</p> <ul style="list-style-type: none"> <li>• Pin 5: +5 V dc</li> <li>• Pin 7: Ground</li> <li>• Pin 9: Ground</li> <li>• Pin 11: Ground</li> <li>• Pin 13: Ground</li> </ul> <p>Are the voltage values approximately the same?</p>	Contact the next level of support.	Go to step 8.
<p><b>Step 8</b> Replace the controller board. See <a href="#">“Controller board removal” on page 165</a>.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

## Cannot set up etherFAX

Action	Yes	No
<p><b>Step 1</b> Check the printer connectivity.</p> <p><b>a</b> Print the Network Setup Page. From the home screen, touch <b>Settings &gt; Reports &gt; Network &gt; Network Setup Page</b>.</p> <p><b>b</b> Check the network status.</p> <p>Is the printer connected to the network?</p>	Go to step 3.	Go to step 2.

Action	Yes	No
<p><b>Step 2</b></p> <p>Make sure that the printer is connected to a network and that the network is connected to the Internet.</p> <p>Can you set up etherFAX?</p>	The problem is solved.	Go to step 3.
<p><b>Step 3</b></p> <p>Make sure that etherFAX is set up correctly. For more information, see the printer <i>User's Guide</i>.</p> <p>Can you set up etherFAX?</p>	The problem is solved.	Go to <a href="https://www.etherfax.net/lexmark">https://www.etherfax.net/lexmark</a> .

### Cannot send or receive faxes using etherFAX

Action	Yes	No
<p><b>Step 1</b></p> <p>Make sure that the printer is connected to a network and that the network is connected to the Internet.</p> <p>Can you send or receive faxes using etherFAX?</p>	The problem is solved.	Go to step 2.
<p><b>Step 2</b></p> <p><b>a</b> From the home screen, touch <b>Settings &gt; Fax &gt; Fax Setup &gt; General Fax Settings</b>.</p> <p><b>b</b> Make sure that you have the correct fax number.</p> <p><b>c</b> Make sure that Fax Transport is set to etherFAX.</p> <p>Can you send or receive faxes using etherFAX?</p>	The problem is solved.	Go to step 3.
<p><b>Step 3</b></p> <p>Split large documents into smaller file sizes.</p> <p>Can you send or receive faxes using etherFAX?</p>	The problem is solved.	Go to <a href="https://www.etherfax.net/lexmark">https://www.etherfax.net/lexmark</a> .



## Fax transmission service check

**Note:** These instructions apply only to printers that support analog fax. For more information, see [“Supported fax” on page 23](#).

Actions	Yes	No
<p><b>Step 1</b> Reseat the telephone cable on the LINE port of the printer and on the wall jack.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b> Check for a dial tone.</p> <p>Is there a dial tone?</p>	Go to step 3.	Go to step 5.
<p><b>Step 3</b> Check if the telephone line can send and receives calls.</p> <p>Is the phone line properly working?</p>	Go to step 6.	Go to step 4.
<p><b>Step 4</b> Check if the telephone line is free of static or external noise.</p> <p>Is the line free of static or external noise?</p>	Go to step 6.	Go to step 5.
<p><b>Step 5</b> Connect the telephone cable to a working wall jack.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p><b>Step 6</b></p> <p><b>a</b> From the home screen, navigate to <b>Settings &gt; Fax &gt; Analog Fax Setup &gt; Fax Receive Settings &gt; Admin Controls &gt; Enable Fax Receive</b>.</p> <p><b>b</b> Select <b>On</b>.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p><b>Step 7</b></p> <p><b>a</b> From the home screen, navigate to <b>Settings &gt; Fax &gt; Analog Fax Setup &gt; Fax Receive Settings &gt; Admin Controls &gt; Answer on</b>.</p> <p><b>b</b> Select a ring pattern.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p><b>Step 8</b> Check if the telephone line is analog.</p> <p>Is the line analog?</p>	Go to step 11.	Go to step 9.

Actions	Yes	No
<p><b>Step 9</b> Check if the telephone line is a VOIP line.</p> <p>Is the line VOIP?</p>	Go to step 11.	Go to step 10.
<p><b>Step 10</b> Ask the system administrator to check if the VOIP server is configured to receive faxes.</p> <p>Is the server configured to receive faxes?</p>	Go to step 11.	Contact the next level of support.
<p><b>Step 11</b> Check if the printer receives a fax from one specific remote device.</p> <p>Does the printer receive a fax from one specific remote device?</p>	Go to step 13.	Go to step 12.
<p><b>Step 12</b> Check if a different device can send a fax.</p> <p>Can the device send a fax?</p>	Contact the next level of support.	Go to step 13.
<p><b>Step 13</b></p> <p><b>a</b> From the home screen, navigate to <b>Settings &gt; Fax &gt; Analog Fax Setup &gt; Fax Receive Settings &gt; Admin Controls &gt; Block No Name Fax</b>.</p> <p><b>b</b> Select <b>Off</b>.</p> <p>Does the problem remain?</p>	Go to step 14.	The problem is solved.
<p><b>Step 14</b></p> <p><b>a</b> From the home screen, navigate to <b>Settings &gt; Fax &gt; Analog Fax Setup &gt; Fax Receive Settings &gt; Admin Controls &gt; Banned Fax List</b>.</p> <p><b>b</b> Check if the remote device number is on the list.</p> <p>Is the number on the list?</p>	Go to step 15.	Go to step 16.
<p><b>Step 15</b> Remove the remote device number from the list.</p> <p>Does the problem remain?</p>	Go to step 16.	The problem is solved.
<p><b>Step 16</b></p> <p><b>a</b> Enter the Service Engineer menu, and then navigate to: <b>Fax SE &gt; Modem Settings &gt; Receive Thresh</b></p> <p><b>b</b> Adjust the setting in steps of 2 dB.</p> <p><b>Note:</b> The recommended adjustment range is between -33 dB and -48 dB.</p> <p>Does the problem remain?</p>	Go to step 17.	The problem is solved.

Actions	Yes	No
<p><b>Step 17</b></p> <p><b>a</b> Enter the Service Engineer menu, and then navigate to:  <b>Fax SE &gt; Fax Settings &gt; AutoPrint T30 Logs</b></p> <p><b>b</b> Check the reported error code. See <a href="#">“Fax error log codes” on page 114.</a></p> <p><b>c</b> Perform the action suggested for the error.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.


## Fax reception service check

**Note:** These instructions apply only to printers that support analog fax. For more information, see [“Supported fax” on page 23.](#)

**Note:** Before performing this service check, make sure that the correct country code is selected.

Actions	Yes	No
<p><b>Step 1</b></p> <p>Reseat the telephone cable on the LINE port of the printer and on the wall jack.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b></p> <p>Check if the telephone line can send and receive calls.</p> <p>Is the phone line properly working?</p>	Go to step 4.	Go to step 3.
<p><b>Step 3</b></p> <p>Connect the telephone cable to a working wall jack.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p><b>Step 4</b></p> <p>Check if the telephone line is analog.</p> <p>Is the telephone line analog?</p>	Go to step 7.	Go to step 5.
<p><b>Step 5</b></p> <p>Check if the telephone line is a VOIP line.</p> <p>Is the line VOIP?</p>	Go to step 6.	Go to step 7.
<p><b>Step 6</b></p> <p>Ask the system administrator to verify if the VOIP server is configured to receive faxes.</p> <p>Is the server configured to receive faxes?</p>	Go to step 7.	Contact the next level of support.

Actions	Yes	No
<p><b>Step 7</b> Check if the printer is on a PABX.</p> <p>Is the printer on a PABX?</p>	Go to step 9.	Go to step 8.
<p><b>Step 8</b></p> <p><b>a</b> From the home screen, navigate to <b>Settings &gt; Fax &gt; Analog Fax Setup &gt; Fax Send Settings &gt; Behind a PABX</b>.</p> <p><b>b</b> Select <b>Yes</b>.</p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.
<p><b>Step 9</b></p> <p><b>a</b> From the home screen, navigate to <b>Settings &gt; Fax &gt; Analog Fax Setup &gt; Fax Send Settings &gt; Behind a PABX</b>.</p> <p><b>b</b> Select <b>No</b>.</p> <p><b>c</b> Check if access to an outside line needs a dial prefix.</p> <p>Does access to an outside line need a dial prefix?</p>	Go to step 10.	Go to step 11.
<p><b>Step 10</b></p> <p>Send a fax using a dial prefix.</p> <p>Does the problem remain?</p>	Go to step 11.	The problem is solved.
<p><b>Step 11</b></p> <p>Check if the printer sends a fax to one specific destination.</p> <p>Does the printer send a fax to one specific destination?</p>	Go to step 13.	Go to step 12.
<p><b>Step 12</b></p> <p>Check if the device that does not receive a fax can send a fax.</p> <p>Can the device send a fax?</p>	Go to step 13.	Contact the next level of support.
<p><b>Step 13</b></p> <p><b>a</b> Enter the Service Engineer menu, and then navigate to: <b>Fax SE &gt; Fax Settings &gt; AutoPrint T30 Logs</b></p> <p><b>b</b> Check the reported error code. See <a href="#">“Fax error log codes” on page 114</a>.</p> <p><b>c</b> Perform the action suggested for the error.</p> <p>Does the problem remain?</p>	Go to step 14.	The problem is solved.

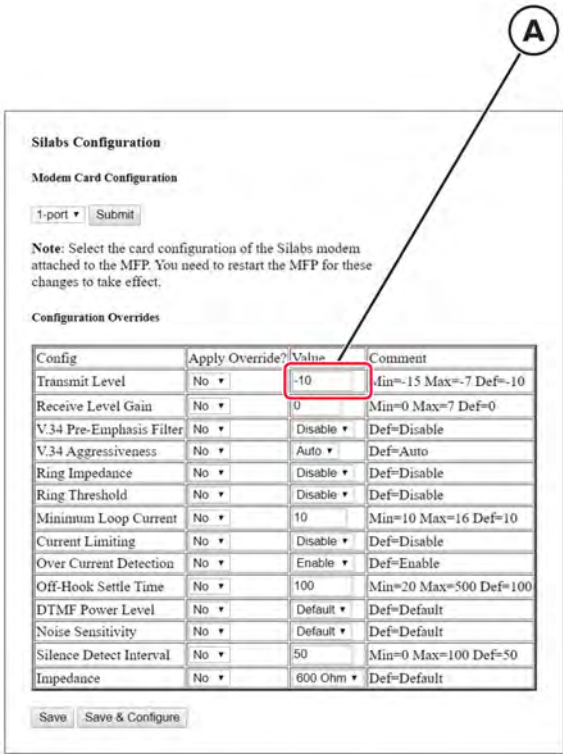Actions	Yes	No																																																												
<p><b>Step 14</b></p> <p>Check the TIA/EIA-IS-968 Standard "Technical Requirements for Connection of Terminal Equipment to the Telephone Network" for your geography.</p> <p>Is it permitted for analog modulated transmitted data to transmit above -9 dBm?</p>	Go to step 15.	Contact the next level of support.																																																												
<p><b>Step 15</b></p> <p><b>a</b> Open a web browser and then type <b>https://&lt;IP address&gt;/se</b>.</p> <p><b>b</b> Navigate to: <b>Fax &gt; Settings &gt; Silabs Configuration</b></p> <p><b>c</b> Adjust the Transmit Level setting (A) in steps of <math>\pm 1</math> dB.</p>  <p>The screenshot shows the 'Silabs Configuration' page. Under 'Modem Card Configuration', there is a dropdown menu set to '1-port' and a 'Submit' button. A note states: 'Note: Select the card configuration of the Silabs modem attached to the MFP. You need to restart the MFP for these changes to take effect.' Below this is the 'Configuration Overrides' table:</p> <table border="1" data-bbox="337 1056 841 1402"> <thead> <tr> <th>Config</th> <th>Apply Override?</th> <th>Value</th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>Transmit Level</td> <td>No ▾</td> <td>-10</td> <td>Min=-15 Max=-7 Def=-10</td> </tr> <tr> <td>Receive Level Gain</td> <td>No ▾</td> <td>0</td> <td>Min=0 Max=7 Def=0</td> </tr> <tr> <td>V.34 Pre-Emphasis Filter</td> <td>No ▾</td> <td>Disable ▾</td> <td>Def=Disable</td> </tr> <tr> <td>V.34 Aggressiveness</td> <td>No ▾</td> <td>Auto ▾</td> <td>Def=Auto</td> </tr> <tr> <td>Ring Impedance</td> <td>No ▾</td> <td>Disable ▾</td> <td>Def=Disable</td> </tr> <tr> <td>Ring Threshold</td> <td>No ▾</td> <td>Disable ▾</td> <td>Def=Disable</td> </tr> <tr> <td>Minimum Loop Current</td> <td>No ▾</td> <td>10</td> <td>Min=10 Max=16 Def=10</td> </tr> <tr> <td>Current Limiting</td> <td>No ▾</td> <td>Disable ▾</td> <td>Def=Disable</td> </tr> <tr> <td>Over Current Detection</td> <td>No ▾</td> <td>Enable ▾</td> <td>Def=Enable</td> </tr> <tr> <td>Off-Hook Settle Time</td> <td>No ▾</td> <td>100</td> <td>Min=20 Max=500 Def=100</td> </tr> <tr> <td>DTMF Power Level</td> <td>No ▾</td> <td>Default ▾</td> <td>Def=Default</td> </tr> <tr> <td>Noise Sensitivity</td> <td>No ▾</td> <td>Default ▾</td> <td>Def=Default</td> </tr> <tr> <td>Silence Detect Interval</td> <td>No ▾</td> <td>50</td> <td>Min=0 Max=100 Def=50</td> </tr> <tr> <td>Impedance</td> <td>No ▾</td> <td>600 Ohm ▾</td> <td>Def=Default</td> </tr> </tbody> </table> <p>At the bottom of the configuration page are 'Save' and 'Save &amp; Configure' buttons.</p> <p>Does the problem remain?</p>	Config	Apply Override?	Value	Comment	Transmit Level	No ▾	-10	Min=-15 Max=-7 Def=-10	Receive Level Gain	No ▾	0	Min=0 Max=7 Def=0	V.34 Pre-Emphasis Filter	No ▾	Disable ▾	Def=Disable	V.34 Aggressiveness	No ▾	Auto ▾	Def=Auto	Ring Impedance	No ▾	Disable ▾	Def=Disable	Ring Threshold	No ▾	Disable ▾	Def=Disable	Minimum Loop Current	No ▾	10	Min=10 Max=16 Def=10	Current Limiting	No ▾	Disable ▾	Def=Disable	Over Current Detection	No ▾	Enable ▾	Def=Enable	Off-Hook Settle Time	No ▾	100	Min=20 Max=500 Def=100	DTMF Power Level	No ▾	Default ▾	Def=Default	Noise Sensitivity	No ▾	Default ▾	Def=Default	Silence Detect Interval	No ▾	50	Min=0 Max=100 Def=50	Impedance	No ▾	600 Ohm ▾	Def=Default	Contact the next level of support.	The problem is solved.
Config	Apply Override?	Value	Comment																																																											
Transmit Level	No ▾	-10	Min=-15 Max=-7 Def=-10																																																											
Receive Level Gain	No ▾	0	Min=0 Max=7 Def=0																																																											
V.34 Pre-Emphasis Filter	No ▾	Disable ▾	Def=Disable																																																											
V.34 Aggressiveness	No ▾	Auto ▾	Def=Auto																																																											
Ring Impedance	No ▾	Disable ▾	Def=Disable																																																											
Ring Threshold	No ▾	Disable ▾	Def=Disable																																																											
Minimum Loop Current	No ▾	10	Min=10 Max=16 Def=10																																																											
Current Limiting	No ▾	Disable ▾	Def=Disable																																																											
Over Current Detection	No ▾	Enable ▾	Def=Enable																																																											
Off-Hook Settle Time	No ▾	100	Min=20 Max=500 Def=100																																																											
DTMF Power Level	No ▾	Default ▾	Def=Default																																																											
Noise Sensitivity	No ▾	Default ▾	Def=Default																																																											
Silence Detect Interval	No ▾	50	Min=0 Max=100 Def=50																																																											
Impedance	No ▾	600 Ohm ▾	Def=Default																																																											

## Lost connection to HTTPS fax server when using etherFAX service check

Action	Yes	No
<p><b>Step 1</b></p> <p><b>a</b> Enter the Service Engineer (SE) menu, and then navigate to: <b>Fax SE Menu &gt; Fax Settings</b></p> <p><b>b</b> Make sure that the Fax Transport option is set to <b>etherFAX</b>.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p><b>Step 2</b></p> <p><b>a</b> Make sure that the printer is connected to a stable network.</p> <p><b>b</b> Perform a POR.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p><b>Step 3</b></p> <p>Check if the printer controller board was previously replaced.</p> <p>Was the printer controller board previously replaced?</p>	Go to step 4.	Go to step 5.
<p><b>Step 4</b></p> <p><b>a</b> Go to your etherFAX portal account, and then remove the printer from the etherFAX registry.</p> <p><b>b</b> Perform a POR.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p><b>Step 5</b></p> <p>Make sure that the printer serial number is properly added in your etherFAX portal account.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

# Service menus

## Understanding the printer control panel

### Using the control panel



	Control panel part	Function
1	Display	<ul style="list-style-type: none"> <li>View printer messages and supply status.</li> <li>Set up and operate the printer.</li> </ul>
2	Power button	Turn on or turn off the printer. <b>Note:</b> To turn off the printer, press and hold the power button for five seconds.
3	Home button	Go to the home screen.
4	Back button	Return to the previous screen.
5	Start button	Start a job, depending on which mode is selected.
6	Indicator light	Check the status of the printer.

### Understanding the status of the indicator light

Indicator light	Printer status
Off	The printer is off or in Hibernate mode.
Blue	The printer is ready or processing data.
Blinking red	The printer requires user intervention.
Solid amber	The printer is in Sleep mode.

# Diagnostics menu

## Entering the Diagnostics Menu

The Diagnostics Menu contains tests that are used to help isolate printer issues.

- To access the menu from POST, do the following:
  - 1** Unplug the power cord from the electrical outlet.
  - 2** Open tray 1.
  - 3** Connect the power cord to the electrical outlet.  
When the display shows the following icon, close tray 1.



- 4** From the menu that appears on the display, select **Diagnostics\_Mode**, and then select **Boot**.
- To access the Diagnostics Menu from the home screen, on the control panel, press the following buttons in this sequence: **Back, Back, Start, Start**

## Reports

### Device Settings

This report lists all the current printer settings.

Enter the Diagnostics menu, and then navigate to:

**Reports > Device > Device Settings**

For non-touch-screen printer models, press **OK** to navigate through the settings.

### Installed Licenses

This setting lists all the installed licenses and their feature data.

Enter the Diagnostics menu, and then navigate to:

**Reports > Licenses > Installed Licenses**

For non-touch-screen printer models, press **OK** to navigate through the settings.



## Advanced Print Quality Samples

This setting prints the Print Quality Test Pages.

Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

## Format Fax Storage

This setting allows formatting of non-volatile fax storage.

Enter the Diagnostics menu, and then navigate to:

**Format Fax Storage > Format Fax Storage**

## Event Log

### Display Log

This setting shows a history of printer events.

Enter the Diagnostics menu, and then navigate to:

**Event Log > Display Log**

For non-touch-screen printer models, press **OK** to navigate through the settings.

### Print Log

This setting shows additional information about the printer events.

Enter the Diagnostics menu, and then navigate to:

**Event Log > Print Log**

For non-touch-screen printer models, press **OK** to navigate through the settings.

**Note:** The events that appear in the report vary depending on the operational history of the printer.

### Print Log Summary

This setting lists a brief summary of the various printer events.

Enter the Diagnostics menu, and then navigate to:

**Event Log > Print Log Summary**

For non-touch-screen printer models, press **OK** to navigate through the settings.

**Note:** The events that appear in the report vary depending on the operational history of the printer.

## Mark Log

This setting allows you to create a service, maintenance, or custom log entry. Each log entry is added in the printer event log.

- 1 Enter the Diagnostics menu, and then navigate to:

**Event Log > Mark Log**

For non-touch-screen printer models, press **OK** to navigate through the settings.

- 2 Select a log that you want to create.

## Input tray quick print

This setting lets you print a single or continuous Quick Test page in either duplex or simplex mode.

- 1 Enter the Diagnostics menu, and then select **Input tray quick print**.
- 2 Select a paper source.
- 3 Select whether to print a single or continuous test page.

## Output bin quick feed

This setting lets you feed a single or continuous page from the standard bin.

- 1 Enter the Diagnostics menu, and then navigate to:

**Output bin quick feed > Standard bin**

For non-touch-screen printer models, press **OK** to navigate through the settings.

- 2 Select whether to print a single or continuous test page.

## Printer Setup

### Printed page count (mono)

This setting displays the amount of pages printed in mono.

- 1 Enter the Diagnostics menu, and then navigate to:

**Printer Setup > Printed page count (mono)**

- 2 View the printed page count for mono.

### Permanent page count

This setting displays the total number of pages printed. After all the print tests are completed, this value resets to zero.

- 1 Enter the Diagnostics menu, and then navigate to:

**Printer Setup > Permanent page count**

- 2 View the permanent page count.

## Enable edge-to-edge (printing)

This setting allows print jobs to include the edges of the page.

- 1 Enter the Diagnostics menu, and then navigate to:  
**Printer Setup > Enable edge-to-edge (printing)**
- 2 Select a setting.

## Enable edge-to-edge (copy)

This setting allows copy jobs to include the edges of the page.

- 1 Enter the Diagnostics menu, and then navigate to:  
**Printer Setup > Enable edge-to-edge (copy)**
- 2 Select a setting.

## Processor ID

This setting indicates the ID of the processor on the controller board.

- 1 Enter the Diagnostics menu, and then navigate to:  
**Printer Setup > Processor ID**
- 2 View the processor ID.

## Serial number

This setting shows the printer serial number.

- 1 Enter the Diagnostics menu, and then navigate to:  
**Printer Setup > Serial number**  
For non-touch-screen printer models, press **OK** to navigate through the settings.
- 2 View the serial number.

## Model name

This setting shows the model name of the printer.

- 1 Enter the Diagnostics menu, and then navigate to:  
**Printer Setup > Model name**  
For non-touch-screen printer models, press **OK** to navigate through the settings.
- 2 View the model name.

## Engine setting [x]

**Warning—Potential Damage:** Do not change this setting without specific instructions from the next level of support.

This setting allows you to select a printer engine setting. Possible values are 0–255. 0 is the default.

For non-touch-screen printer models, press **OK** to navigate through the settings.

- 1 Enter the Diagnostics menu, and then navigate to:  
**Printer Setup > Engine setting [x]**
- 2 Select a setting, and then enter a value.

## EP setup

**Warning—Potential Damage:** Do not change this setting without specific instructions from the next level of support.

This setting allows you to adjust the EP setup of the printer.

For non-touch-screen printer models, press **OK** to navigate through the settings.

- 1 Enter the Diagnostics menu, and then navigate to:  
**Printer Setup > EP setup**
- 2 Select a setting.

## Printer diagnostics & adjustments

### Sensor tests

- 1 Enter the Diagnostics menu, and then select **Printer diagnostics & adjustments**.

A list of sensor tests appears.

- 2 Find, and then manually toggle the sensor.

**Notes:**

- The sensor status on the screen toggles between **1** and **0** when the sensor is properly working.
- If a sensor test fails, the test failure may not indicate a failed sensor. Further troubleshooting may be required. Check the boards and cables for possible issues.
- For the fuser exit sensor actuator, toggle it toward the rear door.

### List of sensor tests

MPF media present
Tray1 present
Input
Output bin/Narrow media
Fuser exit
Front door interlock

## Motor tests

1 Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Motor tests**

For non-touch-screen printer models, press **OK** to navigate through the settings.

2 Select a motor.

### Notes:

- If the motor is activated, then it is properly working.
- Some motors require automatic deactivation to avoid secondary issues such as possible damage and contamination.
- Some tests require a special action to activate a motor such as removing a major component.
- If the motor fails, the test failure may not indicate a failed motor. Further troubleshooting may be required. Check the boards and cables for possible issues.
- To stop a running motor in non-touch-screen printer models , press **OK**.

### List of motor tests

Main Motor
MPF Pick Solenoid
Media Pick Clutch
Fan (main)

## Registration adjust

This setting lets you adjust the skew and margins or print a Quick Test page.

For non-touch-screen printer models, press **OK** to navigate through the settings.

1 Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics and adjustments > Registration adjust**

2 Select a setting to adjust.

## Margin Offset

This setting allows you to adjust the margin offset and to print or reset the default settings.

For non-touch-screen printer models, press **OK** to navigate through the settings.

1 Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Margin Offset**

2 Select a setting.

## Universal Override

This setting allows the user to load custom paper sizes into a paper source.

For non-touch-screen printer models, press **OK** to navigate through the settings.

- 1 Enter the Diagnostics menu, and then navigate to:  
**Printer diagnostics and adjustments > Universal Override**
- 2 Select a setting to adjust.

## Scanner Diagnostics

### Motor Tests

- 1 Enter the Diagnostics menu, and then navigate to:  
**Scanner Diagnostics > Motor Tests**
- For non-touch-screen printer models, press **OK** to navigate through the settings.
- 2 Select a motor.

#### Notes:

- If the motor is activated, then it is properly working.
- Some motors require automatic deactivation to avoid secondary issues such as possible damage and contamination.
- Some tests require a special action to activate a motor such as removing a major component.
- If the motor fails, the test failure may not indicate a failed motor. Further troubleshooting may be required. Check the boards and cables for possible issues.

#### List of motor tests

Scanner
ADF transport

### Sensor Test

This test verifies the status of the scanner sensors.

- 1 Enter the Diagnostics menu, and then navigate to:  
**Scanner diagnostics > Sensor test**
- A list of sensor tests appears.
- 2 Find, and then manually toggle the sensor.

#### Notes:

- The sensor status on the screen toggles between **1** and **0** when the sensor is properly working.
- If a sensor test fails, the test failure may not indicate a failed sensor. Further troubleshooting may be required. Check the boards and cables for possible issues.

#### List of sensor tests

ADF paper present
ADF scan

## Feed Test

This test allows for a continuous feed from the ADF or flatbed.

- 1 Enter the Diagnostics menu, and then navigate to:

**Scanner Diagnostics > Feed Test**

**Note:** Set the paper size to match the paper loaded in the ADF tray if necessary.

- 2 Touch **Feed Test**.

## Scanner Calibration Reset

Before starting the test, clean the scanner. For more information, see [“Cleaning the scanner” on page 205](#).

- 1 Enter the Diagnostics menu, and then select **Scanner Diagnostics**.

- 2 Touch **Scanner Calibration Reset**.

To verify the result, do the following:

**Note:** The following procedure only applies to models with ADF.

- 1 Load the ADF with a document containing light and dark content.
- 2 Print a two-sided copy of the document.

**Notes:**

- If the back side of the copy has vertical streaks, then clean the scanner glass and scanner glass pad, and then print another copy.
- If the streaks still appear, then repeat the cleaning and verification procedure or replace the scanner cover.

## Controller Calibration

This test must be done when the scanner controller or flatbed scanner is changed.

- 1 Enter the Diagnostics menu, and then navigate to:

**Scanner Diagnostics > Controller Calibration**

- 2 Touch **Start**.

# Config Menu

## Entering the Config Menu

The Config menu consists of menus, settings, and operations that are used to configure the printer.

To access the Config menu, press and hold **Right arrow** and **OK** on the control panel, and then turn on the printer.

## Config Menu

Menu item	Description
<b>USB Configuration</b> USB PnP 1* 2	Change the USB driver mode of the printer to improve its compatibility with a personal computer.
<b>USB Configuration</b> USB Scan to Local On* Off	Set whether the USB device driver enumerates as a USB Simple device (single interface) or as a USB Composite device (multiple interfaces).
<b>USB Configuration</b> USB Speed Full Auto*	Set the USB port to run at full speed and disable its high-speed capabilities.
<b>Tray Configuration</b> Tray Linking Automatic* Off	Set the printer to link the trays that have the same paper type and paper size settings.
<b>Tray Configuration</b> Show Tray Insert Message Off Only for unknown sizes* Always	Display a message to select paper size and type after inserting the tray.
<b>Tray Configuration</b> A5 Loading Short Edge Long Edge*	Specify the page orientation when loading A5 paper size.
<b>Tray Configuration</b> Paper Prompts Auto* MP Feeder Manual Paper	Set the paper source that the user fills when a prompt to load paper appears.
<b>Tray Configuration</b> Envelope Prompts Auto* MP Feeder Manual Envelope	Set the paper source that the user fills when a prompt to load envelope appears.
<b>Tray Configuration</b> Action for Prompts Prompt user* Continue Use current	Set the printer to resolve paper- or envelope-related change prompts.

**Note:** An asterisk (\*) next to a value indicates the factory default setting.



Menu item	Description
<b>Reports</b> Menu Settings Page Event Log Event Log Summary	Print reports about printer menu settings, status, and event logs.
<b>Supply Usage And Counters</b> Clear Supply Usage History Reset Black Cartridge Counter Reset Black Imaging Unit Counter Reset Maintenance Counter	Reset the supply page counter or view the total printed pages.
<b>Printer Emulations</b> PS Emulation Off On*	Set the printer to recognize and use the PS data stream.
<b>Printer Emulations</b> Emulator Security Page Timeout 0–60 (60*)	Set the page timeout during emulation.
<b>Printer Emulations</b> Emulator Security Reset Emulator After Job (Off*)	Reset the emulator after a print job.
<b>Printer Emulations</b> Emulator Security Disable Printer Message Access (On*)	Disable access to the printer message during emulation.
<b>Fax Configuration</b> Fax Low Power Support Disable Sleep Permit Sleep Auto*	Set fax to enter Sleep mode whenever the printer determines that it must.  <b>Note:</b> This menu item is available only in some printer models.
<b>Print Configuration</b> Font Sharpening 0–150 (24*)	Set a text point-size value below which the high-frequency screens are used when printing font data.
<b>Print Configuration</b> Print Density Disabled 1–5 (3*) Copy Density Disabled 1–5 (3*)	Adjust the toner density when printing or copying documents.
<b>Note:</b> An asterisk (*) next to a value indicates the factory default setting.	

Menu item	Description
<b>Device Operations</b> Quiet Mode On Off*	Set the printer to reduce the amount of noise that it makes when printing.  <b>Note:</b> Enabling this setting slows down the overall performance of the printer.
<b>Device Operations</b> Panel Menus Enable* Disable	Set the printer to show the control panel menus.  <b>Note:</b> This menu item appears only in the Embedded Web Server.
<b>Device Operations</b> Safe Mode Off* On	Set the printer to operate in a special mode, in which it attempts to continue offering as much functionality as possible, despite known issues.  For example, when set to On, and the duplex motor is nonfunctional, the printer performs one-sided printing of the documents even if the job is two-sided printing.  <b>Note:</b> This setting cannot be used when the tray is not fully inserted or the tray sensor is damaged.
<b>Device Operations</b> Clear Custom Status	Erase all custom messages.
<b>Device Operations</b> Clear all remotely-installed messages	Erase all remotely-installed messages.
<b>Device Operations</b> Automatically Display Error Screens On* Off	Show existing error messages on the display after the printer remains inactive on the home screen for a length of time equal to the Screen Timeout setting.
<b>Scanner Configuration</b> Scanner Manual Registration Print Quick Test	Print a Quick Test target page.  <b>Note:</b> Make sure that the margin spacing on the target page is uniform all the way around the target. If it is not, then the printer margins must be reset.
<b>Scanner Configuration</b> Scanner Manual Registration Front ADF Registration Flatbed Registration	Manually register the flatbed and ADF after replacing the ADF, scanner glass, or controller board.
<b>Scanner Configuration</b> Edge Erase Flatbed Edge Erase (3*) ADF Edge Erase (3*)	Set the size, in millimeters, of the no-print area around an ADF or flatbed scan job.
<b>Scanner Configuration</b> Disable Scanner Enabled* Disabled ADF Disabled	Disable the scanner if it is not working properly.
<b>Note:</b> An asterisk (*) next to a value indicates the factory default setting.	

Menu item	Description
<b>Scanner Configuration</b> Tiff Byte Order CPU Endianness* Little Endian Big Endian	Set the byte order of a TIFF-formatted scan output.
<b>Scanner Configuration</b> Exact Tiff Rows Per Strip On* Off	Set the RowsPerStrip tag value of a TIFF-formatted scan output.
<b>Note:</b> An asterisk (*) next to a value indicates the factory default setting.	

## Service Engineer (SE) menu

### Entering the SE Menu

To access the menu from the home screen, on the control panel, press the following buttons in this sequence:

**Back, Back, Home, Home**

### General SE Menu

- Capture Logs to USB Drive

**Note:** This setting allows you to save a log file to a USB drive.

- Code Versions
- Debug Level

### Network SE Menu

Enter the SE menu, and then select **Network SE Menu**.

**Note:** Use these settings as directed by the next level of support.

Top-level menu	Intermediate menu
HISTORY	<ul style="list-style-type: none"> <li>• Print History</li> <li>• Mark History</li> </ul>
MAC	<ul style="list-style-type: none"> <li>• Set Card Speed</li> <li>• LAA</li> <li>• Keep Alive</li> </ul>
NPAP	Print Alerts

Top-level menu	Intermediate menu
TCP/IP	<ul style="list-style-type: none"> <li>• DHCP Request Options</li> <li>• netstat</li> <li>• arp</li> <li>• Allow SNMP Set</li> <li>• MTU</li> <li>• Meditech Mode</li> <li>• RAW LPR Mode</li> <li>• Garp Interval</li> </ul>
Wireless Settings	<ul style="list-style-type: none"> <li>• Wireless Performance Enhancement</li> <li>• Unset Wireless Region</li> </ul>
Ping Test	<ul style="list-style-type: none"> <li>• Ping Address</li> <li>• Attempts</li> <li>• Packet Size</li> <li>• Ping</li> </ul>
Other Actions	<ul style="list-style-type: none"> <li>• ifconfig</li> <li>• IPtables [Firewall Dump]</li> <li>• IP6tables [Firewall Dump]</li> <li>• IPsec Dump</li> </ul>
Enable DHCPD Debugging	N/A
Enable wpa-supPLICANT Debugging	N/A
Enable Ethernet Gigabit	N/A

## Scanner SE Menu

Enter this setting to view the calibration data.

## Fax SE Menu

Use this menu to help resolve fax transmission and reception issues.

Enter the SE menu, and then touch **Fax SE Menu**.

**Note:** Use these settings as directed by the next level of support.

**Note:** For printers with firmware version FW7.1 and up, adjust the Transmit Level setting via EWS SE. See [“EWS SE Menu” on page 141](#)

Top-level menu	Intermediate menu
Agency Test Menu	<ul style="list-style-type: none"> <li>• Go Off Hook</li> <li>• Ring Detect</li> <li>• Generate Tones</li> <li>• Modulations</li> </ul>

Top-level menu	Intermediate menu
Fax Settings	<ul style="list-style-type: none"> <li>• Fax Modulations</li> <li>• FOIP Settings</li> <li>• Miscellaneous Settings</li> <li>• Reset Fax Settings</li> </ul>
Modem Settings	<ul style="list-style-type: none"> <li>• Caller ID Pattern  <b>Note:</b> Changing the value of this setting also changes the value of the Caller ID setting in the Fax Settings.</li> <li>• Pulse Dial Type</li> <li>• Disable Sending CRP</li> </ul>
Fax logs	<ul style="list-style-type: none"> <li>• Print all T30 Logs</li> <li>• Print CallerID Log</li> <li>• Print Call Log</li> <li>• Print Fax Settings</li> <li>• Print Job Log</li> <li>• Print All T30 Log Errors</li> <li>• Print All Auto Captured Logs On</li> <li>• Print T38 Trace Log</li> <li>• Clear T38 Trace Log</li> </ul>
Reboot System	N/A

## EWS SE Menu

Enter this setting to help resolve customer communication related printing issues.

To access the Silabs configuration:

- 1 Open a web browser and then type **https://<IP address>/se** .
- 2 Navigate to:  
**Fax > Settings > Silabs Configuration**

## Entering invalid engine mode

This mode allows the printer to load the correct firmware code.

- 1 Unplug the power cord from the electrical outlet.
- 2 Open tray 1.
- 3 Connect the power cord to the electrical outlet.

When the display shows the following icon, close tray 1.



- 4 From the menu that appears on the display, select →, and then select **ENGINE\_FLASH**.

## Entering Recovery mode

This mode allows the printer to boot from a secondary set of instructions and flash firmware code. While in this mode, you can only flash firmware code through a USB cable directly connected to a PC.

Depending on your printer model, do any of the following:

### For LED display

- 1 Turn off the printer.
- 2 Open the front door.
- 3 Press and hold the **Stop** button.
- 4 Turn on the printer.
- 5 When all the icons flash, release the button.

### For 2-line display

- 1 Turn off the printer.
- 2 Press and hold the **OK** and **Back** buttons.
- 3 Turn on the printer.
- 4 When the display shows the following icon, release the buttons.



## For 2.4-, 4.3-, 7-, and 10-inch displays

- 1 Turn off the printer.
- 2 Press and hold the **2**, **7**, and **8** buttons.
- 3 Turn on the printer.
- 4 When the display shows the following icon, release the buttons.



## For 2.8-inch display

- 1 Turn off the printer.
- 2 Open tray 1.
- 3 Make sure that paper is loaded in tray 1.
- 4 Turn on the printer.
- 5 When the display shows the following icon, close tray 1.



**Note:** If tray 1 is not closed, then the printer will boot normally.

- 6 A screen with red selection items appears.  
Touch **->** to navigate to Recovery mode.
- 7 Touch **Boot** or **RECOVERY**.





# Parts removal

## Data security notice

### Identifying printer memory

- **Volatile memory**—The printer uses standard random access memory (RAM) to buffer user data temporarily during simple print and copy jobs.
- **Nonvolatile memory**—The printer may use two forms of nonvolatile memory: EEPROM and NAND (flash memory). Both types are used to store the operating system, printer settings, network information, scanner and bookmark settings, and embedded solutions.
- **Hard disk memory**—Some printers have a hard disk drive installed. The hard disk is designed for printer-specific functionality and cannot be used for long-term storage of data that is not print-related. The hard disk does not let users extract information, create folders, create disk or network file shares, or transfer FTP information directly from a client device. The hard disk can retain buffered user data from complex print jobs, form data, and font data.

The following parts can store memory:

- Printer control panel
- User interface controller card (UICC)
- Controller board
- Optional hard disks

**Note:** The printer control panel and controller board contain NVRAM.


### Erasing printer memory


To erase volatile memory or buffered data, turn off the printer.




To erase non-volatile memory or individual settings, device and network settings, security settings, and embedded solutions, do the following:

- 1 From the control panel, navigate to:  
**Settings > Device > Maintenance > Out of Service Erase > Sanitize all information on nonvolatile memory > Yes**
- 2 Select either **Start initial setup** or **Leave printer offline**.






## Removal precautions

 **CAUTION—SHOCK HAZARD:** The low-voltage power supply (LVPS) and the high-voltage power supply (HVPS) may have residual voltage present. To avoid the risk of electrical shock, do not touch their circuit components or the solder side of the board. Only handle them by their outer edges or metal housing.

 **CAUTION—SHOCK HAZARD:** This product uses an electronic power switch. It does not physically disconnect the input AC voltage. To avoid the risk of electrical shock, always remove the power cord from the printer when removal of the input AC voltage is required.


-  **CAUTION—SHOCK HAZARD:** To avoid the risk of electrical shock and to prevent damage to the printer, remove the power cord from the electrical outlet and disconnect all connections to any external devices before you connect or disconnect any cable, electronic board, or assembly.
-  **CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.
-  **CAUTION—PINCH HAZARD:** To avoid the risk of a pinch injury, use caution in areas marked with this label. Pinch injuries may occur around moving parts, such as gears, doors, trays, and covers.

## Précautions de retrait


-  **ATTENTION—RISQUE D'ELECTROCUTION :** Une tension résiduelle peut être présente dans le bloc d'alimentation basse tension (LVPS) et le bloc d'alimentation haute tension (HVPS). Pour éviter tout risque d'électrocution, ne touchez pas les composants du circuit ou le côté soudure de la carte. Tenez-les uniquement par leurs extrémités ou le boîtier en métal.
-  **ATTENTION—RISQUE D'ELECTROCUTION :** Ce produit utilise un commutateur d'alimentation électronique. Il ne déconnecte pas physiquement la tension d'alimentation CA. Pour éviter tout risque d'électrocution, débranchez toujours le cordon d'alimentation de l'imprimante lorsque vous devez déconnecter la tension d'alimentation CA.
-  **ATTENTION—RISQUE D'ELECTROCUTION :** Pour éviter tout risque d'électrocution et éviter d'endommager l'imprimante, débranchez le cordon d'alimentation de la prise électrique et déconnectez toute connexion à tout périphérique externe avant de brancher ou débrancher des câbles ou circuits et assemblages électroniques.
-  **ATTENTION—SURFACE CHAUDE :** L'intérieur de l'imprimante risque d'être brûlant. Pour réduire le risque de brûlure, laissez la surface ou le composant refroidir avant d'y toucher.
-  **ATTENTION : RISQUE DE PINCEMENT :** Pour éviter tout risque de blessure par pincement, agissez avec précaution au niveau des zones signalées par cette étiquette. Les blessures par pincement peuvent se produire autour des pièces mobiles telles que les engrenages, portes, tiroirs et capots.


## Precauciones durante la extracción


-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** La fuente de alimentación de bajo voltaje (LVPS) y la fuente de alimentación de alto voltaje (HVPS) pueden presentar voltaje residual. Para evitar el riesgo de descarga eléctrica, no toque los componentes del circuito ni el lateral soldado de la placa. Manipule solo los bordes exteriores o la carcasa metálica.
-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Este producto utiliza un interruptor de corriente electrónico. No desconecta físicamente la entrada de voltaje de CA. Para evitar el riesgo de descarga eléctrica, desenchufe siempre el cable de alimentación de la impresora cuando sea necesario retirar la entrada de voltaje de CA.
-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Para evitar el riesgo de descargas eléctricas y daños en la impresora, retire el cable de alimentación de la toma eléctrica y desconecte todas las conexiones a dispositivos externos antes de conectar o desconectar cualquier cable, placa electrónica o conjunto.
-  **PRECAUCIÓN: SUPERFICIE CALIENTE:** El interior de la impresora podría estar caliente. Para evitar el riesgo de heridas producidas por el contacto con un componente caliente, deje que la superficie se enfríe antes de tocarlo.


 **PRECAUCIÓN: PELIGRO DE ATRAPAMIENTO:** Para evitar el riesgo de lesión por atrapamiento, preste atención en las áreas marcadas con esta etiqueta. Las lesiones por atrapamiento se pueden producir en torno a partes móviles, tales como engranajes, puertas, bandejas y cubiertas.


## Vorsichtsmaßnahmen bei der Demontage

 **VORSICHT – STROMSCHLAGGEFAHR:** Im Niederspannungsnetzteil (LVPS) und Hochspannungsnetzteil (HVPS) liegt unter Umständen Restspannung vor. Um das Risiko eines elektrischen Schlags zu vermeiden, berühren Sie keine umliegenden Bauteile oder die Lötseite der Platine. Fassen Sie sie nur an den Außenkanten oder am Metallgehäuse an.

 **VORSICHT – STROMSCHLAGGEFAHR:** Dieses Produkt verwendet einen elektronischen Leistungsschalter. Er trennt die Eingangswchselspannung nicht physikalisch. Um das Risiko eines elektrischen Schlags zu vermeiden, ziehen Sie stets das Netzkabel vom Drucker ab, wenn eine Abtrennung der Eingangswchselspannung erforderlich ist.

 **VORSICHT – STROMSCHLAGGEFAHR:** Um das Risiko eines elektrischen Schlags und Schäden am Drucker zu vermeiden, ziehen Sie das Netzkabel aus der Steckdose und trennen Sie alle Verbindungen zu jeglichen externen Geräten, bevor Sie Kabel, Elektronikplatinen oder Baugruppen einstecken oder abziehen.

 **VORSICHT – HEISSE OBERFLÄCHE:** Das Innere des Druckers kann sehr heiß sein. Vermeiden Sie Verletzungen, indem Sie heiße Komponenten stets abkühlen lassen, bevor Sie ihre Oberfläche berühren.

 **VORSICHT – QUETSCHGEFAHR:** Um das Risiko einer Quetschung zu vermeiden, gehen Sie in Bereichen, die mit diesem Etikett gekennzeichnet sind, mit Vorsicht vor. Quetschungen können im Bereich von beweglichen Komponenten auftreten, wie z. B. Zahnrädern, Klappen, Fächern und Abdeckungen.

## Handling ESD-sensitive parts

Many electronic products use parts that are known to be sensitive to electrostatic discharge (ESD). To prevent damage to ESD-sensitive parts, do the following:

- Turn off the printer before removing logic boards.
- Keep the parts in their original packing material until you are ready to install them into the printer.
- Make the least possible movements with your body to prevent an increase of static electricity from clothing fibers, carpets, and furniture.
- Put the ESD wrist strap on your wrist. Connect the wrist band to the system ground point. This action discharges any static electricity in your body to the printer.
- Hold the parts by their edge connector shroud. Do not touch its pins. If you are removing a pluggable module, then use the correct tool.
- If possible, keep all parts in a grounded metal cabinet.
- Do not place the parts on the printer cover or on a metal table. If you need to put down the parts, then put them into their packing material.
- Prevent parts from being accidentally touched by other personnel. Cover the printer when you are not working on it.
- Be careful while working with the parts when cold-weather heating is used. Low humidity increases static electricity.

## Critical information for controller board or control panel replacement

**⚠ CAUTION—POTENTIAL INJURY:** The lithium battery in this product is not intended to be replaced. There is a danger of explosion if a lithium battery is incorrectly replaced. Do not recharge, disassemble, or incinerate a lithium battery. Discard used lithium batteries according to the manufacturer's instructions and local regulations.

**⚠ ATTENTION—RISQUE DE BLESSURE :** La batterie lithium de ce produit n'est pas destinée à être remplacée. Il existe un risque d'explosion si une batterie lithium est placée de façon incorrecte. Ne rechargez pas, ne démontez pas et n'incinerez pas une batterie lithium. Mettez les batteries lithium usagées au rebut selon les instructions du fabricant et les réglementations locales.

**⚠ PRECAUCIÓN: POSIBLES DAÑOS PERSONALES:** La batería de litio de este producto no debe reemplazarse. Existe riesgo de explosión si se sustituye incorrectamente una batería de litio. No recargue, desmonte ni incinere una batería de litio. Deseche las baterías de litio según las instrucciones del fabricante y las normativas locales.

**⚠ VORSICHT – MÖGLICHE VERLETZUNGSGEFAHR** Die Lithiumbatterie in diesem Produkt darf nicht ausgetauscht werden. Wird eine Lithiumbatterie nicht ordnungsgemäß ausgetauscht, besteht Explosionsgefahr. Lithiumbatterien dürfen auf keinen Fall wieder aufgeladen, auseinander genommen oder verbrannt werden. Befolgen Sie zum Entsorgen verbrauchter Lithiumbatterien die Anweisungen des Herstellers und die örtlichen Bestimmungen.

**Warning—Potential Damage:** Observe all precautions when handling ESD sensitive parts. See [“Handling ESD-sensitive parts” on page 147](#).

**Warning—Potential Damage:** Carefully remove cables and connectors. Make sure they are not damaged.

**Warning—Potential Damage:** To avoid damaging the part or experience NVRAM mismatch issues, replace only one of the following components at a time:

- Control panel
- Controller board

To replace a component and to test whether the problem is resolved:

**1** Replace the affected component.

**Warning—Potential Damage:** Do not perform a Power-On Reset (POR) until the problem is resolved. If a POR is performed at this point, then the replacement part can no longer be used in another printer and must be returned to the manufacturer.

**2** Enter the Diagnostics menu. The menu allows you to temporarily use the replacement part.

**Warning—Potential Damage:** Some printers perform a POR automatically if the Diagnostics menu is not opened within five seconds. If a POR is performed at this point, then the replacement part can no longer be used in another printer and must be returned to the manufacturer.

**3** Use the Diagnostics menu to test the replacement part. Do a feed test to check if the problem is resolved.

- If the problem is not resolved—Turn off the printer, and then install the old part.
- If the problem is resolved—Perform a POR.
- If NVRAM error occurs during the replacement, then see [“NVRAM mismatch failure service check” on page 111](#).

## Restoring the printer configuration


Restore the printer to its correct configuration to complete the replacement service. Use the Service Restore Tool to download the software bundle, and then flash the printer settings and embedded solutions.

**Note:** If you do not have access to Service Restore Tool, then contact your next level of support.


**Note:** The software bundle contains the latest version of the firmware, applications, and software licenses from the Lexmark CFM and Package Builder. The printer firmware may be at a different level from what is used before replacement of the part.

### Using the Service Restore Tool

- 1 Go to <https://cdp.lexmark.com/service-restore-tool/> to access the tool.
- 2 Log in using your Lexmark or partner login.  
If your login fails, then contact your next level of support.
- 3 Enter the printer serial number, and then submit the information.

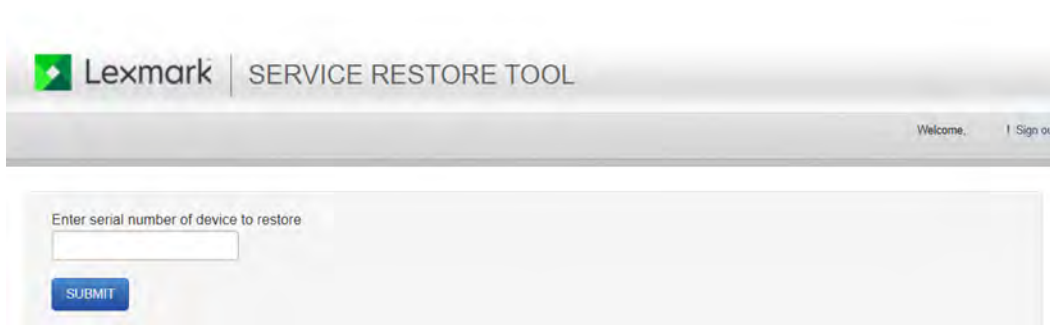


**Note:** Make sure that the serial number that appears on the verification screen is correct.

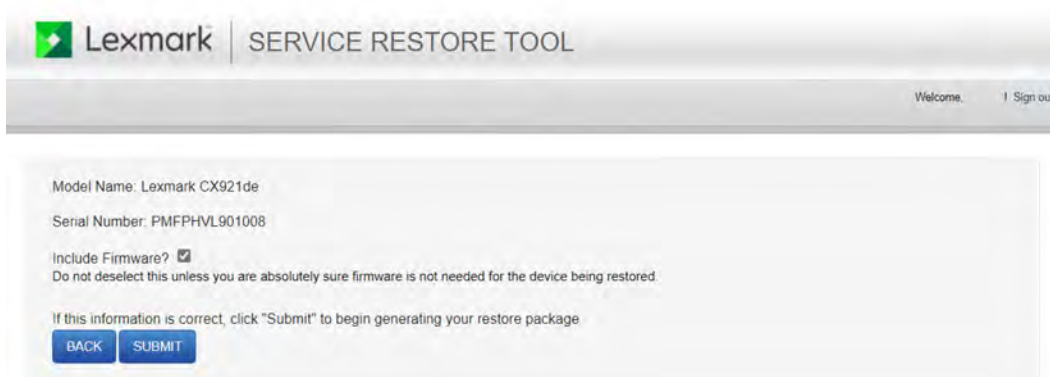

- 4 Save the zip file.


**Note:** Make sure that the serial number in the zip file matches the serial number of the printer being restored.

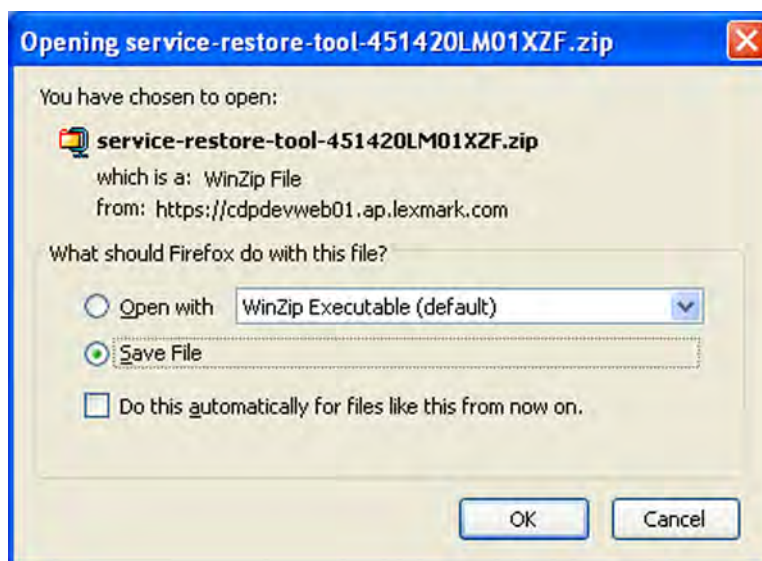

5 Extract the contents of the zip file, open the *Readme* file, and then follow the instructions in the file.

**Notes:**

- Perform the install instructions on the *Readme* file in the exact order shown. Restart the printer only if the file says so.
- For more information on how to flash the downloaded files, see [“Updating the printer firmware ” on page 151.](#)
- To load the zip files that are extracted from the Service Restore Tool, see [restoring-license-config-removal-topic.](#)

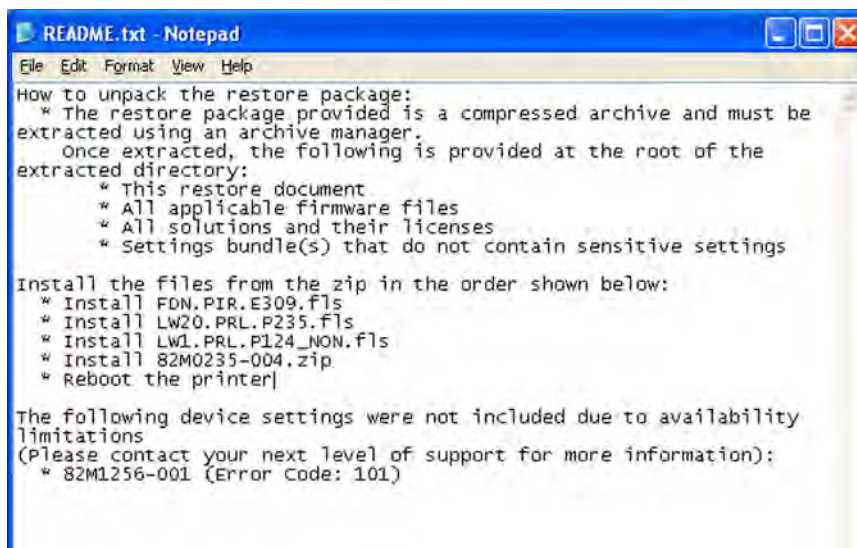

6 If the printer had eSF apps previously installed, then confirm from the customer if all the eSF apps have been installed after performing the installation instructions in the *Readme* file.

**Notes:**

- If you are unable to access the administrative menus to verify that the printer is restored, then ask the customer for access rights.

- If a 10.00 error appears after you restart the printer, then contact the next level of support.

## Updating the printer firmware

**Warning—Potential Damage:** Before updating the printer firmware, ask the next level of support for the correct code. Using an incorrect code level may damage the printer.

### Using a flash drive

**Note:** The printer must be in ready state to update the firmware.

This option is available only in printer models with front USB port.

- 1 Insert the flash drive into the USB port.
- 2 Depending on the printer model, do any of the following:
  - From the control panel, navigate to **USB Menu: Print from USB > Accept** or **OK**, and then select the file that you need to flash.
  - Select the firmware file.

**Note:** Do not turn off the printer while the update is going on.

### Using a network computer

#### Using the File Transfer Protocol (FTP)

**Note:** The printer must be in ready state to update the firmware.

- 1 Turn on the printer.
- 2 Obtain the IP address from the home screen.
- 3 From the command prompt of a network computer, open an FTP session to the printer IP address.
- 4 Use a PUT command to place the firmware file on the printer.  
The printer performs a POR sequence and terminates the FTP session.

#### Using the Embedded Web Server

**Note:** The printer must be in ready state to update the firmware.

- 1 Open a web browser, and then type the printer IP address.
- 2 Click **Settings > Device > Update Firmware**.
- 3 Select the file to use.  
The printer performs a POR sequence and terminates the EWS session.

### Using a USB cable connection

**Note:** Make sure that the cable is connected to the rear USB port.

#### Using USB Flash Utility

- 1 Go to [support.lexmark.com](http://support.lexmark.com), and then download USB Flash Utility.
- 2 Extract, and then run the utility.

- 3 Click **Browse Files**, and then browse to the firmware file directory.
- 4 Select the firmware file.
- 5 Select the source printer.
- 6 Click **Start**.

### Using USButil

- 1 Go to [support.lexmark.com](http://support.lexmark.com), and then download USButil.
- 2 Extract, and then drag and drop the firmware file onto the USButil icon.
- 3 A command prompt window appears briefly.

**Note:** Make sure to disconnect other USB devices when using USButil.


## Ribbon cable connectors

### Low insertion force (LIF) connector

**Warning—Potential Damage:** When installing a cable into an LIF connector, avoid bending the edges of the cables and damaging the contacts on the cables.

#### Inserting the cable


- 1 Make sure that the contacts of the controller board and connectors are on the same side.

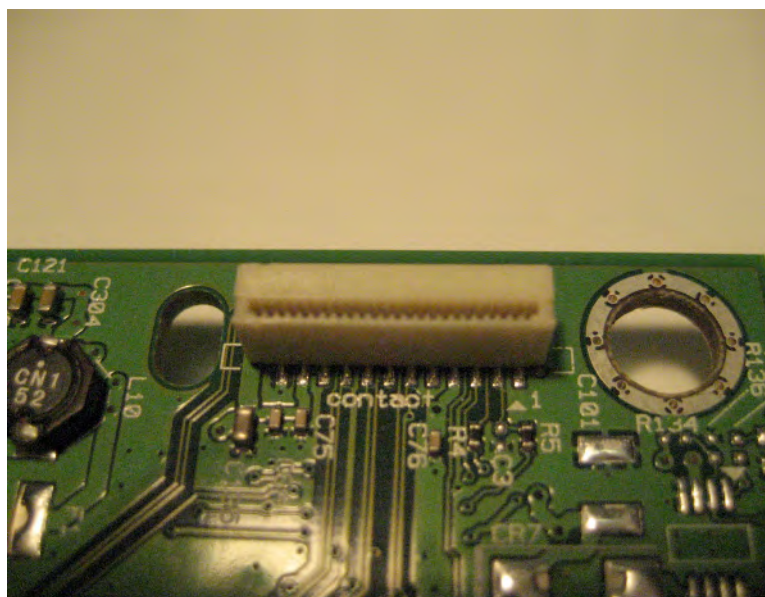

- 2 Insert the cable.

**Note:** Make sure that the cable is installed straight into the connector to avoid intermittent failures.



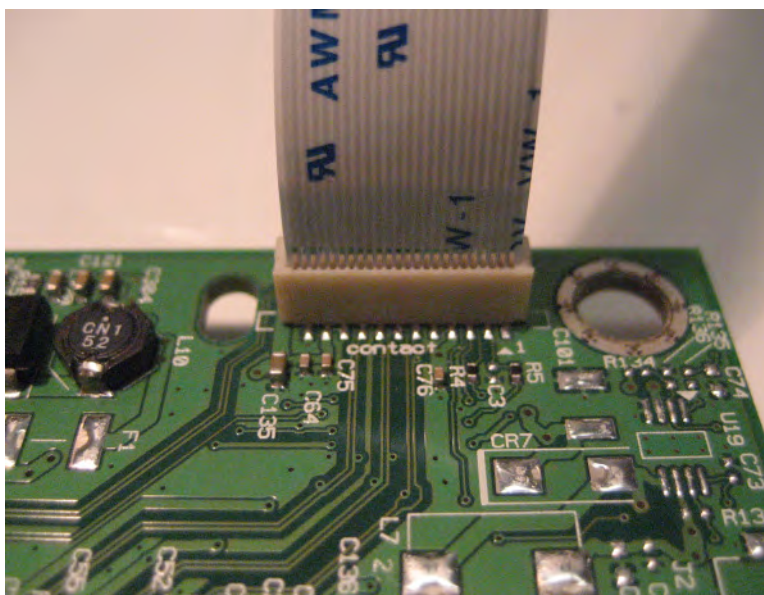

## Removal procedures

Keep the following tips in mind as you replace parts:

- Some removal procedures require removing cable ties. You must replace cable ties during reassembly to avoid pinching wires, obstructing the paper path, or restricting mechanical movement.
- Remove the toner cartridges, imaging unit, and trays before removing other printer parts. The imaging kit must be carefully set on a clean, smooth, and flat surface. It must also be protected from light while out of the printer.
- Disconnect all external cables from the printer to prevent possible damage during service.
- Unless otherwise stated, install the parts in reverse order of removal.
- When installing a part held with several screws, start all screws before the final tightening.
- For printers that have an electronic power switch, make sure to unplug the power cord after powering off.


## Left side removals

### Left cover removal

- 1 Remove the screw at the front, and then remove the screw at the rear of the cover.



- 2 Open the front door, and then release the left front door link.

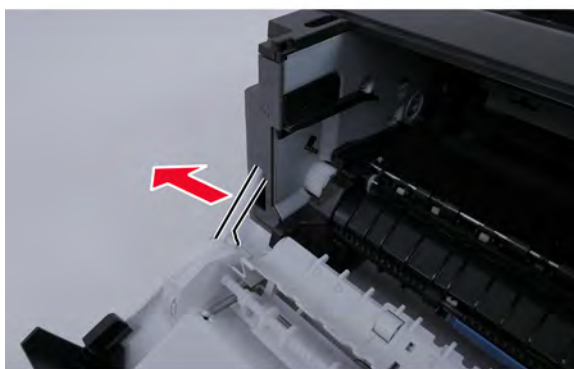

- 3 Place the printer on its right side.

- 4 Release the three latches (A) at the bottom of the cover, and then remove the cover.




## Main drive gears removal

**Note:** For a video demonstration, see [Main drive gears removal](#).

- 1 Remove the left cover. See [“Left cover removal” on page 154](#).
- 2 Place the printer on its right side.


**Warning—Potential Damage:** If the printer is not placed on its right side, then the gears fall out of place when the gear plates are removed.

- 3 Remove the 12 screws, remove the gear covers, and then remove the gears.

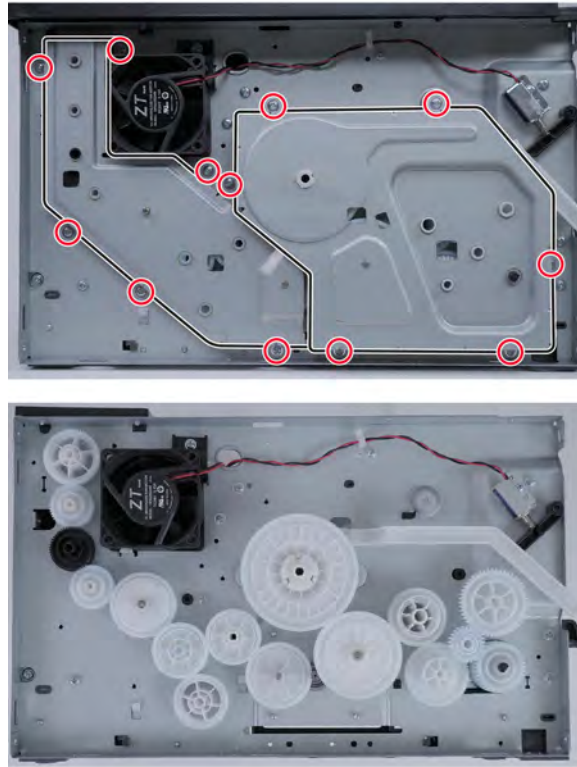


**Installation notes:**

- Pay attention to the position of the gears.
- Most gears have a molded letter for identification.

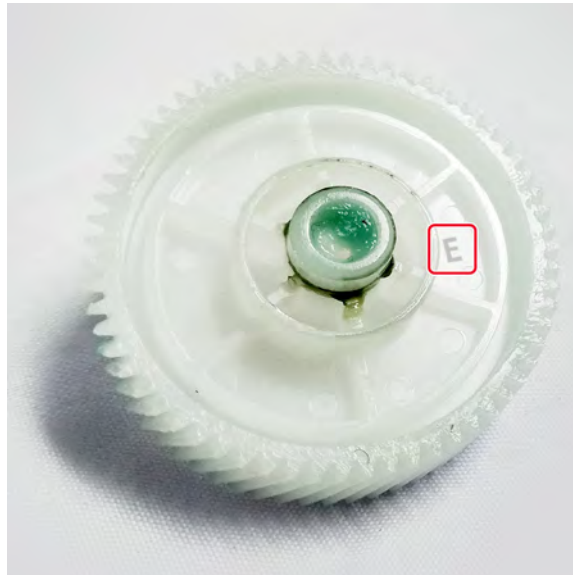


- Note the letter or number on the gears, and then use the following illustration to match their proper location and position in the printer.

- Some locations have multiple gears stacked on top of each other.

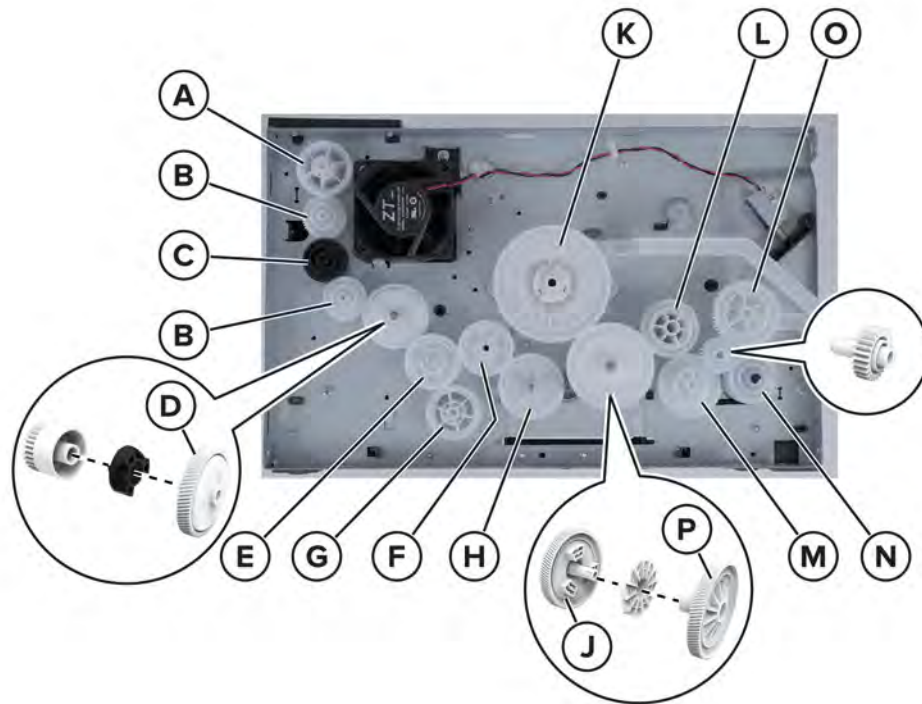


**4** Remove the left front door link. See [“Left front door link removal” on page 161](#).

**5** Remove the two screws (A), and then remove the coupling (B).

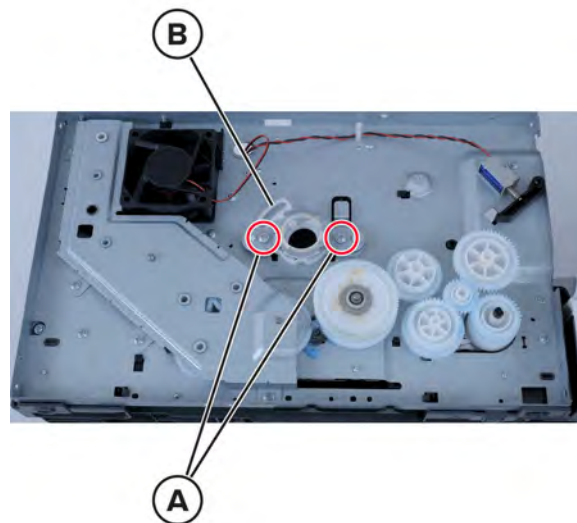


- 6 Place the printer on its left side, remove the screw (C), and then remove the duplex swing arm assembly (D).

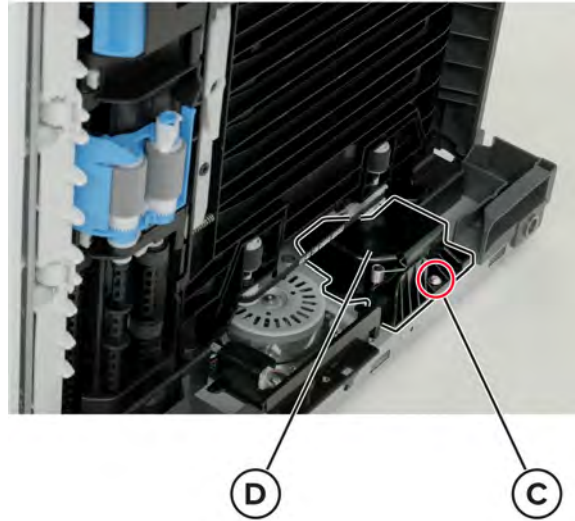

**Installation notes:**

- a Make sure that the gears assembly is properly installed in the housing.

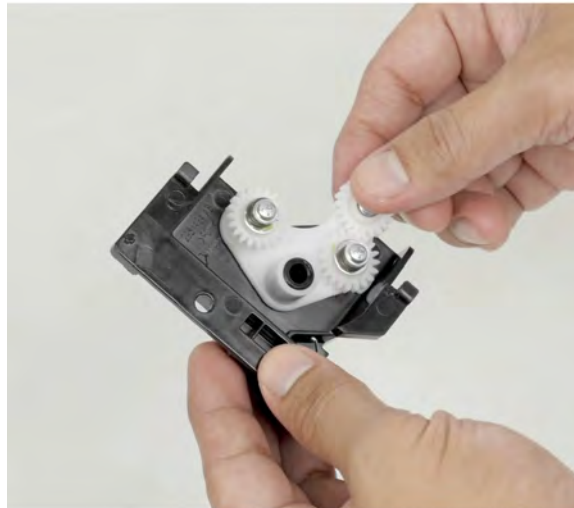


- b** Align the tab on the housing to the notch in the frame, and then install the duplex swing arm assembly.




## Imaging unit coupling removal

- 1** Remove the left cover. See [“Left cover removal” on page 154.](#)
- 2** Remove the left front door link. See [“Left front door link removal” on page 161.](#)
- 3** Remove the two screws (A), and then remove the imaging unit coupling (B).

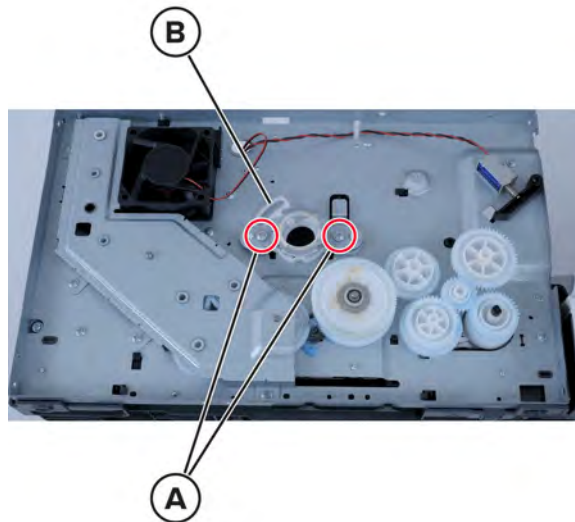


## Pick roller clutch removal

- 1 Remove the left cover. See [“Left cover removal” on page 154.](#)
- 2 Remove the six screws, and then remove the gear cover.

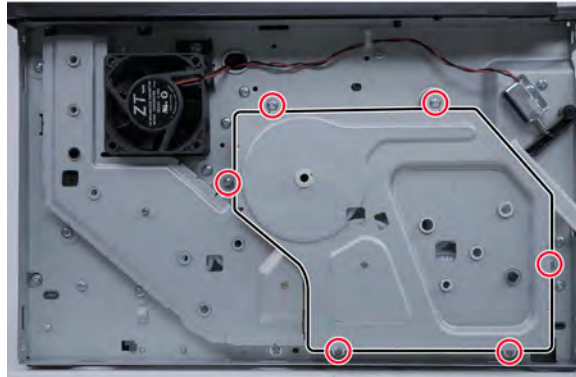


- 3 Remove the three gears.

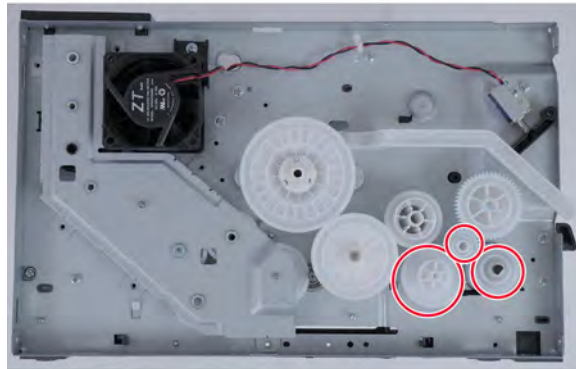

**Installation note:** Pay attention to the position of the gears.




- 4 Remove the clutch (A), and then disconnect the cable (B).

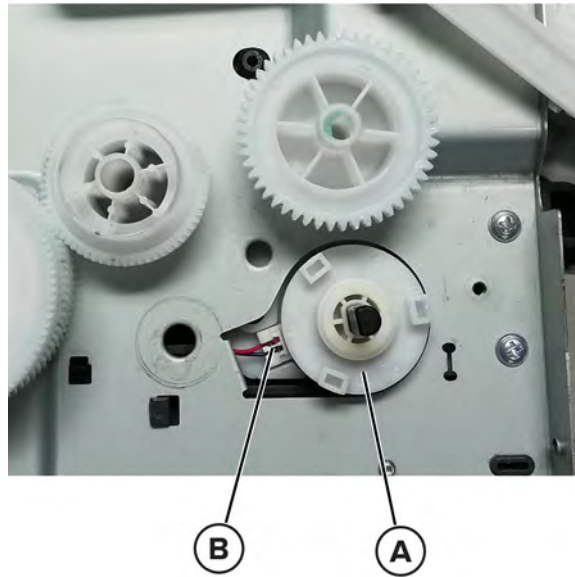

## Left front door link removal


- 1 Remove the left cover. See [“Left cover removal” on page 154.](#)
- 2 Remove the six screws, and then remove the gear cover.

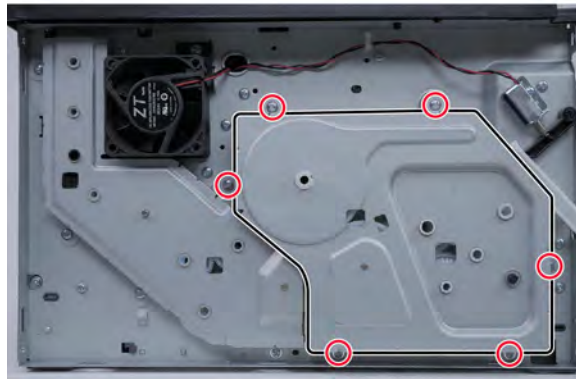

- 3 Remove the gear.



- 4 Release the left front door link (A) from the retainer (B), and then remove the left front door link.

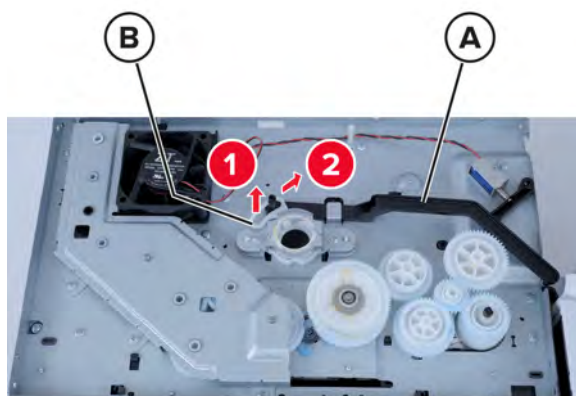

## Right side removals


### Right cover removal

- 1 Remove the screw at the front, and then remove the screw at the rear of the cover.



- 2 Open the front door, and then place the printer on its left side.

3 Release the three latches at the bottom (A).

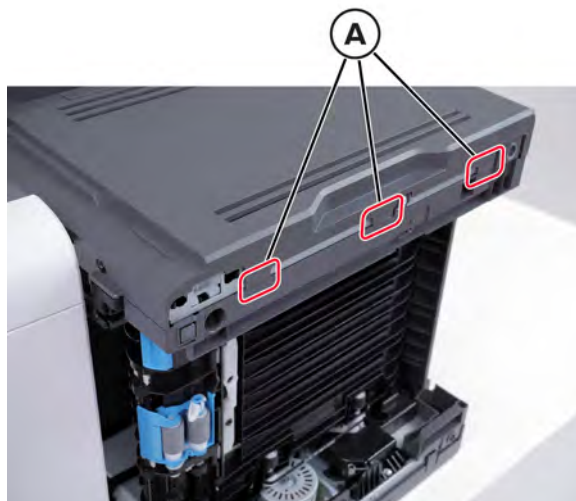

4 Release the latch at the front, and then remove the cover.



Parts removal



## Controller board removal



**Note:** For a video demonstration, see [Controller board removal](#).

**Note:** When replacing the controller board for the MX431adn, MX431adw, MB3442adw, and XM1342 models, make sure that it is compatible with the ADF scanner. Not all ADF scanners are compatible with the controller board. Check the following before installation:


- Printer serial number
- ADF scanner connector
- Printer controller board connector slot

Use the following table to differentiate between the ADF scanners, and then identify their compatible printer controller boards.


Printer S/N	Flatbed scanner and ADF variant	Compatible printer controller board
<p>Serial number for older printers: The eighth character is <b>0</b>.</p>	<p>Part number: 41X2598 Number of pins on the ADF CIS FFC: 14</p>  <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• If 41X2598 is no longer available, then perform one of the following: <ul style="list-style-type: none"> <li>– For printer model MX431adn, replace both the ADF scanner and the printer controller board with the newer ADF scanner (41X2980) and the newer controller board (41X2976).</li> <li>– For printer models MB3442adw, MX431adw, and XM1342, replace both the ADF scanner and the printer controller board with the newer ADF scanner (41X2980) and the newer controller board (41X2977).</li> </ul> </li> <li>• Make sure to upgrade the firmware to FW 074.038 version or later.</li> </ul>	<p>Part numbers:</p> <ul style="list-style-type: none"> <li>• 41X2660 (MX431adn)</li> <li>• 41X2661 (MB3442adw, MX431adw, XM1342)</li> </ul> <p>JDCIS1 connector: 14-pin slot</p>  <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• If 41X2660 is no longer available, then replace both the ADF scanner and the printer controller board with the newer ADF scanner (41X2980) and the newer controller board (41X2976).</li> <li>• If 41X2661 is no longer available, then replace both the ADF scanner and the printer controller board with the newer ADF scanner (41X2980) and the newer controller board (41X2977).</li> <li>• Make sure to upgrade the firmware to FW 074.038 version or later.</li> </ul>

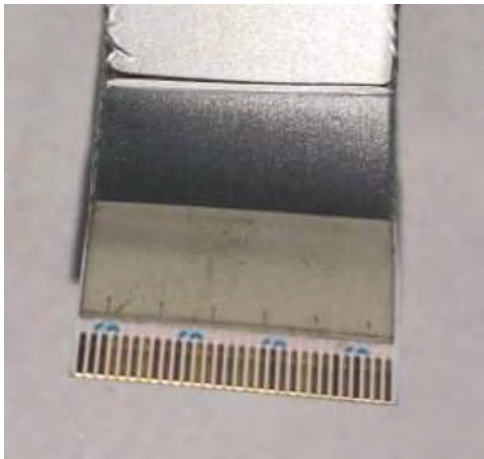Printer S/N	Flatbed scanner and ADF variant	Compatible printer controller board
Serial number for newer printers: The eighth character is equal to or greater than <b>1</b> .	Part number: 41X2980 Number of pins on the ADF CIS FFC: 30 	Part numbers: <ul style="list-style-type: none"> <li>• 41X2976 (MX431adn)</li> <li>• 41X2977 (MB3442adw, MX431adw, XM1342)</li> </ul> JDCIS2 connector: 30-pin slot 
<b>Note:</b> Do not downgrade the firmware to versions earlier than FW 074.038.		

- 1** Remove the right cover. See [“Right cover removal” on page 163](#).
- 2** On printer models equipped with an antenna, perform the following:
  - a** Remove the left cover. See [“Left cover removal” on page 154](#).
  - b** Remove the control panel. See [“Control panel removal” on page 174](#).
  - c** Remove the ADF and scanner. See [“ADF and scanner removal” on page 189](#).
  - d** Release the antenna (A) from the latch (B).

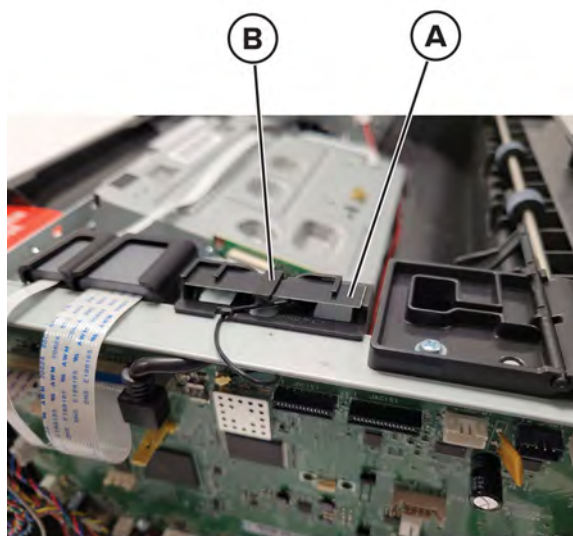

- 3 Disconnect all the cables from the controller board.

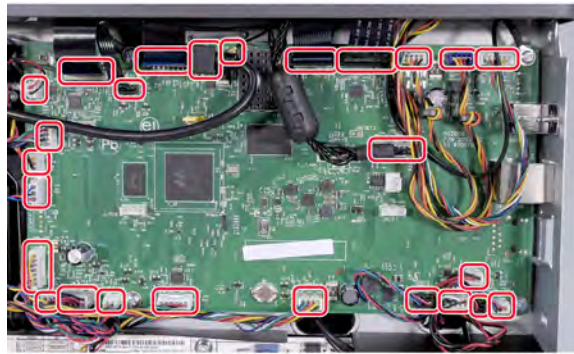


- 4 Remove the five screws, and then remove the controller board.







## LVPS removal

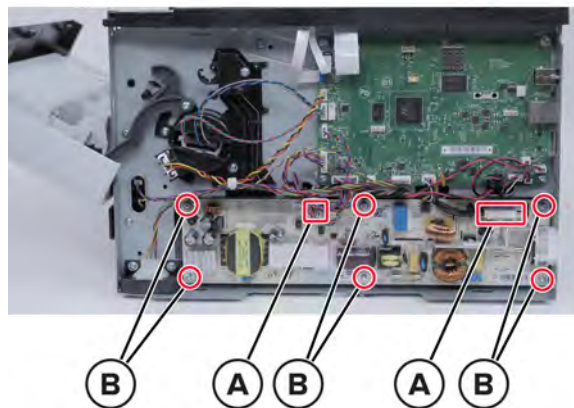**Note:** For a video demonstration, see [LVPS removal](#).

- 1 Remove the right cover. See [“Right cover removal” on page 163](#).
- 2 Disconnect the two cables (A), remove the six screws (B), and then remove the LVPS.



-  **CAUTION—SHOCK HAZARD:** To avoid the risk of electrical shock, do not remove the shield from the back of the LVPS.
-  **ATTENTION—RISQUE D'ELECTROCUTION :** Pour éviter tout risque d'électrocution, ne retirez pas la protection de l'arrière du bloc d'alimentation basse tension (LVPS).
-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Para evitar el riesgo de descarga eléctrica, no retire la protección de la parte trasera de la fuente de alimentación de bajo voltaje (LVPS).
-  **VORSICHT – STROMSCHLAGGEFAHR:** Um die Gefahr eines elektrischen Schlags zu vermeiden, entfernen Sie die Abdeckung nicht von der Rückseite des Niederspannungsnetzteils.



## HVPS removal

**Note:** For a video demonstration, see [HVPS removal](#).

- 1 Remove the left cover. See [“Left cover removal” on page 154](#).
- 2 Remove the right cover. See [“Right cover removal” on page 163](#).
- 3 Remove the rear door. See [“Rear door removal” on page 181](#).
- 4 Place the printer on its left side.




- 5 Remove the three screws (A), release the HVPS, and then disconnect the cable (B).

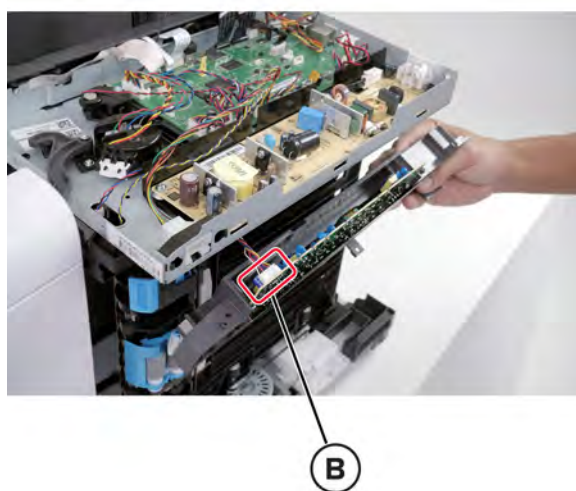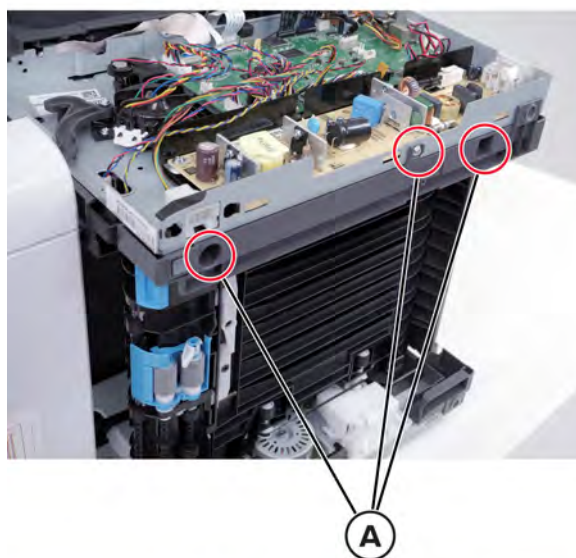


## Sensor (MPF paper present) removal

**Note:** For a video demonstration, see [Sensor \(MPF paper present\) removal](#).

- 1 Remove the right cover. See [“Right cover removal”](#) on page 163.
- 2 Open the front door, and then remove the screw.

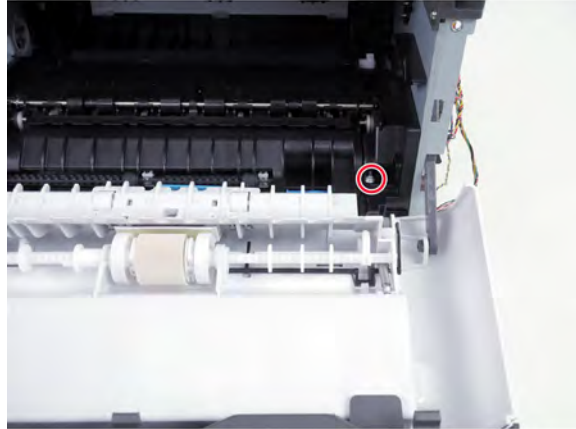


- 3 Release the latches securing the sensor, and then disconnect the sensor cable.

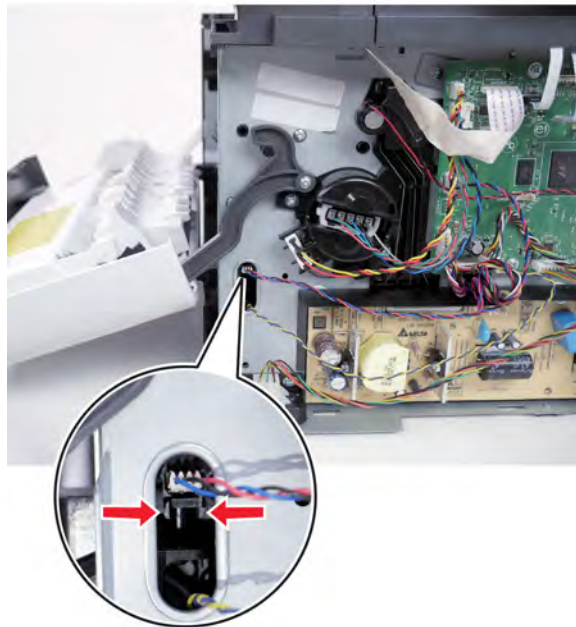

## Right front door link removal

- 1 Remove the right cover. See [“Right cover removal” on page 163.](#)
- 2 Remove the screw, and then remove the link from the front door.

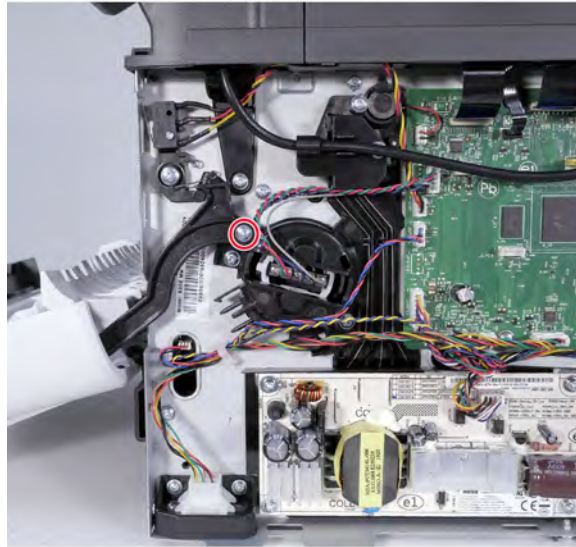


## MPF solenoid cable removal

**Note:** For a video demonstration, see [MPF solenoid cable removal.](#)

- 1 Remove the left cover. See [“Left cover removal” on page 154.](#)
- 2 Remove the right cover. See [“Right cover removal” on page 163.](#)
- 3 Remove the ADF and scanner. See [“ADF and scanner removal” on page 189.](#)

- 4 Disconnect the cable, and then remove the screw to remove the solenoid cable.

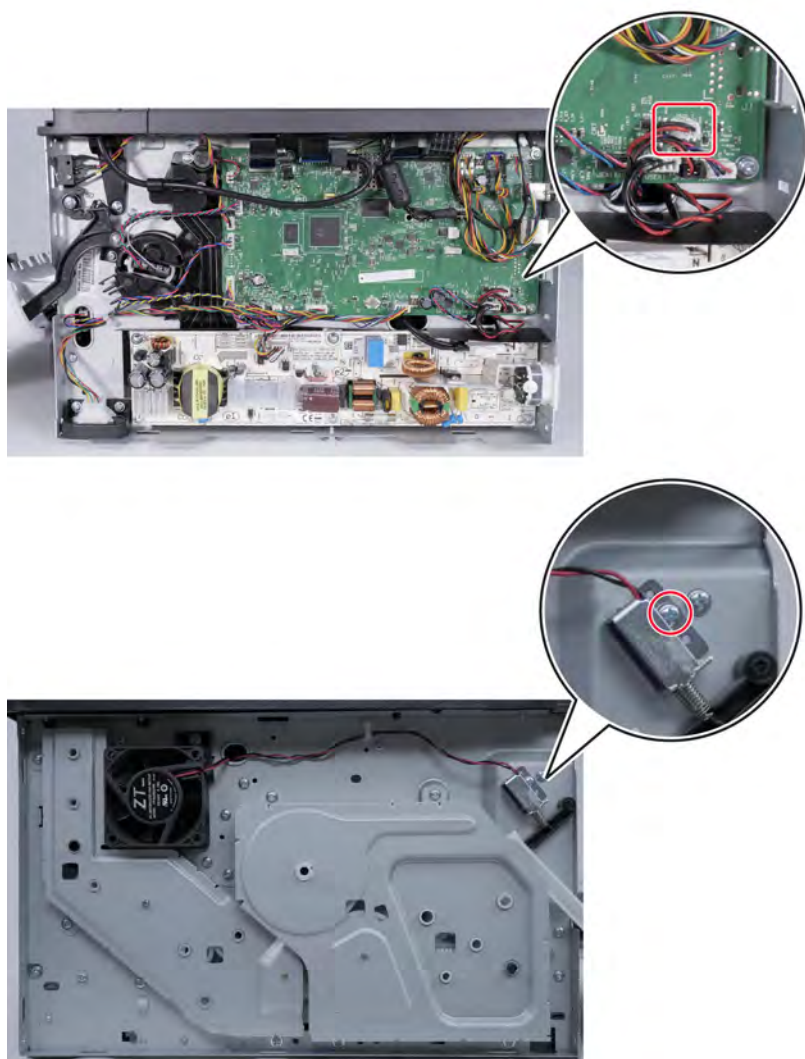


## Main fan removal

**Note:** For a video demonstration, see [Main fan removal](#).


- 1 Remove the left cover. See [“Left cover removal” on page 154](#).
- 2 Remove the right cover. See [“Right cover removal” on page 163](#).
- 3 Remove the ADF and scanner. See [“ADF and scanner removal” on page 189](#).

4 Disconnect the cable, and then remove the screw to remove the fan.

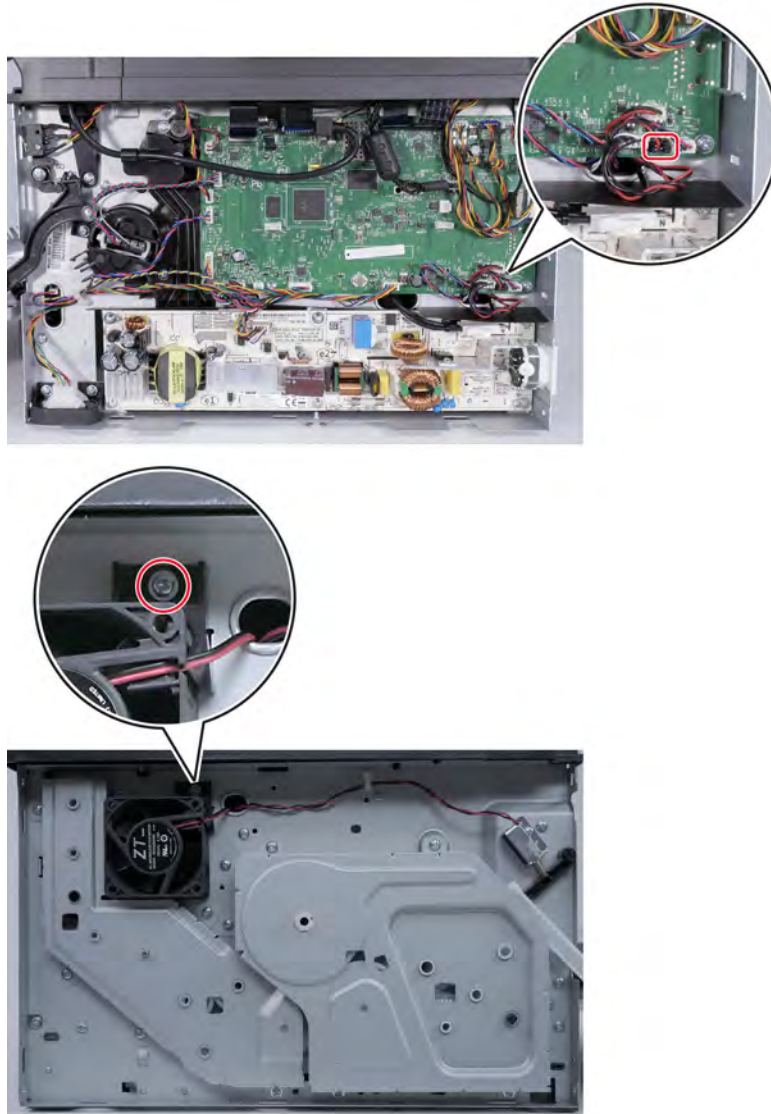

## Speaker removal

- 1 Remove the right cover. See [“Right cover removal” on page 163.](#)
- 2 Disconnect the cable (A), remove the screw (B), and then remove the speaker.

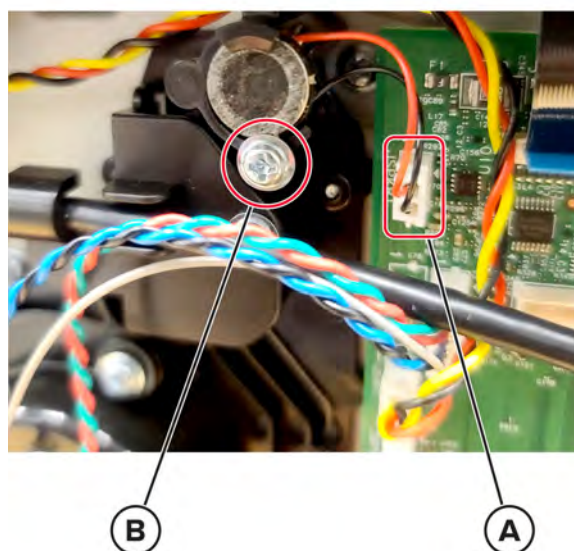

## Front removals

### Control panel removal

- 1 Remove the right cover. See [“Right cover removal” on page 163.](#)
- 2 Disconnect the two cables.



- 3 Remove the ADF and scanner. See [“ADF and scanner removal” on page 189.](#)
- 4 Remove the control panel cables from the top right frame of the printer.

- 5 Remove the screw, and then remove the control panel.



## Upper front cover removal

**Note:** For a video demonstration, see [Upper front cover removal](#).

- 1 Open the front door.
- 2 Release the two latches.





- 3 Remove the cover.



## Front door removal

**Note:** For a video demonstration, see [Front door removal](#).

- 1 Remove the right cover. See [“Right cover removal” on page 163](#).
- 2 Remove the right front door link. See [“Right front door link removal” on page 171](#).
- 3 Release the left front door link, and then remove the front door.

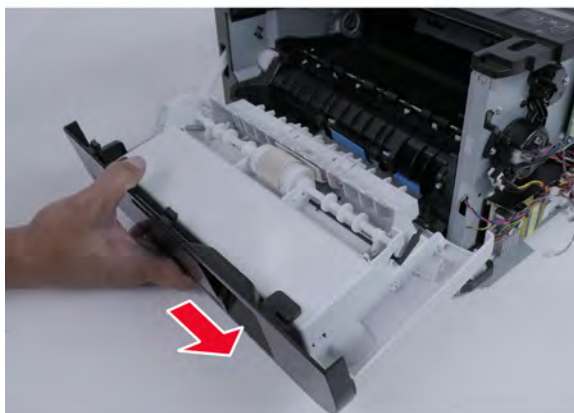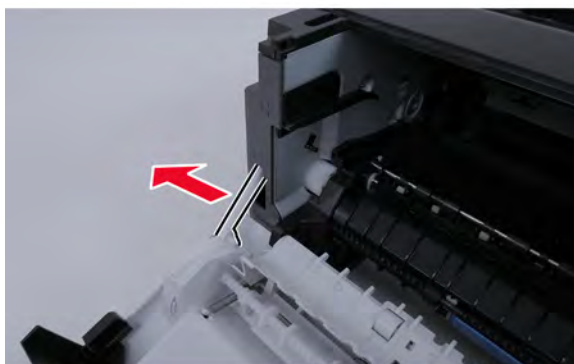



## Transfer roller removal

**Note:** For a video demonstration, see [Transfer roller removal](#).

- 1 Open the front door.
- 2 Release the two latches, and then remove the transfer roller.



### Installation notes:

- Do not touch the foam on the roller.
- The shaft has grease. To avoid contaminating the roller, do not touch the shaft.
- Make sure that the spring is properly installed on the left side of the roller.

## MPF pick roller removal

- 1 Open the front door.
- 2 Remove the MPF pick roller.




## Pick separator roller removal

- 1 Remove the tray insert.
- 2 Remove the pick separator roller.




## Sensor (input) removal


- 1 Open the front door.
- 2 Remove the imaging unit.
- 3 Remove the two screws (A), and then remove the roller assembly (B).

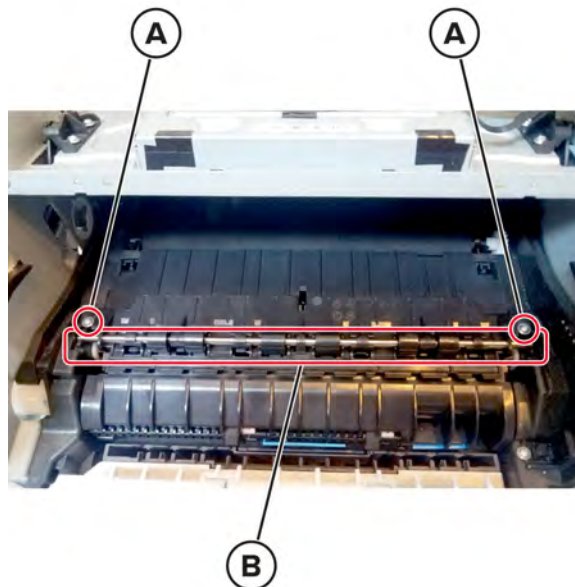

**4** Release the two latches (C), and then remove the paper guide (D).

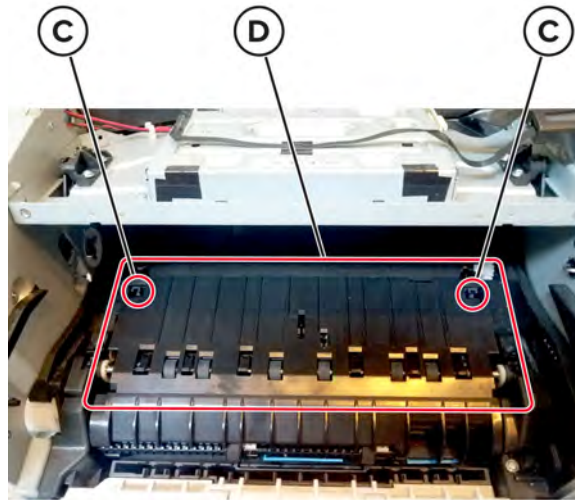


**5** Remove the screw (E), and then disconnect the cable (F) from the sensor.

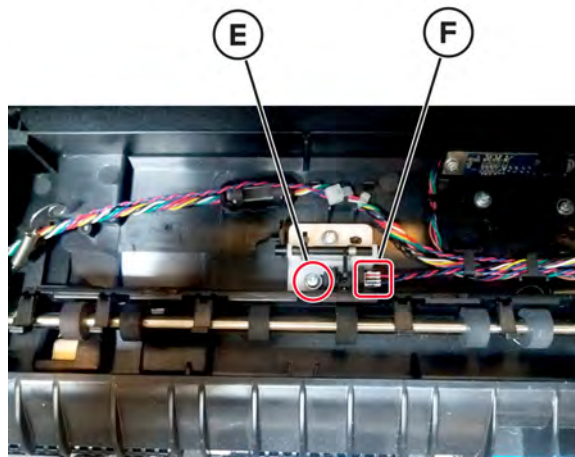

## Rear removals

### Rear door removal

- 1 Remove the left cover. See [“Left cover removal” on page 154.](#)
- 2 Remove the screw, and then remove the rear door.

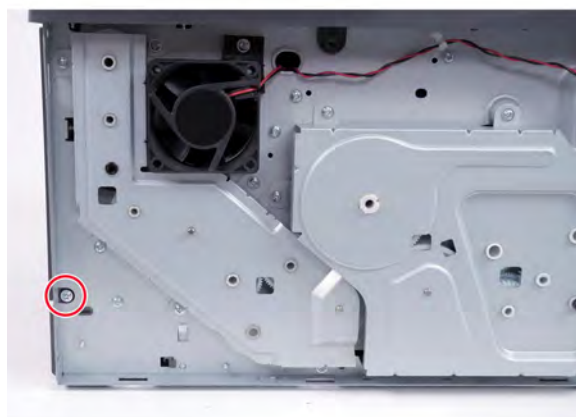


**Note:** Pay attention to the position of the locating feature on the right side before removing the door.



## Fuser removal

**Note:** For a video demonstration, see [Fuser removal](#).

- 1 Remove the right cover. See [“Right cover removal” on page 163](#).
- 2 Disconnect the three cables.

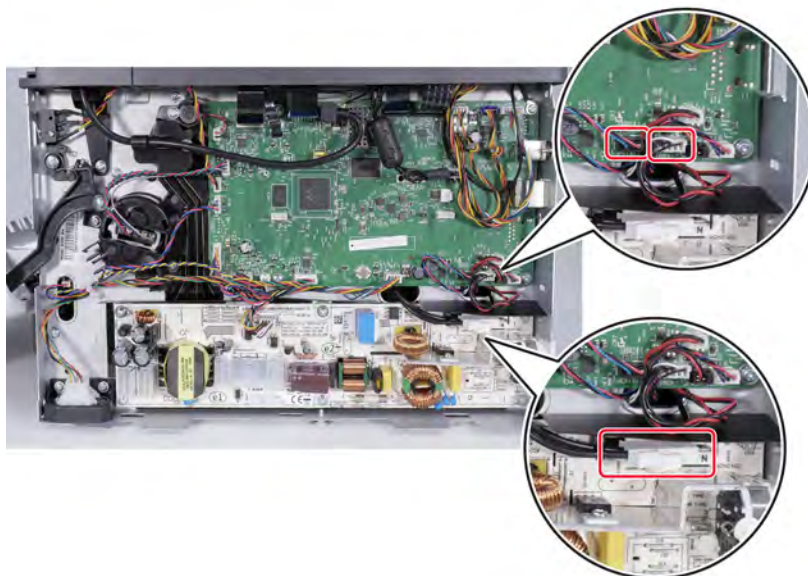

- 3 Open the rear door, remove the four screws, and then remove the fuser.




## Top removals

### Printhead removal


**Note:** For a video demonstration, see [Printhead removal](#).

- 1 Remove the right cover. See [“Right cover removal” on page 163](#).
- 2 Remove the left cover. See [“Left cover removal” on page 154](#).
- 3 Remove the ADF and scanner. See [“ADF and scanner removal” on page 189](#).


4 Disconnect the two cables.

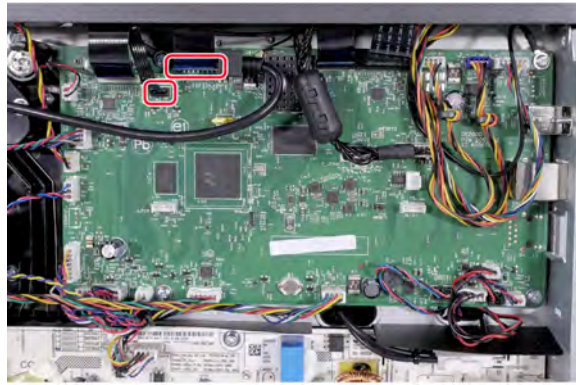

5 Remove the three screws (A), remove the two cables (B) from the toroid (C), and then remove the printhead.

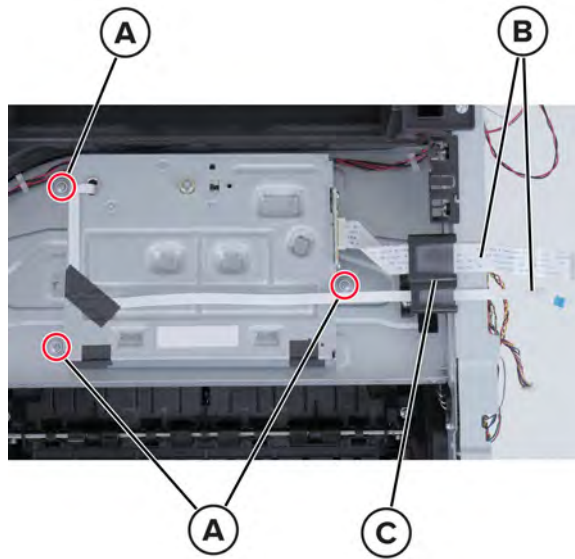


**Installation note:** When installing the printhead, tighten the screws in the following the order:

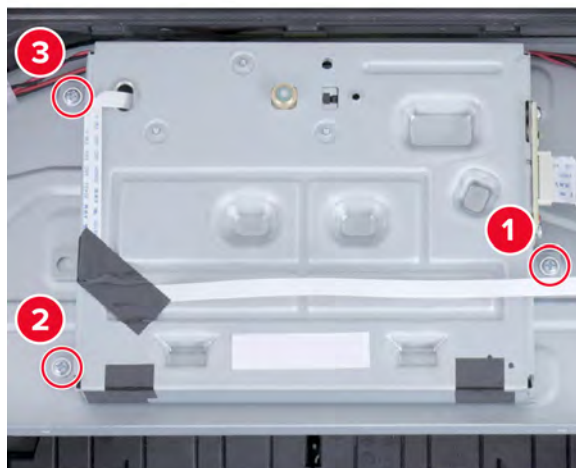


## Redrive removal

**Note:** For a video demonstration, see [Redrive removal](#).

- 1 Remove the right cover. See [“Right cover removal” on page 163](#).
- 2 Remove the left cover. See [“Left cover removal” on page 154](#).
- 3 Remove the ADF and scanner. See [“ADF and scanner removal” on page 189](#).
- 4 Remove the four screws.

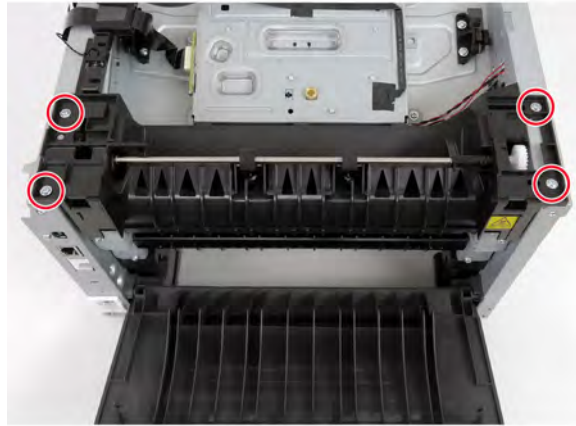


- 5 Lift the redrive, and then disconnect the cable from the redrive.

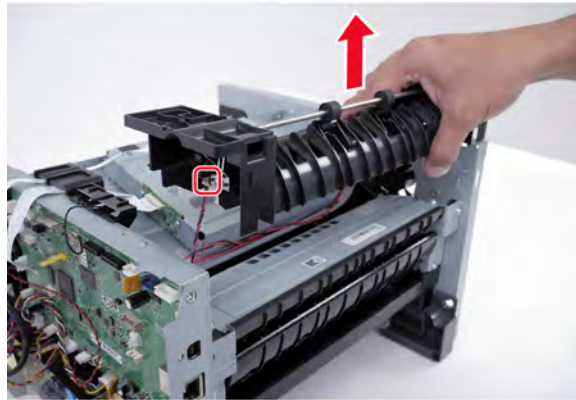



## Bin full sensor actuator removal


- 1 Remove the ADF and scanner. See [“ADF and scanner removal” on page 189](#).
- 2 Firmly pull the bin full actuator to the left until it is disengaged from the printer frame.

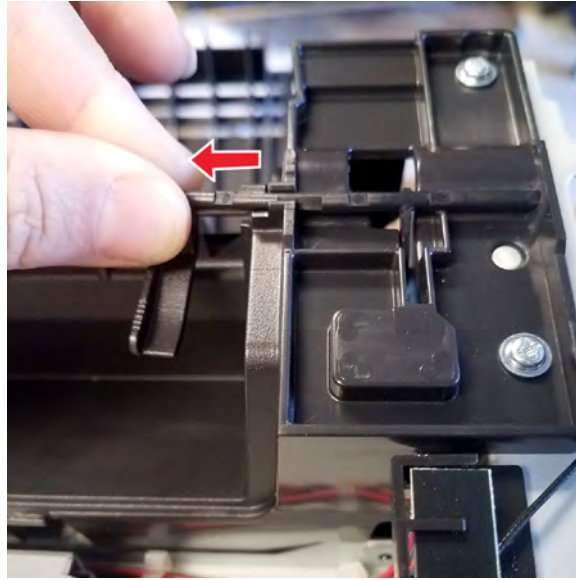


- 3 Remove the actuator.

### Installation notes:

- a Make sure that the actuator is properly positioned as shown.

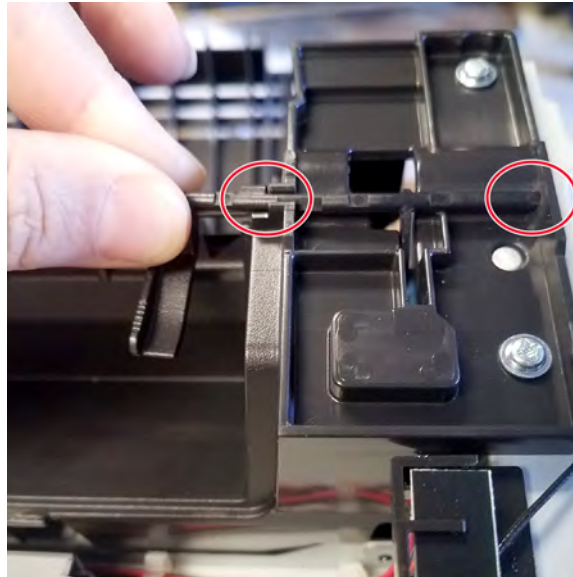

- b** Carefully rotate the actuator upward until it is engaged to the printer frame.

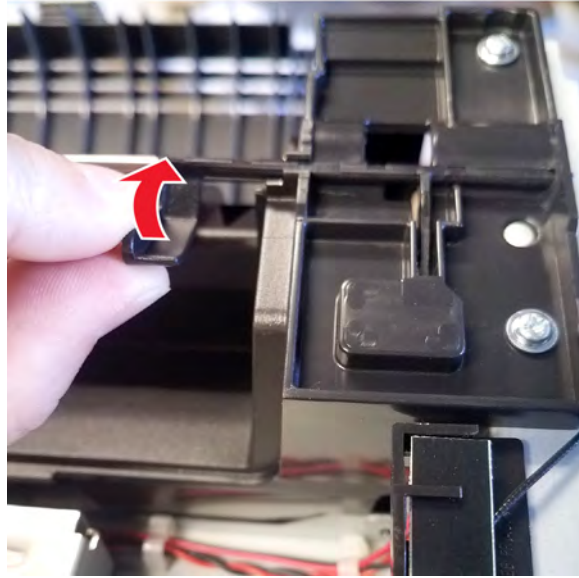


- c** Make sure that the actuator is properly installed and freely rotates without binding.


## Bottom removals

### Duplex guide removal

- 1 Place the printer on its left side.
- 2 Remove the duplex guide.

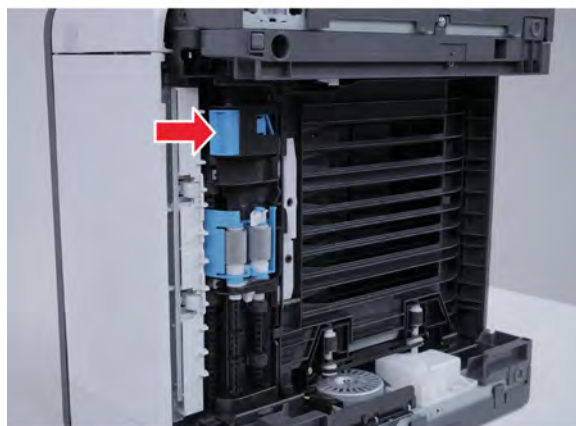

**Installation note:** Make sure that the duplex guide is properly inserted into the locating features inside the printer.

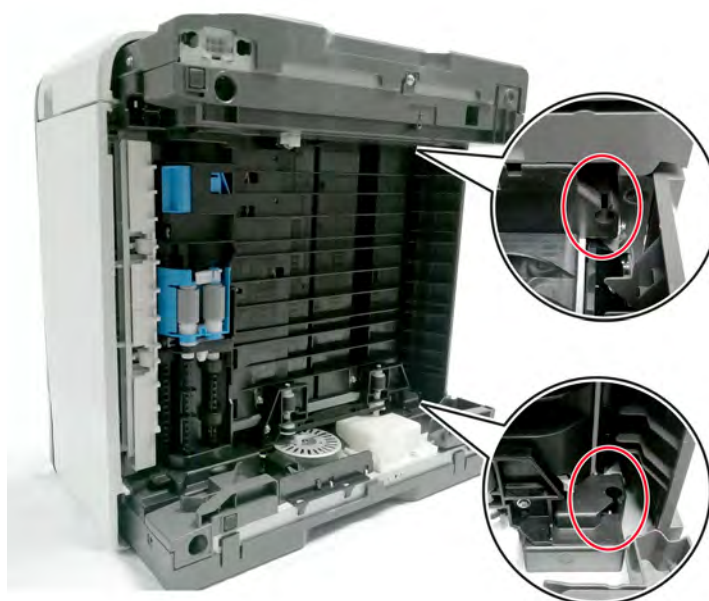

## ADF and scanner removals

### ADF cover removal

- 1 Open the ADF cover.
- 2 Remove the ADF cover.




## ADF tray removal

- 1 Open the ADF cover.
- 2 Remove the ADF tray.



## ADF separator pad removal

- 1 Open the ADF cover.
- 2 Release the latch to remove the ADF separator pad.

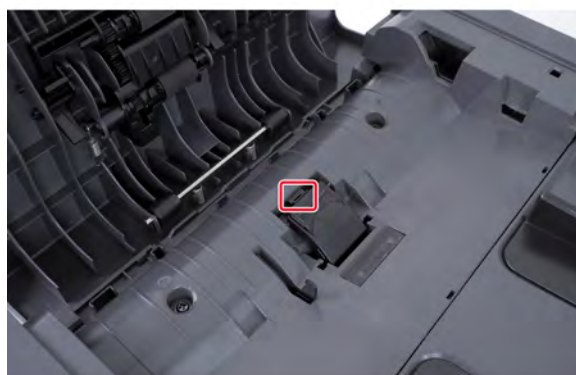

**Installation note:** Do not lose the spring under the ADF separator pad.



## ADF and scanner removal



**Note:** For a video demonstration, see [ADF and scanner removal](#).

**Note:** When replacing the ADF scanner for the MX431adn, MX431adw, MB3442adw, and XM1342 models, make sure that it is compatible with the controller board. Not all ADF scanners are compatible with the controller board. Check the following before installation:


- Printer serial number
- ADF scanner connector
- Printer controller board connector slot

Use the following table to differentiate between the ADF scanners, and then identify their compatible printer controller boards.



Printer S/N	Flatbed scanner and ADF variant	Compatible printer controller board
<p>Serial number for older printers: The eighth character is <b>0</b>.</p>	<p>Part number: 41X2598 Number of pins on the ADF CIS FFC: 14</p>  <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• If 41X2598 is no longer available, then perform one of the following: <ul style="list-style-type: none"> <li>– For printer model MX431adn, replace both the ADF scanner and the printer controller board with the newer ADF scanner (41X2980) and the newer controller board (41X2976).</li> <li>– For printer models MB3442adw, MX431adw, and XM1342, replace both the ADF scanner and the printer controller board with the newer ADF scanner (41X2980) and the newer controller board (41X2977).</li> </ul> </li> <li>• Make sure to upgrade the firmware to FW 074.038 version or later.</li> </ul>	<p>Part numbers:</p> <ul style="list-style-type: none"> <li>• 41X2660 (MX431adn)</li> <li>• 41X2661 (MB3442adw, MX431adw, XM1342)</li> </ul> <p>JDCIS1 connector: 14-pin slot</p>  <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• If 41X2660 is no longer available, then replace both the ADF scanner and the printer controller board with the newer ADF scanner (41X2980) and the newer controller board (41X2976).</li> <li>• If 41X2661 is no longer available, then replace both the ADF scanner and the printer controller board with the newer ADF scanner (41X2980) and the newer controller board (41X2977).</li> <li>• Make sure to upgrade the firmware to FW 074.038 version or later.</li> </ul>

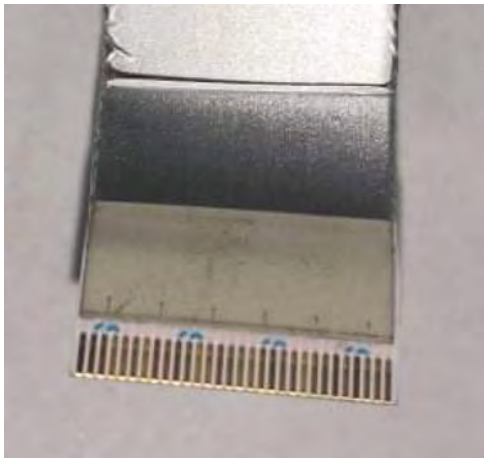Printer S/N	Flatbed scanner and ADF variant	Compatible printer controller board
Serial number for newer printers: The eighth character is equal to or greater than <b>1</b> .	Part number: 41X2980 Number of pins on the ADF CIS FFC: 30 	Part numbers: <ul style="list-style-type: none"> <li>• 41X2976 (MX431adn)</li> <li>• 41X2977 (MB3442adw, MX431adw, XM1342)</li> </ul> JDCIS2 connector: 30-pin slot 
<b>Note:</b> Do not downgrade the firmware to versions earlier than FW 074.038.		

- 1 Remove the right cover. See [“Right cover removal” on page 163](#).
- 2 Remove the left cover. See [“Left cover removal” on page 154](#).
- 3 Remove the control panel. See [“Control panel removal” on page 174](#).
- 4 Disconnect the six cables (A), and then remove the two screws (B).

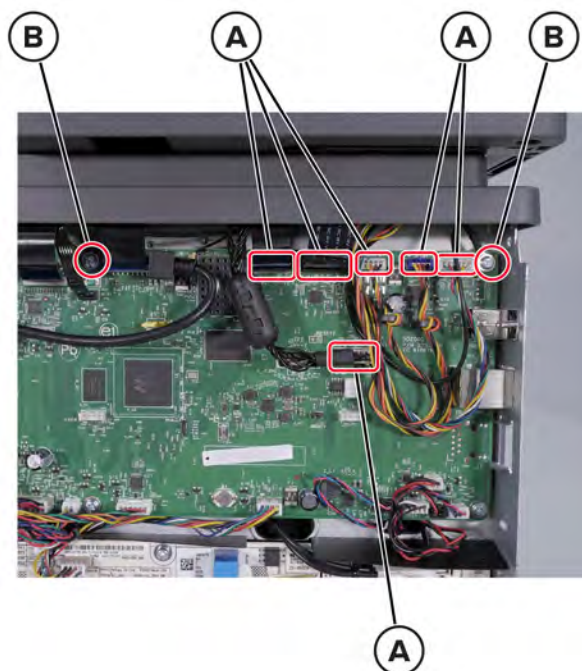


5 Remove the three screws from the printer frame.

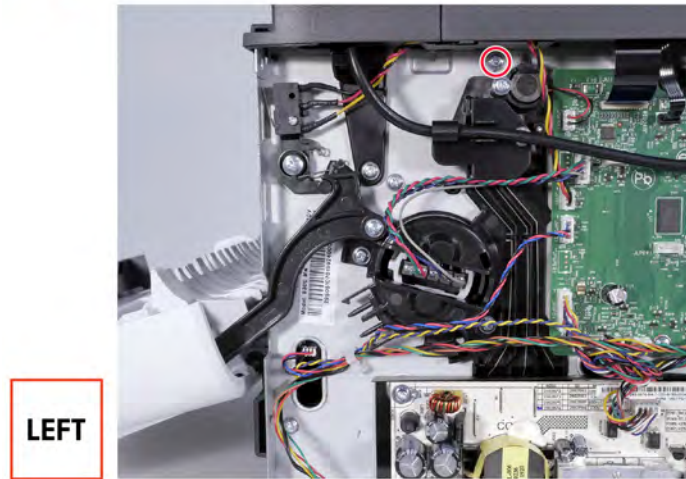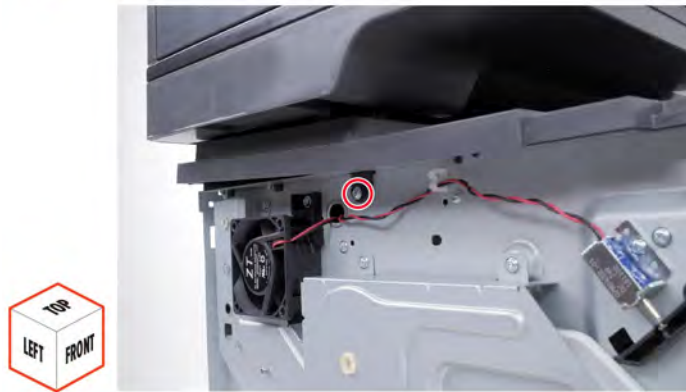



6 Remove the ADF and scanner.

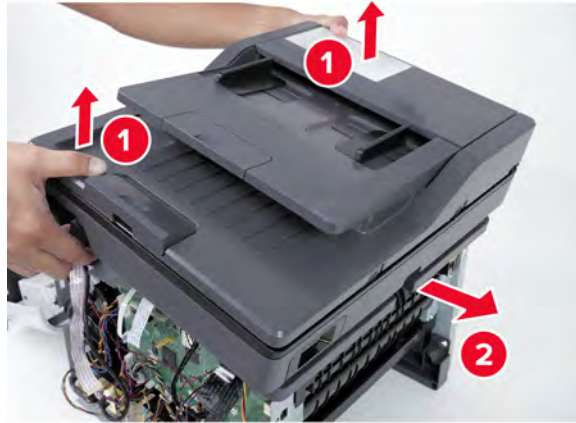

**Installation note:** Make sure to perform the ADF scanner calibration after replacing the ADF and scanner.

To perform the ADF scanner calibration:

- 1 Load the calibration sheet into the ADF tray.

**Note:** Adjust the guides to match the size of the calibration sheet.

- 2 Enter the Diagnostics menu, and then select **Scanner Diagnostics**.

- 3 Touch **Scanner Calibration Reset**.

- 4 Wait for about 45 seconds for the calibration to finish.


**Note:** A **Test Completed** message appears on the display when the calibration is finished.

## Scanner pivot arm removal

- 1 Slightly raise the ADF and scanner assembly.
- 2 While pulling on the scanner pivot arm latch, completely raise the ADF and scanner assembly to release the latch.



- 3 Remove the two screws, and then remove the scanner pivot arm.

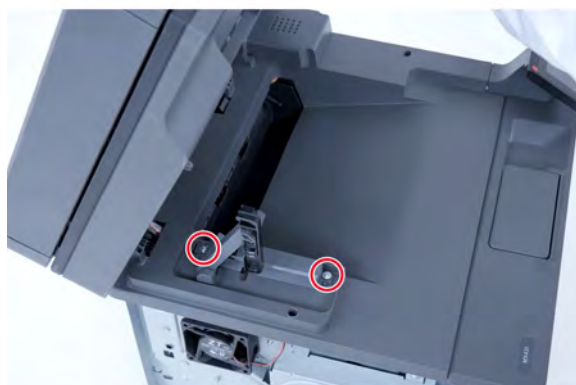

## Fax card removal

**Note:** This topic is only applicable for the MB3442adw, MX331, MX431, and XM1342 printer models.

**Note:** For a video demonstration, see [Fax card removal](#).

- 1 Remove the right cover. See [“Right cover removal” on page 163](#).
- 2 Remove the left cover. See [“Left cover removal” on page 154](#).
- 3 Remove the ADF and scanner. See [“ADF and scanner removal” on page 189](#).
- 4 Release the scanner pivot arm latch.




- 5 Place the ADF and scanner assembly on its left side.

**6** Remove the toroid from the fax card cable.



**7** Release the three latches, and then remove the fax card.

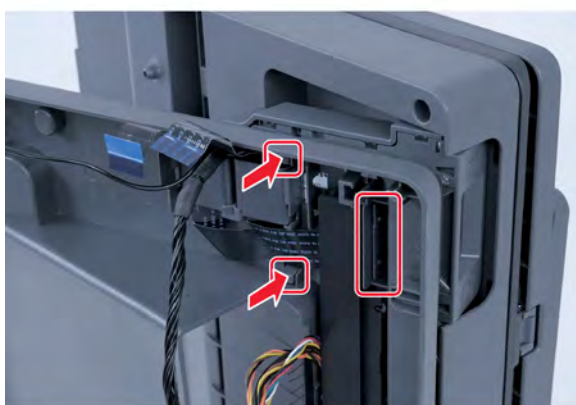

# Component locations

## Printer configuration



<b>1</b>	Automatic document feeder (ADF)
<b>2</b>	ADF tray
<b>3</b>	ADF bin
<b>4</b>	Control panel
<b>5</b>	Standard bin
<b>6</b>	Multipurpose feeder
<b>7</b>	Standard 250-sheet tray
<b>8</b>	Optional 550-sheet tray

## Controller board connectors

Connector	Connects to	Pin number	Signal
JSCANSNS1	Sensor (ADF paper present)	1	SNS_ADF_DOC
		2	SNS_ADF_DOC_LED
		3	GND
		4	SNS_ADF_SCAN
		5	PWR_ADF_SCAN_LED
		6	GND

Connector	Connects to	Pin number	Signal
JFBM1	Motor (scanner fatbed)	1	FBM_BOUT1
		2	FBM_BOUT2
		3	FBM_AOUT2
		4	FBM_AOUT1
JADFM1	Motor (ADF scanner)	1	ADFM_BOUT1
		2	ADFM_BOUT2
		3	ADFM_AOUT2
		4	ADFM_AOUT1
JACIS1	Scanner flatbed analog CIS bar	1	OS1_AFE
		2	GND
		3	OS2_AFE
		4	GND
		5	OS3_AFE
		6	GND
		7	+3.3 V_FB_C
		8	AFE_REV_ID1
		9	AFE_REV_ID2
		10	A_SOL
		11	GND
		12	A_CIS_PCLK
		13	+5 V_AWAKE
		14	SCAN_LEDB
		15	SCAN_LEDG
		16	SCAN_LEDR

Connector	Connects to	Pin number	Signal
JDCIS1	Scanner ADF digital CIS bar	1	GND
		2	SCAN_RXIN_P(0)
		3	SCAN_RXIN_N(0)
		4	GND
		5	SCAN_RXCLK_P
		6	SCAN_RXCLK_N
		7	GND
		8	D_SOL
		9	D_AFE_SEN
		10	D_AFE_SDIO
		11	D_AFE_SCK
		12	GND
		13	D_CIS_PCLK
		14	+3.3 V_ADF
JWIFI1	Wi-Fi antenna	1	WIFI_ANT
		2	GND
J3	USB front port cable	1	+5 V_FUSB
		2	USB_N
		3	USB_P
		4	NC
		5	GND

Connector	Connects to	Pin number	Signal
JVDO1	Printhead video	1	VDO_HSYNC-
		2	GND
		3	VDO_K1+
		4	VDO_K1-
		5	GND
		6	VDO_LPOW_K
		7	VDO_LADJ_K1
		8	VDO_BOOST_K
		9	+3.3 V_PHRAIL_SW
		10	GND
		11	VDO_LEN_K-
		12	+3.3 V_PHRAIL_SW
		13	VDO_K0+
		14	VDO_K0-
		15	GND
		16	VDO_LADJ_K0
JMIR1	Motor (printhead mirror)	1	+25 V_SW
		2	GND
		3	MM_START
		4	MM_LOCK
		5	MM_REFCLK



Connector	Connects to	Pin number	Signal
JUICC28	2.8-in. control panel LCD	1	LED_DRIVE
		2	+5 V_CONT
		3	MIR_TXD
		4	MIR_CS-
		5	POWER_BUTTON
		6	LCD_RS
		7	LCD_TE
		8	MIR_RXD
		9	GND
		10	MIR_CLK
		11	GND
		12	I2C_DAT
		13	I2C_CLK
		14	+5 V_UI
		15	RESET-
		16	IRQ-
		17	GND
		18	LCD_WR
		19	LCD_RD
		20	+5 V_UI
		21	D0
		22	D1
		23	GND
		24	D2
		25	D3
		26	+5 V_UI
		27	D4
		28	D5
		29	GND
		30	D6
		31	D7
		32	+5 V_UI
JSPKR1	Speaker	1	Speaker+
		2	Speaker -

Component locations

Connector	Connects to	Pin number	Signal
JSCHIP1	Toner cartridge and imaging unit smart chip	1	I2C_DAT
		2	+3.3 V_SCHIP
		3	I2C_CLK
		4	GND
		5	TONER_EMPTY
JCVR1	Front door laser safety switch	1	+3.3 V_PHRAIL
		2	+3.3 V
		3	GND
JMPSNS1	Sensor (MPF paper present)	1	SNS_MPS
		2	GND
		3	PWR_MPF
JHVPS1	HVPS	1	+25 V_SW
		2	DEV_PWM
		3	ADC_HV_SERVO
		4	XFER_EN
		5	TX_PWM
		6	GND
		7	CHG_PWM





Connector	Connects to	Pin number	Signal
JMTR1	Motor (main drive)	1	+25 V_SW
		2	GND
		3	BRAKE
		4	PWM
		5	DIR
		6	FG
		7	+25 V_SW
		8	GND
	Sensor (toner density)	9	LED_PWM_TDS
		10	THERM_TDS
		11	SNS_TDS
		12	GND
		13	PWR_TDS
	Pick clutch	14	+25 V_SW
		15	CLUTCH_SINK
	Sensor (input)	16	SNS_INPUT
		17	GND
		18	PWR_INPUT
JTRAY1	Tray present switch	1	PWR_TRAY
		2	TRAY_DETECT
JOPT1	Paper handling option	1	+25 V_SW
		2	TXD_OPT
		3	TRAY_PULLED_N
		4	RXD_OPT
		5	GND
		6	5 V_OPT
JLVPS1	LVPS	1	RELAY_ON
		2	HEAT_ON
		3	ZERO_CROSS
		4	+25 V_SW_ON
		5	+25 V_CONT_RAIL
		6	GND
		7	+25 V_SW_RAIL
		8	GND

Connector	Connects to	Pin number	Signal
JEXIT1	Sensor (fuser exit)	1	SNS_EXIT
		2	GND
		3	PWR_EXIT
JFUSER1	Fuser thermistor	1	THERM_FUSER
		2	GND
		3	AC_RELAY_ON_TCO
		4	AC_RELAY_ON
JFAN1	Fan	1	+25 V_SW
		2	FAN_SINK
JBIN1	Sensor (bin full)	1	SNS_BF
		2	GND
		3	PWR_BF
JSOL1	MPF pick solenoid	1	+25 V_SW
		2	SOL_SINK
JFAX1	Fax <b>Note:</b> This connector is only applicable for the MB3442adw, MX331, MX431, and XM1342 printer models.	1	TONE
		2	FAX_PWR
		3	FAX_PWR
		4	RES
		5	+5V
		6	IRQ
		7	GND
		8	SCK
		9	GND
		10	MOSI
		11	GND
		12	MISO
		13	GND
		14	CS

# Maintenance

## Cleaning printer parts

### Cleaning the printer

-  **CAUTION—SHOCK HAZARD:** To avoid the risk of electrical shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.
-  **ATTENTION—RISQUE D'ELECTROCUTION :** pour éviter tout risque d'électrocution lors du nettoyage de l'extérieur de l'imprimante, débranchez le cordon d'alimentation électrique de la prise et déconnectez tous les câbles de l'imprimante avant de continuer.
-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Para evitar el riesgo de descarga eléctrica al limpiar el exterior de la impresora, desconecte el cable de alimentación de la toma eléctrica y desconecte todos los cables de la impresora antes de realizar la operación.
-  **VORSICHT – STROMSCHLAGGEFAHR:** Um das Risiko eines elektrischen Schlags beim Reinigen des Druckergehäuses zu vermeiden, ziehen Sie das Netzkabel aus der Steckdose, und ziehen Sie alle Kabel vom Drucker ab, bevor Sie fortfahren.

#### Notes:

- Perform this task after every few months.
- Damage to the printer caused by improper handling is not covered by the printer warranty.

- 1 Turn off the printer, and then unplug the power cord from the electrical outlet.
- 2 Remove paper from the standard bin and multipurpose feeder.
- 3 Remove any dust, lint, and pieces of paper around the printer using a soft brush or vacuum.
- 4 Wipe the outside of the printer with a damp, soft, lint-free cloth.

#### Notes:

- Do not use household cleaners or detergents, as they may damage the finish of the printer.
  - Make sure that all areas of the printer are dry after cleaning.
- 5 Connect the power cord to the electrical outlet, and then turn on the printer.

### Cleaning the scanner

- 1 Open the scanner cover.



2 Using a damp, soft, lint-free cloth, wipe the following areas:

- ADF glass pad

**Note:** In some printer models, this location has an ADF glass instead of a pad.



- Scanner glass pad



- ADF glass



- Scanner glass



**3** Close the scanner cover.

# Parts catalog

## Legend

The following column headings are used in the parts catalog:


- **Asm-index**—Identifies the item in the illustration.
- **Part number**—Identifies the unique number that correlates with the part.
- **Units/mach**—Refers to the number of units actually used in the base machine or product.
- **Units/FRU**—Refers to the number of units in a particular FRU.
- **Description**—Describes the part.

The following abbreviations are used in the parts catalog:

- **NS** (not shown) in the Asm-index column indicates that the part is procurable but is not pictured in the illustration.
- **PP** (parts packet) in the Description column indicates that the part is contained in a parts packet.




# Assembly 1: Covers

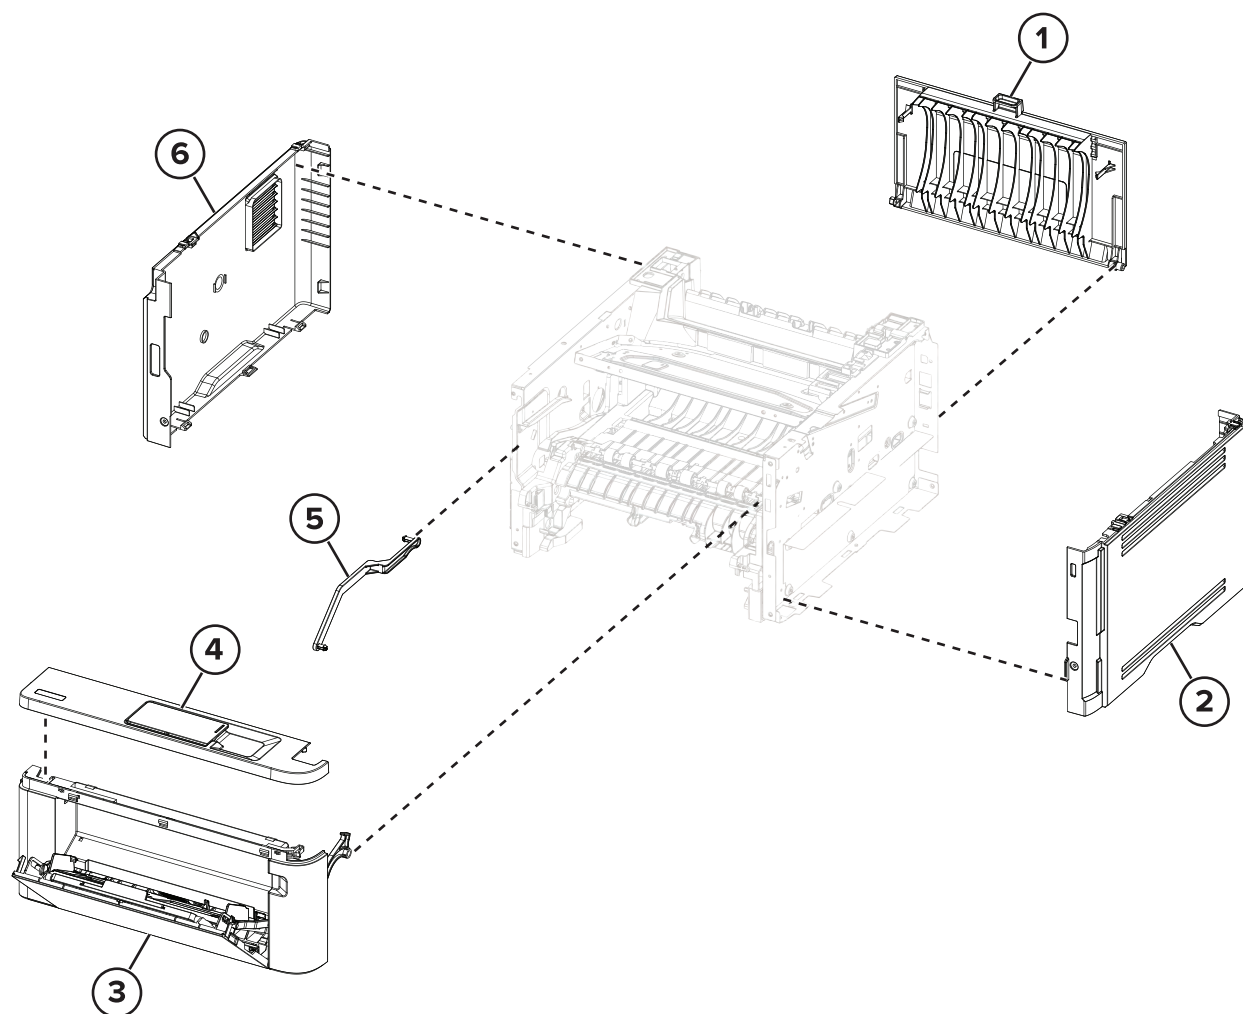

## Assembly 1: Covers

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X2582	1	1	Rear door	<a href="#">“Rear door removal” on page 181</a>
2	41X2580	1	1	Right cover (MX331)	<a href="#">“Right cover removal” on page 163</a>
2	41X4207	1	1	Right cover (MB3442, MX431, XM1342)	<a href="#">“Right cover removal” on page 163</a>
3	41X2584	1	1	Front door with MPF pick roller	<a href="#">“Front door removal” on page 176</a>
4	41X2670	1	12	Upper front cover with decals (MX331, MB3442, MX431)	<a href="#">“Upper front cover removal” on page 175</a>
4	41X2929	1	12	Upper front cover with decals (XM1342)	<a href="#">“Upper front cover removal” on page 175</a>
5	41X2578	1	1	Left front door link	<a href="#">“Left front door link removal” on page 161</a>
6	41X2579	1	1	Left cover	<a href="#">“Left cover removal” on page 154</a>


## Assembly 2: Control panel

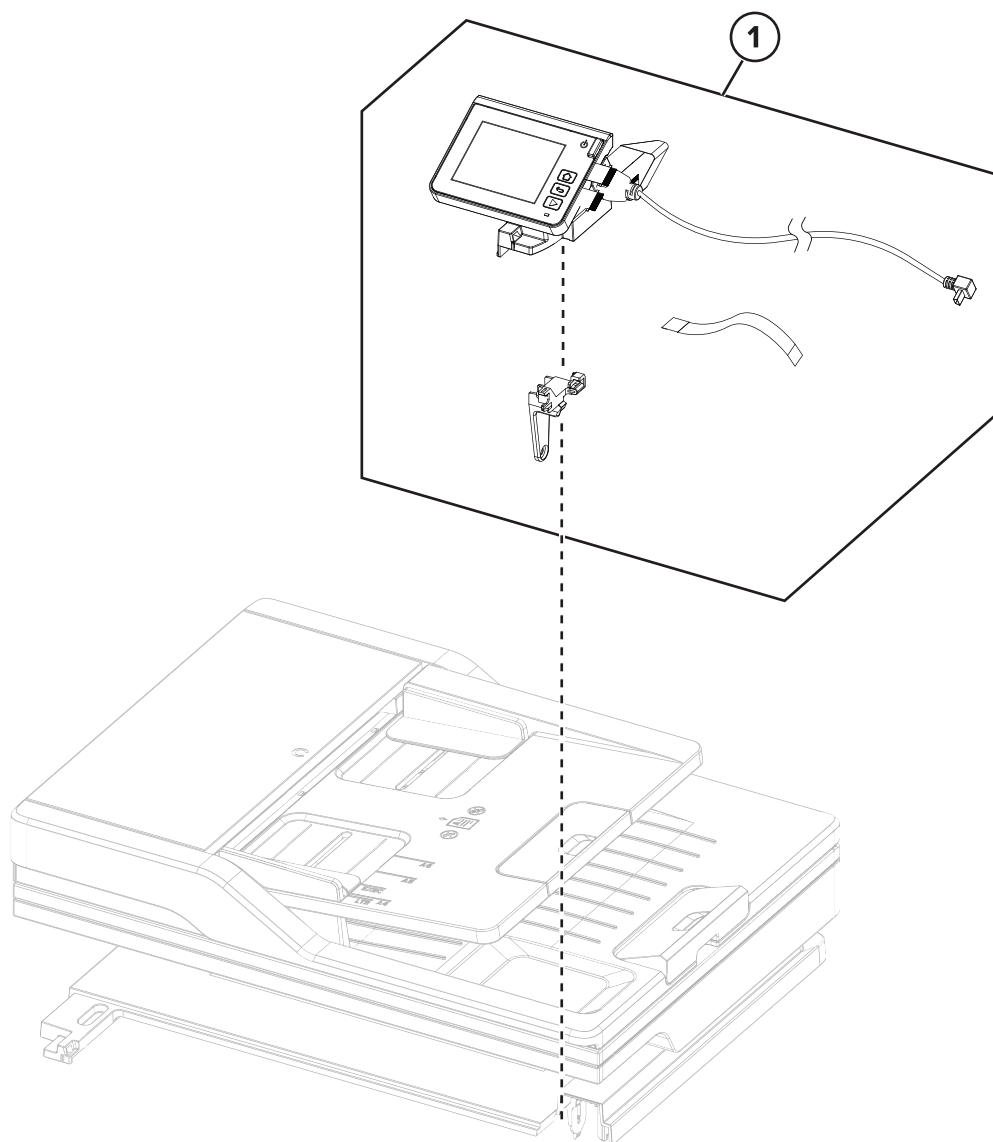

## Assembly 2: Control panel

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X2595	1	1	Control panel assembly	<a href="#">“Control panel removal” on page 174</a>

## Assembly 3: Electronics

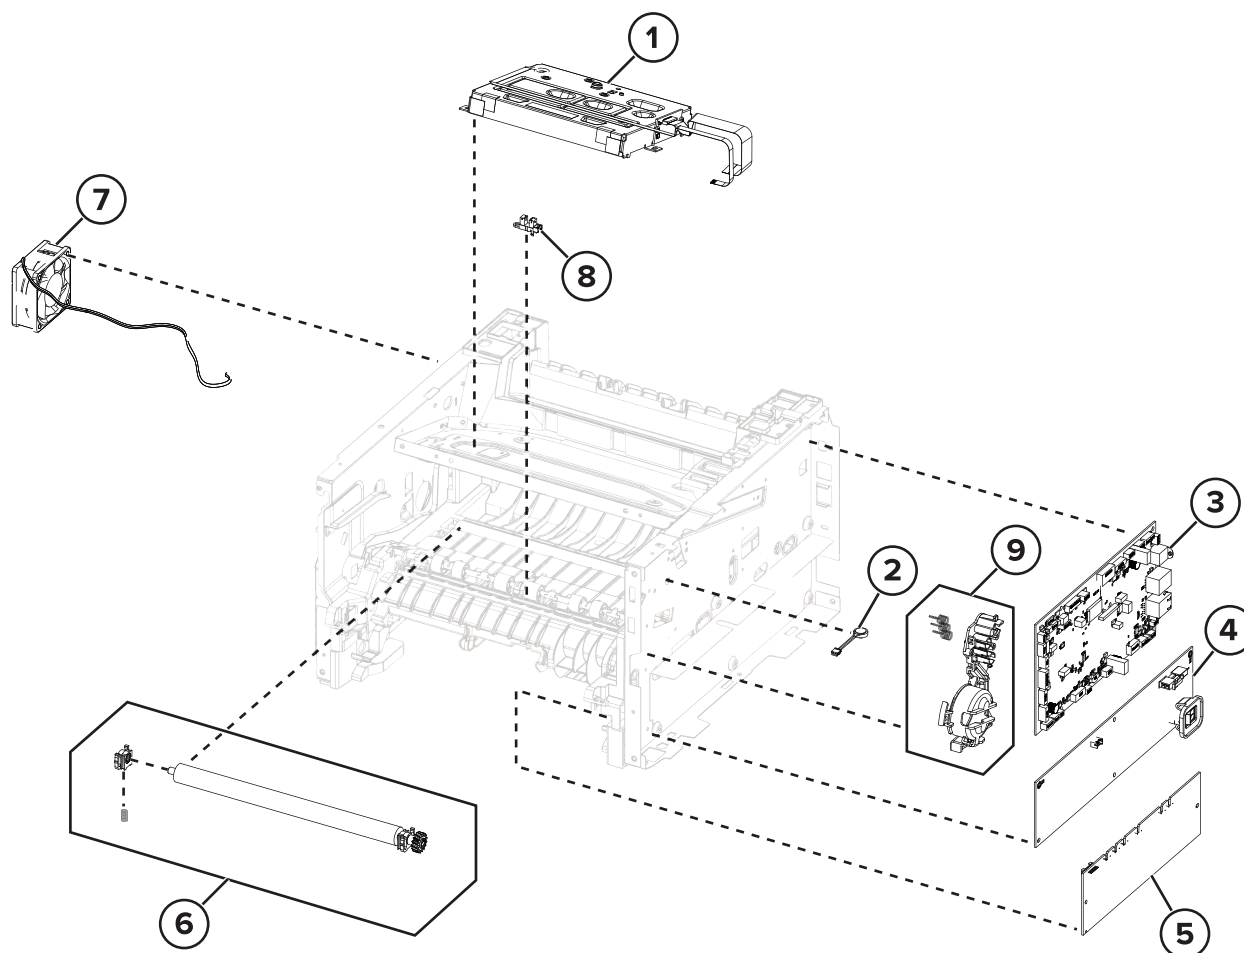

## Assembly 3: Electronics


Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X2573	1	1	Printhead	<a href="#">“Printhead removal” on page 182</a>
2	41X2978	1	1	Speaker	<a href="#">“Speaker removal” on page 174</a>
3	41X2659	1	1	Controller board (MX331adn)	<a href="#">“Controller board removal” on page 165</a>
3	41X2975	1	1	Controller board (MX331adn) <b>Note:</b> Make sure to upgrade the firmware to FW 074.038 version or later.	<a href="#">“Controller board removal” on page 165</a>
3	41X2660	1	1	Controller board (MX431adn) <b>Notes:</b> <ul style="list-style-type: none"> <li>• This part is compatible with older printers that have 0 as the eighth character of the printer serial number.</li> <li>• If 41X2660 is no longer available, then replace both the ADF scanner and the printer controller board with the newer ADF scanner (41X2980) and the newer controller board (41X2976).</li> <li>• Make sure to upgrade the firmware to FW 074.038 version or later.</li> </ul>	<a href="#">“Controller board removal” on page 165</a>
3	41X2976	1	1	Controller board (MX431adn) <b>Notes:</b> <ul style="list-style-type: none"> <li>• This part is compatible for new printers that have 1 or greater as the eighth character of the printer serial number.</li> <li>• Make sure to upgrade the firmware to FW 074.038 version or later.</li> </ul>	<a href="#">“Controller board removal” on page 165</a>

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
3	41X2661	1	1	Controller board (MB3442adw, MX431adw, XM1342) <b>Notes:</b> <ul style="list-style-type: none"> <li>This part is compatible with older printers that have 0 as the eighth character of the printer serial number.</li> <li>If 41X2661 is no longer available, then replace both the ADF scanner and the printer controller board with the newer ADF scanner (41X2980) and the newer controller board (41X2977).</li> <li>Make sure to upgrade the firmware to FW 074.038 version or later.</li> </ul>	<a href="#">“Controller board removal” on page 165</a>
3	41X2977	1	1	Controller board (MB3442adw, MX431adw, XM1342) <b>Notes:</b> <ul style="list-style-type: none"> <li>This part is compatible for new printers that have 1 or greater as the eighth character of the printer serial number.</li> <li>Make sure to upgrade the firmware to FW 074.038 version or later.</li> </ul>	<a href="#">“Controller board removal” on page 165</a>
4	41X2590	1	1	LVPS, 75 W and 120 V	<a href="#">“LVPS removal” on page 167</a>
4	41X2591	1	1	LVPS, 75 W and 230 V	<a href="#">“LVPS removal” on page 167</a>
5	41X2592	1	1	HVPS	<a href="#">“HVPS removal” on page 168</a>
6	41X2587	1	3	Transfer roller, bearing and spring	<a href="#">“Transfer roller removal” on page 177</a>
7	41X2636	1	1	Main fan	<a href="#">“Main fan removal” on page 172</a>
8	41X1083	1	1	Sensor (input)	<a href="#">“Sensor (input) removal” on page 179</a>
9	41X4273	1	1	Toner cartridge contact	--






# Assembly 4: Gears

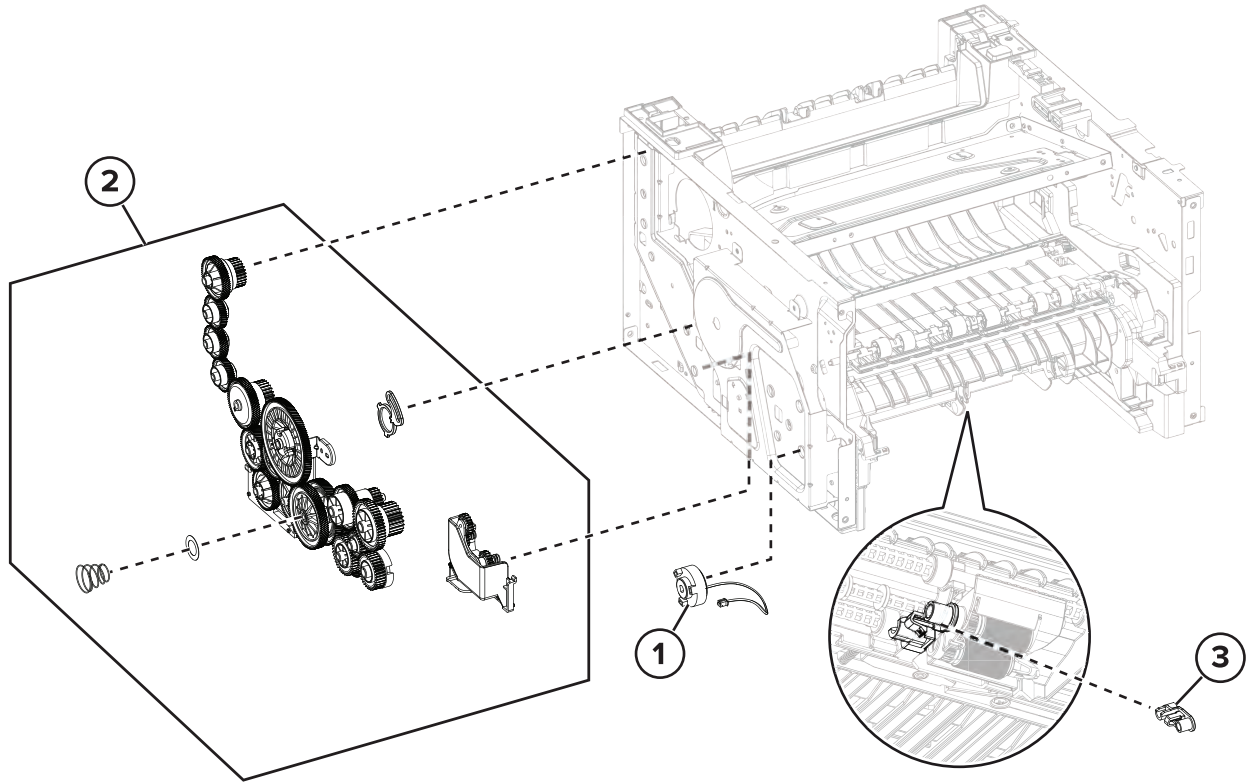

## Assembly 4: Gears

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X2425	1	1	Pick roller clutch	<a href="#">“Pick roller clutch removal” on page 160</a>
2	41X2576	1	24	Main drive gears kit	<a href="#">“Main drive gears removal” on page 155</a>
3	41X4471	1	1	Duplex shaft bushing	--


# Assembly 5: Paper path

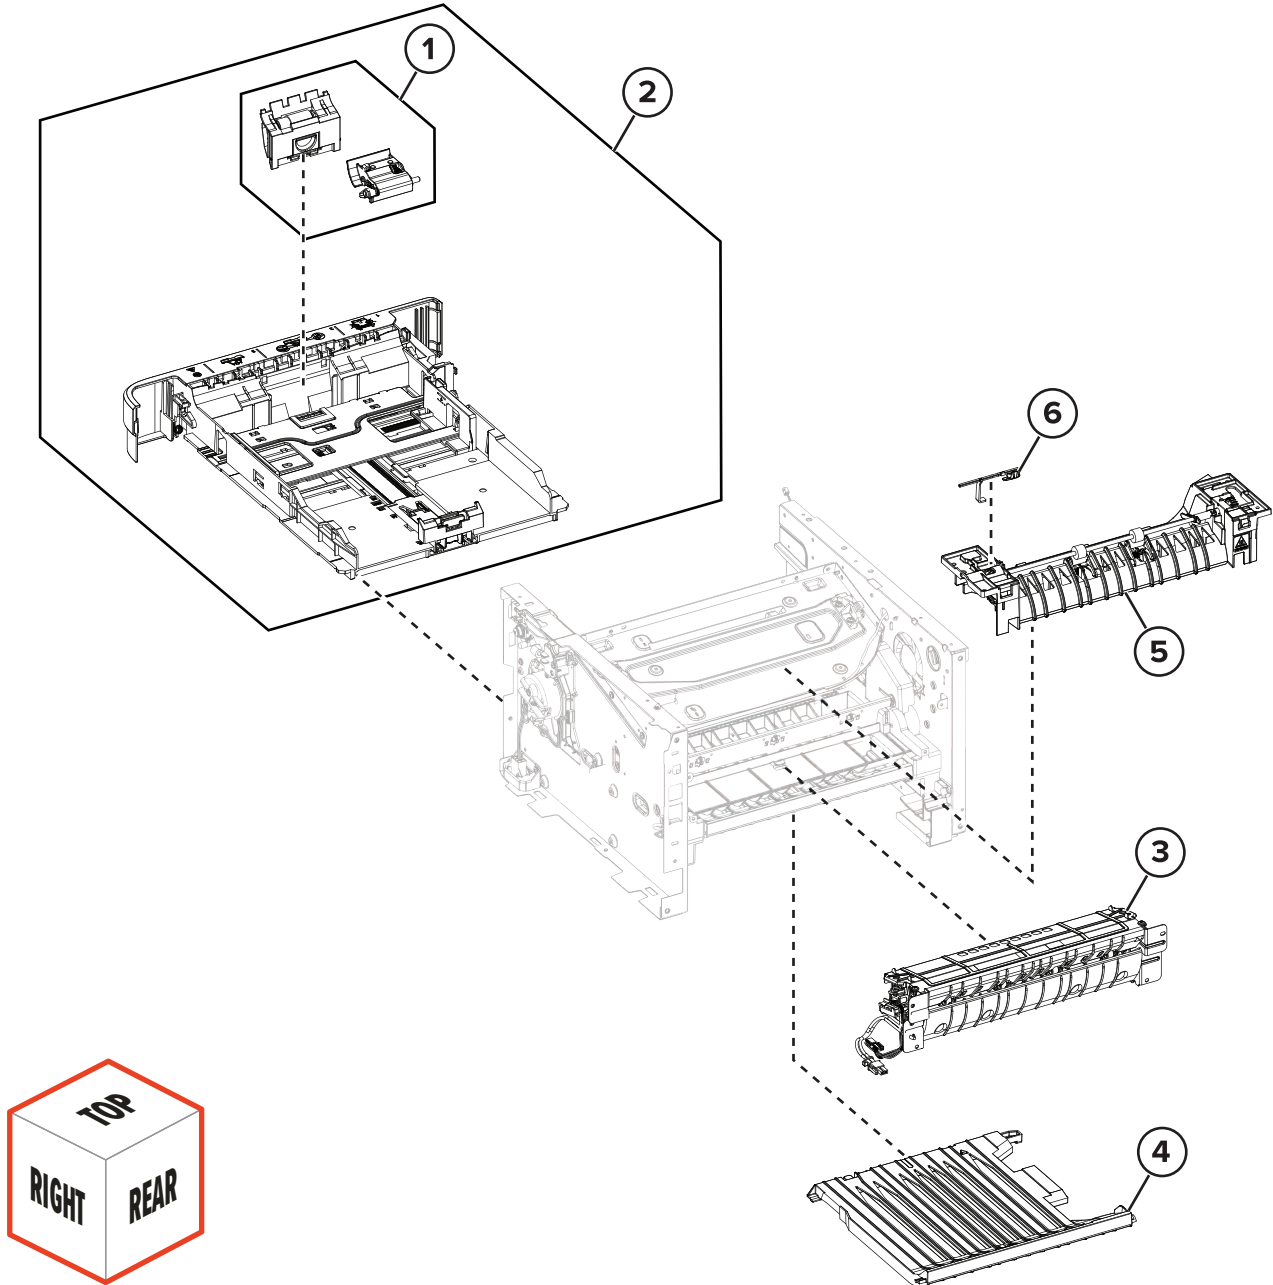

## Assembly 5: Paper path

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X2575	1	1	Pick separator roller	<a href="#">“Pick separator roller removal” on page 179</a>
2	41X2585	1	1	250-sheet tray	--
3	41X2599	1	1	Fuser, 100 V	<a href="#">“Fuser removal” on page 182</a>
3	41X2586	1	1	Fuser, 115 V	<a href="#">“Fuser removal” on page 182</a>
3	41X2600	1	1	Fuser, 230 V	<a href="#">“Fuser removal” on page 182</a>
4	41X2712	1	1	Duplex guide	<a href="#">“Duplex guide removal” on page 187</a>
5	41X4195	1	1	Redrive	<a href="#">“Redrive removal” on page 184</a>
6	41X4196	1	1	Bin full sensor actuator	<a href="#">“Bin full sensor actuator removal” on page 185</a>


## Assembly 6: 550-sheet optional tray

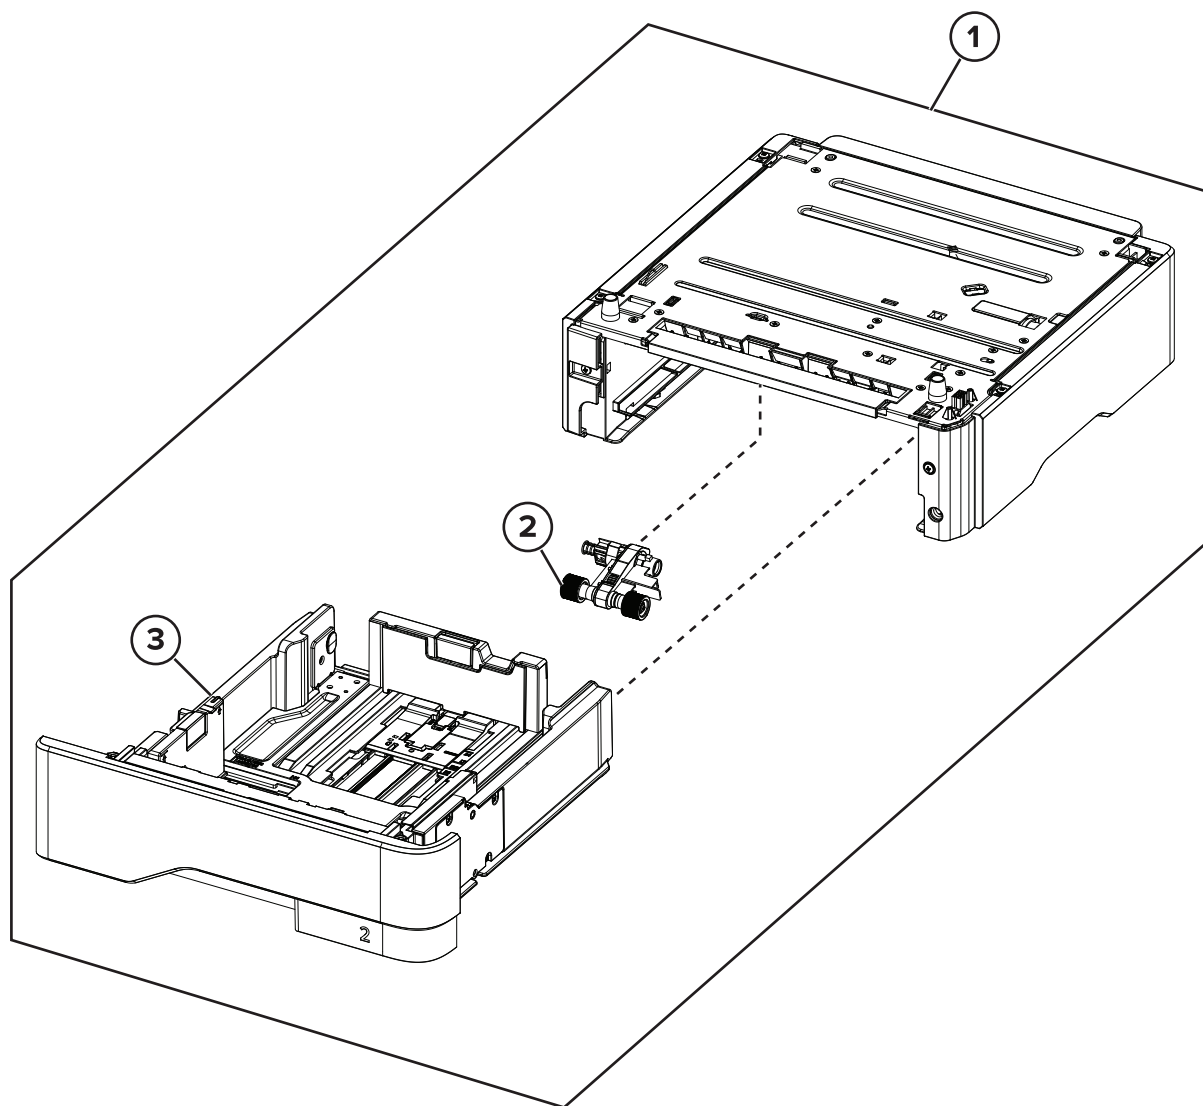

## Assembly 6: 550-sheet optional tray

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X2612	1	1	550-sheet tray	--
2	41X2614	1	1	550-sheet tray pick roller	--
3	41X2613	1	1	550-sheet tray insert	--

## Assembly 7: ADF and scanner

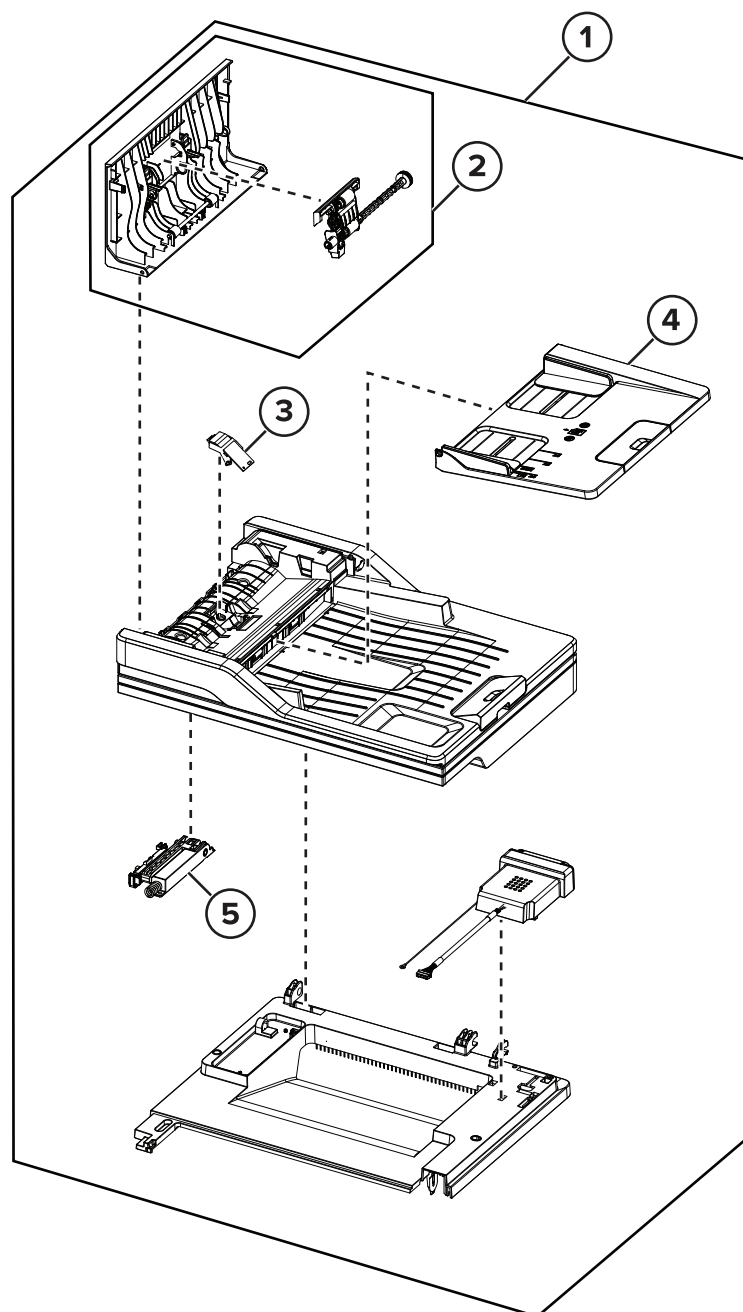

## Assembly 7: ADF and scanner

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X2597	1	1	Scanner with fax card (MX331) (simplex ADF)	<a href="#">“ADF and scanner removal” on page 189</a>
1	41X2598	1	1	Scanner with fax card (MB3442, MX431, XM1342)  <b>Notes:</b> <ul style="list-style-type: none"> <li>This part is compatible with older printers that have 0 as the eighth character of the printer serial number.</li> <li>If 41X2598 is no longer available, then replace both the ADF scanner and the printer controller board with the newer ADF scanner (41X2980) and the newer controller board (41X2976 or 41X2977).</li> <li>Make sure to upgrade the firmware to FW 074.038 version or later.</li> </ul>	<a href="#">“ADF and scanner removal” on page 189</a>
1	41X2980	1	1	Scanner with fax card (MB3442, MX431, XM1342)  <b>Notes:</b> <ul style="list-style-type: none"> <li>This part is compatible with new printers that have 1 or greater as the eighth character of the printer serial number.</li> <li>Make sure to upgrade the firmware to FW 074.038 version or later.</li> </ul>	<a href="#">“ADF and scanner removal” on page 189</a>
2	41X2510	1	1	ADF cover	<a href="#">“ADF cover removal” on page 188</a>
3	41X2511	1	1	ADF separator pad	<a href="#">“ADF separator pad removal” on page 189</a>
4	41X2428	1	1	ADF tray	<a href="#">“ADF tray removal” on page 189</a>
5	41X2596	1	1	Scanner pivot arm	<a href="#">“Scanner pivot arm removal” on page 194</a>



## Assembly 8: Miscellaneous

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
NS	41X1872	1	1	MarkNet N8372 802.11 a/b/g/n/ac wireless print server (MX431, MB3442, XM1342)	N/A
NS	40X0288	1	1	Power cord, Argentina	N/A
NS	40X1767	1	1	Power cord, Europe	N/A
NS	40X1766	1	1	Power cord, Bolivia and Peru	N/A
NS	40X0259	1	1	Power cord, Brazil	N/A
NS	40X0273	1	1	Power cord, Chile and Uruguay	N/A
NS	40X1792	1	1	Power cord, Korea	N/A
NS	40X0303	1	1	Power cord, PRC	N/A
NS	40X1791	1	1	Power cord, Taiwan	N/A
NS	40X0301	1	1	Power cord, Australia and New Zealand	N/A
NS	40X0271	1	1	Power cord, United Kingdom, Asian, Brunei, Cambodia, Indonesia, Laos, Malaysia, Myanmar, Philippines, Singapore, Thailand, Vietnam, Afghanistan, Bangladesh, Bhutan, India, Nepal, Pakistan, Sri Lanka, Tibet, and Hong Kong	N/A
NS	40X7229	1	1	Power cord, India	N/A



# Printer specifications

## Power consumption

### Product power consumption

The following table documents the power consumption characteristics of the product.

**Note:** Some modes may not apply to your product.

Mode	Description	Power consumption (Watts)
Printing	The product is generating hard-copy output from electronic inputs.	One-sided: 530 (MX331); 580 (MB3442, MX431, XM1342) Two-sided: 315 (MX331); 330 (MB3442, MX431, XM1342)
Copy	The product is generating hard-copy output from hard-copy original documents.	550 (MX331); 600 (MB3442, MX431, XM1342)
Scan	The product is scanning hard-copy documents.	13 (MX331); 14 (MB3442, MX431, XM1342)
Ready	The product is waiting for a print job.	6.5 (MX331); 7 (MX431dn, MX431adn); 7.5 (MB3442, MX431adw, XM1342)
Sleep Mode	The product is in a high-level energy-saving mode.	0.8 (MX331); 0.9 (MX431dn, MX431adn); 1.1 (MB3442, MX431adw, XM1342)
Hibernate	The product is in a low-level energy-saving mode.	0.1
Off	The product is plugged into an electrical outlet, but the power switch is turned off.	0.1

The power consumption levels listed in the previous table represent time-averaged measurements. Instantaneous power draws may be substantially higher than the average.

Values are subject to change. See [www.lexmark.com](http://www.lexmark.com) for current values.

### Sleep Mode

This product is designed with an energy-saving mode called *Sleep Mode*. The Sleep Mode saves energy by lowering power consumption during extended periods of inactivity. The Sleep Mode is automatically engaged after this product is not used for a specified period of time, called the *Sleep Mode Timeout*.

Factory default Sleep Mode Timeout for this product (in minutes):	15
-------------------------------------------------------------------	----

By using the configuration menus, the Sleep Mode Timeout can be modified between 1 minute and 120 minutes. If the print speed is less than or equal to 30 pages per minute, then you can set the timeout only up to 60 minutes. Setting the Sleep Mode Timeout to a low value reduces energy consumption, but may increase the response time of the product. Setting the Sleep Mode Timeout to a high value maintains a fast response, but uses more energy.

## Hibernate Mode

This product is designed with an ultra-low power operating mode called *Hibernate mode*. When operating in Hibernate Mode, all other systems and devices are powered down safely.

The Hibernate mode can be entered in any of the following methods:

- Using the Hibernate Timeout
- Using the Schedule Power modes

Factory default Hibernate Timeout for this product in all countries or regions	3 days
--------------------------------------------------------------------------------	--------

The amount of time the printer waits after a job is printed before it enters Hibernate mode can be modified between one hour and one month.

## Off mode

If this product has an off mode which still consumes a small amount of power, then to completely stop product power consumption, disconnect the power supply cord from the electrical outlet.

## Total energy usage

It is sometimes helpful to estimate the total product energy usage. Since power consumption claims are provided in power units of Watts, the power consumption should be multiplied by the time the product spends in each mode in order to calculate energy usage. The total product energy usage is the sum of each mode's energy usage.

## Applicability of Regulation (EU) 2019/2015 and (EU) 2019/2020

Per Commission Regulation (EU) 2019/2015 and (EU) 2019/2020, the light source contained within this product or its component is intended to be used for Image Capture or Image Projection only, and is not intended for use in other applications.

## Selecting a location for the printer

- Leave enough room to open trays, covers, and doors and to install hardware options.
- Set up the printer near an electrical outlet.
- Make sure that airflow in the room meets the latest revision of the ASHRAE 62 standard or the CEN Technical Committee 156 standard.
- Provide a flat, sturdy, and stable surface.
- Keep the printer:
  - Clean, dry, and free of dust
  - Away from stray staples and paper clips
  - Away from the direct airflow of air conditioners, heaters, or ventilators
  - Free from direct sunlight and humidity extremes
- Observe the recommended temperatures and avoid fluctuations.

Ambient temperature	10 to 32.2°C (50 to 90°F)
Storage temperature	-40 to 40°C (-40 to 104°F)

- Allow the following recommended amount of space around the printer for proper ventilation:



1	Top	305 mm (12 in.)
2	Rear	100 mm (3.94 in.)
3	Right side	76.2 mm (3 in.)
4	Front	305 mm (12 in.) <b>Note:</b> The minimum space needed in front of the printer is 76 mm (3 in.).
5	Left side	110 mm (4.33 in.)

## Noise emission levels

The following measurements were made in accordance with ISO 7779 and reported in conformance with ISO 9296.

**Note:** Some modes may not apply to your product.

1-meter average sound pressure, dBA	
Printing	One-sided: 53; Two-sided: 50
Ready	14

Values are subject to change. See [www.lexmark.com](http://www.lexmark.com) for current values.

## Temperature information

Ambient operating temperature	10 to 32.2°C (50 to 90°F)
Shipping temperature	-40 to 40°C (-40 to 104°F)
Storage temperature and relative humidity	-40 to 40°C (-40 to 104°F) 8 to 80% RH




# Theory of operation

## POR sequence

As the printer is turned on, the engine code goes through a series of tests to verify hardware integrity. If a hardware failure is detected, then it is reported to the printer. If the POR sequence cannot be completed successfully, then the printer may post an error message. The message states that service may be needed.

## Print cycle operation


### Print engine layout

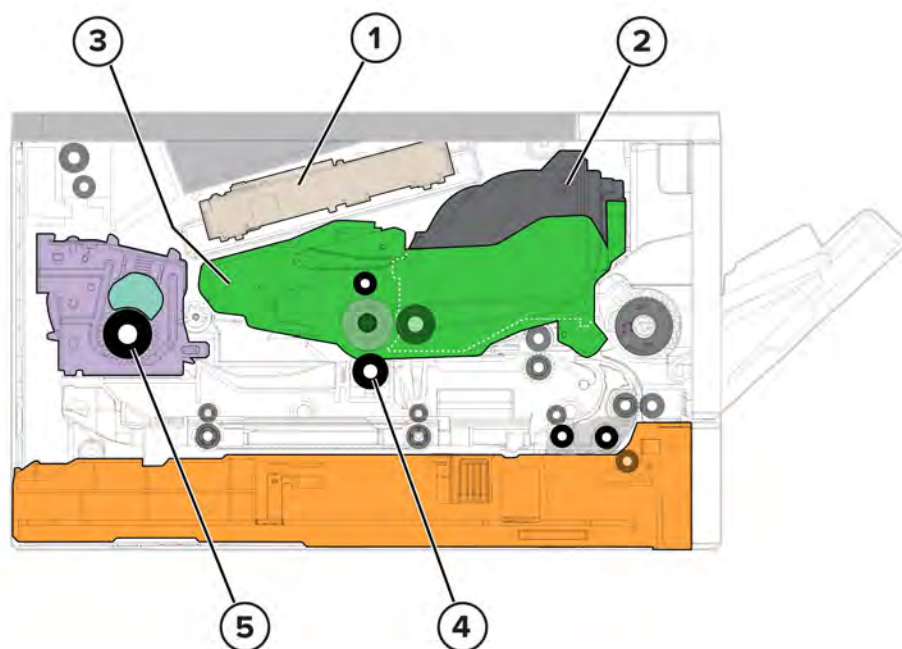

1	Printhead
2	Toner cartridge
3	Imaging unit
4	Transfer roller
5	Fuser


# Print cycle

## Flowchart

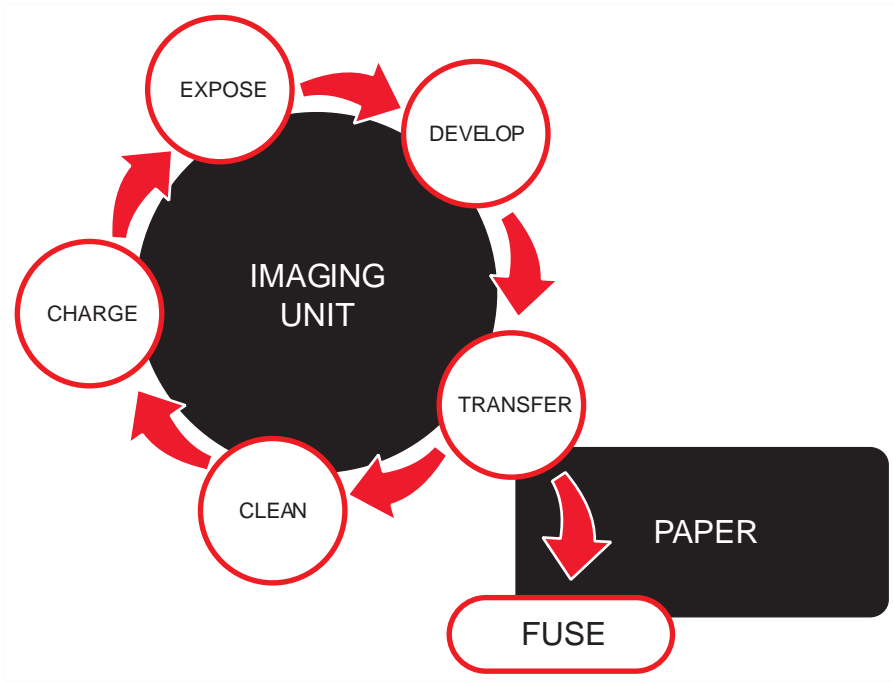




## Charge

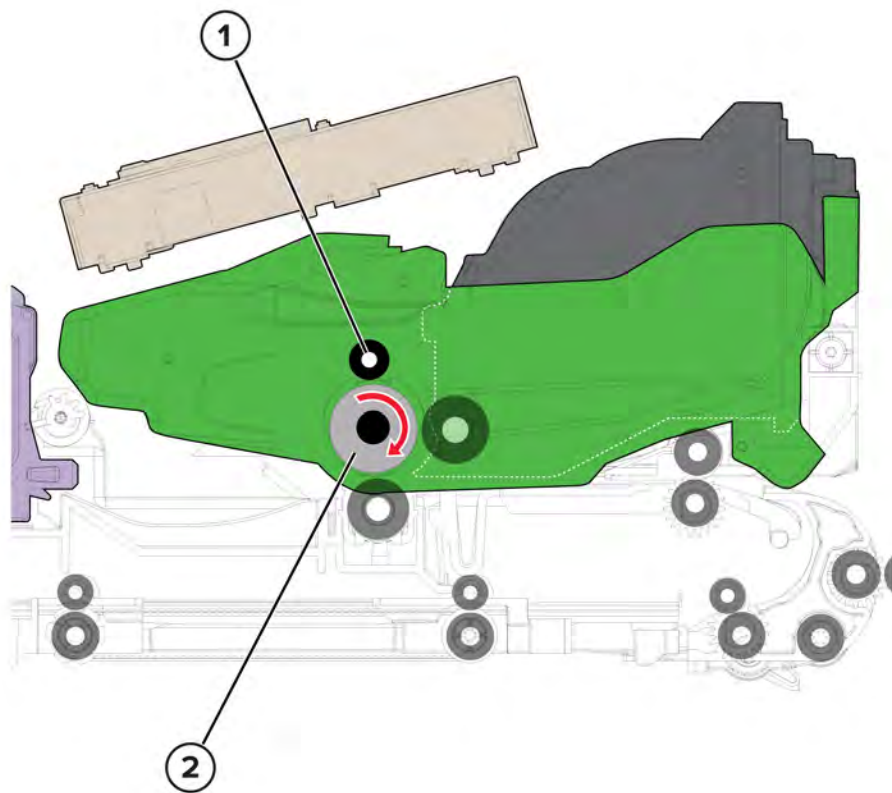

1	Charge roller
2	Photoconductor

The charge roller applies a uniform negative electrical charge to the surface of the photoconductor. The insulative properties of the photoconductor allow it to hold a charge and its photoconductive properties allow it to discharge when exposed to light.


## Expose

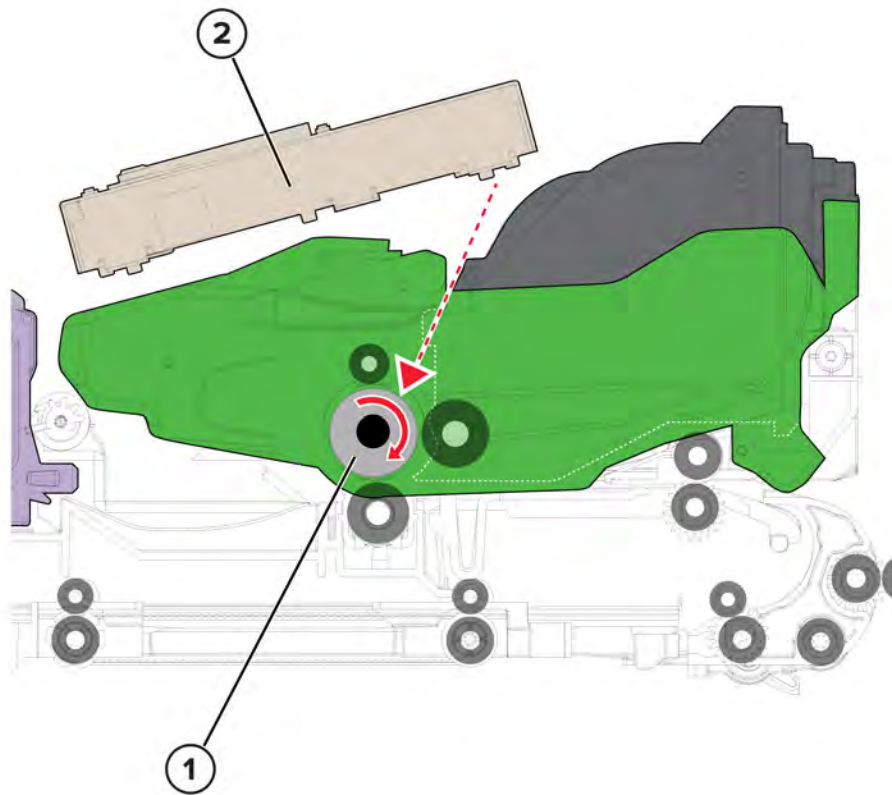

1	Photoconductor
2	Printhead

The printhead emits a laser that exposes the surface of the photoconductor. The laser pulses coincide with the digital latent image. The exposed areas of the photoconductor surface are discharged, resulting in a photoconductor surface potential that is less negative than the non-exposed areas.


## Develop

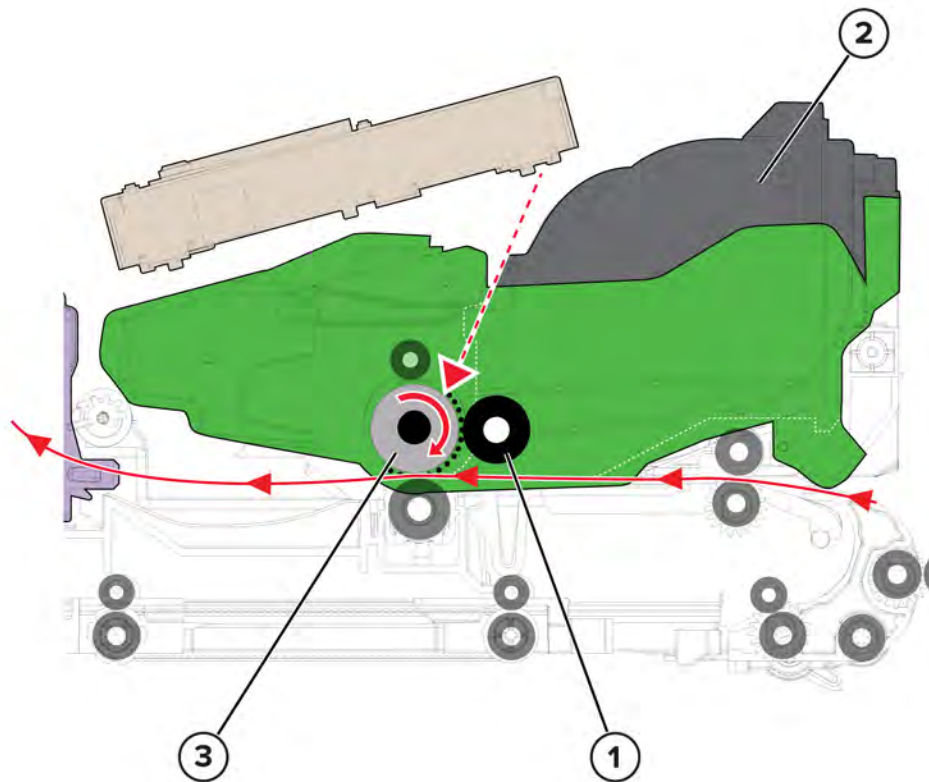

1	Developer roller
2	Toner cartridge
3	Photoconductor

The developer roller applies the toner from the toner cartridge to the photoconductor during the development process. The difference in surface potential creates an electric field that causes the toner particles to move to the photoconductor according to the pattern of the latent image.

## Transfer

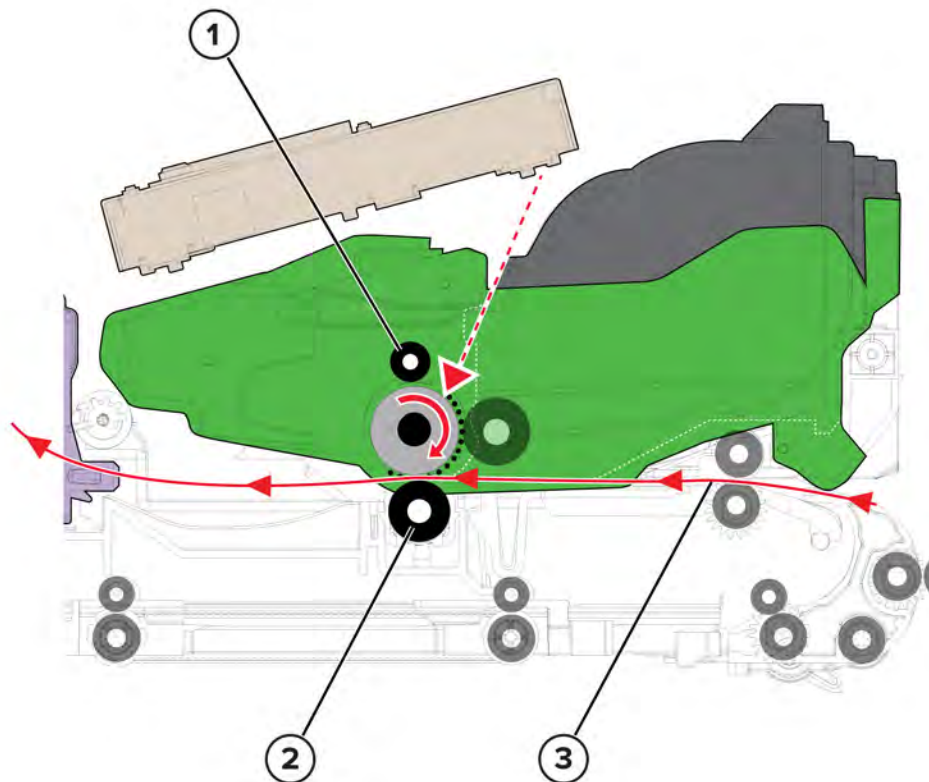


1	Charge roller
2	Transfer roller
3	Paper

A positive potential relative to the toned image formed on the photoconductor is applied to the transfer roller. This allows the transfer roller to move the developed toner from the surface of the photoconductor to the paper as the paper is passed between the transfer roller and photoconductor.

## Clean

The cleaning blade removes the residual toner from the photoconductor after the transfer. After cleaning, the process moves again to the charge process and repeats each cycle until the entire image is transferred to a side of the paper.

## Fuse

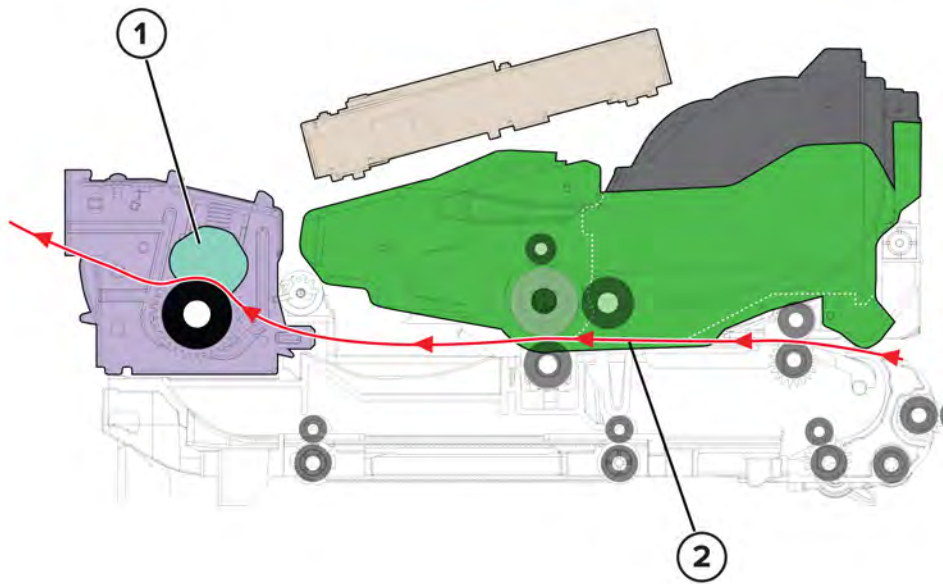


1	Fuser
2	Paper

After the toner image is transferred to the paper, the toner particles are not yet permanently bonded to the paper. For the final step in the print process, paper is transported to the fuser where heat and pressure are applied to it. As a result, the toner particles melt and are permanently fused to the paper, completing the print process. The print cycle repeats for the succeeding pages.

# Printer operation


## Printer sections

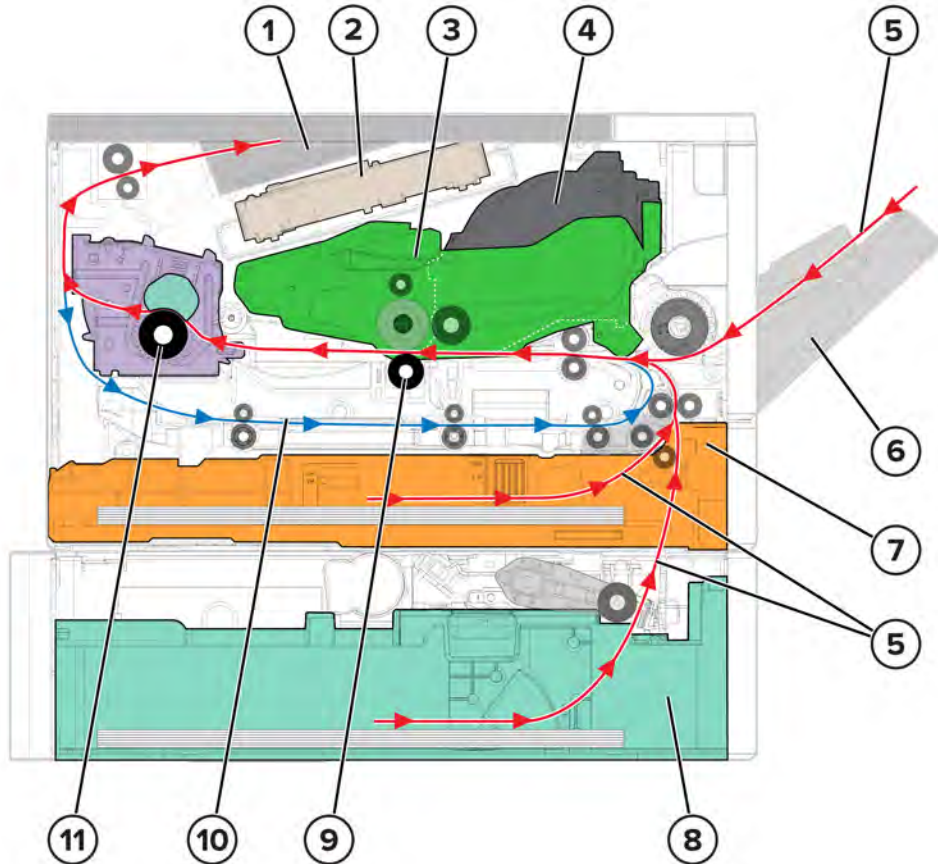

1	Output bin
2	Printhead
3	Imaging unit
4	Toner cartridge
5	Simplex paper path
6	MPF
7	Standard tray
8	Optional tray
9	Transfer roller
10	Duplex paper path
11	Fuser

## Printer paper path

### Simplex print job

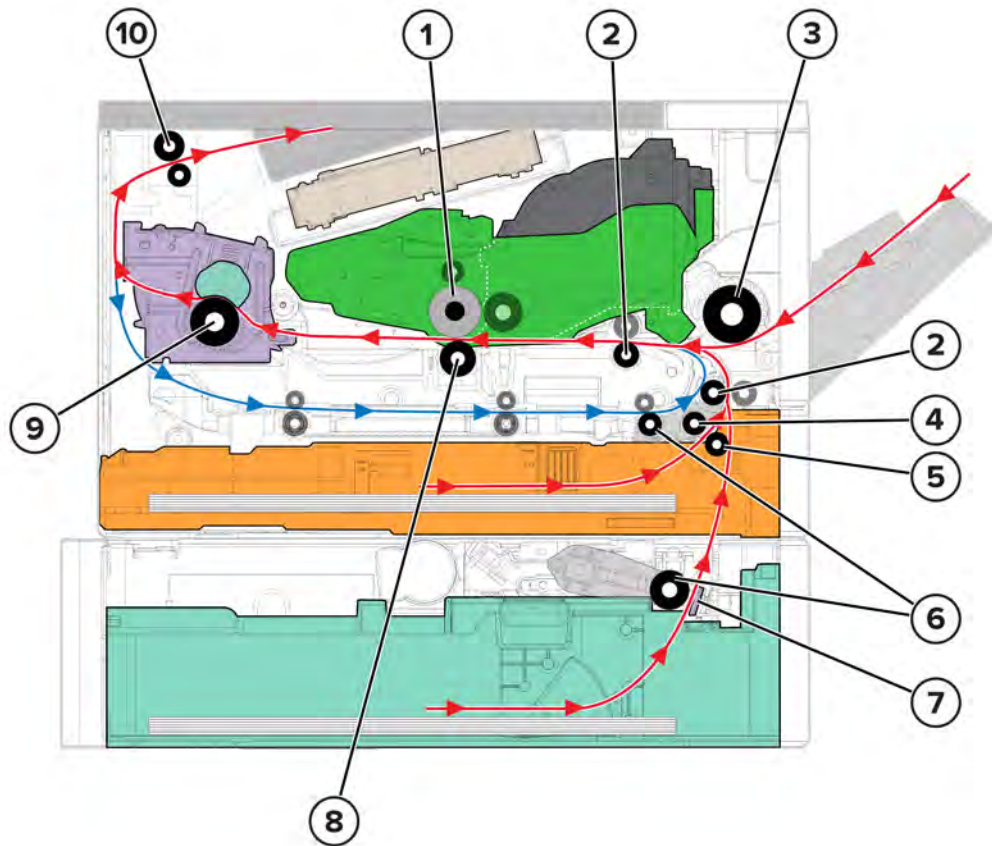


1	Photoconductor
2	Transport roller
3	MPF pick roller
4	Feed roller
5	Separator roller
6	Pick roller
7	Separator pad
8	Transfer roller
9	Fuser
10	Paper exit roller

The pick roller picks and the feed roller feeds the paper to the separator roller or separator pad. The feed roller feeds the paper to the transport roller. For MPF print jobs, the MPF pick roller picks and feeds the paper to the transport roller.

The transport rollers feed the paper to the transfer roller. At the transfer roller, the photoconductor transfers the developed image to the paper to create the printed image.

As the paper passes the fuser, heat and pressure are applied to permanently bond the toner to the paper. After printing, the paper exit roller ejects the paper to the output bin.

### Duplex print job

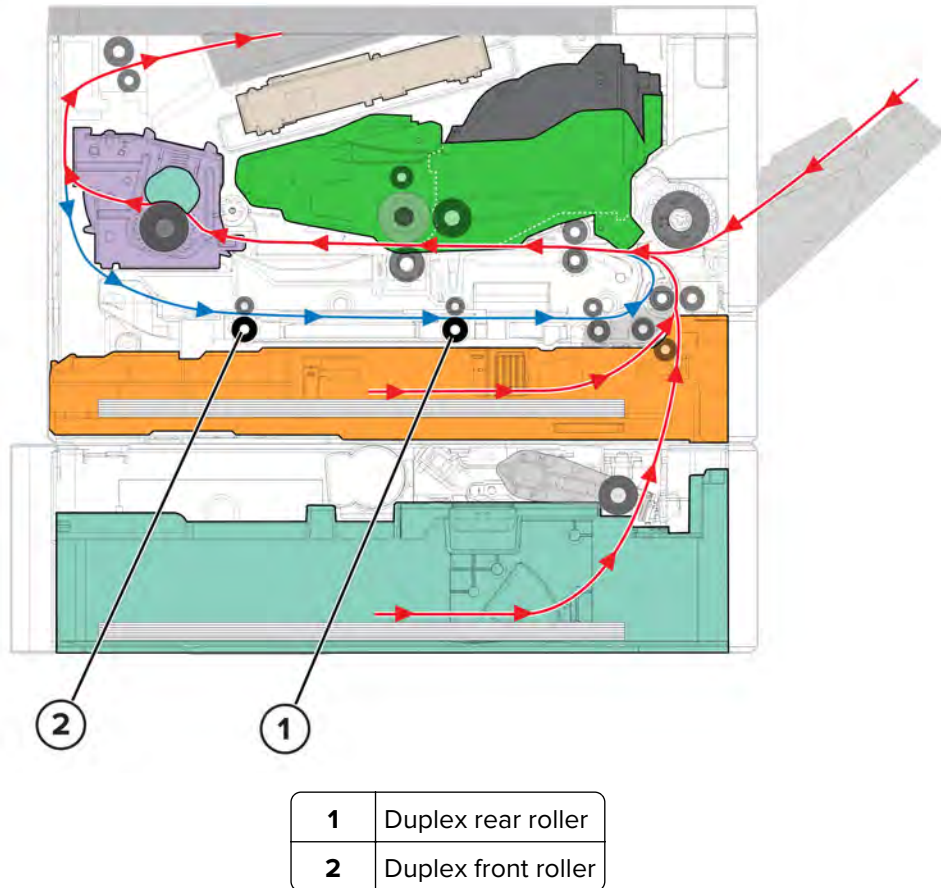


After the first side is printed, the paper stops at the output bin while still in the paper exit roller. The paper is fed again into the duplex paper path to have the opposite side printed.

The paper travels along the duplex path until it enters again the transport roller. From there, the paper continues its path until the print job is done.




## Printer paper path sensors

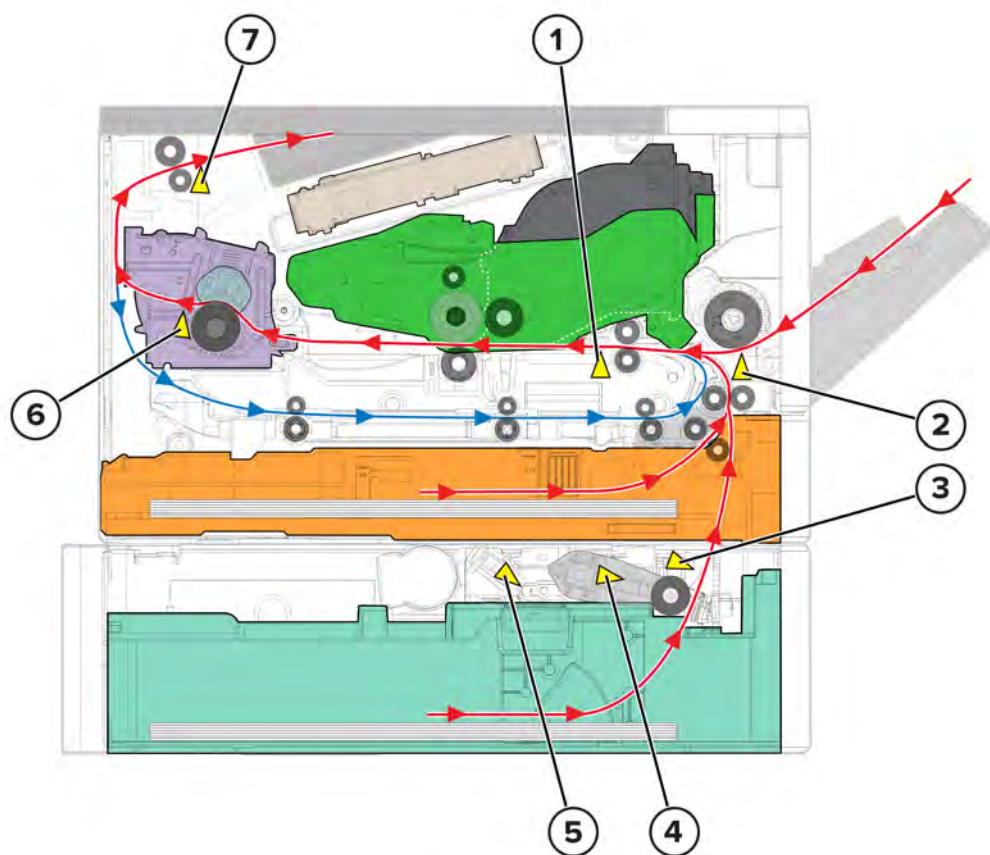

#	Sensor	Function
1	Sensor (input)	Detects paper that is traveling from the transport roller
2	Sensor (MPF paper present)	Detects paper presence in the MPF
3	Sensor (trailing edge)	Detects the trailing edge of the paper that is fed from the optional tray
4	Sensor (index)	Detects if the pick roller is at the correct height to pick paper from the optional tray
5	Sensor (paper present)	Detects paper presence in the optional tray
6	Sensor (fuser exit)	Detects paper that is exiting the fuser
7	Sensor (narrow media/bin full)	<ul style="list-style-type: none"> <li>• Detects if paper is narrow</li> <li>• Detects if the bin is full</li> </ul>

## Main drive

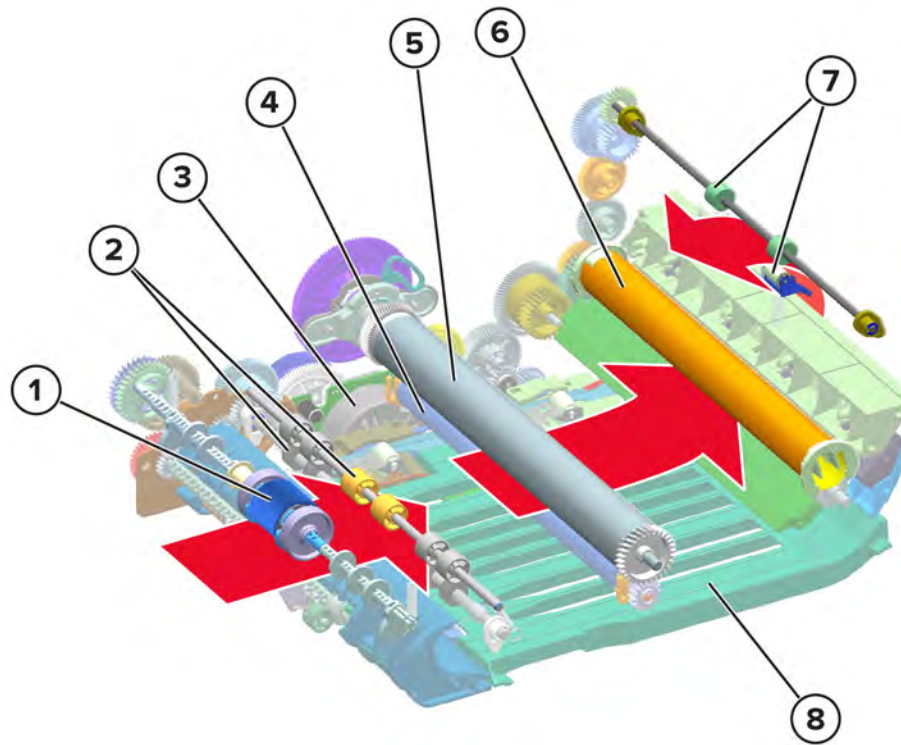

1	MPF pick roller
2	Transport roller
3	Motor (main drive)
4	Transfer roller
5	Photoconductor
6	Fuser
7	Paper exit roller
8	Duplex


The motor (main drive) provides mechanical power to the printer.

The motor transfers power through several gears to the following parts:

- MPF pick roller
- Transport roller
- Transfer roller
- Photoconductor

- Fuser
- Paper exit roller
- Duplex

## Tray drive

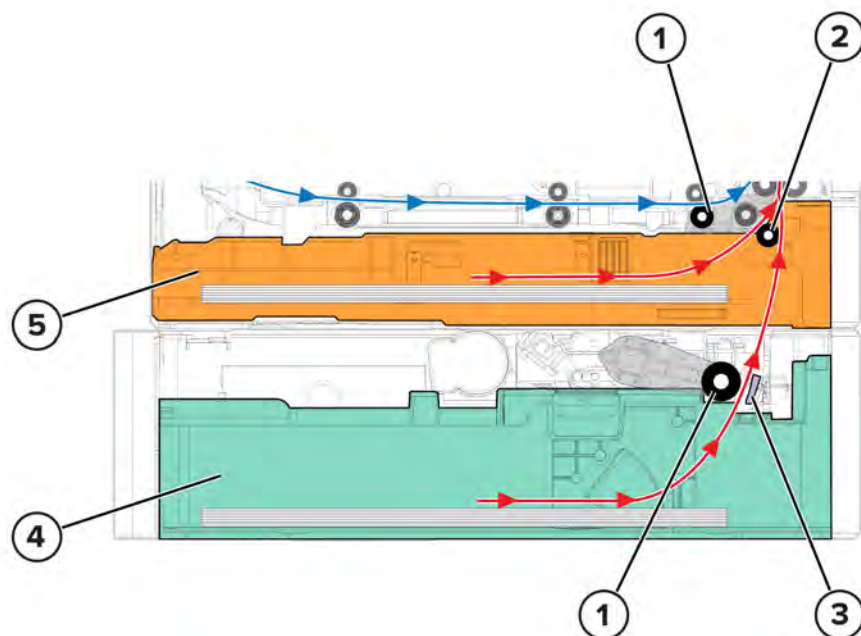

1	Pick roller
2	Separator roller
3	Separator pad
4	Optional tray
5	Standard tray


The motor (main drive) in the printer drives the standard tray. The lift plate in the tray is spring loaded and is not driven by a motor. The spring raises the lift plate until the paper is in contact with the pick roller.

The motor inside the optional tray drives the optional tray. The motor drives the lift plate to a specified height in the tray.

To prepare for feeding, the lift plate raises to push the paper against the pick roller. The lift plate stops pushing at the point where the pick roller is at the proper height for picking. After the pick roller is in position, it feeds the topmost paper. The separator roller and separator pad ensures that only one sheet is fed at a time.

## ADF theory

### ADF paper path

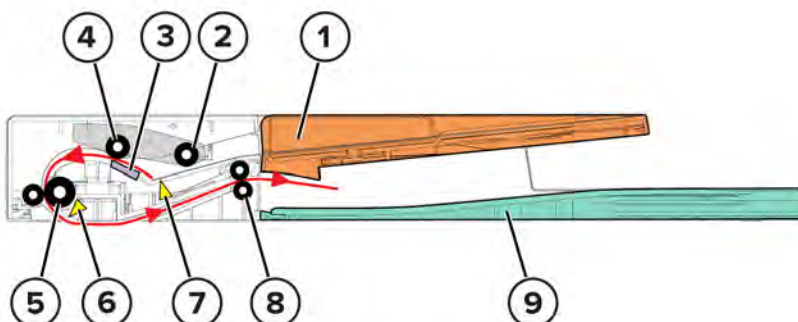

1	ADF tray
2	ADF pick roller
3	ADF separator pad
4	ADF feed roller
5	ADF scan roller
6	Sensor (ADF scan)
7	Sensor (ADF paper present)
8	ADF exit roller
9	ADF bin

Paper from the ADF tray enters the ADF through the ADF pick roller, ADF feed roller, and ADF separator pad. On the ADF tray, the sensor (ADF paper present) detects if paper is loaded.

After the paper is fed, it travels to the ADF scan roller for scanning. As the paper passes the sensor (ADF scan), the scanner under the ADF obtains the image from the sheet. If equipped, a CIS unit obtains the image from the other side of the sheet in a duplex scan job.

After the paper is scanned, the ADF exit roller ejects the paper to the ADF bin.

# Index

## A

ADF paper path 244  
advanced print quality samples 129

## C

cannot send or receive faxes using etherFAX 120  
charge 233  
clean 236  
cleaning  
  exterior of the printer 205  
  interior of the printer 205  
cleaning the printer 205  
cleaning the scanner 205  
config menu  
  accessing 135  
configurations  
  printer models 19  
connectors  
  controller board 197  
control panel  
  critical information 148  
  using 127  
controller board  
  critical information 148

## D

data security notice 145  
develop 235  
diagnostics menu  
  accessing 128  
  controller calibration 135  
  feed test 135  
  scanner calibration reset 135

## E

electrostatic-sensitive parts 147  
emission notices 229  
error codes  
  121 error messages 87  
  126 error messages 89  
  140 error messages 90  
  162 error messages 91  
  200 paper jam messages 58  
  202 paper jam messages 65  
  232 paper jam messages 71  
  242 paper jam messages 73  
  280 paper jam messages 73

29 77  
295 paper jam messages 73  
31 77  
32 77  
33 77  
41 79  
42 79  
43 79  
600 error messages 93  
602 error messages 93  
611 error messages 93  
621 error messages 93  
662 error messages 93  
680 error messages 93  
80 83  
84 83  
840 error messages 97  
842 error messages 97  
843 error messages 97  
845 error messages 97  
88 83  
912 error messages 108  
938–992 error messages 111  
ESD-sensitive parts 147  
event log  
  display log 129  
  mark log 130  
  print log 129  
  print log summary 129  
expose 234

## F

fax error log codes 114  
fax troubleshooting  
  cannot send or receive faxes using etherFAX 120  
  cannot set up etherFAX 119  
finding the printer serial number 24  
format fax storage 129  
fuse 237

## I

indicator light  
  understanding the status 127  
invalid code, fixing 141  
invalid engine mode  
  accessing 141

**L**

low insertion force (LIF) connector 152

**M**

menu

  Config Menu 136

moving the printer 228

**N**

noise emission levels 229

notices 227, 228, 229

**P**

paper path, duplex 239

paper path, simplex 239

paper sizes, supported 19

paper types, supported 22

paper weights, supported 22

parts catalog legend 208

parts of the printer 197

print cycle 232

  charge 233

  clean 236

  develop 235

  expose 234

  flowchart 232

  fuse 237

  transfer 236

print engine layout 231

print quality troubleshooting

  fax reception service check 123

  fax transmission service check 121

printer

  minimum clearances 228

  selecting a location 228

printer configuration 197

printer diagnostics

  input tray quick print 130

  output bin quick feed 130

printer diagnostics & adjustments

  motor tests 133

  sensor tests 132

printer diagnostics and adjustments

  margin offset 133

  registration adjust 133

  universal override 133

printer model

  configurations 19

printer sections 238

printer setup

  enable edge-to-edge (copy) 131

  enable edge-to-edge (printing) 131

  engine setting [x] 131

  EP setup 132

  model name 131

  permanent page count 130

  printed page count (mono) 130

  process ID 131

  serial number 131

printer status 127

**R**

recovery mode

  accessing 142

removal procedures

  tips 153

removals

  ADF and scanner 189

  ADF cover 188

  ADF separator pad 189

  ADF tray 189

  bin full sensor actuator 185

  control panel 174

  controller board 165

  duplex guide 187

  fax card 195

  front door 176

  fuser 182

  HVPS 168

  imaging unit coupling 159

  left cover 154

  left front door link 161

  LVPS 167

  main drive gears 155

  main fan 172

  MPF pick roller 178

  MPF solenoid cable 171

  pick roller clutch 160

  pick separator roller 179

  printhead 182

  rear door 181

  redrive 184

  right cover 163

  right front door link 171

  scanner pivot arm 194

  sensor (input) 179

  sensor (MPF paper present) 170

  speaker 174

  transfer roller 177

  upper front cover 175

- reports
  - device settings 128
  - installed licenses 128
- restoring configuration 149

## S

- safe mode 29
- scanner
  - cleaning 205
- scanner diagnostics
  - controller calibration 135
  - feed test 135
  - motor tests 134
  - scanner calibration reset 135
  - sensor tests 134
- selecting a location for the printer 228
- sensors, paper path 241
- serial number, printer
  - finding 24
- service checks troubleshooting
  - 111 service error messages 85
  - 900 service error messages 104
- service engineer (SE) menu
  - accessing 139
  - fax SE menu 140
  - general SE 139
  - network SE menu 139
  - scanner SE menu 140
- supported fax 23
- supported paper sizes 19
- supported paper types 22
- supported paper weights 22
- symptoms
  - fax 114
  - printer 112

## T

- theory
  - duplex paper path 239
  - main drive 242
  - paper path sensors 241
  - simplex paper path 239
  - tray drive 243
- theory of operation
  - POR sequence 231
- tools, required 25
- transfer 236
- troubleshooting
  - initial check 29
- troubleshooting, fax
  - cannot send or receive faxes using etherFAX 120

- cannot set up etherFAX 119
- troubleshooting, print quality
  - fax reception service check 123
  - fax transmission service check 121
- troubleshooting, service checks
  - 111 service error messages 85
  - 900 service error messages 104

## U

- updating the printer firmware
  - using a flash drive 151
  - using a network computer 151
  - using a USB cable connection 151
- using the control panel 127





# Part number index

<b>P/N</b>	<b>Part name</b>	<b>Page</b>
40X0259	Power cord, Brazil.....	225
40X0271	Power cord, United Kingdom, Asian, Brunei, Cambodia, Indonesia, Laos, Malaysia, Myanmar, Philippines, Singapore, Thailand, Vietnam, Afghanistan, Bangladesh, Bhutan, India, Nepal, Pakistan, Sri Lanka, Tibet, and Hong Kong.....	225
40X0273	Power cord, Chile and Uruguay.....	225
40X0288	Power cord, Argentina.....	225
40X0301	Power cord, Australia and New Zealand.....	225
40X0303	Power cord, PRC.....	225
40X1766	Power cord, Bolivia and Peru.....	225
40X1767	Power cord, Europe.....	225
40X1791	Power cord, Taiwan.....	225
40X1792	Power cord, Korea.....	225
40X7229	Power cord, India.....	225
41X1083	Sensor (input).....	215
41X1872	MarkNet N8372 802.11 a/b/g/n/ac wireless print server (MX431, MB3442, XM1342).....	225
41X2425	Pick roller clutch.....	218
41X2428	ADF tray.....	224
41X2510	ADF cover.....	224
41X2511	ADF separator pad.....	224
41X2573	Printhead.....	214
41X2575	Pick separator roller.....	220
41X2576	Main drive gears kit.....	218
41X2578	Left front door link.....	210
41X2579	Left cover.....	210
41X2580	Right cover (MX331).....	210
41X2582	Rear door.....	210
41X2584	Front door with MPF pick roller.....	210
41X2585	250-sheet tray.....	220
41X2586	Fuser, 115 V.....	220
41X2587	Transfer roller, bearing and spring.....	215
41X2590	LVPS, 75 W and 120 V.....	215
41X2591	LVPS, 75 W and 230 V.....	215

<b>P/N</b>	<b>Part name</b>	<b>Page</b>
41X2592	HVPS.....	215
41X2595	Control panel assembly.....	212
41X2596	Scanner pivot arm.....	224
41X2597	Scanner with fax card (MX331) (simplex ADF).....	224
41X2598	Scanner with fax card (MB3442, MX431, XM1342).....	224
41X2599	Fuser, 100 V.....	220
41X2600	Fuser, 230 V.....	220
41X2612	550-sheet tray.....	222
41X2613	550-sheet tray insert.....	222
41X2614	550-sheet tray pick roller.....	222
41X2636	Main fan.....	215
41X2659	Controller board (MX331adn).....	214
41X2660	Controller board (MX431adn).....	214
41X2661	Controller board (MB3442adw, MX431adw, XM1342).....	215
41X2670	Upper front cover with decals (MX331, MB3442, MX431).....	210
41X2712	Duplex guide.....	220
41X2929	Upper front cover with decals (XM1342).....	210
41X2975	Controller board (MX331adn).....	214
41X2976	Controller board (MX431adn).....	214
41X2977	Controller board (MB3442adw, MX431adw, XM1342).....	215
41X2978	Speaker.....	214
41X2980	Scanner with fax card (MB3442, MX431, XM1342).....	224
41X4195	Redrive.....	220
41X4196	Bin full sensor actuator.....	220
41X4207	Right cover (MB3442, MX431, XM1342).....	210
41X4273	Toner cartridge contact.....	215
41X4471	Duplex shaft bushing.....	218

# Part name index

<b>P/N</b>	<b>Part name</b>	<b>Page</b>
41X2585	250-sheet tray.....	220
41X2612	550-sheet tray.....	222
41X2613	550-sheet tray insert.....	222
41X2614	550-sheet tray pick roller.....	222
41X2510	ADF cover.....	224
41X2511	ADF separator pad.....	224
41X2428	ADF tray.....	224
41X4196	Bin full sensor actuator.....	220
41X2595	Control panel assembly.....	212
41X2661	Controller board (MB3442adw, MX431adw, XM1342).....	215
41X2977	Controller board (MB3442adw, MX431adw, XM1342).....	215
41X2659	Controller board (MX331adn).....	214
41X2975	Controller board (MX331adn).....	214
41X2660	Controller board (MX431adn).....	214
41X2976	Controller board (MX431adn).....	214
41X2712	Duplex guide.....	220
41X4471	Duplex shaft bushing.....	218
41X2584	Front door with MPF pick roller.....	210
41X2599	Fuser, 100 V.....	220
41X2586	Fuser, 115 V.....	220
41X2600	Fuser, 230 V.....	220
41X2592	HVPS.....	215
41X2579	Left cover.....	210
41X2578	Left front door link.....	210
41X2590	LVPS, 75 W and 120 V.....	215
41X2591	LVPS, 75 W and 230 V.....	215
41X2576	Main drive gears kit.....	218
41X2636	Main fan.....	215
41X1872	MarkNet N8372 802.11 a/b/g/n/ac wireless print server (MX431, MB3442, XM1342).....	225
41X2425	Pick roller clutch.....	218
41X2575	Pick separator roller.....	220
40X0288	Power cord, Argentina.....	225

<b>P/N</b>	<b>Part name</b>	<b>Page</b>
40X0301	Power cord, Australia and New Zealand.....	225
40X1766	Power cord, Bolivia and Peru.....	225
40X0259	Power cord, Brazil.....	225
40X0273	Power cord, Chile and Uruguay.....	225
40X1767	Power cord, Europe.....	225
40X7229	Power cord, India.....	225
40X1792	Power cord, Korea.....	225
40X0303	Power cord, PRC.....	225
40X1791	Power cord, Taiwan.....	225
40X0271	Power cord, United Kingdom, Asian, Brunei, Cambodia, Indonesia, Laos, Malaysia, Myanmar, Philippines, Singapore, Thailand, Vietnam, Afghanistan, Bangladesh, Bhutan, India, Nepal, Pakistan, Sri Lanka, Tibet, and Hong Kong.....	225
41X2573	Printhead.....	214
41X2582	Rear door.....	210
41X4195	Redrive.....	220
41X4207	Right cover (MB3442, MX431, XM1342).....	210
41X2580	Right cover (MX331).....	210
41X2596	Scanner pivot arm.....	224
41X2598	Scanner with fax card (MB3442, MX431, XM1342).....	224
41X2980	Scanner with fax card (MB3442, MX431, XM1342).....	224
41X2597	Scanner with fax card (MX331) (simplex ADF).....	224
41X1083	Sensor (input).....	215
41X2978	Speaker.....	214
41X4273	Toner cartridge contact.....	215
41X2587	Transfer roller, bearing and spring.....	215
41X2670	Upper front cover with decals (MX331, MB3442, MX431).....	210
41X2929	Upper front cover with decals (XM1342).....	210

# MB3442adw, MB3442i, MX331adn, MX431adn, MX431adw, and XM1342

## WIRING DIAGRAM

