

Fuser

- 1 Remove the duplexer. See page 244.
- 2 Rotate the two blue tabs inward.

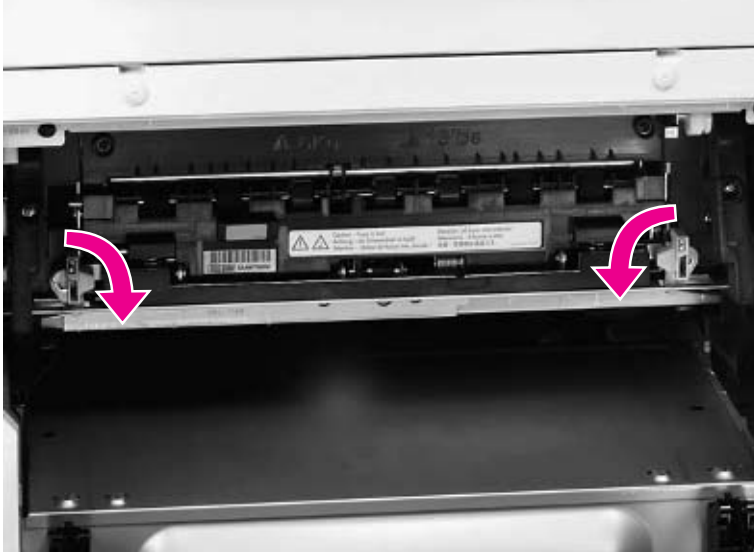


Figure 157. Unlock the fuser

- 3 Slightly lift up the fuser and pull it out.



Figure 158. Remove the fuser

Intermediate transfer belt (ITB)

- 1 Open the front doors.

Note

Make sure that the green handle is down.

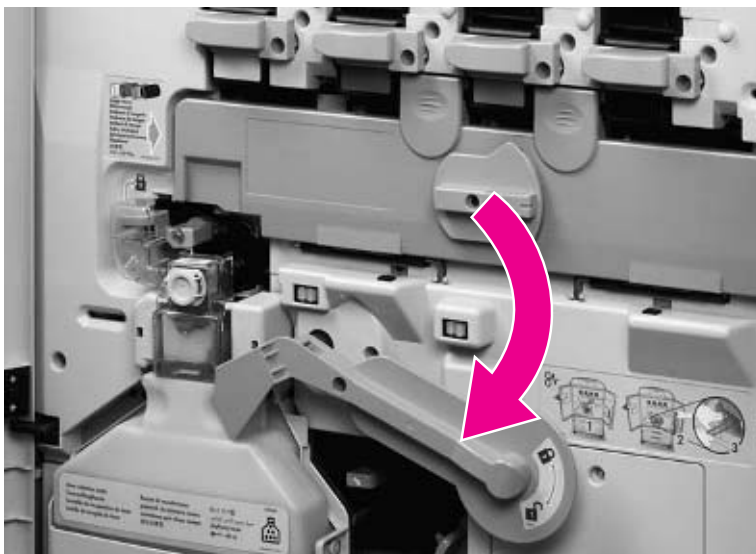


Figure 159. Release the ITB

- 2 Open the ITB door.



Figure 160. Open the ITB door

- 3 Grasp the blue handle, and slide the ITB out until it stops.

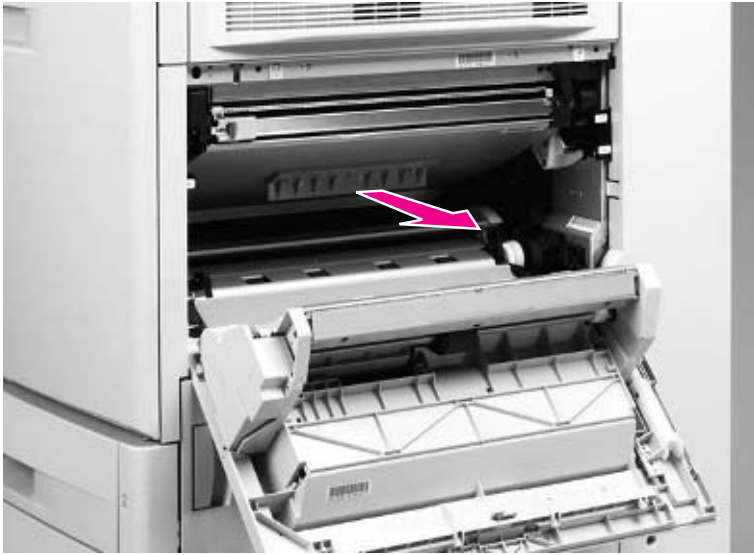


Figure 161. Slide the ITB out of the printer

CAUTION Do not let anything touch the surface of the ITB.

- 4 Depress the two blue levers (callout 1), and remove the ITB.

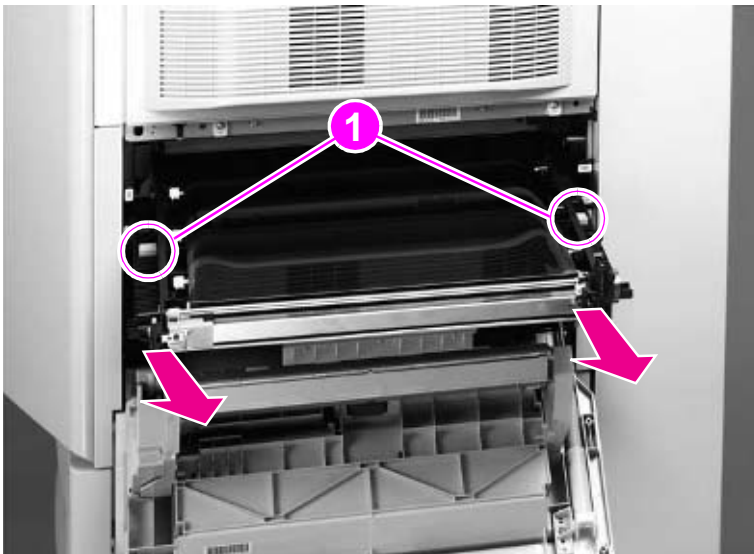


Figure 162. Remove the ITB

CAUTION Make sure that you set the ITB on a flat, clean surface.

Transfer cleaner (cleaning blade)

- 1 Rotate the blue lever down.

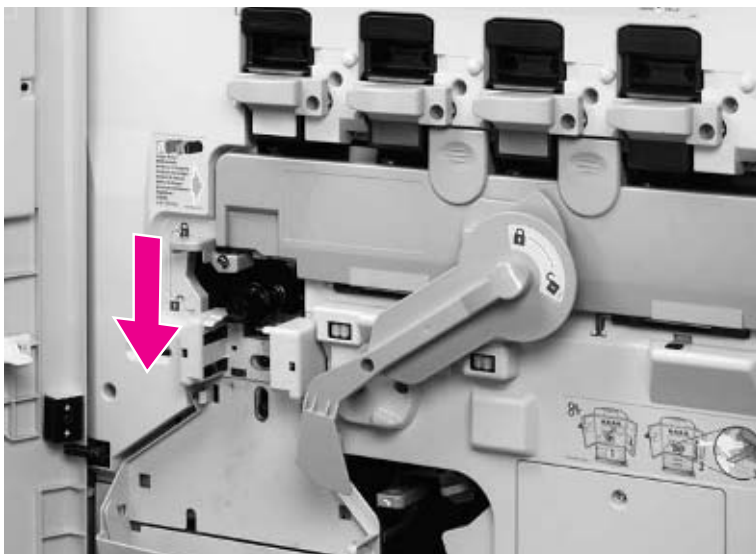


Figure 78. Unlock the transfer cleaner

- 2 Pull out the transfer cleaner.



Figure 79. Remove the transfer cleaner

Transfer roller

Note

Do not touch the surface of the transfer roller.

- 1 Rotate the green lever clockwise.

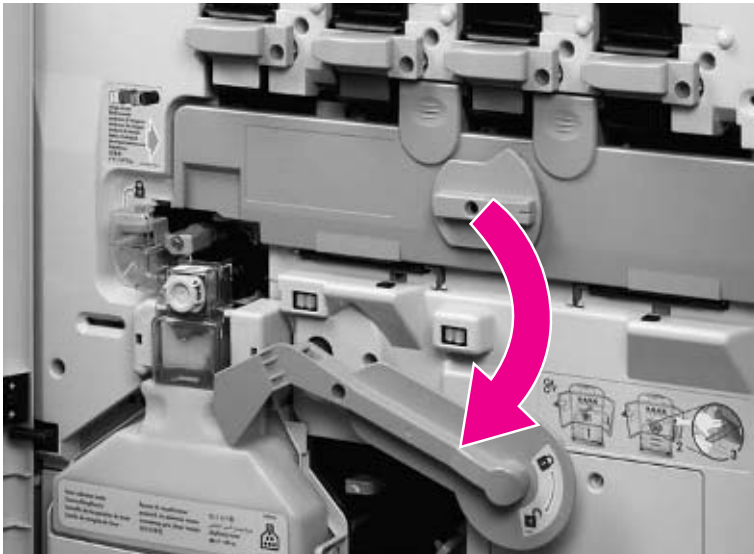


Figure 80. Disengage the ITB to release the transfer roller

- 2 Grasp the blue tab and pull the transfer roller out.



Figure 81. Remove the transfer roller

Tray 1 pickup roller

- 1 Open the ITB door.
- 2 Unhook one claw (callout 1), slide the roller holder (callout 2), and remove the tray 1 pickup roller (callout 3).

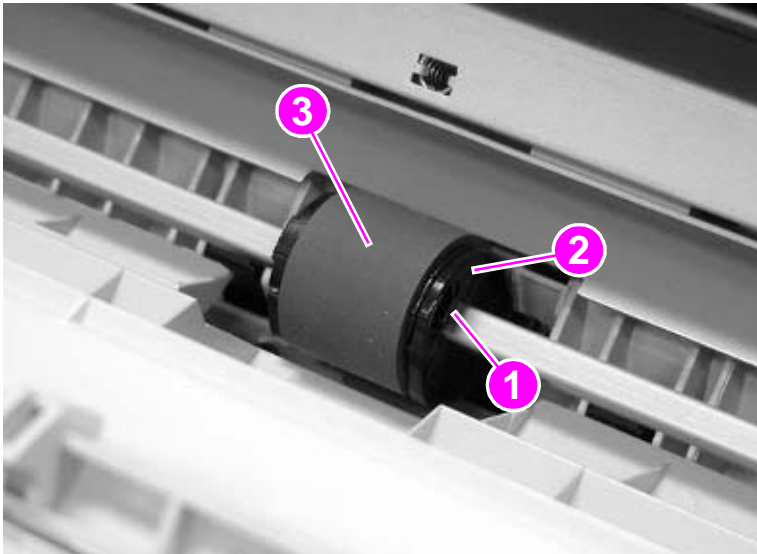


Figure 239. Remove the tray 1 pickup roller

Tray 1 separation pad

- 1 Remove the ITB door.
- 2 Remove the tray 1 pickup roller. See page 294.
- 3 Unhook two claws (callout 1), and remove the pad cover (callout 2).

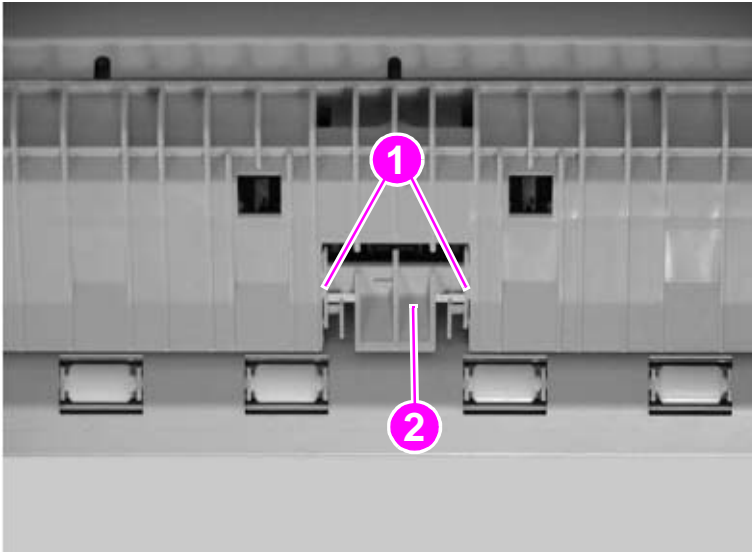


Figure 240. Unhook the tray 1 separation pad

- 4 Unhook two claws (callout 3), and remove the separation pad (callout 4).

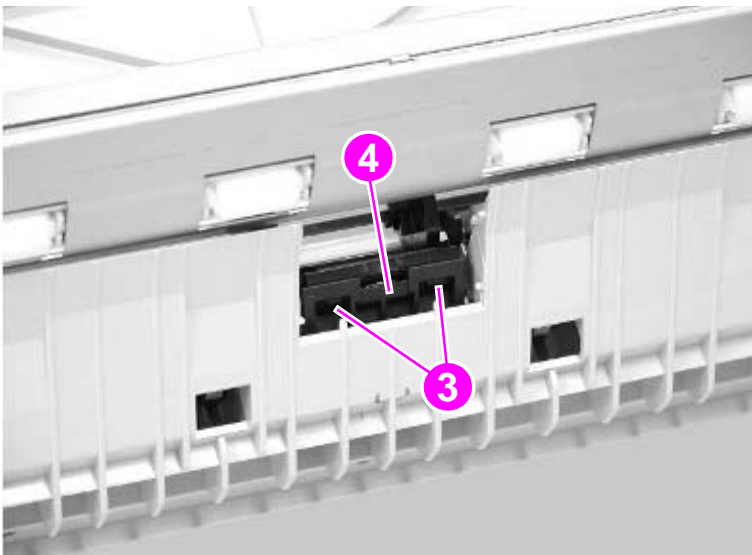


Figure 241. Remove the tray 1 separation pad

Waste toner bottle (toner collection bottle)

- 1 Hold the top of the waste toner bottle and pull it out.



Figure 77. Remove the waste toner bottle