


HP M712/M725MFP Close left door message

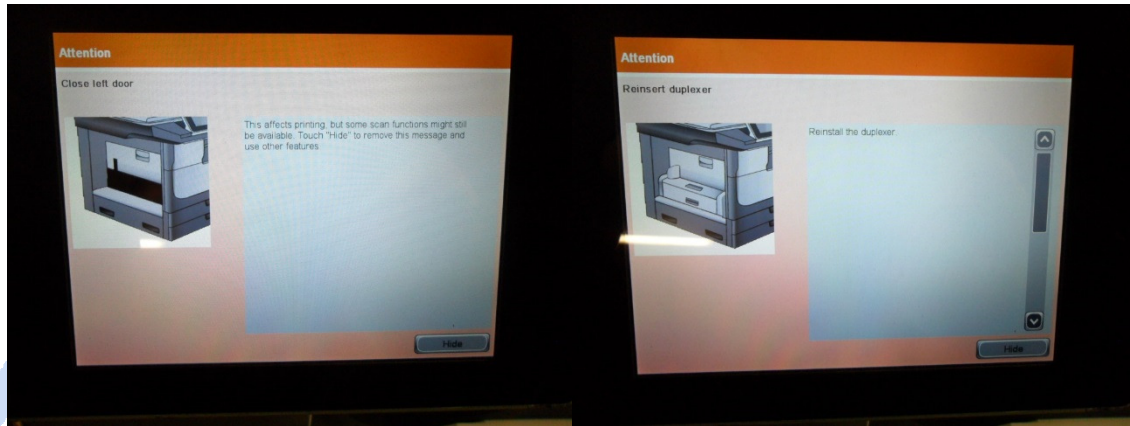

There have been a few cases where the printer will display one of the above messages without the ability to print. The cause of this has been the rear fuser lock tab being just out of the locked position, which will intern cause the linkage to the switch “SW1 fuser/left door” incomplete.

Below are incorrect and correct positions for the rear fuser lock tab:

