



Lexmark<sup>TM</sup>

# MB2236 MFP

---

## Service Manual

---

## Product information

Product name:

Lexmark MB2236adw MFP

Machine type:

3400

Model(s):

481, 485

---

## Edition notice

May 24, 2021

**The following paragraph does not apply to any country where such provisions are inconsistent with local law:** LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

**The following paragraph does not apply to any country where such provisions are inconsistent with local law:** THIS PUBLICATION IS PROVIDED “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

Lexmark and the Lexmark logo are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

PCL® is a registered trademark of the Hewlett-Packard Company. PCL is Hewlett-Packard Company's designation of a set of printer commands (language) and functions included in its printer products. This printer is intended to be compatible with the PCL language. This means the printer recognizes PCL commands used in various application programs, and that the printer emulates the functions corresponding to the commands.

PostScript is a registered trademark of Adobe Systems Incorporated in the United States and/or other countries.

All other trademarks are the property of their respective owners.

**All rights reserved.**

# Contents

<b>Product information .....</b>	<b>2</b>
<b>Edition notice.....</b>	<b>3</b>
<b>Notices, conventions, and safety information</b>	
Laser notice.....	12
Avis relatif à l'utilisation du laser.....	12
Aviso de láser.....	12
Laser-Hinweis.....	13
Conventions .....	13
Safety information .....	14
Consignes de sécurité.....	15
Información de seguridad.....	17
Sicherheitshinweise.....	18
<b>Change history</b>	
Change history .....	21
<b>General information</b>	
Printer model configurations .....	26
Finding the printer serial number .....	26
Supported paper sizes, types, and weights .....	27
Supported paper sizes .....	27
Supported paper types.....	30
Supported paper weights .....	30
Supported fax .....	31
Tools required for service .....	31
<b>Diagnostics and troubleshooting</b>	
Troubleshooting precautions .....	32
Précautions de dépannage .....	33
Precauciones durante la solución de problemas .....	34
Vorsichtsmaßnahmen bei der Fehlerbehebung .....	35
Troubleshooting overview .....	36
Performing the initial troubleshooting check .....	36
Securing the printer .....	37
Resetting the printer without admin credentials .....	37
Data security notice.....	37
Identifying printer memory.....	37
Erasing printer memory .....	38
Fixing print quality issues .....	38

Initial print quality check .....	38
Gray or solid background check.....	39
Solid color or black image check.....	44
Blank or white pages check.....	47
Dark print check .....	52
Light print check .....	56
Paper curl check.....	61
Folded or wrinkled paper check .....	63
Repeating defects check .....	66
Skewed print check .....	71
Streaked vertical lines appear on prints check.....	73
Horizontal white lines check.....	78
Vertical white lines check .....	82
Vertical colored lines or banding check.....	87
Vertical dark streaks with print missing check.....	91
White streaks and voided areas check.....	96
Clipped pages or images check .....	100
Compressed images appear on prints check.....	105
Incorrect margins on prints check .....	109
Toner rubs off check .....	112
Toner specks appear on prints check.....	114
Paper jams .....	118
Avoiding jams .....	118
200 paper jams.....	119
200 paper jam messages .....	119
Sensor (input sensor S3) static jam service check.....	120
Sensor (input sensor S3) service check .....	123
202 paper jams.....	127
202 paper jam messages .....	127
Sensor (fuser exit sensor S4) service check .....	128
Sensor (fuser exit sensor S4) never cleared service check .....	133
Sensor (fuser exit sensor S4) static jam service check.....	138
206 paper jams.....	141
206 paper jam messages .....	141
Sensor (staging sensor S2): Paper failed to clear service check.....	141
Sensor (staging sensor S2): Paper failed to arrive service check.....	146
232 paper jams.....	151
232 paper jam messages .....	151
Sensor (input sensor S3): Duplex failure service check.....	151
User attendance messages .....	156
Non-Lexmark supply .....	156
8–12 user attendance messages .....	157
8–12 user attendance messages .....	157
Manual feeder service check.....	157
Auto reboot service check .....	159
31–33 user attendance messages .....	161
31–33 user attendance messages .....	161
Photoconductor and toner cartridge service check .....	161
Black imaging unit, photoconductor smart chip, or sensor problem service check.....	163
Unsupported imaging unit or toner cartridge service check .....	166

34–41 user attendance messages .....	168
34–41 user attendance messages .....	168
Scanner collation area service check .....	168
Insufficient memory service check .....	170
42 user attendance messages .....	172
42 user attendance messages .....	172
Toner cartridge service check .....	174
55 user attendance messages .....	175
55 user attendance messages .....	175
Unsupported USB device service check .....	175
71 user attendance messages .....	177
71 user attendance messages .....	177
Fax station name service check .....	177
Analog phone line service check .....	178
Network service check .....	179
84 user attendance messages .....	180
84 user attendance messages .....	180
Toner cartridge or imaging unit low service check .....	181
88 user attendance messages .....	183
88 user attendance messages .....	183
Non-supply user attendance messages .....	184
Non-supply user attendance messages .....	184
Fax card service check .....	184
Short paper service check .....	185
Insufficient memory service check .....	189
Complex page service check .....	189
Printer hardware errors .....	190
111 error messages .....	190
111 error messages .....	190
121 errors .....	191
121 error messages .....	191
Fuser service check .....	193
126 errors .....	197
126 error messages .....	197
LVPS service check .....	198
140 errors .....	199
140 error messages .....	199
Motor (transport drive) service check .....	199
6yy errors .....	201
6yy error messages .....	201
Printer declared jam service check .....	203
Printhead error 1 service check .....	205
Printhead error 2 service check .....	206
Procedure before starting the 9yy service checks .....	209
A. Collecting the history information from the SE menu .....	209
B. Collecting the firmware logs (Fwdebug and logs.tar.gz) from the SE menu .....	210
C. Collecting the settings from the Menu Settings Page .....	210
.....	211
D. Collecting information from the user .....	211
9yy errors .....	211
9yy error messages .....	211
900 error service check .....	214
Engine error service check .....	218

Network software error service check .....	219
ADF/Scanner hardware errors .....	221
84y error messages.....	221
Sensor (scan) service check .....	222
.....	222
Sensor (ADF top door interlock) service check.....	225
.....	225
ADF feed error service check.....	228
.....	228
Scanner disabled and scanner communication error service check.....	231
.....	231
Flatbed home position service check .....	233
.....	233
Other symptoms .....	235
Base printer symptoms.....	235
Base printer symptoms.....	235
Door switch service check.....	235
Load tray 1 with A4 plain paper service check .....	237
Paper did not arrive in the bin service check.....	239
Tray insert obstructed service check .....	242
Unable to remove toner cartridge service check .....	243
No display service check .....	245
No power service check .....	246
ADF/scanner symptoms .....	247
ADF cover open service check.....	247
Fax symptoms .....	249
Cannot send or receive faxes using etherFAX .....	249
Fax symptoms .....	250
Fax not detected service check .....	250
Cannot set up etherFAX .....	251
Fax transmission service check.....	252
Fax reception service check .....	255
Lost connection to HTTPS fax server when using etherFAX service check.....	259
Fax error log codes.....	260

## Service menus

Understanding the printer control panel .....	267
Lexmark MB2236adw MFP .....	267
Lexmark MB2236adwe, Lexmark MB2236i MFPs .....	269
Understanding the status of the power button and indicator light .....	269
Diagnostics menu.....	270
Entering the Diagnostics menu .....	270
Reports.....	271
Device Settings.....	271
Installed Licenses .....	271
Advanced Print Quality Samples.....	271
Format Fax Storage .....	272
Event Log .....	272
Display Log .....	272
Print Log .....	272
Print Log Summary .....	272
Mark Log.....	273

Input tray quick print .....	273
Output bin quick feed .....	273
Printer Setup .....	273
Printed page count (mono) .....	273
Permanent page count .....	274
Processor ID .....	274
Serial number .....	274
Model name .....	274
Engine setting [x] .....	274
EP setup .....	275
Printer diagnostics & adjustments .....	275
Sensor tests .....	275
Motor tests .....	276
Registration adjust .....	276
Universal Override .....	277
HVPS adjust .....	277
Scanner Diagnostics .....	277
Motor Tests .....	277
Sensor Tests .....	278
Feed Test .....	279
Scanner Calibration Reset .....	279
.....	279
Config menu .....	280
Entering the Config menu .....	280
Config Menu .....	280
Service Engineer menu .....	284
Entering the Service Engineer (SE) menu .....	284
General SE .....	284
Network SE .....	284
Fax SE Menu .....	285
Scan SE .....	286
EWS SE Menu .....	286
Entering Invalid engine mode .....	287
Entering Recovery mode .....	288
For LED display .....	288
For 2-line display .....	288
For 2.4-, 4.3-, 7-, and 10-inch displays with number pads .....	288
For 2.8-, 4.3-, 7-, and 10-inch displays without number pads .....	289

## Parts removal

Important removal information .....	290
Removal precautions .....	290
Précautions de retrait .....	291
Precauciones durante la extracción .....	291
Vorsichtsmaßnahmen bei der Demontage .....	292
Handling ESD-sensitive parts .....	293
Critical information for controller board or control panel replacement (for MB2236adwe only) .....	294
Restoring the printer configuration .....	295
Restoring solutions, licenses, and configuration settings .....	297

Updating the printer firmware .....	297
Using a flash drive .....	297
Using a network computer .....	298
Using a USB cable connection .....	298
Backing up eSF solutions and settings .....	299
Ribbon cable connectors .....	299
Zero Insertion Force (ZIF) connectors .....	299
Horizontal top contact connector .....	300
.....	301
Horizontal bottom contact connector .....	302
.....	303
Vertical mount contact connector .....	306
.....	307
Horizontal sliding contact connector .....	310
.....	311
Low insertion force (LIF) connector .....	314
Printhead assembly adjustment .....	316
Performing the HVPS characterization .....	318
Removal procedures .....	319
Left side removals .....	319
Left cover removal .....	319
Controller board removal .....	322
LVPS removal .....	326
HVPS removal .....	327
Right side removals .....	329
Right cover removal .....	329
Main drive removal .....	331
Pick solenoid removal .....	333
Fan assembly removal .....	334
Front removals .....	337
2-line control panel removal .....	337
2.8-in. control panel removal .....	340
Front door removal .....	343
Transfer roller removal .....	344
Rear removals .....	345
Rear door removal .....	345
Duplex unit removal .....	346
Bottom rear door removal .....	347
Redrive removal .....	347
Fuser removal .....	348
Fuser exit flag removal .....	350
Top removals .....	351
Top cover removal .....	351
.....	355
.....	359
Printhead removal .....	363
Bottom removals .....	365
Sensor (fuser exit) removal .....	365

Sensor (paper present) removal.....	366
Sensor (staging and input) removal .....	367
Input sensor flags removal .....	369
Pick rollers removal .....	371
ADF and scanner .....	373
Scanner stand removal .....	373
ADF pick assembly removal.....	374
ADF scanner (old) and flatbed scanner (old) removal .....	376
Removal procedure .....	379
ADF scanner (new) and flatbed scanner (new) removal.....	386
Removal procedure .....	388

## Component locations

Printer configuration .....	397
Controller board connectors.....	398

## Maintenance

Cleaning printer parts.....	404
Cleaning the printer .....	404
Cleaning the scanner .....	405

## Parts catalog

Legend .....	408
Covers (MB2236adw) .....	409
Covers (MB2236adwe, MB2236i) .....	411
Paper path.....	413
Drive .....	414
Sensors .....	415
Electronics.....	416
Scanner .....	418
Miscellaneous .....	420

## Printer specifications

Power consumption.....	421
Product power consumption.....	421
Sleep Mode .....	422
Hibernate Mode.....	422
Off mode.....	422
Total energy usage .....	422
Selecting a location for the printer.....	423
Noise emission levels.....	424
Temperature information .....	424
Applicability of Regulation (EU) 2019/2015 and (EU) 2019/2020 .....	424

## Theory of operation

POR sequence .....	425
Print cycle operation.....	425
Print engine layout.....	425
Print cycle .....	426
Flowchart .....	426
Charge .....	427
Expose.....	428
Develop .....	429
Transfer .....	430
Clean .....	430
Fuse.....	431
Printer operation.....	432
Printer sections.....	432
Printer paper path.....	433
Simplex print job .....	433
Duplex print job.....	434
Printer paper path sensors .....	435
Main drive .....	436
ADF and scanner operation .....	437
Flatbed scanner drive .....	437
ADF paper path .....	438
ADF paper path sensors .....	439
<b>Index .....</b>	<b>440</b>

# Notices, conventions, and safety information

## Laser notice

The printer is certified in the U.S. to conform to the requirements of DHHS 21 CFR, Chapter I, Subchapter J for Class I (1) laser products, and elsewhere is certified as a Class I laser product conforming to the requirements of IEC 60825-1: 2014.

Class I laser products are not considered to be hazardous. The laser system and printer are designed so there is never any human access to laser radiation above a Class I level during normal operation, user maintenance, or prescribed service conditions. The printer has a non-serviceable printhead assembly that contains a laser with the following specifications:

Class: IIIb (3b) AlGaAs

Nominal output power (milliwatts): 15

Wavelength (nanometers): 775–800

## Avis relatif à l'utilisation du laser

Cette imprimante est certifiée conforme aux exigences de la réglementation des Etats-Unis relative aux produits laser de classe I (1) (DHHS 21 CFR, Chapitre I, Sous-chapitre J). Pour les autres pays, elle est certifiée conforme aux exigences des normes CEI 60825-1:2014 relatives aux produits laser de classe I.

Les produits laser de classe I ne sont pas considérés comme dangereux. Le système laser ainsi que l'imprimante ont été conçus de manière à ce que personne ne soit jamais exposé à des radiations laser dépassant le niveau de classe I dans le cadre d'un fonctionnement normal, de l'entretien par l'utilisateur ou de la maintenance. L'imprimante dispose d'un ensemble de têtes d'impression non réparable contenant un laser doté des caractéristiques suivantes :

Class: IIIb (3b) AlGaAs

Nominal output power (milliwatts): 15

Wavelength (nanometers): 775–800

## Aviso de láser

Esta impresora se ha certificado en EE.UU. cumpliendo con los requisitos de DHHS 21 CFR, capítulo I, subcapítulo J para los productos láser de Clase I (1) y en otros países está certificada como un producto láser de Clase I de acuerdo con los requisitos de IEC 60825-1: 2014.

Los productos láser de Clase I no se consideran peligrosos. El sistema láser y la impresora se han diseñado para que el ser humano no acceda nunca a las radiaciones láser por encima del nivel de Clase I durante su uso normal, ni en tareas de mantenimiento o intervenciones de servicio técnico prescritas. El conjunto de cabezal de impresión de la impresora no se puede reparar y contiene un láser con las siguientes especificaciones:

Class: IIIb (3b) AlGaAs

Nominal output power (milliwatts): 15

Wavelength (nanometers): 775–800

## Laser-Hinweis

Der Drucker wurde in den USA zertifiziert und entspricht den Anforderungen der Vorschriften DHHS 21 CFR Kapitel I für Laserprodukte der Klasse I (1), andernorts ist er als Laserprodukt der Klasse I zertifiziert, das den Anforderungen von IEC 60825-1 entspricht: 2014.

Laserprodukte der Klasse I werden nicht als gefährlich betrachtet. Das Lasersystem und der Drucker sind so konstruiert, dass unter normalen Betriebsbedingungen, bei der Wartung durch den Benutzer oder bei den vorgeschriebenen Wartungsbedingungen Menschen keiner Laserstrahlung ausgesetzt sind, die die Werte für Klasse I überschreitet. Der Drucker verfügt über eine Druckkopfeinheit, die nicht gewartet werden kann und mit einem Laser mit den folgenden Spezifikationen ausgestattet ist.

Class: IIIb (3b) AlGaAs

Nominal output power (milliwatts): 15

Wavelength (nanometers): 775–800

## Conventions

**Note:** A *note* identifies information that could help you.

**Warning:** A *warning* identifies something that could damage the product hardware or software.

**CAUTION:** A *caution* indicates a potentially hazardous situation that could injure you. Different types of caution statements include:



### CAUTION—POTENTIAL INJURY

Indicates a risk of injury.



### CAUTION—SHOCK HAZARD

Indicates a risk of electrical shock.

**CAUTION—HOT SURFACE**

Indicates a risk of burn if touched.

**CAUTION—PINCH HAZARD**

Indicates a risk of being caught between moving parts.

**CAUTION—MOVING PARTS**

Indicates a risk of laceration or abrasion injuries from rotating parts.

## Safety information

- The safety of this product is based on testing and approvals of the original design and specific components. The manufacturer is not responsible for safety in the event of use of unauthorized replacement parts.
- The maintenance information for this product has been prepared for use by a professional service person and is not intended to be used by others.
- There may be an increased risk of electrical shock and personal injury during disassembly and servicing of this product. Professional service personnel should understand this risk and take necessary precautions.

**CAUTION—SHOCK HAZARD**

When you see this symbol on the product, there is a danger from hazardous voltage in the area of the product where you are working. Unplug the product before you begin, or use caution if the product must receive power in order to perform the task.

**CAUTION—POTENTIAL INJURY**

The lithium battery in this product is not intended to be replaced. There is a danger of explosion if a lithium battery is incorrectly replaced. Do not recharge, disassemble, or incinerate a lithium battery. Discard used lithium batteries according to the manufacturer's instructions and local regulations.

**CAUTION—POTENTIAL INJURY**

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.



**CAUTION—POTENTIAL INJURY**

To avoid the risk of fire or electrical shock, use only the power cord provided with this product or the manufacturer's authorized replacement.



**CAUTION—POTENTIAL INJURY**

Do not use this product with extension cords, multioutlet power strips, multioutlet extenders, or UPS devices. The power capacity of these types of accessories can be easily overloaded by a laser printer and may result in a risk of fire, property damage, or poor printer performance.



**CAUTION—POTENTIAL INJURY**

Only a Lexmark Inline Surge Protector that is properly connected between the printer and the power cord provided with the printer may be used with this product. The use of non-Lexmark surge protection devices may result in a risk of fire, property damage, or poor printer performance.



**CAUTION—POTENTIAL INJURY**

Do not use this product with an inline surge protector. The use of a surge protection device may result in a risk of fire, property damage, or poor printer performance.



**CAUTION—POTENTIAL INJURY**

If the printer weight is greater than 20 kg (44 lb), then it may require two or more people to lift it safely.

## Consignes de sécurité

- La sécurité de ce produit est basée sur des tests et certifications de sa conception d'origine et de ses composants spécifiques. Le fabricant décline toute responsabilité en cas d'utilisation de pièces de rechange non autorisées.
- Les informations de maintenance de ce produit sont destinées à des professionnels qualifiés et ne sont pas conçues pour être utilisées par d'autres personnes.
- Il existe un risque potentiel de choc électrique et de blessures lors du démontage et de la maintenance de ce produit. Le personnel professionnel de maintenance doit comprendre les risques et prendre les précautions nécessaires.



**CAUTION—SHOCK HAZARD**

Ce symbole indique un danger lié à des niveaux de tension dangereux dans la zone du produit à manipuler. Débranchez le produit avant de commencer, ou agissez avec prudence si le produit doit être alimenté pour effectuer l'opération.



**CAUTION—POTENTIAL INJURY**

La batterie lithium de ce produit n'est pas destinée à être remplacée. Si vous ne respectez pas les instructions de remplacement de la batterie, vous risquez de provoquer une explosion. Ne rechargez pas, ne désassemblez pas et ne brûlez pas la batterie au lithium. Mettez les batteries lithium usagées au rebut selon les instructions du fabricant et les réglementations locales.



**CAUTION—POTENTIAL INJURY**

Pour éviter tout risque d'électrocution ou d'incendie, branchez le câble d'alimentation directement à une prise électrique répondant aux exigences requises et correctement mise à la terre, proche du produit et facile d'accès.



**CAUTION—POTENTIAL INJURY**

Pour éviter tout risque d'incendie ou d'électrocution, utilisez uniquement le câble d'alimentation fourni avec ce produit ou un câble de remplacement autorisé par le fabricant.



**CAUTION—POTENTIAL INJURY**

Ce produit ne doit pas être utilisé avec des rallonges, des barres multiprises, des rallonges multiprises ou des périphériques UPS. La capacité de ces types d'accessoires peut être facilement dépassée par une imprimante laser, d'où un risque de dégâts matériels, d'incendie ou de performances d'impression amoindries.



**CAUTION—POTENTIAL INJURY**

Utilisez uniquement un parasurtenseur correctement raccordé à l'imprimante et au câble d'alimentation fourni avec la machine. L'utilisation de parasurtenseurs non fabriqués par Lexmark comporte un risque d'incendie et de dégâts matériels, et peut amoindrir les performances de l'imprimante.



**CAUTION—POTENTIAL INJURY**

N'utilisez pas ce produit avec un parasurtenseur en ligne. L'utilisation de parasurtenseurs comporte un risque d'incendie et de dégâts matériels, et peut réduire les performances de l'imprimante.



**CAUTION—POTENTIAL INJURY**

Si votre imprimante pèse plus de 20 kg (44 lb), l'intervention d'au moins deux personnes est nécessaire pour la soulever sans risque.

## Información de seguridad

- La seguridad de este producto se basa en las pruebas y comprobaciones del diseño original y los componentes específicos. El fabricante no se hace responsable de la seguridad en caso de uso de piezas de repuesto no autorizadas.
- La información de mantenimiento de este producto se ha preparado para su uso por parte de un profesional de asistencia técnica y no está diseñada para su uso por parte de otros usuarios.
- Es posible que haya un mayor riesgo de descarga eléctrica y daños personales durante el desmontaje y el mantenimiento de este producto. El personal de asistencia profesional debe conocer este riesgo y tomar las precauciones necesarias.



**CAUTION—SHOCK HAZARD**

Cuando vea este símbolo en el producto, existe peligro de tensiones peligrosas en el área del producto en la que está trabajando. Desconecte el producto antes de empezar o tenga cuidado si el producto debe recibir alimentación a fin de realizar la tarea.



**CAUTION—POTENTIAL INJURY**

La batería de litio de este producto no debe reemplazarse. Existe riesgo de explosión si se sustituye incorrectamente una batería de litio. No recargue, desmonte ni incinere una batería de litio. Deseche las baterías de litio usadas según las instrucciones del fabricante y las normativas locales.



**CAUTION—POTENTIAL INJURY**

Para evitar el riesgo de incendio o descarga eléctrica, conecte el cable de alimentación a una toma de corriente debidamente conectada a tierra con la potencia adecuada que se encuentre cerca del dispositivo y resulte fácilmente accesible.



**CAUTION—POTENTIAL INJURY**

Para evitar el riesgo de incendio o descarga eléctrica, utilice exclusivamente el cable de alimentación que se suministra junto con este producto o el repuesto autorizado por el fabricante.



**CAUTION—POTENTIAL INJURY**

No utilice este producto con cables alargadores, regletas de varias tomas, cables alargadores de varias tomas o sistemas de alimentación ininterrumpida. La potencia de este tipo de accesorios puede sobrecargarse fácilmente si se utiliza una impresora láser, lo que puede dar lugar a que el rendimiento de la impresora sea bajo, a daños materiales o a posibles incendios.



**CAUTION—POTENTIAL INJURY**

Solo debe usarse con este producto un protector de sobretensión insertable Lexmark debidamente conectado entre la impresora y el cable de alimentación que con ella se suministra. El uso de protectores de sobretensión de marcas distintas a Lexmark puede dar lugar a que el rendimiento de la impresora sea bajo, a daños materiales o a posibles incendios.



**CAUTION—POTENTIAL INJURY**

No utilice este producto con un protector de sobretensión. El uso de un dispositivo de protección contra sobretensión puede dar lugar a que el rendimiento de la impresora sea bajo, a daños materiales o a posibles incendios.



**CAUTION—POTENTIAL INJURY**

si el peso de la impresora es superior a 20 kg (44 lb), pueden ser necesarias dos o más personas para levantarla de forma segura.

## Sicherheitshinweise

- Die Sicherheit dieses Produkts basiert auf Tests und Zulassungen des Originaldesigns und der spezifischen Komponenten. Sofern nicht autorisierte Ersatzteile eingesetzt werden, übernimmt der Hersteller keinerlei Verantwortung in Bezug auf die Sicherheit dieses Produkts.
- Die Wartungsinformationen für dieses Produkt wurden für ausgebildete Servicemitarbeiter zusammengestellt und dürfen nicht von anderen verwendet werden.
- Möglicherweise besteht bei der Demontage und Wartung dieses Produkts eine erhöhte Stromschlag- und Verletzungsgefahr. Ausgebildete Servicemitarbeiter sollten sich dieser Gefahr bewusst sein und die notwendigen Vorsichtsmaßnahmen ergreifen.



**CAUTION—SHOCK HAZARD**

Wenn Sie dieses Symbol sehen, besteht eine Gefahr durch gefährliche Spannungen in dem Produktbereich, in dem Sie arbeiten. Trennen Sie das Produkt von seiner Stromverbindung, bevor Sie beginnen, oder gehen Sie vorsichtig vor, wenn das Produkt für die Durchführung der Aufgabe mit Strom versorgt werden muss.



**CAUTION—POTENTIAL INJURY**

Die Lithiumbatterie in diesem Produkt darf nicht ausgetauscht werden. Wird eine Lithiumbatterie nicht ordnungsgemäß ausgetauscht, besteht Explosionsgefahr. Lithiumbatterien dürfen auf keinen Fall wieder aufgeladen, auseinander genommen oder verbrannt werden. Befolgen Sie zum Entsorgen verbrauchter Lithiumbatterien die Anweisungen des Herstellers und die örtlichen Bestimmungen.



**CAUTION—POTENTIAL INJURY**

Um Feuer- und Stromschlaggefahr zu vermeiden, schließen Sie das Netzkabel direkt an eine ordnungsgemäß geerdete Steckdose an, die sich in der Nähe des Geräts befindet und leicht zugänglich ist.



**CAUTION—POTENTIAL INJURY**

Um das Risiko eines Feuers oder elektrischen Schlags zu vermeiden, verwenden Sie ausschließlich das diesem Produkt beiliegende Netzkabel bzw. ein durch den Hersteller zugelassenes Ersatzkabel.



**CAUTION—POTENTIAL INJURY**

Verwenden Sie das Produkt nicht mit Verlängerungskabeln, Mehrfachsteckdosen, Mehrfachverlängerungen oder Geräten für unterbrechungsfreie Stromversorgung. Die Belastbarkeit solcher Zubehörteile kann durch Laserdrucker schnell überschritten werden, was zu Brandgefahr, Beschädigung von Eigentum oder einer eingeschränkten Druckerleistung führen kann.



**CAUTION—POTENTIAL INJURY**

Mit diesem Produkt darf nur ein Lexmark Inline Surge Protector verwendet werden, der vorschriftsgemäß zwischen dem Drucker und dem mitgelieferten Netzkabel angeschlossen ist. Die Verwendung von nicht von Lexmark stammenden Überspannungsschutzgeräten kann zu Brandgefahr, Beschädigung von Eigentum oder einer eingeschränkten Druckerleistung führen.



**CAUTION—POTENTIAL INJURY**

Verwenden Sie dieses Produkt nicht mit einem Inline-Überspannungsschutz. Die Verwendung von Überspannungsschutzgeräten kann zu Brandgefahr, Beschädigung von Eigentum oder einer eingeschränkten Druckerleistung führen.



**CAUTION—POTENTIAL INJURY**

Wenn der Drucker mehr als 20 kg wiegt, sind zum sicheren Anheben mindestens zwei Personen notwendig.

# Change history

## Change history

### September 4, 2024

- Updated the Controller board connectors topic in the Component locations chapter. See [Controller board connectors on page 398](#).
- Updated the wiring diagram. See [wiring diagram](#).

### August 9, 2024

- Added the 42.60–42.64K error codes in the 42 user attendance messages topic of the Diagnostics and troubleshooting chapter. See [42 user attendance messages on page 172](#).
- Updated the Toner cartridge service check topic of the Diagnostics and troubleshooting chapter. See [Toner cartridge service check on page 174](#).

### May 30, 2024

- Updated the Controller board connectors topic in the Component locations chapter. See [Controller board connectors on page 398](#).
- Updated the wiring diagram. See [wiring diagram](#).

### July 11, 2023

- Added a note for 40X0296 in the Miscellaneous topic of the Parts catalog chapter. See [Miscellaneous on page 420](#) in the Diagnostics and troubleshooting chapter.

### February 1, 2023

- Added the error codes 845.02 and 845.03. See [84y error messages on page 221](#) in the Diagnostics and troubleshooting chapter.

### January 31, 2023

- Added the ADF scanner (new) and flatbed scanner (new) removal topic in the Parts removal chapter. See [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

### January 16, 2023

- Updated the ADF scanner and flatbed scanner removal topic in the Parts removal chapter. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#).

### January 5, 2023

- Removed the note from the Left cover removal topic of the Parts removal chapter. See [Left cover removal on page 319](#).
- Removed the note from the Front door removal topic of the Parts removal chapter. See [Front door removal on page 343](#).
- Removed the note in the following assembly of the Parts catalog chapter:
  - 41X2450
  - 41X2451

See [Covers \(MB2236adw\)](#) on page 409.

See [Covers \(MB2236adwe, MB2236i\)](#) on page 411.

### November 29, 2022

- Added the topic group Securing the printer in the Diagnostics and troubleshooting chapter. It includes the topic Resetting the printer without admin credentials. See [Resetting the printer without admin credentials](#) on page 37.

### October 6, 2022

- Added a note in the Left cover removal topic of the Parts removal chapter. See [Left cover removal](#) on page 319.
- Added a note in the Front door removal topic of the Parts removal chapter. See [Front door removal](#) on page 343.
- Added the Applicability of Regulation (EU) 2019/2015 and (EU) 2019/2020 regulatory notice in the Printer specifications chapter.
- Added a note in the following assembly of the Parts catalog chapter:
  - 41X2450
  - 41X2451

See [Covers \(MB2236adw\)](#) on page 409.

See [Covers \(MB2236adwe, MB2236i\)](#) on page 411.

- Updated the Entering recovery mode topic in the Service menus chapter. See [Entering Recovery mode](#) on page 288.

### September 26, 2022

- Updated the installation note in the ADF scanner and flatbed scanner removal topic in the Parts removal chapter. See [ADF scanner \(old\) and flatbed scanner \(old\) removal](#) on page 376.

### July 5, 2022

- Added the following parts in the Scanner assembly in the Parts catalog chapter:
    - 41X4494 (ADF scanner assembly (new))
    - 41X4495 (flatbed scanner (new))
- See [Scanner](#) on page 418.
- Updated the description of the following parts in the Scanner assembly in the Parts catalog chapter:

- 41X2476 (ADF scanner assembly (old))
- 41X2478 (flatbed scanner (old))

See [Scanner](#) on page 418.

- Added a note in the description of the following parts in the Scanner assembly in the Parts catalog chapter:
  - 41X2476 (ADF scanner assembly (old))
  - 41X4494 (ADF scanner assembly (new))
  - 41X2478 (flatbed scanner (old))
  - 41X4495 (flatbed scanner (new))

See [Scanner](#) on page 418.

### June 9, 2022

- Added an installation note in the ADF scanner and flatbed scanner removal topic in the Parts removal chapter. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#).

### March 25, 2022

- Updated the 42 user attendance messages topic in the Diagnostics and troubleshooting chapter. See [42 user attendance messages on page 172](#).
- Updated the Toner cartridge service check topic in the Diagnostics and troubleshooting chapter. See [Photoconductor and toner cartridge service check on page 161](#).
- Updated the Restoring the printer configuration topic in the Parts removal chapter. See [Restoring the printer configuration on page 295](#).

### January 5, 2022

- Added the following error codes in the 31–33 user attendance messages topic of the Diagnostics and troubleshooting chapter.
  - 31.40C
  - 31.60CSee [31–33 user attendance messages on page 161](#).

### September 15, 2021

- Added the following PNs in the Parts catalog chapter:
  - 40X0278
  - 40X0282
  - 40X0286
  - 40X0297
  - 40X4596
  - 40X1792
  - 40X0296
  - 40X0279
  - 40X0271
  - 40X1791See [Miscellaneous on page 420](#).

### June 16, 2021

- Replaced the System Software error service check topic with the 900 error service check topic in the Diagnostics and troubleshooting chapter.
- Updated the 9yy error messages topic in the Diagnostics and troubleshooting chapter.

### May 26, 2021

- Updated the Printhead removal topic in the Parts removal chapter.

### April 7, 2021

- Updated the installation note in the Controller board removal topic in the Parts removal chapter.

### February 9, 2021

- Added MB2236i in the Printer model configurations topic in the General information chapter.
- Added the Supported fax topic in the General information chapter.
- Added the Finding the serial number topic in the General information chapter.

- Added the MB2236i top cover removal and ADF scanner and flatbed scanner removal topics in the Parts removal chapter.
- Added Top cover (MB2236i) (41X2979) in the Parts catalog chapter.
- Updated Entering the configurations menu topic in the Service menus chapter:
- Added Fax SE menu topic in the Service menu chapter.
- Added EWS SE menu topic in the Service menu chapter.
- Added note for the supported printers on the following topics in the Diagnostics and troubleshooting chapter:
  - Fax card service check
  - Fax not detected service check
  - Fax transmission service check
  - Fax reception service check
  - Analog phone line service check
- Added the following topics in the Fax symptoms under diagnostics and troubleshooting chapter:
  - Cannot set up using etherFAX
  - Cannot send or receive faxes using etherFAX
  - Lost connection to HTTPS fax server when using etherFAX service check
- Added a note in the Controller board connectors topic in the Component locations chapter
- Updated the Wiring diagram.

### January 18, 2021

- Updated the warning statements for the controller board removal in the Parts removal chapter.

### September 7, 2020

- Updated the Critical information for controller board or control panel replacement topic in the Parts removal chapter.
- Updated the video removal demonstration links in the Parts removal chapter.

### August 12, 2020

- Reinstated the following topics in the Parts removal chapter:
  - Restoring the printer configuration after replacing the controller board
  - Restoring solutions, licenses, and configuration settings
  - Backing up eSF solutions and settings

### August 3, 2020

- Updated the Controller board removal topic in the Parts removal chapter.
- Removed the following topics in the Parts removal chapter:
  - Restoring the printer configuration after replacing the controller board
  - Restoring solutions, licenses, and configuration settings
  - Backing up eSF solutions and settings

### June 3, 2020

- Added the Entering Recovery Mode topic in the Service menus chapter.
- Replaced PN 41X2456 with PN 41X2843 in the Parts catalog chapter.

### May 20, 2020

- Updated the Printhead removal topic in the Parts removal chapter.

### **April 1, 2020**

- Updated the description of PN 41X2467 in the Parts catalog chapter.

### **July 15, 2019**

- Added information for the MB2236adwe printer model.
- Updated the following topics in the Service menus chapter:
  - Entering the Diagnostics menu
  - Entering Invalid engine mode
- Added the Critical information for controller board or control panel replacement topic in the Parts removal chapter.
- Added the 2.8-in control panel removal topic in the Parts removal chapter.
- Updated the Top cover removal topic in the Parts removal chapter.
- Added the following PNs in the Parts catalog chapter:
  - 41X2516 (2.8-in control panel)
  - 41X2515 (MB2236adwe controller board)
  - 41X2617 (Front USB cable)
- Updated the Power consumption topic in the Printer specifications chapter.

### **April 1, 2019**

- Updated the 9yy error topics in the Diagnostics and troubleshooting chapter.
- Updated the User attendance messages topics in the Diagnostics and troubleshooting chapter.
- Removed the Intervention required error messages topics in the Diagnostics and troubleshooting chapter.

### **March 1, 2019**

- Added the Intervention required error messages and service checks in the Diagnostics and troubleshooting chapter.
- Updated the Controller board removal topic in the Parts removal chapter.

## General information

### Printer model configurations

The Lexmark™ MB2236adw, MB2236adwe and MB2236i are small, monochrome, network-capable multifunction laser printers.

Model	Configurations	Machine type/model
MB2236adw	Network-ready monochrome laser printer with 2-line LCD display, wireless capability, analog fax, internal duplex printing, and simplex scanning for small workgroups	3400-481
MB2236adwe	Network-ready monochrome laser printer with 2.8-in. LCD display, wireless capability, analog fax, internal duplex printing, and simplex scanning for small workgroups	3400-485
MB2236i	Network-ready monochrome laser printer with 2.8-in. LCD display, wireless capability, internal duplex printing, and simplex scanning for small workgroups	3400-485

### Finding the printer serial number

1. Pull out the tray.
2. Locate the serial number below the manual feeder.



## Supported paper sizes, types, and weights

### Supported paper sizes

**Note:**

- Paper less than 210 mm (8.3 in.) wide always prints at reduced speed.
- Use the manual feeder when printing on paper less than 105 mm (4.1 in.) wide.
- The minimum paper dimension supported for two-sided printing is 210 x 279.4 mm (8.3 x 11 in.).
- The maximum paper length supported by the scanner glass is 297 mm (11.7 in.).
- For two-sided printing on letter-, legal-, or folio-size paper, make sure that the paper size setting in the duplex unit is set to Letter.

Paper size	250-sheet tray	Manual feeder	Two-sided printing	Scanner glass	Automatic document feeder
<b>A4</b> 210 x 297 mm (8.27 x 11.7 in.)	✓	✓	✓	✓	✓

## General information

Paper size	250-sheet tray	Manual feeder	Two-sided printing	Scanner glass	Automatic document feeder
<b>A5 (short edge feed)</b> 148 x 210 mm (5.83 x 8.27 in.)	✓	✓	X	✓	✓
<b>A5 (long edge feed)</b> 210 x 148 mm (8.27 x 5.83 in.)	✓	✓	X	✓	✓
<b>A6</b> 105 x 148 mm (4.13 x 5.83 in.)	✓	✓	X	✓	✓
<b>JIS B5</b> 182 x 257 mm (7.17 x 10.1 in.)	✓	✓	X	✓	✓
<b>Oficio (Mexico)</b> 215.9 x 340.4 mm (8.5 x 13.4 in.)	✓	✓	X	X	✓
<b>Hagaki</b> 100 x 148 mm (3.94 x 5.83 in.)	X	✓	X	✓	X
<b>Statement</b> 139.7 x 215.9 mm (5.5 x 8.5 in.)	✓	✓	X	✓	✓
<b>Executive</b> 184.2 x 266.7 mm (7.25 x 10.5 in.)	✓	✓	X	✓	✓
<b>Letter</b> 215.9 x 279.4 mm (8.5 x 11 in.)	✓	✓	✓	✓	✓
<b>Legal</b> 215.9 x 355.6 mm (8.5 x 14 in.)	✓	✓	✓	X	✓

## General information

Paper size	250-sheet tray	Manual feeder	Two-sided printing	Scanner glass	Automatic document feeder
<b>Folio</b> 215.9 x 330.2 mm (8.5 x 13 in.)	✓	✓	✓	X	✓
<b>Universal</b> 98 x 148 mm (3.9 x 5.8 in.) to 216 x 356 mm (8.5 x 14 in.)	X	✓	X	✓	✓
<b>Universal</b> 105 x 148 mm (4.1 x 5.8 in.) to 216 x 356 mm (8.5 x 14 in.)	✓	✓	X	✓	✓
<b>7 3/4 Envelope (Monarch)</b> 98.4 x 190.5 mm (3.875 x 7.5 in.)	X	✓	X	✓	X
<b>9 Envelope</b> 98.4 x 225.4 mm (3.875 x 8.9 in.)	X	✓	X	✓	X
<b>10 Envelope</b> 104.8 x 241.3 mm (4.12 x 9.5 in.)	X	✓	X	✓	X
<b>DL Envelope</b> 110 x 220 mm (4.33 x 8.66 in.)	X	✓	X	✓	X
<b>C5 Envelope</b> 162 x 229 mm (6.38 x 9.01 in.)	X	✓	X	✓	X
<b>B5 Envelope</b> 176 x 250 mm (6.93 x 9.84 in.)	X	✓	X	✓	X

## General information

Paper size	250-sheet tray	Manual feeder	Two-sided printing	Scanner glass	Automatic document feeder
<b>Universal Envelope X</b> 98.4 x 162 mm (3.87 x 6.38 in.) to 176 x 250 mm (6.93 x 9.84 in.)		✓	X	✓	X

\* This paper source supports paper size only up to 216 x 297 mm (8.5 x 11.7 in.).

## Supported paper types

**Note:** Labels, envelopes, and card stock always print at reduced speed.

Paper type	250-sheet tray	Manual feeder	Two-sided printing	Automatic document feeder
Plain paper	✓	✓	✓	✓
Card stock	X	✓	X	X
Labels	X	✓	X	X
Bond	✓	✓	✓	✓
Envelope	X	✓	X	X
Letterhead	✓	✓	✓	✓
Preprinted	✓	✓	✓	✓
Colored paper	✓	✓	✓	✓
Light	✓	✓	✓	✓
Heavy	✓	✓	✓	✓
Recycled	✓	✓	✓	✓

## Supported paper weights

250-sheet tray	Manual feeder	Two-sided printing	Automatic document feeder
60–105 g/m <sup>2</sup> (16–28-lb bond)	60–200 g/m <sup>2</sup> (16–54-lb bond)	70–105 g/m <sup>2</sup> (18.7–28-lb bond)	60–105 g/m <sup>2</sup> (16–28-lb bond)

## Supported fax

Printer model	Analog fax	etherFAX <sup>1</sup>	Fax server	Fax over IP (FoIP) <sup>2</sup>
MB2236adw	✓	✓	X	✓
MB2236adwe	✓	✓	✓	✓
MB2236i	X	✓	✓	✓

<sup>1</sup> Needs a subscription. For more information, go to <https://www.etherfax.net/lexmark> or contact the place where you purchased the printer.

<sup>2</sup> Needs an installed license bundle. For more information, contact the place where you purchased the printer.

## Tools required for service

- Flat-blade screwdrivers, various sizes
- #1 Phillips screwdriver, magnetic
- #2 Phillips screwdriver, magnetic
- #2 Phillips screwdriver, magnetic short-blade
- Torx screwdriver (T20 head)
- Needle-nose pliers
- Diagonal side cutters
- Spring hook
- Feeler gauges
- Analog or digital multimeter
- 3 mm ball hex wrench
- Toner vacuum
- Flashlight

# Diagnostics and troubleshooting

## Troubleshooting precautions



### **CAUTION—SHOCK HAZARD**

When you see this symbol on the product, there is a danger from hazardous voltage in the area of the product where you are working. Unplug the product before you begin, or use caution if the product must receive power in order to perform the task.



### **CAUTION—SHOCK HAZARD**

This product uses an electronic power switch. It does not physically disconnect the input AC voltage. To avoid the risk of electrical shock, always remove the power cord from the printer when removal of the input AC voltage is required.



### **CAUTION—SHOCK HAZARD**

To avoid the risk of electrical shock while troubleshooting with covers removed or doors open, do not touch the exposed wires or circuits while the printer is connected to an electrical outlet.



### **CAUTION—SHOCK HAZARD**

To avoid the risk of electrical shock and to prevent damage to the printer, remove the power cord from the electrical outlet and disconnect all connections to any external devices before you connect or disconnect any cable, electronic board, or assembly.



### **CAUTION—HOT SURFACE**

The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.



### **CAUTION—PINCH HAZARD**

To avoid the risk of a pinch injury, use caution in areas marked with this label. Pinch injuries may occur around moving parts, such as gears, doors, trays, and covers.

### **CAUTION—MOVING PARTS**

To avoid the risk of laceration or abrasion injuries, keep hands away from moving parts in areas marked with this label. Injuries from moving parts may occur around gears and other rotating parts.

## Précautions de dépannage



### **CAUTION—SHOCK HAZARD**

Ce symbole indique un danger lié à des niveaux de tension dangereux dans la zone du produit à manipuler. Débranchez le produit avant de commencer, ou agissez avec prudence si le produit doit être alimenté pour effectuer l'opération.



### **CAUTION—SHOCK HAZARD**

Ce produit utilise un commutateur d'alimentation électronique. Il ne déconnecte pas physiquement la tension d'alimentation CA. Pour éviter tout risque d'électrocution, débranchez toujours le cordon d'alimentation de l'imprimante lorsque vous devez déconnecter la tension d'alimentation CA.



### **CAUTION—SHOCK HAZARD**

Pour éviter tout risque d'électrocution lors du dépannage de l'imprimante avec les capots retirés ou les portes ouvertes, prenez garde de ne pas toucher les fils ou circuits dénudés si l'imprimante est connectée à une prise électrique.



### **CAUTION—SHOCK HAZARD**

Pour éviter tout risque d'électrocution et éviter d'endommager l'imprimante, débranchez le cordon d'alimentation de la prise électrique et déconnectez toute connexion à tout périphérique externe avant de brancher ou débrancher des câbles ou circuits et assemblages électroniques.



### **CAUTION—HOT SURFACE**

L'intérieur de l'imprimante risque d'être brûlant. Pour réduire le risque de brûlure, laissez la surface ou le composant refroidir avant d'y toucher.

**CAUTION—PINCH HAZARD**

Pour éviter tout risque de blessure par pincement, agissez avec précaution au niveau des zones signalées par cette étiquette. Les blessures par pincement peuvent se produire autour des pièces mobiles telles que les engrenages, portes, tiroirs et capots.

**CAUTION—MOVING PARTS**

Pour éviter tout risque de coupures ou de frottements, éloignez les mains des pièces en mouvement dans les zones signalées par cette étiquette. Les pièces en mouvement autour des engrenages et autres pièces rotatives peuvent causer des blessures.

## Precauciones durante la solución de problemas

**CAUTION—SHOCK HAZARD**

Cuando vea este símbolo en el producto, existe peligro de tensiones peligrosas en el área del producto en la que está trabajando. Desconecte el producto antes de empezar o tenga cuidado si el producto debe recibir alimentación a fin de realizar la tarea.

**CAUTION—SHOCK HAZARD**

Este producto utiliza un interruptor de corriente electrónico. No desconecta físicamente la entrada de voltaje de CA. Para evitar el riesgo de descarga eléctrica, desenchufe siempre el cable de alimentación de la impresora cuando sea necesario retirar la entrada de voltaje de CA.

**CAUTION—SHOCK HAZARD**

Para evitar el riesgo de descarga eléctrica al solucionar problemas sin las cubiertas o con las puertas abiertas, no toque los cables ni los circuitos expuestos mientras la impresora está conectada a una toma de corriente.

**CAUTION—SHOCK HAZARD**

Para evitar el riesgo de descargas eléctricas y daños en la impresora, retire el cable de alimentación de la toma eléctrica y desconecte todas las conexiones a dispositivos externos antes de conectar o desconectar cualquier cable, placa electrónica o conjunto.

**CAUTION—HOT SURFACE**

El interior de la impresora podría estar caliente. Para evitar el riesgo de heridas producidas por el contacto con un componente caliente, deje que la superficie se enfríe antes de tocarlo.

**CAUTION—PINCH HAZARD**

Para evitar el riesgo de lesión por atrapamiento, preste atención en las áreas marcadas con esta etiqueta. Las lesiones por atrapamiento se pueden producir en torno a partes móviles, tales como engranajes, puertas, bandejas y cubiertas.

**CAUTION—MOVING PARTS**

Para evitar el riesgo de lesiones por laceración o abrasión, mantenga las manos lejos de las partes móviles en las zonas marcadas con esta etiqueta. Las lesiones causadas por partes móviles pueden producirse cerca de los engranajes u otras piezas giratorias.

## Vorsichtsmaßnahmen bei der Fehlerbehebung

**CAUTION—SHOCK HAZARD**

Wenn Sie dieses Symbol sehen, besteht eine Gefahr durch gefährliche Spannungen in dem Produktbereich, in dem Sie arbeiten. Trennen Sie das Produkt von seiner Stromverbindung, bevor Sie beginnen, oder gehen Sie vorsichtig vor, wenn das Produkt für die Durchführung der Aufgabe mit Strom versorgt werden muss.

**CAUTION—SHOCK HAZARD**

Dieses Produkt verwendet einen elektronischen Leistungsschalter. Er trennt die Eingangswechselspannung nicht physikalisch. Um das Risiko eines elektrischen Schlags zu vermeiden, ziehen Sie stets das Netzkabel vom Drucker ab, wenn eine Abtrennung der Eingangswechselspannung erforderlich ist.

**CAUTION—SHOCK HAZARD**

Um die Gefahr eines Stromschlags während der Fehlerbehebung bei entfernten Abdeckungen oder offenen Klappen zu vermeiden, berühren Sie die freiliegenden Drähte oder Stromkreise nicht, wenn der Drucker an eine Steckdose angeschlossen ist.



### CAUTION—SHOCK HAZARD

Um das Risiko eines elektrischen Schlags und Schäden am Drucker zu vermeiden, ziehen Sie das Netzkabel aus der Steckdose und trennen Sie alle Verbindungen zu jeglichen externen Geräten, bevor Sie Kabel, Elektronikplatinen oder Baugruppen einstecken oder abziehen.



### CAUTION—HOT SURFACE

Das Innere des Druckers kann sehr heiß sein. Vermeiden Sie Verletzungen, indem Sie heiße Komponenten stets abkühlen lassen, bevor Sie ihre Oberfläche berühren.



### CAUTION—PINCH HAZARD

Um das Risiko einer Quetschung zu vermeiden, gehen Sie in Bereichen, die mit diesem Etikett gekennzeichnet sind, mit Vorsicht vor. Quetschungen können im Bereich von beweglichen Komponenten auftreten, wie z. B. Zahnrädern, Klappen, Fächern und Abdeckungen.

### CAUTION—MOVING PARTS

Um das Risiko von Verletzungen und Abschürfungen zu vermeiden, halten Sie Ihre Hände von sich bewegenden Teilen in Bereichen fern, die mit diesem Hinweis gekennzeichnet sind. Verletzungen durch sich bewegende Teile treten unter Umständen im Bereich von Zahnrädern und anderen sich drehenden Teilen auf.

## Troubleshooting overview

### Performing the initial troubleshooting check

- With the power cord unplugged from the electrical outlet, check if the cord is free from breakage, short circuits, disconnected wires, or incorrect connections.
- Make sure that the printer is properly grounded.
- Make sure that the power supply line voltage is within 10% of the rated line voltage.
- Make sure that the printer is securely installed on a level surface in a well-ventilated area.
- Make sure that the temperature and relative humidity are within the specifications. See [Temperature information on page 424](#).
- Avoid locations that:
  - Generate ammonia gas
  - Are exposed to direct sunlight
  - Are near open flames
  - Are dusty
- Make sure that the recommended paper for this printer is used.
- Do a test print with paper from a newly opened package, and then check the result.

# Securing the printer

## Resetting the printer without admin credentials

**Note:**

- Resetting the printer or replacing the controller board deletes all security settings.
- Before changing the security settings, ask permission from your administrator.

Perform an Out of Service Erase to reset the printer to factory defaults without using admin credentials. For more information, see [Data security notice on page 37](#).

**Warning—Potential Damage**

This method makes the device vulnerable to hacking because it allows the creation of an admin account afterwards. By default, newer firmware versions restrict Out of Service Erase to admin users only, making the printer more secure and remembering the admin password more important.

## Data security notice

### Identifying printer memory

- **Volatile memory**—The printer uses standard random access memory (RAM) to buffer user data temporarily during simple print and copy jobs.
- **Nonvolatile memory**—The printer may use two forms of nonvolatile memory: EEPROM and NAND (flash memory). Both types are used to store the operating system, printer settings, network information, scanner and bookmark settings, and embedded solutions.
- **Hard disk memory**—Some printers have a hard disk drive installed. The hard disk is designed for printer-specific functionality and cannot be used for long-term storage of data that is not print-related. The hard disk does not let users extract information, create folders, create disk or network file shares, or transfer FTP information directly from a client device. The hard disk can retain buffered user data from complex print jobs, form data, and font data.

The following parts can store memory:

- Printer control panel
- User interface controller card (UICC)
- Controller board
- Optional hard disks

**Note:** The printer control panel and controller board contain NVRAM.

# Erasing printer memory

To erase volatile memory, turn off the printer.

To erase nonvolatile memory, do the following:

1. From the control panel, navigate to **Settings > Device > Maintenance > Out of Service Erase > Sanitize all information on nonvolatile memory**.
2. Select **Sanitize all information on nonvolatile memory**, and then select **ERASE**.
3. Follow the instructions on the screen.

To erase hard disk memory, do the following:

1. From the control panel, navigate to **Settings > Device > Maintenance > Out of Service Erase > Sanitize all information on hard disk**.
2. Select **Sanitize all information on hard disk**, and then select **ERASE**.
3. Follow the instructions on the screen.

**Note:** This process can take from several minutes to more than an hour, making the printer unavailable for other tasks.

If a hard disk is replaced, then do the following:

1. Remove the hard disk, and then return it to the customer.
2. Request the customer to sign the *Customer Retention* form.

**Note:** You can get printed copies of the form from your Lexmark partner manager.

3. Take a photo of the signed form, and then upload it to the Service Request debrief tool.
4. Fax or e-mail the signed form to the number or e-mail address shown at the bottom of the form.

## Fixing print quality issues

### Initial print quality check

Before troubleshooting print problems, perform the following:

- Make sure that the printer is located in an area that follows the recommended operating environment and power requirement specifications.
- Check the status of supplies. Replace supplies that are low or empty.
- Load 20-lb (75-80 g/m<sup>2</sup>) plain letter or A4 paper. Make sure that the paper guides are properly set and locked. From the control panel, set the paper size and type to match the paper loaded in the tray.
- From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.
- Print and keep the Menu Settings Page. The original page is used to restore the custom settings if necessary. From the control panel, navigate to **Settings > Reports > Menu Settings Page**, and then press **OK**.

- On the Menu Settings page, check if the print resolution is set to 600 dpi and the toner darkness is set to Normal.
- Check the toner cartridges for damage, and replace if necessary.
- Make sure that the correct print driver is used to prevent print problems. If the wrong print driver is installed, then incorrect characters could print and the copy may not fit the page correctly.

## Gray or solid background check



1. Perform the following tests:
  - a. Make sure that the toner cartridge is supported.
  - b. Make sure that the toner cartridge and imaging unit are not empty.
  - c. Check if the toner cartridge is new.

Is the toner cartridge new?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 3.

2. Make sure to remove the packing material on the toner cartridge and imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:
  - a. Clear the paper path of debris and contamination.
  - b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Make sure that the toner cartridge is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the developer roller surface is free of damage.
- d. Make sure that the toner HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Replace the toner cartridge.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:

- a. Make sure that the imaging unit is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the photoconductor roller surface is free of damage.
- d. Make sure that the imaging unit HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Replace the imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Perform the following tests:

- a. Check the HVPS toner contact spring for proper installation and damage.
- b. Check the toner smart chip contact for proper installation and damage.
- c. Check the toner contact spring for corrosion and contamination.

Are the HVPS toner contact spring and toner smart chip contact properly installed and free of damage and contamination?

- **Yes:**  
Go to step 10.
- **No:**  
Go to the next step.

9. Perform the following tests:

- a. Make sure that the HVPS toner contact spring is in proper contact with the toner cartridge.
- b. Make sure that the HVPS toner contact spring is in proper contact with the HVPS.
- c. Reseat the smart chip contact cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

10. Perform the following tests:

- a. Check the imaging unit contact spring for damage and contamination.
- b. Make sure that the imaging unit contact spring is in proper contact with the HVPS.

Is the imaging unit contact spring properly installed and free of damage and contamination?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

11. Perform the following tests:

- a. Make sure that the transfer roller is properly installed and free of damage and contamination.
- b. Make sure that the HVPS contact spring is properly connected to the transfer roller.
- c. Make sure that the transfer roller spring is properly installed.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Reseat the transfer roller.
- b. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

13. Replace the transfer roller. See [Transfer roller removal on page 344](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

14. Adjust the toner darkness.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

15. Perform the following tests:

- a. Check the HVPS characterization.
- b. Reseat the HVPS cables.
- c. Check the HVPS cables for proper installation and damage.
- d. Check the HVPS spring contact for proper connection to the board.

Is the HVPS properly installed and free of damage?

- **Yes:**  
Go to step 17.
- **No:**  
Go to the next step.

16. Replace the HVPS. See [HVPS removal on page 327](#).

**Note:** Make sure to perform the HVPS characterization when replacing the HVPS.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

17. Perform the following tests:

- a. Reseat all the cables connected to the LVPS.
- b. Check the cables for proper connection and damage.
- c. Check the fuse for continuity.
- d. Check the electronic components on the LVPS for damage.
- e. Check the LVPS for proper installation and damage.

Is the LVPS properly installed and free of damage?

- **Yes:**  
Go to step 20.
- **No:**  
Go to the next step.

18. Perform the following tests:

- a. Make sure that the LVPS is compatible with the fuser and the printer.
- b. Make sure that the fuser connector has voltage.
- c. Make sure that the correct power input voltage is used.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

19. Replace the LVPS. See [LVPS removal on page 326](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

20. Perform the following tests:

- a. Check the controller board for proper installation and damage.
- b. Reseat all the cables on the controller board.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

21. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Solid color or black image check



1. Perform the following tests:
  - a. Make sure that the toner cartridge is supported.
  - b. Make sure that the toner cartridge and imaging unit are not empty.
  - c. Check if the toner cartridge is new.

Is the toner cartridge new?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 3.

2. Make sure to remove the packing material on the toner cartridge and imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:
  - a. Clear the paper path of debris and contamination.
  - b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.
  - d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Make sure that the imaging unit is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the photoconductor roller surface is free of damage.
- d. Make sure that the imaging unit HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Replace the imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:

- a. Check the imaging unit contact spring for damage and contamination.
- b. Make sure that the imaging unit contact spring is in proper contact with the HVPS.

Is the imaging unit contact spring properly installed and free of damage and contamination?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Make sure that the toner cartridge is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the developer roller surface is free of damage.
- d. Make sure that the toner HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Replace the toner cartridge.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**

The problem is solved.

9. Perform the following tests:

- a. Check the HVPS toner contact spring for proper installation and damage.
- b. Check the toner smart chip contact for proper installation and damage.
- c. Check the toner contact spring for corrosion and contamination.

Are the HVPS toner contact spring and toner smart chip contact properly installed and free of damage and contamination?

- **Yes:**

Go to step 11.

- **No:**

Go to the next step.

10. Perform the following tests:

- a. Make sure that the HVPS toner contact spring is in proper contact with the toner cartridge.
- b. Make sure that the HVPS toner contact spring is in proper contact with the HVPS.
- c. Reseat the smart chip contact cable.

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

11. Perform the following tests:

- a. Check the HVPS characterization.
- b. Reseat the HVPS cables.
- c. Check the HVPS cables for proper installation and damage.
- d. Check the HVPS spring contact for proper connection to the board.

Is the HVPS properly installed and free of damage?

- **Yes:**

Contact the next level of support.

- **No:**

Go to the next step.

12. Replace the HVPS. See [HVPS removal on page 327](#).

**Note:** Make sure to perform the HVPS characterization when replacing the HVPS.

Does the problem remain?


- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

## Blank or white pages check

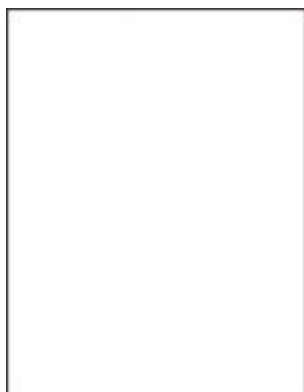

1. Perform the following tests:

- a. Make sure that the toner cartridge is supported.
- b. Make sure that the toner cartridge and imaging unit are not empty.
- c. Check if the toner cartridge is new.

Is the toner cartridge new?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 3.

2. Make sure to remove the packing material on the toner cartridge and imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Clear the paper path of debris and contamination.
- b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Make sure that the imaging unit is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the photoconductor roller surface is free of damage.
- d. Make sure that the imaging unit HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Replace the imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:

- a. Check the imaging unit contact spring for damage and contamination.
- b. Make sure that the imaging unit contact spring is in proper contact with the HVPS.

Is the imaging unit contact spring properly installed and free of damage and contamination?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Make sure that the transfer roller is properly installed and free of damage and contamination.
- b. Make sure that the HVPS contact spring is properly connected to the transfer roller.
- c. Make sure that the transfer roller spring is properly installed.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Perform the following tests:

- a. Reseat the transfer roller.
- b. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

9. Replace the transfer roller. See [Transfer roller removal on page 344](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

10. Perform the following tests:

- Make sure that the toner cartridge is properly installed and free of damage.
- Make sure that the smart chip contacts are free of corrosion and contamination.
- Make sure that the developer roller surface is free of damage.
- Make sure that the toner HVPS contacts are free of corrosion and contamination.
- Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

11. Replace the toner cartridge.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

12. Perform the following tests:

- Check the HVPS toner contact spring for proper installation and damage.
- Check the toner smart chip contact for proper installation and damage.
- Check the toner contact spring for corrosion and contamination.

Are the HVPS toner contact spring and toner smart chip contact properly installed and free of damage and contamination?

- **Yes:**

Go to step 14.

- **No:**

Go to the next step.

13. Perform the following tests:

- Make sure that the HVPS toner contact spring is in proper contact with the toner cartridge.
- Make sure that the HVPS toner contact spring is in proper contact with the HVPS.
- Reseat the smart chip contact cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

14. Perform the following tests:

- a. Clean the printhead lens.
- b. Reseat the two printhead cables at both ends.
- c. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

15. Perform the following tests:

- a. Make sure that the printhead cables are properly connected.
- b. Check the printhead for proper installation and damage.

Is the printhead properly installed and free of damage?

- **Yes:**  
Go to step 17.
- **No:**  
Go to the next step.

16. Replace the printhead. See [.Printhead removal on page 363](#)

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

17. Perform the following tests:

- a. Reseat the HVPS cables.
- b. Check the cables for damage.

Are the cables free of damage?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 19.

18. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

19. Perform the following tests:

- a. Check the HVPS characterization.
- b. Reseat the HVPS cables.
- c. Check the HVPS cables for proper installation and damage.
- d. Check the HVPS spring contact for proper connection to the board.

Is the HVPS properly installed and free of damage?

- **Yes:**  
Go to step 21.
- **No:**  
Go to the next step.

20. Replace the HVPS. See [HVPS removal on page 327](#).

**Note:** Make sure to perform the HVPS characterization when replacing the HVPS.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

21. Perform the following tests:

- a. Check the controller board for proper installation and damage.
- b. Reseat all the cables on the controller board.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

22. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Dark print check



1. Perform the following tests:

- a. Make sure that the toner cartridge is supported.
- b. Make sure that the toner cartridge and imaging unit are not empty.
- c. Check if the toner cartridge is new.

Is the toner cartridge new?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 3.

2. Make sure to remove the packing material on the toner cartridge and imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Clear the paper path of debris and contamination.
- b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Make sure that the paper type is supported.
- b. Make sure that the paper type and size settings match the paper type and size set on the tray.
- c. Make sure that the paper has no damage or defects.
- d. Make sure that the paper guides are properly set.
- e. Make sure that the paper size setting in the duplex unit is properly set.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Adjust the toner darkness.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:

- a. Make sure that the toner cartridge is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the developer roller surface is free of damage.
- d. Make sure that the toner HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Replace the toner cartridge.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Perform the following tests:

- a. Make sure that the imaging unit is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the photoconductor roller surface is free of damage.
- d. Make sure that the imaging unit HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

9. Replace the imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

10. Perform the following tests:

- a. Check the HVPS toner contact spring for proper installation and damage.
- b. Check the toner smart chip contact for proper installation and damage.
- c. Check the toner contact spring for corrosion and contamination.

Are the HVPS toner contact spring and toner smart chip contact properly installed and free of damage and contamination?

- **Yes:**  
Go to step 12.
- **No:**  
Go to the next step.

11. Perform the following tests:

- a. Make sure that the HVPS toner contact spring is in proper contact with the toner cartridge.
- b. Make sure that the HVPS toner contact spring is in proper contact with the HVPS.
- c. Reseat the smart chip contact cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Check the imaging unit contact spring for damage and contamination.
- b. Make sure that the imaging unit contact spring is in proper contact with the HVPS.

Is the imaging unit contact spring properly installed and free of damage and contamination?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

13. Perform the following tests:

- a. Make sure that the transfer roller is properly installed and free of damage and contamination.
- b. Make sure that the HVPS contact spring is properly connected to the transfer roller.
- c. Make sure that the transfer roller spring is properly installed.

- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

14. Perform the following tests:

- a. Reseat the transfer roller.
- b. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

15. Replace the transfer roller. See [Transfer roller removal on page 344](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

16. Perform the following tests:

- a. Reseat the HVPS cables.
- b. Check the cables for damage.

Are the cables free of damage?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 18.

17. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

18. Perform the following tests:

- a. Check the HVPS characterization.
- b. Reseat the HVPS cables.
- c. Check the HVPS cables for proper installation and damage.
- d. Check the HVPS spring contact for proper connection to the board.

Is the HVPS properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

19. Replace the HVPS. See [HVPS removal on page 327](#).

**Note:** Make sure to perform the HVPS characterization when replacing the HVPS.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Light print check



1. Perform the following tests:
  - a. Make sure that the toner cartridge is supported.
  - b. Make sure that the toner cartridge and imaging unit are not empty.
  - c. Check if the toner cartridge is new.

Is the toner cartridge new?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 3.

2. Make sure to remove the packing material on the toner cartridge and imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Clear the paper path of debris and contamination.
- b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Make sure that the paper type is supported.
- b. Make sure that the paper type and size settings match the paper type and size set on the tray.
- c. Make sure that the paper has no damage or defects.
- d. Make sure that the paper guides are properly set.
- e. Make sure that the paper size setting in the duplex unit is properly set.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Adjust the toner darkness.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:

- a. Make sure that the toner cartridge is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the developer roller surface is free of damage.
- d. Make sure that the toner HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**

The problem is solved.

7. Replace the toner cartridge.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Perform the following tests:

- a. Make sure that the imaging unit is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the photoconductor roller surface is free of damage.
- d. Make sure that the imaging unit HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

9. Replace the imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

10. Perform the following tests:

- a. Check the HVPS toner contact spring for proper installation and damage.
- b. Check the toner smart chip contact for proper installation and damage.
- c. Check the toner contact spring for corrosion and contamination.

Are the HVPS toner contact spring and toner smart chip contact properly installed and free of damage and contamination?

- **Yes:**  
Go to step 12.
- **No:**  
Go to the next step.

11. Perform the following tests:

- a. Make sure that the HVPS toner contact spring is in proper contact with the toner cartridge.
- b. Make sure that the HVPS toner contact spring is in proper contact with the HVPS.
- c. Reseat the smart chip contact cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Check the imaging unit contact spring for damage and contamination.
- b. Make sure that the imaging unit contact spring is in proper contact with the HVPS.

Is the imaging unit contact spring properly installed and free of damage and contamination?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

13. Perform the following tests:

- a. Make sure that the transfer roller is properly installed and free of damage and contamination.
- b. Make sure that the HVPS contact spring is properly connected to the transfer roller.
- c. Make sure that the transfer roller spring is properly installed.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

14. Perform the following tests:

- a. Reseat the transfer roller.
- b. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

15. Replace the transfer roller. See [Transfer roller removal on page 344](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

16. Perform the following tests:

- a. Clean the printhead lens.
- b. Reseat the two printhead cables at both ends.
- c. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

17. Perform the following tests:

- a. Make sure that the printhead cables are properly connected.
- b. Check the printhead for proper installation and damage.

Is the printhead properly installed and free of damage?

- **Yes:**  
Go to step 19.
- **No:**  
Go to the next step.

18. Replace the printhead. See [.Printhead removal on page 363](#)

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

19. Perform the following tests:

- a. Reseat the HVPS cables.
- b. Check the cables for damage.

Are the cables free of damage?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 21.

20. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

21. Perform the following tests:

- a. Check the HVPS characterization.
- b. Reseat the HVPS cables.
- c. Check the HVPS cables for proper installation and damage.
- d. Check the HVPS spring contact for proper connection to the board.

Is the HVPS properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**

Go to the next step.

22. Replace the HVPS. See [HVPS removal on page 327](#).

**Note:** Make sure to perform the HVPS characterization when replacing the HVPS.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Paper curl check



1. Perform the following tests:
  - a. Clear the paper path of debris and contamination.
  - b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.
  - d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
2. Perform the following tests:
    - a. Make sure that the paper type is supported.
    - b. Make sure that the paper type and size settings match the paper type and size set on the tray.

- c. Make sure that the paper has no damage or defects.
- d. Make sure that the paper guides are properly set.
- e. Make sure that the paper size setting in the duplex unit is properly set.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Check the fuser cables for proper connection and damage.
- b. Check the fuser access door for damage.
- c. Check if the fuser gears are in proper contact with the drive gears.
- d. Make sure that the fuser is compatible with the LVPS.
- e. Check the fuser for proper installation and damage.

Is the fuser properly installed and free of damage?

- **Yes:**  
Go to step 6.
- **No:**  
Go to the next step.

4. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Motor tests**

- b. Select **Motor (transport)**.
- c. Open the rear door, and then check if the fuser exit rollers turn.
- d. Open the fuser access door, and then check if the hot rollers turn.

Are the rollers properly working?

- **Yes:**  
Go to step 6.
- **No:**  
Go to the next step.

5. Replace the fuser. See [Fuser removal on page 348](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:

- a. Reseat all the cables connected to the LVPS.
- b. Check the cables for proper connection and damage.
- c. Check the fuse for continuity.
- d. Check the electronic components on the LVPS for damage.

- e. Check the LVPS for proper installation and damage.

Is the LVPS properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

7. Perform the following tests:

- a. Make sure that the LVPS is compatible with the fuser and the printer.
- b. Make sure that the fuser connector has voltage.
- c. Make sure that the correct power input voltage is used.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Replace the LVPS. See [LVPS removal on page 326](#).

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Folded or wrinkled paper check



1. Perform the following tests:

- a. Clear the paper path of debris and contamination.
- b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.

- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Make sure that the paper type is supported.
- b. Make sure that the paper type and size settings match the paper type and size set on the tray.
- c. Make sure that the paper has no damage or defects.
- d. Make sure that the paper guides are properly set.
- e. Make sure that the paper size setting in the duplex unit is properly set.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Check the fuser cables for proper connection and damage.
- b. Check the fuser access door for damage.
- c. Check if the fuser gears are in proper contact with the drive gears.
- d. Make sure that the fuser is compatible with the LVPS.
- e. Check the fuser for proper installation and damage.

Is the fuser properly installed and free of damage?

- **Yes:**  
Go to step 6.
- **No:**  
Go to the next step.

4. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:  
**Printer diagnostics & adjustments > Motor tests**
- b. Select **Motor (transport)**.
- c. Open the rear door, and then check if the fuser exit rollers turn.
- d. Open the fuser access door, and then check if the hot rollers turn.

Are the rollers properly working?

- **Yes:**  
Go to step 6.
- **No:**  
Go to the next step.

5. Replace the fuser. See [Fuser removal on page 348](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:

- a. Reseat all the cables connected to the LVPS.
- b. Check the cables for proper connection and damage.
- c. Check the fuse for continuity.
- d. Check the electronic components on the LVPS for damage.
- e. Check the LVPS for proper installation and damage.

Is the LVPS properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

7. Perform the following tests:

- a. Make sure that the LVPS is compatible with the fuser and the printer.
- b. Make sure that the fuser connector has voltage.
- c. Make sure that the correct power input voltage is used.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Replace the LVPS. See [LVPS removal on page 326](#).

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Repeating defects check



1. Perform the following tests:
  - a. Make sure that the toner cartridge is supported.
  - b. Make sure that the toner cartridge and imaging unit are not empty.
  - c. Check if the toner cartridge is new.

Is the toner cartridge new?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 3.

2. Make sure to remove the packing material on the toner cartridge and imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:
  - a. Clear the paper path of debris and contamination.
  - b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.
  - d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Measure the distance between the horizontal defects.

Is the distance equal to 75.4 mm or 34.7 mm?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 6.

5. Replace the imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:

- a. Make sure that the imaging unit is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the photoconductor roller surface is free of damage.
- d. Make sure that the imaging unit HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Replace the imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Measure the distance between the horizontal defects.

Is the distance equal to 44.6 mm, 28.3 mm, or 39.3 mm?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 10.

9. Replace the toner cartridge.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**

The problem is solved.

10. Perform the following tests:

- a. Make sure that the toner cartridge is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the developer roller surface is free of damage.
- d. Make sure that the toner HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

11. Replace the toner cartridge.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

12. Measure the distance between the horizontal defects.

Is the distance equal to 44 mm?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 14.

13. Replace the transfer roller. See [Transfer roller removal on page 344](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

14. Perform the following tests:

- a. Make sure that the transfer roller is properly installed and free of damage and contamination.
- b. Make sure that the HVPS contact spring is properly connected to the transfer roller.
- c. Make sure that the transfer roller spring is properly installed.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

15. Perform the following tests:

- a. Reseat the transfer roller.
- b. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

16. Replace the transfer roller. See [Transfer roller removal on page 344](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

17. Measure the distance between the horizontal defects.

Is the distance equal to 78.1 mm?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 19.

18. Replace the fuser. See [Fuser removal on page 348](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

19. Perform the following tests:

- a. Check the fuser cables for proper connection and damage.
- b. Check the fuser access door for damage.
- c. Check if the fuser gears are in proper contact with the drive gears.
- d. Make sure that the fuser is compatible with the LVPS.
- e. Check the fuser for proper installation and damage.

Is the fuser properly installed and free of damage?

- **Yes:**  
Go to step 22.
- **No:**  
Go to the next step.

20. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:  
**Printer diagnostics & adjustments > Motor tests**

- b. Select **Motor (transport)**.
- c. Open the rear door, and then check if the fuser exit rollers turn.
- d. Open the fuser access door, and then check if the hot rollers turn.

Are the rollers properly working?

- **Yes:**  
Go to step 22.
- **No:**  
Go to the next step.

21. Replace the fuser. See [Fuser removal on page 348](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

22. Perform the following tests:

- a. Clean the printhead lens.
- b. Reseat the two printhead cables at both ends.
- c. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

23. Perform the following tests:

- a. Make sure that the printhead cables are properly connected.
- b. Check the printhead for proper installation and damage.

Is the printhead properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

24. Replace the printhead. See [.Printhead removal on page 363](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Skewed print check



1. Perform the following tests:
  - a. Clear the paper path of debris and contamination.
  - b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.
  - d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:
  - a. Make sure that the paper type is supported.
  - b. Make sure that the paper type and size settings match the paper type and size set on the tray.
  - c. Make sure that the paper has no damage or defects.
  - d. Make sure that the paper guides are properly set.
  - e. Make sure that the paper size setting in the duplex unit is properly set.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:
  - a. Check the tray insert for proper installation and damage.
  - b. Make sure that the separator roller is free of dust and contamination.
  - c. Check the lift plate for proper operation.
  - d. Check the paper guides for proper operation.

Is the tray insert properly installed and free of damage?

- **Yes:**  
Go to step 5.
- **No:**  
Go to the next step.

4. Replace the tray insert.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Perform the following tests:

- a. Clear the pick rollers of contamination.
- b. Reseat the pick rollers.
- c. Perform a feed test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:

- a. Check the pick rollers for proper installation and damage.
- b. Check the shaft of the pick rollers for damage.

Are the pick rollers properly installed and free of damage?

- **Yes:**  
Go to step 8.
- **No:**  
Go to the next step.

7. Replace the pick rollers. See [Pick rollers removal on page 371](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Make sure that the roller is free of dirt and contamination.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

9. Perform the following tests:

- a. Clean the printhead lens.
- b. Reseat the two printhead cables at both ends.
- c. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

10. Perform the following tests:

- a. Make sure that the printhead cables are properly connected.
- b. Check the printhead for proper installation and damage.

Is the printhead properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

11. Replace the printhead. See [.Printhead removal on page 363](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Streaked vertical lines appear on prints check



1. Perform the following tests:

- a. Make sure that the toner cartridge is supported.
- b. Make sure that the toner cartridge and imaging unit are not empty.
- c. Check if the toner cartridge is new.

Is the toner cartridge new?

- **Yes:**  
Go to the next step.
  - **No:**  
Go to step 3.
2. Make sure to remove the packing material on the toner cartridge and imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
3. Perform the following tests:
- a. Clear the paper path of debris and contamination.
  - b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
4. Perform the following tests:
- a. Clean the printhead lens.
  - b. Reseat the two printhead cables at both ends.
  - c. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
5. Perform the following tests:
- a. Make sure that the printhead cables are properly connected.
  - b. Check the printhead for proper installation and damage.

Is the printhead properly installed and free of damage?

- **Yes:**  
Go to step 7.
  - **No:**  
Go to the next step.
6. Replace the printhead. See [.Printhead removal on page 363](#)

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Make sure that the imaging unit is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the photoconductor roller surface is free of damage.
- d. Make sure that the imaging unit HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Replace the imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

9. Perform the following tests:

- a. Make sure that the toner cartridge is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the developer roller surface is free of damage.
- d. Make sure that the toner HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

10. Replace the toner cartridge.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

11. Perform the following tests:

- a. Check the HVPS toner contact spring for proper installation and damage.
- b. Check the toner smart chip contact for proper installation and damage.
- c. Check the toner contact spring for corrosion and contamination.

Are the HVPS toner contact spring and toner smart chip contact properly installed and free of damage and contamination?

- **Yes:**  
Go to step 13.
- **No:**  
Go to the next step.

12. Perform the following tests:

- a. Make sure that the HVPS toner contact spring is in proper contact with the toner cartridge.
- b. Make sure that the HVPS toner contact spring is in proper contact with the HVPS.
- c. Reseat the smart chip contact cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

13. Perform the following tests:

- a. Check the imaging unit contact spring for damage and contamination.
- b. Make sure that the imaging unit contact spring is in proper contact with the HVPS.

Is the imaging unit contact spring properly installed and free of damage and contamination?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

14. Perform the following tests:

- a. Make sure that the transfer roller is properly installed and free of damage and contamination.
- b. Make sure that the HVPS contact spring is properly connected to the transfer roller.
- c. Make sure that the transfer roller spring is properly installed.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

15. Perform the following tests:

- a. Reseat the transfer roller.
- b. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**  
The problem is solved.

16. Replace the transfer roller. See [Transfer roller removal on page 344](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

17. Perform the following tests:

- a. Reseat the HVPS cables.
- b. Check the cables for damage.

Are the cables free of damage?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 19.

18. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

19. Perform the following tests:

- a. Check the HVPS characterization.
- b. Reseat the HVPS cables.
- c. Check the HVPS cables for proper installation and damage.
- d. Check the HVPS spring contact for proper connection to the board.

Is the HVPS properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

20. Replace the HVPS. See [HVPS removal on page 327](#).

**Note:** Make sure to perform the HVPS characterization when replacing the HVPS.

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

## Horizontal white lines check



1. Perform the following tests:

- a. Make sure that the toner cartridge is supported.
- b. Make sure that the toner cartridge and imaging unit are not empty.
- c. Check if the toner cartridge is new.

Is the toner cartridge new?

- **Yes:**

Go to the next step.

- **No:**

Go to step 3.

2. Make sure to remove the packing material on the toner cartridge and imaging unit.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

3. Perform the following tests:

- a. Clear the paper path of debris and contamination.
- b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.

- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

4. Perform the following tests:

- Make sure that the imaging unit is properly installed and free of damage.
- Make sure that the smart chip contacts are free of corrosion and contamination.
- Make sure that the photoconductor roller surface is free of damage.
- Make sure that the imaging unit HVPS contacts are free of corrosion and contamination.
- Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

5. Replace the imaging unit.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

6. Perform the following tests:

- Make sure that the toner cartridge is properly installed and free of damage.
- Make sure that the smart chip contacts are free of corrosion and contamination.
- Make sure that the developer roller surface is free of damage.
- Make sure that the toner HVPS contacts are free of corrosion and contamination.
- Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

7. Replace the toner cartridge.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

8. Perform the following tests:

- Check the HVPS toner contact spring for proper installation and damage.
- Check the toner smart chip contact for proper installation and damage.
- Check the toner contact spring for corrosion and contamination.

Are the HVPS toner contact spring and toner smart chip contact properly installed and free of damage and contamination?

- **Yes:**  
Go to step 10.
- **No:**  
Go to the next step.

9. Perform the following tests:

- a. Make sure that the HVPS toner contact spring is in proper contact with the toner cartridge.
- b. Make sure that the HVPS toner contact spring is in proper contact with the HVPS.
- c. Reseat the smart chip contact cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

10. Perform the following tests:

- a. Check the imaging unit contact spring for damage and contamination.
- b. Make sure that the imaging unit contact spring is in proper contact with the HVPS.

Is the imaging unit contact spring properly installed and free of damage and contamination?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

11. Perform the following tests:

- a. Make sure that the transfer roller is properly installed and free of damage and contamination.
- b. Make sure that the HVPS contact spring is properly connected to the transfer roller.
- c. Make sure that the transfer roller spring is properly installed.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Reseat the transfer roller.
- b. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**

The problem is solved.

13. Replace the transfer roller. See [Transfer roller removal on page 344](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

14. Perform the following tests:

- a. Clean the printhead lens.
- b. Reseat the two printhead cables at both ends.
- c. Perform a print test.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

15. Perform the following tests:

- a. Make sure that the printhead cables are properly connected.
- b. Check the printhead for proper installation and damage.

Is the printhead properly installed and free of damage?

- **Yes:**

Go to step 17.

- **No:**

Go to the next step.

16. Replace the printhead. See [.Printhead removal on page 363](#)

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

17. Perform the following tests:

- a. Reseat the HVPS cables.
- b. Check the cables for damage.

Are the cables free of damage?

- **Yes:**

Go to the next step.

- **No:**

Go to step 19.

18. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

19. Perform the following tests:

- a. Check the HVPS characterization.
- b. Reseat the HVPS cables.
- c. Check the HVPS cables for proper installation and damage.
- d. Check the HVPS spring contact for proper connection to the board.

Is the HVPS properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

20. Replace the HVPS. See [HVPS removal on page 327](#).

**Note:** Make sure to perform the HVPS characterization when replacing the HVPS.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Vertical white lines check



1. Perform the following tests:

- a. Make sure that the toner cartridge is supported.
- b. Make sure that the toner cartridge and imaging unit are not empty.
- c. Check if the toner cartridge is new.

Is the toner cartridge new?

- **Yes:**  
Go to the next step.
  - **No:**  
Go to step 3.
2. Make sure to remove the packing material on the toner cartridge and imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
3. Perform the following tests:
- a. Clear the paper path of debris and contamination.
  - b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
4. Perform the following tests:
- a. Clean the printhead lens.
  - b. Reseat the two printhead cables at both ends.
  - c. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
5. Perform the following tests:
- a. Make sure that the printhead cables are properly connected.
  - b. Check the printhead for proper installation and damage.

Is the printhead properly installed and free of damage?

- **Yes:**  
Go to step 7.
  - **No:**  
Go to the next step.
6. Replace the printhead. See [.Printhead removal on page 363](#)

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Make sure that the imaging unit is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the photoconductor roller surface is free of damage.
- d. Make sure that the imaging unit HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Replace the imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

9. Perform the following tests:

- a. Make sure that the toner cartridge is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the developer roller surface is free of damage.
- d. Make sure that the toner HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

10. Replace the toner cartridge.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

11. Perform the following tests:

- a. Check the HVPS toner contact spring for proper installation and damage.
- b. Check the toner smart chip contact for proper installation and damage.
- c. Check the toner contact spring for corrosion and contamination.

Are the HVPS toner contact spring and toner smart chip contact properly installed and free of damage and contamination?

- **Yes:**  
Go to step 13.
- **No:**  
Go to the next step.

12. Perform the following tests:

- a. Make sure that the HVPS toner contact spring is in proper contact with the toner cartridge.
- b. Make sure that the HVPS toner contact spring is in proper contact with the HVPS.
- c. Reseat the smart chip contact cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

13. Perform the following tests:

- a. Check the imaging unit contact spring for damage and contamination.
- b. Make sure that the imaging unit contact spring is in proper contact with the HVPS.

Is the imaging unit contact spring properly installed and free of damage and contamination?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

14. Perform the following tests:

- a. Make sure that the transfer roller is properly installed and free of damage and contamination.
- b. Make sure that the HVPS contact spring is properly connected to the transfer roller.
- c. Make sure that the transfer roller spring is properly installed.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

15. Perform the following tests:

- a. Reseat the transfer roller.
- b. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**  
The problem is solved.

16. Replace the transfer roller. See [Transfer roller removal on page 344](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

17. Perform the following tests:

- a. Reseat the HVPS cables.
- b. Check the cables for damage.

Are the cables free of damage?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 19.

18. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

19. Perform the following tests:

- a. Check the HVPS characterization.
- b. Reseat the HVPS cables.
- c. Check the HVPS cables for proper installation and damage.
- d. Check the HVPS spring contact for proper connection to the board.

Is the HVPS properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

20. Replace the HVPS. See [HVPS removal on page 327](#).

**Note:** Make sure to perform the HVPS characterization when replacing the HVPS.

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

## Vertical colored lines or banding check



1. Perform the following tests:

- a. Make sure that the toner cartridge is supported.
- b. Make sure that the toner cartridge and imaging unit are not empty.
- c. Check if the toner cartridge is new.

Is the toner cartridge new?

- **Yes:**

Go to the next step.

- **No:**

Go to step 3.

2. Make sure to remove the packing material on the toner cartridge and imaging unit.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

3. Perform the following tests:

- a. Clear the paper path of debris and contamination.
- b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.

- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

4. Perform the following tests:

- a. Clean the printhead lens.
- b. Reseat the two printhead cables at both ends.
- c. Perform a print test.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

5. Perform the following tests:

- a. Make sure that the printhead cables are properly connected.
- b. Check the printhead for proper installation and damage.

Is the printhead properly installed and free of damage?

- **Yes:**

Go to step 7.

- **No:**

Go to the next step.

6. Replace the printhead. See [.Printhead removal on page 363](#)

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

7. Perform the following tests:

- a. Make sure that the imaging unit is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the photoconductor roller surface is free of damage.
- d. Make sure that the imaging unit HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

8. Replace the imaging unit.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

9. Perform the following tests:

- Make sure that the toner cartridge is properly installed and free of damage.
- Make sure that the smart chip contacts are free of corrosion and contamination.
- Make sure that the developer roller surface is free of damage.
- Make sure that the toner HVPS contacts are free of corrosion and contamination.
- Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

10. Replace the toner cartridge.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

11. Perform the following tests:

- Check the HVPS toner contact spring for proper installation and damage.
- Check the toner smart chip contact for proper installation and damage.
- Check the toner contact spring for corrosion and contamination.

Are the HVPS toner contact spring and toner smart chip contact properly installed and free of damage and contamination?

- **Yes:**

Go to step 13.

- **No:**

Go to the next step.

12. Perform the following tests:

- Make sure that the HVPS toner contact spring is in proper contact with the toner cartridge.
- Make sure that the HVPS toner contact spring is in proper contact with the HVPS.
- Reseat the smart chip contact cable.

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

13. Perform the following tests:

- Check the imaging unit contact spring for damage and contamination.
- Make sure that the imaging unit contact spring is in proper contact with the HVPS.

Is the imaging unit contact spring properly installed and free of damage and contamination?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

14. Perform the following tests:

- a. Make sure that the transfer roller is properly installed and free of damage and contamination.
- b. Make sure that the HVPS contact spring is properly connected to the transfer roller.
- c. Make sure that the transfer roller spring is properly installed.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

15. Perform the following tests:

- a. Reseat the transfer roller.
- b. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

16. Replace the transfer roller. See [Transfer roller removal on page 344](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

17. Perform the following tests:

- a. Reseat the HVPS cables.
- b. Check the cables for damage.

Are the cables free of damage?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 19.

18. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

19. Perform the following tests:

- a. Check the HVPS characterization.
- b. Reseat the HVPS cables.
- c. Check the HVPS cables for proper installation and damage.
- d. Check the HVPS spring contact for proper connection to the board.

Is the HVPS properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.


20. Replace the HVPS. See [HVPS removal on page 327](#).

**Note:** Make sure to perform the HVPS characterization when replacing the HVPS.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Vertical dark streaks with print missing check

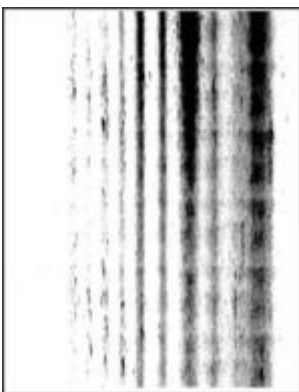

1. Perform the following tests:

- a. Make sure that the toner cartridge is supported.
- b. Make sure that the toner cartridge and imaging unit are not empty.
- c. Check if the toner cartridge is new.

Is the toner cartridge new?

- **Yes:**  
Go to the next step.
  - **No:**  
Go to step 3.
2. Make sure to remove the packing material on the toner cartridge and imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
3. Perform the following tests:
- a. Clear the paper path of debris and contamination.
  - b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
4. Perform the following tests:
- a. Clean the printhead lens.
  - b. Reseat the two printhead cables at both ends.
  - c. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
5. Perform the following tests:
- a. Make sure that the printhead cables are properly connected.
  - b. Check the printhead for proper installation and damage.

Is the printhead properly installed and free of damage?

- **Yes:**  
Go to step 7.
  - **No:**  
Go to the next step.
6. Replace the printhead. See [.Printhead removal on page 363](#)

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Make sure that the imaging unit is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the photoconductor roller surface is free of damage.
- d. Make sure that the imaging unit HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Replace the imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

9. Perform the following tests:

- a. Make sure that the toner cartridge is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the developer roller surface is free of damage.
- d. Make sure that the toner HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

10. Replace the toner cartridge.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

11. Perform the following tests:

- a. Check the HVPS toner contact spring for proper installation and damage.
- b. Check the toner smart chip contact for proper installation and damage.
- c. Check the toner contact spring for corrosion and contamination.

Are the HVPS toner contact spring and toner smart chip contact properly installed and free of damage and contamination?

- **Yes:**  
Go to step 13.
- **No:**  
Go to the next step.

12. Perform the following tests:

- a. Make sure that the HVPS toner contact spring is in proper contact with the toner cartridge.
- b. Make sure that the HVPS toner contact spring is in proper contact with the HVPS.
- c. Reseat the smart chip contact cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

13. Perform the following tests:

- a. Check the imaging unit contact spring for damage and contamination.
- b. Make sure that the imaging unit contact spring is in proper contact with the HVPS.

Is the imaging unit contact spring properly installed and free of damage and contamination?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

14. Perform the following tests:

- a. Make sure that the transfer roller is properly installed and free of damage and contamination.
- b. Make sure that the HVPS contact spring is properly connected to the transfer roller.
- c. Make sure that the transfer roller spring is properly installed.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

15. Perform the following tests:

- a. Reseat the transfer roller.
- b. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**  
The problem is solved.

16. Replace the transfer roller. See [Transfer roller removal on page 344](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

17. Perform the following tests:

- a. Reseat the HVPS cables.
- b. Check the cables for damage.

Are the cables free of damage?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 19.

18. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

19. Perform the following tests:

- a. Check the HVPS characterization.
- b. Reseat the HVPS cables.
- c. Check the HVPS cables for proper installation and damage.
- d. Check the HVPS spring contact for proper connection to the board.

Is the HVPS properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

20. Replace the HVPS. See [HVPS removal on page 327](#).

**Note:** Make sure to perform the HVPS characterization when replacing the HVPS.

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

## White streaks and voided areas check



1. Perform the following tests:

- a. Make sure that the toner cartridge is supported.
- b. Make sure that the toner cartridge and imaging unit are not empty.
- c. Check if the toner cartridge is new.

Is the toner cartridge new?

- **Yes:**

Go to the next step.

- **No:**

Go to step 3.

2. Make sure to remove the packing material on the toner cartridge and imaging unit.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

3. Perform the following tests:

- a. Clear the paper path of debris and contamination.
- b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.

- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

4. Perform the following tests:

- Make sure that the imaging unit is properly installed and free of damage.
- Make sure that the smart chip contacts are free of corrosion and contamination.
- Make sure that the photoconductor roller surface is free of damage.
- Make sure that the imaging unit HVPS contacts are free of corrosion and contamination.
- Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

5. Replace the imaging unit.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

6. Perform the following tests:

- Make sure that the toner cartridge is properly installed and free of damage.
- Make sure that the smart chip contacts are free of corrosion and contamination.
- Make sure that the developer roller surface is free of damage.
- Make sure that the toner HVPS contacts are free of corrosion and contamination.
- Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

7. Replace the toner cartridge.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

8. Perform the following tests:

- Check the HVPS toner contact spring for proper installation and damage.
- Check the toner smart chip contact for proper installation and damage.
- Check the toner contact spring for corrosion and contamination.

Are the HVPS toner contact spring and toner smart chip contact properly installed and free of damage and contamination?

- **Yes:**  
Go to step 10.
- **No:**  
Go to the next step.

9. Perform the following tests:

- a. Make sure that the HVPS toner contact spring is in proper contact with the toner cartridge.
- b. Make sure that the HVPS toner contact spring is in proper contact with the HVPS.
- c. Reseat the smart chip contact cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

10. Perform the following tests:

- a. Check the imaging unit contact spring for damage and contamination.
- b. Make sure that the imaging unit contact spring is in proper contact with the HVPS.

Is the imaging unit contact spring properly installed and free of damage and contamination?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

11. Perform the following tests:

- a. Make sure that the transfer roller is properly installed and free of damage and contamination.
- b. Make sure that the HVPS contact spring is properly connected to the transfer roller.
- c. Make sure that the transfer roller spring is properly installed.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Reseat the transfer roller.
- b. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**

The problem is solved.

13. Replace the transfer roller. See [Transfer roller removal on page 344](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

14. Perform the following tests:

- Clean the printhead lens.
- Reseat the two printhead cables at both ends.
- Perform a print test.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

15. Perform the following tests:

- Make sure that the printhead cables are properly connected.
- Check the printhead for proper installation and damage.

Is the printhead properly installed and free of damage?

- **Yes:**

Go to step 17.

- **No:**

Go to the next step.

16. Replace the printhead. See [Printhead removal on page 363](#)

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

17. Perform the following tests:

- Reseat the HVPS cables.
- Check the cables for damage.

Are the cables free of damage?

- **Yes:**

Go to the next step.

- **No:**

Go to step 19.

18. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

19. Perform the following tests:

- a. Check the HVPS characterization.
- b. Reseat the HVPS cables.
- c. Check the HVPS cables for proper installation and damage.
- d. Check the HVPS spring contact for proper connection to the board.

Is the HVPS properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

20. Replace the HVPS. See [HVPS removal on page 327](#).

**Note:** Make sure to perform the HVPS characterization when replacing the HVPS.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Clipped pages or images check



1. Perform the following tests:

- a. Make sure that the toner cartridge is supported.
- b. Make sure that the toner cartridge and imaging unit are not empty.
- c. Check if the toner cartridge is new.

Is the toner cartridge new?

- **Yes:**  
Go to the next step.
  - **No:**  
Go to step 3.
2. Make sure to remove the packing material on the toner cartridge and imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
3. Perform the following tests:
- a. Clear the paper path of debris and contamination.
  - b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
4. Perform the following tests:
- a. Make sure that the imaging unit is properly installed and free of damage.
  - b. Make sure that the smart chip contacts are free of corrosion and contamination.
  - c. Make sure that the photoconductor roller surface is free of damage.
  - d. Make sure that the imaging unit HVPS contacts are free of corrosion and contamination.
  - e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
5. Replace the imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:

- a. Make sure that the toner cartridge is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the developer roller surface is free of damage.
- d. Make sure that the toner HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Replace the toner cartridge.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Perform the following tests:

- a. Check the HVPS toner contact spring for proper installation and damage.
- b. Check the toner smart chip contact for proper installation and damage.
- c. Check the toner contact spring for corrosion and contamination.

Are the HVPS toner contact spring and toner smart chip contact properly installed and free of damage and contamination?

- **Yes:**  
Go to step 10.
- **No:**  
Go to the next step.

9. Perform the following tests:

- a. Make sure that the HVPS toner contact spring is in proper contact with the toner cartridge.
- b. Make sure that the HVPS toner contact spring is in proper contact with the HVPS.
- c. Reseat the smart chip contact cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

10. Perform the following tests:

- a. Check the imaging unit contact spring for damage and contamination.
- b. Make sure that the imaging unit contact spring is in proper contact with the HVPS.

Is the imaging unit contact spring properly installed and free of damage and contamination?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

11. Perform the following tests:

- a. Make sure that the transfer roller is properly installed and free of damage and contamination.
- b. Make sure that the HVPS contact spring is properly connected to the transfer roller.
- c. Make sure that the transfer roller spring is properly installed.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Reseat the transfer roller.
- b. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

13. Replace the transfer roller. See [Transfer roller removal on page 344](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

14. Perform the following tests:

- a. Clean the printhead lens.
- b. Reseat the two printhead cables at both ends.
- c. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

15. Perform the following tests:

- a. Make sure that the printhead cables are properly connected.
- b. Check the printhead for proper installation and damage.

Is the printhead properly installed and free of damage?

- **Yes:**  
Go to step 17.

- **No:**  
Go to the next step.

16. Replace the printhead. See [.Printhead removal on page 363](#)

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

17. Perform the following tests:

- a. Reseat the HVPS cables.
- b. Check the cables for damage.

Are the cables free of damage?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 19.

18. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

19. Perform the following tests:

- a. Check the HVPS characterization.
- b. Reseat the HVPS cables.
- c. Check the HVPS cables for proper installation and damage.
- d. Check the HVPS spring contact for proper connection to the board.

Is the HVPS properly installed and free of damage?

- **Yes:**  
Go to step 21.
- **No:**  
Go to the next step.

20. Replace the HVPS. See [HVPS removal on page 327](#).

**Note:** Make sure to perform the HVPS characterization when replacing the HVPS.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

21. Perform the following tests:

- Reseat all the cables connected to the LVPS.
- Check the cables for proper connection and damage.
- Check the fuse for continuity.
- Check the electronic components on the LVPS for damage.
- Check the LVPS for proper installation and damage.

Is the LVPS properly installed and free of damage?

- **Yes:**

Contact the next level of support.

- **No:**

Go to the next step.

22. Perform the following tests:

- Make sure that the LVPS is compatible with the fuser and the printer.
- Make sure that the fuser connector has voltage.
- Make sure that the correct power input voltage is used.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

23. Replace the LVPS. See [LVPS removal on page 326](#).

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

## Compressed images appear on prints check



1. Perform the following tests:

- a. Clear the paper path of debris and contamination.
- b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Make sure that the imaging unit is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the photoconductor roller surface is free of damage.
- d. Make sure that the imaging unit HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Replace the imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Check the imaging unit drive lever for proper installation and damage.
- b. Open the right cover, and then check the lever assembly for proper installation and damage.

Is the imaging unit drive lever properly installed and free of damage?

- **Yes:**  
Go to step 6.
- **No:**  
Go to the next step.

5. Perform the following tests:

- a. Open the front door.
- b. Remove the imaging unit.
- c. Remove the toner cartridge from the imaging unit.
- d. Slightly close the front door, and then check if the lever actuates the imaging unit drive gear.

Did the imaging unit drive gear actuate?

- **Yes:**  
The problem is solved.
- **No:**  
Contact the next level of support.

6. Perform the following tests:

- a. Remove the imaging unit.
- b. Check the coupling drive gear for proper installation and damage.
- c. Actuate the lever, and then check if the coupling drive gear engages.

Is the coupling drive gear properly installed and free of damage?

- **Yes:**  
Go to step 8.
- **No:**  
Go to the next step.

7. Replace the main drive. See [Main drive removal on page 331](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Perform the following tests:

- a. Make sure that the transfer roller is properly installed and free of damage and contamination.
- b. Make sure that the HVPS contact spring is properly connected to the transfer roller.
- c. Make sure that the transfer roller spring is properly installed.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

9. Perform the following tests:

- a. Reseat the transfer roller.
- b. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

10. Replace the transfer roller. See [Transfer roller removal on page 344](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

11. Make sure that the roller is free of dirt and contamination.

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

12. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

- b. Check if the clip in the middle of the solenoid turns when the paper is transported.

Did the clip turn?

- **Yes:**

Go to step 14.

- **No:**

Go to the next step.

13. Reseat the deskew solenoid cable at both ends.

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

14. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Motor tests**

- b. Select **Motor (transport drive)**.

Did the motor run?

- **Yes:**

Go to the next step.

- **No:**

Go to step 16.

15. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

- b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Duplex > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

16. Perform the following tests:

- a. Make sure that the main drive is properly installed and free of damage.
- b. Make sure that the main drive gears are properly installed.
- c. Make sure that the drive gears are in proper contact with the gear they are driving.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

17. Replace the main drive. See [Main drive removal on page 331](#).

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Incorrect margins on prints check



1. Perform the following tests:

- a. Clear the paper path of debris and contamination.

- b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Make sure that the paper type is supported.
- b. Make sure that the paper type and size settings match the paper type and size set on the tray.
- c. Make sure that the paper has no damage or defects.
- d. Make sure that the paper guides are properly set.
- e. Make sure that the paper size setting in the duplex unit is properly set.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Check the tray insert for proper installation and damage.
- b. Make sure that the separator roller is free of dust and contamination.
- c. Check the lift plate for proper operation.
- d. Check the paper guides for proper operation.

Is the tray insert properly installed and free of damage?

- **Yes:**  
Go to step 5.
- **No:**  
Go to the next step.

4. Replace the tray insert.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

### Printer diagnostics & adjustments > Registration adjust

- b. Select **Quick test** or **Duplex quick test**.
- c. Adjust the following margins:

- Top Margin
- Bottom Margin
- Left Margin
- Right Margin

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:
  - a. Clean the printhead lens.
  - b. Reseat the two printhead cables at both ends.
  - c. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:
  - a. Make sure that the printhead cables are properly connected.
  - b. Check the printhead for proper installation and damage.

Is the printhead properly installed and free of damage?

- **Yes:**  
Go to step 9.
- **No:**  
Go to the next step.

8. Replace the printhead. See [.Printhead removal on page 363](#)

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

9. Perform the following tests:
  - a. Check the controller board for proper installation and damage.
  - b. Reseat all the cables on the controller board.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
  - **No:**  
Go to the next step.
10. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Toner rubs off check



1. Perform the following tests:
  - a. Make sure that the toner cartridge is supported.
  - b. Make sure that the toner cartridge and imaging unit are not empty.
  - c. Check if the toner cartridge is new.

Is the toner cartridge new?

- **Yes:**  
Go to the next step.
  - **No:**  
Go to step 3.
2. Make sure to remove the packing material on the toner cartridge and imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
3. Perform the following tests:
    - a. Clear the paper path of debris and contamination.
    - b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Make sure that the paper type and size settings match the paper type and size set on the tray.
- b. Check the fuser cables for proper connection and damage.
- c. Check the fuser access door for damage.
- d. Check if the fuser gears are in proper contact with the drive gears.
- e. Make sure that the fuser is compatible with the LVPS.
- f. Check the fuser for proper installation and damage.

Is the fuser properly installed and free of damage?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

5. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Motor tests**

- b. Select **Motor (transport)**.
- c. Open the rear door, and then check if the fuser exit rollers turn.
- d. Open the fuser access door, and then check if the hot rollers turn.

Are the rollers properly working?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

6. Replace the fuser. See [Fuser removal on page 348](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Reseat all the cables connected to the LVPS.
- b. Check the cables for proper connection and damage.
- c. Check the fuse for continuity.
- d. Check the electronic components on the LVPS for damage.
- e. Check the LVPS for proper installation and damage.

Is the LVPS properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

8. Perform the following tests:

- a. Make sure that the LVPS is compatible with the fuser and the printer.
- b. Make sure that the fuser connector has voltage.
- c. Make sure that the correct power input voltage is used.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

9. Replace the LVPS. See [LVPS removal on page 326](#).

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Toner specks appear on prints check



1. Perform the following tests:

- a. Make sure that the toner cartridge is supported.
- b. Make sure that the toner cartridge and imaging unit are not empty.
- c. Check if the toner cartridge is new.

Is the toner cartridge new?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 3.

2. Make sure to remove the packing material on the toner cartridge and imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Clear the paper path of debris and contamination.
- b. Remove, and then insert the imaging unit and toner cartridge.

**Note:** Shake the toner cartridge and imaging unit before inserting them.

- c. Perform a POR.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Make sure that the imaging unit is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the photoconductor roller surface is free of damage.
- d. Make sure that the imaging unit HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Replace the imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**

The problem is solved.

6. Perform the following tests:

- a. Make sure that the toner cartridge is properly installed and free of damage.
- b. Make sure that the smart chip contacts are free of corrosion and contamination.
- c. Make sure that the developer roller surface is free of damage.
- d. Make sure that the toner HVPS contacts are free of corrosion and contamination.
- e. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

7. Replace the toner cartridge.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

8. Perform the following tests:

- a. Check the HVPS toner contact spring for proper installation and damage.
- b. Check the toner smart chip contact for proper installation and damage.
- c. Check the toner contact spring for corrosion and contamination.

Are the HVPS toner contact spring and toner smart chip contact properly installed and free of damage and contamination?

- **Yes:**

Go to step 10.

- **No:**

Go to the next step.

9. Perform the following tests:

- a. Make sure that the HVPS toner contact spring is in proper contact with the toner cartridge.
- b. Make sure that the HVPS toner contact spring is in proper contact with the HVPS.
- c. Reseat the smart chip contact cable.

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

10. Perform the following tests:

- a. Check the imaging unit contact spring for damage and contamination.
- b. Make sure that the imaging unit contact spring is in proper contact with the HVPS.

Is the imaging unit contact spring properly installed and free of damage and contamination?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

11. Perform the following tests:

- a. Make sure that the transfer roller is properly installed and free of damage and contamination.
- b. Make sure that the HVPS contact spring is properly connected to the transfer roller.
- c. Make sure that the transfer roller spring is properly installed.
- d. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Reseat the transfer roller.
- b. Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

13. Replace the transfer roller. See [Transfer roller removal on page 344](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

14. Perform the following tests:

- a. Clean the printhead lens.
- b. Reseat the two printhead cables at both ends.
- c. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

15. Perform the following tests:

- a. Make sure that the printhead cables are properly connected.

- b. Check the printhead for proper installation and damage.

Is the printhead properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

16. Replace the printhead. See [.Printhead removal on page 363](#)

Does the problem remain?


- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Paper jams


### Avoiding jams

#### Load paper properly

- Make sure that the paper lies flat in the tray.

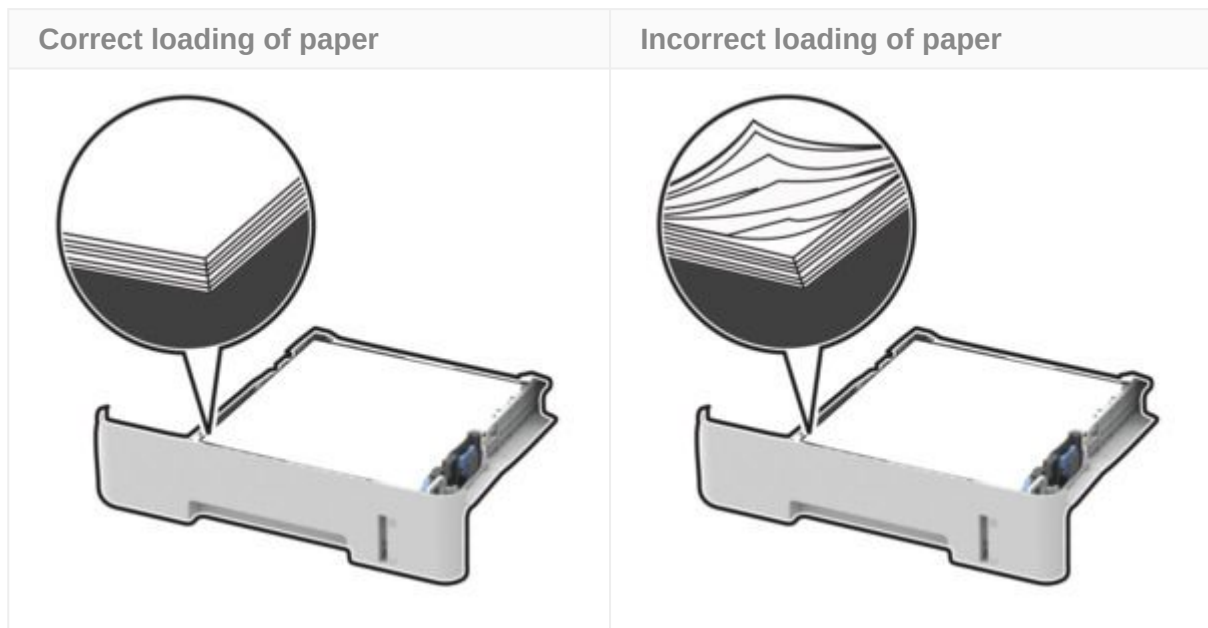


- Do not load or remove a tray while the printer is printing.
- Do not load too much paper. Make sure that the stack height is below the maximum paper fill indicator.
- Do not slide paper into the tray. Load paper as shown in the illustration.

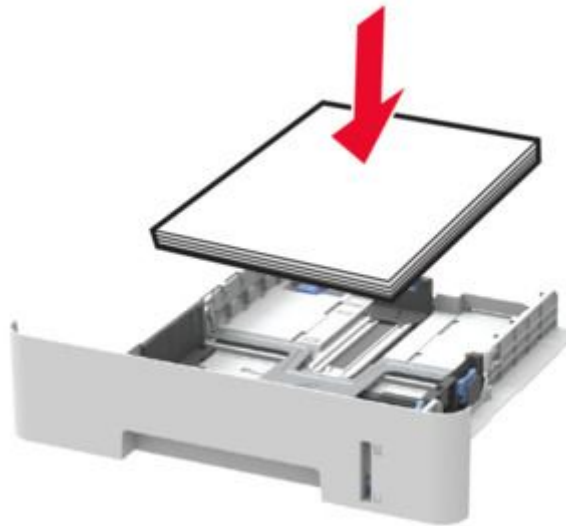

- Make sure that the paper guides are positioned correctly and are not pressing tightly against the paper or envelopes.
- Push the tray firmly into the printer after loading paper.

### Use recommended paper

- Use only recommended paper or specialty media.
- Do not load paper that is wrinkled, creased, damp, bent, or curled.
- Flex, fan, and align the paper edges before loading.

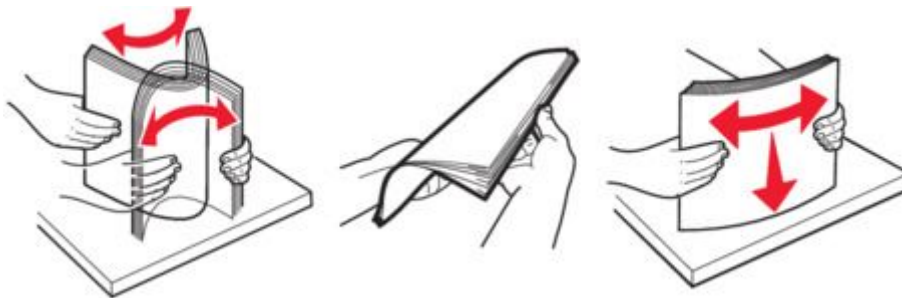

- Do not use paper that has been cut or trimmed by hand.
- Do not mix paper sizes, weights, or types in the same tray.
- Make sure that the paper size and type are set correctly on the computer or printer control panel.
- Store paper according to manufacturer recommendations.

## 200 paper jams

### 200 paper jam messages

Error code	Description	Action
200.04	Paper fed from the manual feeder cleared the sensor (input sensor S3) earlier than expected.	See <a href="#">Sensor (input sensor S3) service check on page 123</a> .

Error code	Description	Action
200.05	Paper fed from the manual feeder never cleared the sensor (input sensor S3).	
200.06	Paper fed from the manual feeder was not picked. Paper did not reach the sensor (input sensor S3).	
200.07	Paper reached the sensor (input sensor S3) earlier than expected.	
200.12	Paper fed from tray 1 arrived at the sensor (input sensor S3) earlier than expected.	
200.13	Paper fed from tray 1 was detected later than expected or was never detected at the sensor (input sensor S3).	
200.14	Paper fed from tray 1 cleared the sensor (input sensor S3) earlier than expected.	
200.15	Paper fed from tray 1 never cleared the sensor (input sensor S3).	
200.91	Paper remains on the sensor (input sensor S3) during the warm up sequence.	See <a href="#">Sensor (input sensor S3) static jam service check on page 120</a> .

## Sensor (input sensor S3) static jam service check

### 1. Perform the following tests:

- Make sure that the tray insert is properly inserted.
- Make sure that the paper type and size settings match the paper type and size set on the tray.
- Make sure that the duplex unit is properly inserted.
- Make sure that the paper size setting in the duplex unit matches the printer setting.
- Make sure that the front and rear doors are fully closed.
- Make sure that the output bin is free from obstructions.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
2. Perform the following tests:
- a. Remove the imaging unit and toner cartridge, and then make sure that the paper path is free of jams and obstructions.
  - b. Clear all rollers of dirt and contamination.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
3. Perform the following tests:
- a. Perform a POR.
  - b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
4. Perform the following tests:
- a. Reseat the sensor cable.
  - b. Enter the Diagnostics menu, and then navigate to:
- Printer diagnostics & adjustments > Sensor tests**
- c. Find the sensor (staging sensor S2).

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 7.
  - **No:**  
Go to the next step.
5. Perform the following tests:
- a. Check the sensor for proper installation and damage.
  - b. Check the alignment with the sensor flag.
  - c. Check the sensor cable for proper connection and damage.

Is the sensor properly installed and free of damage?

- **Yes:**  
Go to step 7.
- **No:**

Go to the next step.

6. Replace the sensor.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

7. Perform the following tests:

a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustment > Sensor tests**

b. Find the following sensors:

- Sensor (media present in tray1 S1)
- Sensor (input sensor S3)
- Sensor (fuser exit sensor S4)

Does the sensor status change while toggling the sensor?

- **Yes:**

Go to step 10.

- **No:**

Go to the next step.

8. Perform the following tests:

- a. Check the sensor flags for proper installation and damage.
- b. Check the sensor flags for proper alignment with the sensors.
- c. Check the sensor flag springs for proper installation and damage.

Are the sensor flags properly installed and free of damage?

- **Yes:**

Go to step 10.

- **No:**

Go to the next step.

9. Replace the damaged sensor flag.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

10. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**

Go to step 12.

- **No:**

Go to the next step.

11. Replace the damaged cable.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

12. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**

Contact the next level of support.

- **No:**

Go to the next step.

13. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

## Sensor (input sensor S3) service check

1. Perform the following tests:

- a. Make sure that the tray insert is properly inserted.
- b. Make sure that the paper type and size settings match the paper type and size set on the tray.
- c. Make sure that the duplex unit is properly inserted.
- d. Make sure that the paper size setting in the duplex unit matches the printer setting.
- e. Make sure that the front and rear doors are fully closed.
- f. Make sure that the output bin is free from obstructions.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

2. Perform the following tests:

- a. Remove the imaging unit and toner cartridge, and then make sure that the paper path is free of jams and obstructions.

- b. Clear all rollers of dirt and contamination.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Perform a POR.
  - b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Reseat the sensor cable.
  - b. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Sensor tests**

- c. Find the sensor (staging sensor S2).

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

5. Perform the following tests:

- a. Check the sensor for proper installation and damage.
  - b. Check the alignment with the sensor flag.
  - c. Check the sensor cable for proper connection and damage.

Is the sensor properly installed and free of damage?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

6. Replace the sensor.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**

The problem is solved.

7. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustment > Sensor tests**

- b. Find the following sensors:

- Sensor (media present in tray1 S1)
- Sensor (input sensor S3)
- Sensor (fuser exit sensor S4)

Does the sensor status change while toggling the sensor?

- **Yes:**

Go to step 10.

- **No:**

Go to the next step.

8. Perform the following tests:

- a. Check the sensor flags for proper installation and damage.
- b. Check the sensor flags for proper alignment with the sensors.
- c. Check the sensor flag springs for proper installation and damage.

Are the sensor flags properly installed and free of damage?

- **Yes:**

Go to step 10.

- **No:**

Go to the next step.

9. Replace the damaged sensor flag.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

10. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

- b. Check if the clip in the middle of the solenoid turns when the paper is transported.

Did the clip turn?

- **Yes:**

Go to step 12.

- **No:**

Go to the next step.

11. Reseat the deskew solenoid cable at both ends.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
  - **No:**  
The problem is solved.
12. Check the cables for proper connection and damage.
- Are the cables properly connected and free of damage?
- **Yes:**  
Go to step 14.
  - **No:**  
Go to the next step.
13. Replace the damaged cable.
- Does the problem remain?
- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
14. Perform the following tests:
- a. Enter the Diagnostics menu, and then navigate to:  
**Printer diagnostics & adjustments > Motor tests**
  - b. Select **Motor (transport drive)**.
- Did the motor run?
- **Yes:**  
Go to the next step.
  - **No:**  
Go to step 16.
15. Perform the following tests:
- a. Enter the Diagnostics menu, and then navigate to:  
**Input tray quick print > Tray 1 > Single**
  - b. Enter the Diagnostics menu, and then navigate to:  
**Input tray quick print > Duplex > Single**
- Does the problem remain?
- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
16. Perform the following tests:
- a. Make sure that the main drive is properly installed and free of damage.
  - b. Make sure that the main drive gears are properly installed.
  - c. Make sure that the drive gears are in proper contact with the gear they are driving.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

17. Replace the main drive. See [Main drive removal on page 331](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

18. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

19. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## 202 paper jams

### 202 paper jam messages

Error code	Description	Action
202.03	Paper fed from the manual feeder never arrived at the sensor (fuser exit sensor S4).	See <a href="#">Sensor (fuser exit sensor S4) service check on page 128</a> .
202.05	Paper fed from the manual feeder never cleared the sensor (fuser exit sensor S4).	See <a href="#">Sensor (fuser exit sensor S4) never cleared service check on page 133</a> .

Error code	Description	Action
202.13	Paper fed from tray 1 never arrived at the sensor (fuser exit sensor S4).	See <a href="#">Sensor (fuser exit sensor S4) service check on page 128</a> .
202.15	Paper fed from tray 1 never arrived at the sensor (fuser exit sensor S4).	See <a href="#">Sensor (fuser exit sensor S4) never cleared service check on page 133</a> .
202.91	Paper remains on the sensor (fuser exit sensor S4) during the warm up sequence.	See <a href="#">Sensor (fuser exit sensor S4) static jam service check on page 138</a> .
202.93	Paper never arrive at the sensor (fuser exit sensor S4) which triggered a flush action.	See <a href="#">Sensor (fuser exit sensor S4) service check on page 128</a> .

### Sensor (fuser exit sensor S4) service check

1. Perform the following tests:

- Make sure that the tray insert is properly inserted.
- Make sure that the paper type and size settings match the paper type and size set on the tray.
- Make sure that the duplex unit is properly inserted.
- Make sure that the paper size setting in the duplex unit matches the printer setting.
- Make sure that the front and rear doors are fully closed.
- Make sure that the output bin is free from obstructions.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- Remove the imaging unit and toner cartridge, and then make sure that the paper path is free of jams and obstructions.
- Clear all rollers of dirt and contamination.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- Perform a POR.
- Enter the Diagnostics menu, and then navigate to:

### Input tray quick print > Tray 1 > Single

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

#### **Printer diagnostics & adjustments > Sensor tests**

- b. Find the sensor (fuser exit sensor S4).

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

5. Perform the following tests:

- a. Make sure that the fuser exit sensor cable is properly connected and free of damage.
- b. Make sure that the sensor is properly aligned with the sensor flag.
- c. Check the sensor for proper installation and damage.

Is the sensor properly installed and free of damage?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

6. Replace the sensor. See [Sensor \(fuser exit\) removal on page 365](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

#### **Printer diagnostics & adjustment > Sensor tests**

- b. Find the following sensors:

- Sensor (media present in tray1 S1)
- Sensor (input sensor S3)
- Sensor (fuser exit sensor S4)

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 10.

- **No:**  
Go to the next step.

8. Perform the following tests:

- a. Check the sensor flags for proper installation and damage.
- b. Check the sensor flags for proper alignment with the sensors.
- c. Check the sensor flag springs for proper installation and damage.

Are the sensor flags properly installed and free of damage?

- **Yes:**  
Go to step 10.

- **No:**  
Go to the next step.

9. Replace the damaged sensor flag.

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**  
The problem is solved.

10. Check the rear door for proper installation and damage.

Is the door properly installed and free of damage?

- **Yes:**  
Go to step 12.

- **No:**  
Go to the next step.

11. Replace the rear door. See [.Bottom rear door removal on page 347](#)

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Enter Diagnostics menu, and then navigate to:  
**Printer diagnostics & adjustments > Motor tests**
- b. Select **Motor (transport drive)**.
- c. Open the rear door, and then check if the fuser exit rollers turn.
- d. Open the fuser access door, and then check if the hot rollers turn.

Are the rollers properly working?

- **Yes:**  
Go to the next step.

- **No:**

Go to step 14.

13. Perform the following tests:

- Check the fuser cables for proper connection and damage.
- Check the fuser access door for damage.
- Check if the fuser gears are in proper contact with the drive gears.
- Make sure that the fuser is compatible with the LVPS.
- Check the fuser for proper installation and damage.

Is the fuser properly installed and free of damage?

- **Yes:**

Go to step 15.

- **No:**

Go to the next step.

14. Replace the fuser. See [Fuser removal on page 348](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

15. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**

Go to step 17.

- **No:**

Go to the next step.

16. Replace the damaged cable.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

17. Perform the following tests:

- Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

- Check if the clip in the middle of the solenoid turns when the paper is transported.

Did the clip turn?

- **Yes:**

Go to step 19.

- **No:**

Go to the next step.

18. Reseat the deskew solenoid cable at both ends.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

19. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Motor tests**

- b. Select **Motor (transport drive)**.

Did the motor run?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 21.

20. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

- b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Duplex > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

21. Perform the following tests:

- a. Make sure that the main drive is properly installed and free of damage.
- b. Make sure that the main drive gears are properly installed.
- c. Make sure that the drive gears are in proper contact with the gear they are driving.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

22. Replace the main drive. See [Main drive removal on page 331](#).

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**

The problem is solved.

23. Perform the following tests:

- Reseat all the cables on the controller board.
- Check if the controller board LED lights up.
- Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**

Contact the next level of support.

- **No:**

Go to the next step.

24. Replace the controller board. See [.Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

## Sensor (fuser exit sensor S4) never cleared service check

1. Perform the following tests:

- Make sure that the tray insert is properly inserted.
- Make sure that the paper type and size settings match the paper type and size set on the tray.
- Make sure that the duplex unit is properly inserted.
- Make sure that the paper size setting in the duplex unit matches the printer setting.
- Make sure that the front and rear doors are fully closed.
- Make sure that the output bin is free from obstructions.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

2. Perform the following tests:

- Remove the imaging unit and toner cartridge, and then make sure that the paper path is free of jams and obstructions.
- Clear all rollers of dirt and contamination.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

3. Perform the following tests:

- a. Perform a POR.
- b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Sensor tests**

- b. Find the sensor (fuser exit sensor S4).

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

5. Perform the following tests:

- a. Make sure that the fuser exit sensor cable is properly connected and free of damage.
- b. Make sure that the sensor is properly aligned with the sensor flag.
- c. Check the sensor for proper installation and damage.

Is the sensor properly installed and free of damage?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

6. Replace the sensor. See [Sensor \(fuser exit\) removal on page 365](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustment > Sensor tests**

- b. Find the following sensors:

- Sensor (media present in tray1 S1)

- Sensor (input sensor S3)
- Sensor (fuser exit sensor S4)

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 10.

- **No:**  
Go to the next step.

8. Perform the following tests:

- a. Check the sensor flags for proper installation and damage.
- b. Check the sensor flags for proper alignment with the sensors.
- c. Check the sensor flag springs for proper installation and damage.

Are the sensor flags properly installed and free of damage?

- **Yes:**  
Go to step 10.

- **No:**  
Go to the next step.

9. Replace the damaged sensor flag.

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**  
The problem is solved.

10. Check the rear door for proper installation and damage.

Is the door properly installed and free of damage?

- **Yes:**  
Go to step 12.

- **No:**  
Go to the next step.

11. Replace the rear door. See [Bottom rear door removal on page 347](#)

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Enter Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Motor tests**

- b. Select **Motor (transport drive)**.

- c. Open the rear door, and then check if the fuser exit rollers turn.

- d. Open the fuser access door, and then check if the hot rollers turn.

Are the rollers properly working?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 14.

13. Perform the following tests:

- a. Check the fuser cables for proper connection and damage.
- b. Check the fuser access door for damage.
- c. Check if the fuser gears are in proper contact with the drive gears.
- d. Make sure that the fuser is compatible with the LVPS.
- e. Check the fuser for proper installation and damage.

Is the fuser properly installed and free of damage?

- **Yes:**  
Go to step 15.
- **No:**  
Go to the next step.

14. Replace the fuser. See [Fuser removal on page 348](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

15. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**  
Go to step 17.
- **No:**  
Go to the next step.

16. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

17. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:  
**Printer diagnostics & adjustment > Motor tests**
- b. Select **Motor (transport)**.
- c. Check if the exit roller turns.

Did the exit roller turn?

- **Yes:**  
Go to step 20.

- **No:**  
Go to the next step.

18. Perform the following tests:

- a. Make sure that the redrive gears are in proper contact with the printer drive gears.
- b. Check the redrive gears for proper installation and damage.
- c. Check the roller for wear, contamination, and damage.

Is the redrive properly installed and free of damage?

- **Yes:**  
Go to step 20.

- **No:**  
Go to the next step.

19. Replace the redrive. See [.Redrive removal on page 347](#)

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**  
The problem is solved.

20. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:  
**Printer diagnostics & adjustments > Motor tests**
- b. Select **Motor (transport drive)**.

Did the motor run?

- **Yes:**  
Go to the next step.

- **No:**  
Go to step 22.

21. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:  
**Input tray quick print > Tray 1 > Single**
- b. Enter the Diagnostics menu, and then navigate to:  
**Input tray quick print > Duplex > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**  
The problem is solved.

22. Perform the following tests:

- a. Make sure that the main drive is properly installed and free of damage.
- b. Make sure that the main drive gears are properly installed.
- c. Make sure that the drive gears are in proper contact with the gear they are driving.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

23. Replace the main drive. See [Main drive removal on page 331](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

24. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

25. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Sensor (fuser exit sensor S4) static jam service check

1. Perform the following tests:

- a. Make sure that the tray insert is properly inserted.
- b. Make sure that the paper type and size settings match the paper type and size set on the tray.
- c. Make sure that the duplex unit is properly inserted.
- d. Make sure that the paper size setting in the duplex unit matches the printer setting.
- e. Make sure that the front and rear doors are fully closed.
- f. Make sure that the output bin is free from obstructions.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
2. Perform the following tests:
- a. Remove the imaging unit and toner cartridge, and then make sure that the paper path is free of jams and obstructions.
  - b. Clear all rollers of dirt and contamination.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
3. Perform the following tests:
- a. Perform a POR.
  - b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
4. Perform the following tests:
- a. Enter the Diagnostics menu, and then navigate to:  
**Printer diagnostics & adjustments > Sensor tests**
  - b. Find the sensor (fuser exit sensor S4).

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 7.
  - **No:**  
Go to the next step.
5. Perform the following tests:
- a. Make sure that the fuser exit sensor cable is properly connected and free of damage.
  - b. Make sure that the sensor is properly aligned with the sensor flag.
  - c. Check the sensor for proper installation and damage.

Is the sensor properly installed and free of damage?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

6. Replace the sensor. See [Sensor \(fuser exit\) removal on page 365](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustment > Sensor tests**

- b. Find the following sensors:

- Sensor (media present in tray1 S1)
- Sensor (input sensor S3)
- Sensor (fuser exit sensor S4)

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 10.
- **No:**  
Go to the next step.

8. Perform the following tests:

- a. Check the sensor flags for proper installation and damage.
- b. Check the sensor flags for proper alignment with the sensors.
- c. Check the sensor flag springs for proper installation and damage.

Are the sensor flags properly installed and free of damage?

- **Yes:**  
Go to step 10.
- **No:**  
Go to the next step.

9. Replace the damaged sensor flag.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

10. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**  
Go to step 12.
- **No:**  
Go to the next step.

11. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

13. Replace the controller board. See [.Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## 206 paper jams

### 206 paper jam messages

Error code	Description	Action
206.15	Paper fed from tray remains on the sensor (fuser exit sensor S4).	See <a href="#">Sensor (staging sensor S2): Paper failed to clear service check on page 141.</a>
206.16	Paper fed from tray 1 never arrived at the sensor (staging sensor S2).	See <a href="#">Sensor (staging sensor S2): Paper failed to arrive service check on page 146.</a>

### Sensor (staging sensor S2): Paper failed to clear service check

1. Perform the following tests:
  - a. Make sure that the tray insert is properly inserted.
  - b. Make sure that the paper type and size settings match the paper type and size set on the tray.

- c. Make sure that the duplex unit is properly inserted.
- d. Make sure that the paper size setting in the duplex unit matches the printer setting.
- e. Make sure that the front and rear doors are fully closed.
- f. Make sure that the output bin is free from obstructions.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Remove the imaging unit and toner cartridge, and then make sure that the paper path is free of jams and obstructions.
- b. Clear all rollers of dirt and contamination.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Perform a POR.
- b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Reseat the sensor cable.
- b. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Sensor tests**

- c. Find the sensor (staging sensor S2).

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

5. Perform the following tests:

- a. Check the sensor for proper installation and damage.
- b. Check the alignment with the sensor flag.

- c. Check the sensor cable for proper connection and damage.

Is the sensor properly installed and free of damage?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

6. Replace the sensor.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustment > Sensor tests**

- b. Find the following sensors:

- Sensor (media present in tray1 S1)
- Sensor (input sensor S3)
- Sensor (fuser exit sensor S4)

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 10.
- **No:**  
Go to the next step.

8. Perform the following tests:

- a. Check the sensor flags for proper installation and damage.
- b. Check the sensor flags for proper alignment with the sensors.
- c. Check the sensor flag springs for proper installation and damage.

Are the sensor flags properly installed and free of damage?

- **Yes:**  
Go to step 10.
- **No:**  
Go to the next step.

9. Replace the damaged sensor flag.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

10. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**  
Go to step 12.
- **No:**  
Go to the next step.

11. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

- b. Check if the clip in the middle of the solenoid turns when the paper is transported.

Did the clip turn?

- **Yes:**  
Go to step 14.
- **No:**  
Go to the next step.

13. Reseat the deskew solenoid cable at both ends.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

14. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Motor tests**

- b. Select **Motor (transport drive)**.

Did the motor run?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 16.

15. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

- b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Duplex > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

16. Perform the following tests:

- a. Make sure that the main drive is properly installed and free of damage.
- b. Make sure that the main drive gears are properly installed.
- c. Make sure that the drive gears are in proper contact with the gear they are driving.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

17. Replace the main drive. See [Main drive removal on page 331](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

18. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

19. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Sensor (staging sensor S2): Paper failed to arrive service check

1. Perform the following tests:

- a. Make sure that the tray insert is properly inserted.
- b. Make sure that the paper type and size settings match the paper type and size set on the tray.
- c. Make sure that the duplex unit is properly inserted.
- d. Make sure that the paper size setting in the duplex unit matches the printer setting.
- e. Make sure that the front and rear doors are fully closed.
- f. Make sure that the output bin is free from obstructions.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Remove the imaging unit and toner cartridge, and then make sure that the paper path is free of jams and obstructions.
- b. Clear all rollers of dirt and contamination.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Perform a POR.
- b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Reseat the sensor cable.
- b. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Sensor tests**

- c. Find the sensor (staging sensor S2).

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 7.

- **No:**  
Go to the next step.

5. Perform the following tests:

- a. Check the sensor for proper installation and damage.
- b. Check the alignment with the sensor flag.
- c. Check the sensor cable for proper connection and damage.

Is the sensor properly installed and free of damage?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

6. Replace the sensor.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustment > Sensor tests**

- b. Find the following sensors:

- Sensor (media present in tray1 S1)
- Sensor (input sensor S3)
- Sensor (fuser exit sensor S4)

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 10.
- **No:**  
Go to the next step.

8. Perform the following tests:

- a. Check the sensor flags for proper installation and damage.
- b. Check the sensor flags for proper alignment with the sensors.
- c. Check the sensor flag springs for proper installation and damage.

Are the sensor flags properly installed and free of damage?

- **Yes:**  
Go to step 10.
- **No:**  
Go to the next step.

9. Replace the damaged sensor flag.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

10. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**  
Go to step 12.
- **No:**  
Go to the next step.

11. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Clear the pick rollers of contamination.
- b. Reseat the pick rollers.
- c. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single.**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

13. Perform the following tests:

- a. Check the pick rollers for proper installation and damage.
- b. Check the shaft of the pick rollers for damage.

Are the pick roller properly installed and free of damage?

- **Yes:**  
Go to step 15.
- **No:**  
Go to the next step.

14. Replace the pick rollers. See [Pick rollers removal on page 371](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

15. Perform the following tests:

- a. Reseat the pick solenoid cable.
- b. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Motor tests**

- c. Select **Feed solenoid**.
- d. Check if the pick solenoid actuates.

Did the pick solenoid actuate?

- **Yes:**

Go to step 18.

- **No:**

Go to the next step.

16. Check the pick solenoid for proper installation and damage.

Is the pick solenoid properly installed and free of damage?

- **Yes:**

Go to step 18.

- **No:**

Go to the next step.

17. Replace the pick solenoid. See [Pick solenoid removal on page 333](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

18. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Motor tests**

- b. Select **Motor (transport drive)**.

Did the motor run?

- **Yes:**

Go to the next step.

- **No:**

Go to step 20.

19. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

- b. Enter the Diagnostics menu, and then navigate to:

### Input tray quick print > Duplex > Single

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

20. Perform the following tests:

- a. Make sure that the main drive is properly installed and free of damage.
- b. Make sure that the main drive gears are properly installed.
- c. Make sure that the drive gears are in proper contact with the gear they are driving.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

21. Replace the main drive. See [Main drive removal on page 331](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

22. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

23. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## 232 paper jams

### 232 paper jam messages

Error code	Description	Action
232.13	Paper fed from tray 1 never arrived at the sensor (input sensor S3) during a duplex print job.	See <a href="#">Sensor (input sensor S3): Duplex failure service check on page 151</a> .
232.15	Paper fed from tray 1 never cleared the sensor (input sensor S3) during a duplex print job.	

### Sensor (input sensor S3): Duplex failure service check

1. Perform the following tests:

- Make sure that the tray insert is properly inserted.
- Make sure that the paper type and size settings match the paper type and size set on the tray.
- Make sure that the duplex unit is properly inserted.
- Make sure that the paper size setting in the duplex unit matches the printer setting.
- Make sure that the front and rear doors are fully closed.
- Make sure that the output bin is free from obstructions.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- Remove the imaging unit and toner cartridge, and then make sure that the paper path is free of jams and obstructions.
- Clear all rollers of dirt and contamination.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- Perform a POR.
- Enter the Diagnostics menu, and then navigate to:

### Input tray quick print > Tray 1 > Single

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Reseat the sensor cable.
- b. Enter the Diagnostics menu, and then navigate to:

#### **Printer diagnostics & adjustments > Sensor tests**

- c. Find the sensor (staging sensor S2).

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

5. Perform the following tests:

- a. Check the sensor for proper installation and damage.
- b. Check the alignment with the sensor flag.
- c. Check the sensor cable for proper connection and damage.

Is the sensor properly installed and free of damage?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

6. Replace the sensor.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

#### **Printer diagnostics & adjustment > Sensor tests**

- b. Find the following sensors:
  - Sensor (media present in tray1 S1)
  - Sensor (input sensor S3)
  - Sensor (fuser exit sensor S4)

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 10.
- **No:**  
Go to the next step.

8. Perform the following tests:

- a. Check the sensor flags for proper installation and damage.
- b. Check the sensor flags for proper alignment with the sensors.
- c. Check the sensor flag springs for proper installation and damage.

Are the sensor flags properly installed and free of damage?

- **Yes:**  
Go to step 10.
- **No:**  
Go to the next step.

9. Replace the damaged sensor flag.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

10. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

- b. Check if the clip in the middle of the solenoid turns when the paper is transported.

Did the clip turn?

- **Yes:**  
Go to step 12.
- **No:**  
Go to the next step.

11. Reseat the deskew solenoid cable at both ends.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Clear the duplex paper path of obstructions.
- b. Load the correct paper in the tray.
- c. Make sure that the paper size setting in the duplex unit matches the paper loaded in the tray.

- d. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Duplex**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

13. Perform the following tests:

- a. Reseat the duplex unit.
- b. Check the duplex unit gears for damage.
- c. Check the rollers and belts for wear and contamination.

Is the duplex unit properly installed and free of damage?

- **Yes:**  
Go to step 15.
- **No:**  
Go to the next step.

14. Replace the duplex unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

15. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**  
Go to step 17.
- **No:**  
Go to the next step.

16. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

17. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Motor tests**

- b. Select **Motor (transport drive)**.

Did the motor run?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 19.

18. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

- b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Duplex > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

19. Perform the following tests:

- a. Make sure that the main drive is properly installed and free of damage.  
b. Make sure that the main drive gears are properly installed.  
c. Make sure that the drive gears are in proper contact with the gear they are driving.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

20. Replace the main drive. See [Main drive removal on page 331](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

21. Perform the following tests:

- a. Reseat all the cables on the controller board.  
b. Check if the controller board LED lights up.  
c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

22. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

# User attendance messages

## Non-Lexmark supply

The printer has detected a non-Lexmark supply or part installed in the printer. The Lexmark printer is designed to function best with genuine Lexmark supplies and parts. Use of third-party supplies or parts may affect the performance, reliability, or life of the printer and its imaging components. All life indicators are designed to function with Lexmark supplies and parts and may deliver unpredictable results if third-party supplies or parts are used. Imaging component usage beyond the intended life may damage the Lexmark printer or associated components.

### **Warning—Potential Damage**

Use of third-party supplies or parts can affect warranty coverage. Damage caused by the use of third-party supplies or parts may not be covered by the warranty.

If a customer accepts any and all of these risks and proceeds with the use of non-genuine supplies or parts in the printer, then instruct the customer to press and hold **X** and **#** simultaneously from the control panel for 15 seconds. Do not perform this action yourself. If a customer does not want to accept these risks, then remove the third-party supply or part from the printer and install a genuine Lexmark supply or part. For more information, see [Using genuine Lexmark parts and supplies](#). If the printer does not print after pressing and holding **X** and **#** simultaneously for 15 seconds, then instruct the customer to reset the supply usage counter.

1. From the control panel, navigate to:

**Settings > Device > Maintenance > Config Menu > Supply Usage And Counters**

2. Select the part or supply to reset.
3. Read the warning message, and then select **Continue**.
4. Press and hold **X** and **#** simultaneously for 15 seconds to clear the message.

**Note:** If the customer is unable to reset the supply usage counters, then the customer must return the item to the place of purchase.

### **Warning—Potential Damage**

Supplies and parts without Return Program agreement terms may be reset and remanufactured.

## 8–12 user attendance messages

### 8–12 user attendance messages

Error code	Description	Action
8.01	Close the door, cover, or latch at location A.	See <a href="#">Door switch service check on page 235</a> .
8.02	Close the door, cover, or latch at location B.	
9	Auto reboot.	See <a href="#">Auto reboot service check on page 159</a> .
11.1	Load tray 1.	See <a href="#">Load tray 1 with A4 plain paper service check on page 237</a> .
11.8	Load the manual feeder.	See <a href="#">Manual feeder service check on page 157</a> .
12.1	Change the paper in tray 1.	See <a href="#">Load tray 1 with A4 plain paper service check on page 237</a> .
12.8	Change the paper in the manual feeder.	See <a href="#">Manual feeder service check on page 157</a> .

### Manual feeder service check

1. Make sure that the imaging unit and toner cartridge are genuine Lexmark supplies.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:
  - a. Shake the toner cartridge.
  - b. Clean the toner cartridge smart chip contacts, and then check the contacts for damage.
  - c. Clean the toner cartridge spring contacts, and then check the contacts for damage.
  - d. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**

The problem is solved.

3. Replace the toner cartridge.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

4. Perform the following tests:

- a. Shake the imaging unit.
- b. Clean the imaging unit smart chip contacts, and then check the contacts for damage.
- c. Clean the imaging unit spring contacts, and then check the contacts for damage.
- d. Perform a print test.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

5. Check the smart chip for proper installation and damage.

Is the smart chip properly installed and free of damage?

- **Yes:**

Go to step 7.

- **No:**

Go to the next step.

6. Replace the imaging unit.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

7. Perform the following tests:

- a. From the control panel, navigate to **Settings > Reports > Device > Device statistics**.
- b. Check if the install date reflects the date that you replaced the cartridge.
- c. Check the supply level of the toner cartridge.
- d. Check the supply level of the imaging unit.

Is there sufficient supply level, and does the install date reflect the cartridge replacement date?

- **Yes:**

Go to the next step.

- **No:**

Go to step 10.

8. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**  
Go to step 10.
- **No:**  
Go to the next step.

9. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

10. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

11. Replace the controller board. See [.Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Auto reboot service check

1. Perform the following tests:

- a. Turn off the printer.
- b. Unplug the power cord.
- c. Wait for 10 seconds, and then plug the power cord.
- d. Turn on the printer.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Upgrade the firmware.

**Note:** Contact your next level of support for the correct firmware level to use.

- b. Perform a POR.
- c. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**  
Go to step 5.
- **No:**  
Go to the next step.

4. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

6. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## 31–33 user attendance messages

### 31–33 user attendance messages

Error code	Description	Action
31.40	Missing black toner cartridge.	See <a href="#">Photoconductor and toner cartridge service check on page 161</a> .
31.40C	Black toner smart chip or sensor failure.	See <a href="#">Photoconductor and toner cartridge service check on page 161</a> .
31.60C	Black imaging unit, photoconductor smart chip, or sensor failure.	See <a href="#">Black imaging unit, photoconductor smart chip, or sensor problem service check on page 163</a> .
32.40	Unsupported toner cartridge.	See <a href="#">Unsupported imaging unit or toner cartridge service check on page 166</a> .
32.60	Unsupported imaging unit.	
33	Non-Lexmark Return Program (NLRP) codes.	See <a href="#">Photoconductor and toner cartridge service check on page 161</a> .

## Photoconductor and toner cartridge service check

1. Make sure that the imaging unit and toner cartridge are genuine Lexmark supplies.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:
  - a. Shake the toner cartridge.
  - b. Clean the toner cartridge smart chip contacts, and then check the contacts for damage.
  - c. Clean the toner cartridge spring contacts, and then check the contacts for damage.
  - d. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**

The problem is solved.

3. Replace the toner cartridge.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

4. Perform the following tests:

- a. Shake the imaging unit.
- b. Clean the imaging unit smart chip contacts, and then check the contacts for damage.
- c. Clean the imaging unit spring contacts, and then check the contacts for damage.
- d. Perform a print test.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

5. Check the smart chip for proper installation and damage.

Is the smart chip properly installed and free of damage?

- **Yes:**

Go to step 7.

- **No:**

Go to the next step.

6. Replace the imaging unit.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

7. Perform the following tests:

- a. From the control panel, navigate to **Settings > Reports > Device > Device statistics**.
- b. Check if the install date reflects the date that you replaced the cartridge.
- c. Check the supply level of the toner cartridge.
- d. Check the supply level of the imaging unit.

Is there sufficient supply level, and does the install date reflect the cartridge replacement date?

- **Yes:**

Go to the next step.

- **No:**

Go to step 10.

8. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**  
Go to step 10.

- **No:**  
Go to the next step.

9. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

10. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

11. Replace the controller board. See [.Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Black imaging unit, photoconductor smart chip, or sensor problem service check

1. Perform the following tests:

- a. Open the front door.
- b. Reseat the imaging unit and toner cartridge.
- c. Close the front door.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Shake the toner cartridge.
- b. Clean the toner cartridge smart chip contacts, and then check the contacts for damage.
- c. Clean the toner cartridge spring contacts, and then check the contacts for damage.
- d. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Replace the toner cartridge.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Shake the imaging unit.
- b. Clean the imaging unit smart chip contacts, and then check the contacts for damage.
- c. Clean the imaging unit spring contacts, and then check the contacts for damage.
- d. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Check the smart chip for proper installation and damage.

Is the smart chip properly installed and free of damage?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

6. Replace the imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Check the front door for proper installation and damage.
- b. Check the front door flag for damage.

- c. Check the front door hinge for damage.
- d. Check if the front door properly closes.

Is the front door properly installed and free of damage?

- **Yes:**  
Go to step 9.
- **No:**  
Go to the next step.

8. Replace the front door. See [Rear door removal on page 345](#)

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

9. Check the front door link for proper installation and damage.

Is the front door link properly installed and free of damage?

- **Yes:**  
Go to step 11.
- **No:**  
Go to the next step.

10. Replace the printer.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

11. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**  
Go to step 13.
- **No:**  
Go to the next step.

12. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

13. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.

- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

14. Replace the controller board. See [.Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Unsupported imaging unit or toner cartridge service check

1. Make sure that the imaging unit and toner cartridge are genuine Lexmark supplies.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Shake the toner cartridge.
- b. Clean the toner cartridge smart chip contacts, and then check the contacts for damage.
- c. Clean the toner cartridge spring contacts, and then check the contacts for damage.
- d. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Replace the toner cartridge.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Shake the imaging unit.

- b. Clean the imaging unit smart chip contacts, and then check the contacts for damage.
- c. Clean the imaging unit spring contacts, and then check the contacts for damage.
- d. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Check the smart chip for proper installation and damage.

Is the smart chip properly installed and free of damage?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

6. Replace the imaging unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**  
Go to step 9.
- **No:**  
Go to the next step.

8. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

9. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**

Go to the next step.

10. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## 34–41 user attendance messages

### 34–41 user attendance messages

Error code	Description	Action
34	Paper size mismatch (too short or too narrow).	See <a href="#">Load tray 1 with A4 plain paper service check on page 237</a> .
37.3	Insufficient memory.	See <a href="#">Insufficient memory service check on page 170</a> .
38.1	Memory is full.	
39.1	Complex page.	
41.60	Toner cartridge and imaging unit mismatch.	See <a href="#">Unsupported imaging unit or toner cartridge service check on page 166</a> .

## Scanner collation area service check

1. Close all held jobs.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:
  - a. Turn off the printer.
  - b. Unplug the power cord.
  - c. Wait for 10 seconds, and then plug the power cord.
  - d. Turn on the printer.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

3. Resend a print job or a scan job.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

4. Perform the following tests:

- a. Perform a print test.

- b. Perform a copy job.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

5. Reduce the number of pages to scan.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

6. Check if the error occurs on documents with text, graphics, or images.

Did the error occur?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

7. Change the source document.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

8. Perform the following tests:

- a. Upgrade the firmware.

**Note:** Contact your next level of support for the correct firmware level to use.

- b. Perform a POR.
- c. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

9. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

10. Replace the controller board. See [Controller board removal on page 322](#).

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Insufficient memory service check

1. Close all held jobs.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Turn off the printer.
- b. Unplug the power cord.
- c. Wait for 10 seconds, and then plug the power cord.
- d. Turn on the printer.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**

The problem is solved.

3. Resend a print job or a scan job.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Reduce the number of pages to print.
- b. Reduce the file size of the print job.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Perform the following tests:

- a. Upgrade the firmware.

**Note:** Contact your next level of support for the correct firmware level to use.

- b. Perform a POR.
- c. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

7. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.

- **No:**  
The problem is solved.

## 42 user attendance messages

### 42 user attendance messages

**Note:** The .xy in the error code after 42 indicates the printer and cartridge regions. Where x is the printer region and y is the cartridge region. The numeric value is from 0 to 6. See the following table for the xy definitions:

Region		Numeric code	
The printer is not regionalized and matches any regionalized cartridge.		0y	
The cartridge is not regionalized and only matches with printer region 0.		x0	
North America (United States, Canada)		1	
European Economic Area, Western Europe, Nordic countries, Switzerland		2	
Asia Pacific		3	
Latin America		4	
Rest of Europe, Middle East, Africa		5	
Australia, New Zealand		6	
Invalid region		9	
Error code	Description		Action
42.01	Toner cartridge region does not match the printer region.		See <a href="#">Toner cartridge service check on page 174</a> .
42.02			
42.03			
42.04			
42.05			
42.09			
42.10			
42.12			

Error code	Description	Action
42.13		
42.14		
42.15		
42.19		
42.20		
42.21		
42.23		
42.24		
42.25		
42.29		
42.30		
42.31	Toner cartridge region does not match the printer region.	See <a href="#">Toner cartridge service check on page 174</a> .
42.32		
42.34		
42.35		
42.39		
42.40		
42.41		
42.42		
42.43		
42.45		
42.49		
42.50		
42.51		
42.52		
42.53		
42.54		
42.59		

Error code	Description	Action
42.60	Toner cartridge region does not match the printer region.	See <a href="#">Toner cartridge service check on page 174</a> .
42.60K		
42.61		
42.61K		
42.62		
42.62K		
42.63		
42.63K		
42.64		
42.64K		
42.90	Toner cartridge region does not match the printer region.	See <a href="#">Toner cartridge service check on page 174</a> .
42.91		
42.92		
42.93		
42.94		
42.95		

## Toner cartridge service check

1. Make sure that the imaging unit and toner cartridge are genuine Lexmark supplies.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:
  - a. Shake the toner cartridge.
  - b. Clean the toner cartridge smart chip contacts, and then check the contacts for damage.
  - c. Clean the toner cartridge spring contacts, and then check the contacts for damage.
  - d. Perform a print test.

Does the problem remain?

- **Yes:**

- Go to the next step.
- **No:**  
The problem is solved.
3. Make sure that the toner cartridge is changed from shipped with equipment (SWE) toner to a compatible toner.
- Does the problem remain?
- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
4. Reset the printer configuration. See [Restoring the printer configuration on page 295](#).
- Does the problem remain?
- **Yes:**  
Contact the next level of support.
  - **No:**  
The problem is solved.

## 55 user attendance messages

### 55 user attendance messages

Error code	Description	Action
55.1	Unsupported USB device.	See <a href="#">Unsupported USB device service check on page 175</a> .
55.2	Unsupported USB hub.	

## Unsupported USB device service check

1. Perform the following tests:
- a. Turn off the printer.
  - b. Unplug the power cord.
  - c. Wait for 10 seconds, and then plug the power cord.
  - d. Turn on the printer.
- Does the problem remain?
- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
2. Perform the following tests:
- a. Check if the flash drive is set to the correct file system.

- b. Check if the flash drive is detected on the computer.

Is the flash drive set to the correct file system, and is it detected?

- **Yes:**  
Go to step 4.
- **No:**  
Go to the next step.

3. Format the flash drive to the correct file system.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. From the control panel, go to **Settings > Device > Restore factory defaults**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

6. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Upgrade the firmware.

**Note:** Contact your next level of support for the correct firmware level to use.

- b. Perform a POR.
- c. Perform a print test.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

8. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**

Contact the next level of support.

- **No:**

Go to the next step.

9. Replace the controller board. See [.Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

## 71 user attendance messages

### 71 user attendance messages

Error code	Description	Action
71.01	Fax station name is not set.	See <a href="#">Fax station name service check on page 177</a> .
71.03	No analog phone line connected.	See <a href="#">Analog phone line service check on page 178</a> .
71.10	The SMTP server is not set.	See <a href="#">Network service check on page 179</a> .

### Fax station name service check

1. Perform the following tests:

- a. Turn off the printer.
- b. Unplug the power cord.
- c. Wait for 10 seconds, and then plug the power cord.
- d. Turn on the printer.

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
2. Perform the following tests:
    - a. From the control panel, go to **Settings > Fax > Fax defaults > General fax settings > Fax name**.
    - b. Enter the fax name.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Analog phone line service check

**Note:** These instructions apply only to printers that support analog fax. For more information, see [Supported fax on page 31](#).

1. Perform the following tests:
    - a. Turn off the printer.
    - b. Unplug the power cord.
    - c. Wait for 10 seconds, and then plug the power cord.
    - d. Turn on the printer.
- Does the problem remain?
- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
2. Perform the following tests:
    - a. Make sure that the telephone line is properly connected to the correct port on the fax card.
    - b. Check if the telephone line is active.

Is the telephone line active?

- **Yes:**  
Go to the next step.
  - **No:**  
Check with your service provider.
3. Check the cables for proper connection and damage.
- Are the cables properly connected and free of damage?

- **Yes:**  
Contact the next level of support.
  - **No:**  
Go to the next step.
4. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Network service check

1. Perform the following tests:
- a. Turn off the printer.
  - b. Unplug the power cord.
  - c. Wait for 10 seconds, and then plug the power cord.
  - d. Turn on the printer.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Make sure that the printer is properly connected to the network.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Contact your network administrator.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## 84 user attendance messages

### 84 user attendance messages

Error code	Description	Action
84.01	The imaging unit is nearly low.	See <a href="#">Toner cartridge or imaging unit low service check on page 181.</a>
84.02		
84.11	The imaging unit is low.	
84.12		
84.13		
84.19		
84.21	The imaging unit is very low.	
84.22		
84.23		
84.31	Replace the imaging unit. Zero estimated pages remain.	
84.32		
84.33	Replace the imaging unit or photoconductor. Zero estimated pages remain. Absolute end of life has been reached due to page count.	
84.41	Replace the imaging kit. Zero estimated pages remain. Absolute end of life has been reached due to the photoconductor rev counter.	
84.42	Replace the imaging unit. Zero estimated pages remain. Absolute end of life has been reached due to waste toner.	
84.43	Replace the imaging unit. Zero estimated pages remain. Absolute end of life has been reached due to page count.	

## Toner cartridge or imaging unit low service check

1. Make sure that the imaging unit and toner cartridge are genuine Lexmark supplies.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. From the control panel, navigate to **Settings > Reports > Device > Device statistics**.
- b. Check if the install date reflects the date that you replaced the cartridge.
- c. Check the supply level of the toner cartridge.
- d. Check the supply level of the imaging unit.

Is there sufficient supply level, and does the install date reflect the cartridge replacement date?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 4.

3. Perform the following tests:

- a. Enter the Diagnostics menu, and then select **Advanced print quality samples**.
- b. Check the test pages for print quality defects.

Are there print quality defects?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Shake the toner cartridge.
- b. Clean the toner cartridge smart chip contacts, and then check the contacts for damage.
- c. Clean the toner cartridge spring contacts, and then check the contacts for damage.
- d. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Replace the toner cartridge.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

6. Perform the following tests:

- Shake the imaging unit.
- Clean the imaging unit smart chip contacts, and then check the contacts for damage.
- Clean the imaging unit spring contacts, and then check the contacts for damage.
- Perform a print test.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

7. Check the smart chip for proper installation and damage.

Is the smart chip properly installed and free of damage?

- **Yes:**

Go to step 9.

- **No:**

Go to the next step.

8. Replace the imaging unit.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

9. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**

Go to step 11.

- **No:**

Go to the next step.

10. Replace the damaged cable.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

11. Perform the following tests:

- Reseat all the cables on the controller board.
- Check if the controller board LED lights up.
- Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

12. Replace the controller board. See [.Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## 88 user attendance messages

### 88 user attendance messages

Error code	Description	Action
88.00	The toner cartridge is nearly low.	See <a href="#">Toner cartridge or imaging unit low service check on page 181</a> .
88.09		
88.10	The toner cartridge is low.	
88.19		
88.20	The toner cartridge is very low.	
88.29		
88.30	Replace the toner cartridge. Zero estimated pages remain.	
88.40	Toner cartridge hard stop.	
88.48		

## Non-supply user attendance messages

### Non-supply user attendance messages

Error code	Description	Action
34B	Short paper.	See <a href="#">Short paper service check on page 185</a> .
35A	Deficient memory.	See <a href="#">Insufficient memory service check on page 170</a> .
37A	Insufficient collation area.	
37C	Insufficient memory.	
38A	Memory full.	
39A	Complex page.	See <a href="#">Complex page service check on page 189</a> .

### Fax card service check

**Note:** These instructions apply only to printers that support analog fax. For more information, see [Supported fax on page 31](#).

1. Perform the following tests:
  - a. Make sure that the fax card port is free of damage.
  - b. Reseat the fax analog line.
  - c. Reseat the fax card cable on the controller board.
  - d. Perform a POR.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Replace the top cover. See [Top cover removal on page 351](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:
  - a. Reseat all the cables on the controller board.

- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

4. Replace the controller board. See [Controller board removal on page 322](#).

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Short paper service check

1. Perform the following tests:

- a. Make sure that the tray insert is properly inserted.
- b. Make sure that the paper type and size settings match the paper type and size set on the tray.
- c. Make sure that the duplex unit is properly inserted.
- d. Make sure that the paper size setting in the duplex unit matches the printer setting.
- e. Make sure that the front and rear doors are fully closed.
- f. Make sure that the output bin is free from obstructions.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Remove the imaging unit and toner cartridge, and then make sure that the paper path is free of jams and obstructions.
- b. Clear all rollers of dirt and contamination.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Perform a POR.
- b. Enter the Diagnostics menu, and then navigate to:

### **Input tray quick print > Tray 1 > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Make sure that the separator roller is free of dust and contamination.
- b. Make sure that the lift plate is properly working.
- c. Make sure that the paper guides are properly working.
- d. Check the tray insert for proper installation and damage.

Is the tray insert properly installed, and free of contamination and damage?

- **Yes:**  
Go to step 6.
- **No:**  
Go to the next step.

5. Replace the tray insert.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:

- a. Clear the duplex paper path of obstructions.
- b. Load the correct paper in the tray.
- c. Make sure that the paper size setting in the duplex unit matches the paper loaded in the tray.
- d. Enter the Diagnostics menu, and then navigate to:

### **Input tray quick print > Tray 1 > Duplex**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Remove, and then insert the duplex unit.
- b. Check the duplex unit gears for damage.
- c. Check the rollers and belts for wear and contamination.

Is the duplex unit properly installed and free of damage?

- **Yes:**  
Go to step 9.
- **No:**  
Go to the next step.

8. Replace the duplex unit.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

9. Perform the following tests:

- a. Reseat the sensor cable.
- b. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Sensor tests**

- c. Find the sensor (staging sensor S2).

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 12.
- **No:**  
Go to the next step.

10. Perform the following tests:

- a. Check the sensor for proper installation and damage.
- b. Check the alignment with the sensor flag.
- c. Check the sensor cable for proper connection and damage.

Is the sensor properly installed and free of damage?

- **Yes:**  
Go to step 12.
- **No:**  
Go to the next step.

11. Replace the sensor.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustment > Sensor tests**

- b. Find the following sensors:
  - Sensor (media present in tray1 S1)

- Sensor (input sensor S3)
- Sensor (fuser exit sensor S4)

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 15.

- **No:**  
Go to the next step.

13. Perform the following tests:

- a. Check the sensor flags for proper installation and damage.
- b. Check the sensor flags for proper alignment with the sensors.
- c. Check the sensor flag springs for proper installation and damage.

Are the sensor flags properly installed and free of damage?

- **Yes:**  
Go to step 15.

- **No:**  
Go to the next step.

14. Replace the damaged sensor flag.

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**  
The problem is solved.

15. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.

- **No:**  
Go to the next step.

16. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.

- **No:**  
The problem is solved.

## Insufficient memory service check

1. Perform the following tests:

- a. Perform a POR.
- b. Send a print job with no image.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Enter the Diagnostics menu, and then select **Advanced print quality samples**.
- b. Check the test pages for print quality defects.

Are there print quality defects?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Make sure that the printer is using the latest firmware version, and update if necessary.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Complex page service check

1. Perform the following tests:

- a. Perform a POR.
- b. Send a print job with no image.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Enter the Diagnostics menu, and then select **Advanced print quality samples**.
- b. Check the test pages for print quality defects.

Are there print quality defects?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

3. Make sure that the printer is using the latest firmware version, and update if necessary.

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

## Printer hardware errors

### 111 error messages

#### 111 error messages

Error code	Description	Action
111.20	Printhead error (mirror motor lock) was detected before the motor was turned on.	See <a href="#">Printhead error 1 service check on page 205</a> .
111.21	No printhead power (+5V) when the laser servo started.	
111.30	The printhead failed during power-on tests.	
111.31	Printhead error (no first HSYNC) was detected.	
111.32	Printhead error (lost HSYNC) was detected.	
111.33	Printhead error (lost HSYNC) was detected during servo.	
111.34	Printhead error (mirror motor lost lock) was detected.	
111.35	Printhead error (mirror motor never got first lock) was detected.	

Error code	Description	Action
111.36	Printhead error (mirror motor lock never stabilized) was detected.	See <a href="#">Printhead error 2 service check on page 206</a> .
111.37	Paper reached the sensor (input sensor S3) but the mirror motor was not locked.	
111.38	Paper reached the sensor (input sensor S3) but the printhead startup was not complete.	
111.40	The wrong printhead is installed.	See <a href="#">Printhead error 1 service check on page 205</a> .

## 121 errors

### 121 error messages

Error code	Description	Action
121.00	The fuser failed to reach temperature during warm-up.	See <a href="#">Fuser service check on page 193</a> .
121.01	Attempting to heat the fuser, but the fuser is not installed.	
121.02	Attempting to power up the fuser while it is too warm (belt: 50°C, lamp: 76°C) to execute EWC/line voltage detection after a Wrong Fuser Installed error had been previously declared.	
121.10	The fuser did not warm up enough to start EWC/line voltage detection (belt: 60°C, lamp: 88°C) within time-out (belt: 10 seconds, lamp: 90 seconds).	
121.11	The fuser took too long to reach the final EWC/line detection temperature (belt: 90°C, lamp: 149°C).	

Error code	Description	Action
121.12	The fuser never reached final EWC/line detection temperature (belt: 90°C, lamp: 149°C).	
121.13	The fuser heated too fast to the final EWC/line detection temperature (belt: 90°C, lamp: 149°C).	
121.20	The fuser high power trace heating rate from 165°C to 180°C exceeded the error threshold.	
121.22	Open fuser relay detected.	
121.28	The fuser failed to reach the EP warm-up temperature in time.	
121.31	The fuser is too hot.	
121.32	The fuser is too cold for too long while its power is at 100%.	
Error code	Description	Action
121.33	The fuser is too cold when paper is in the fuser.	See <a href="#">Fuser service check on page 193</a> .
121.34	<p>The fuser is too cold during steady state control when paper is not in the fuser.</p> <div> <p><b>Note:</b> This event can occur during printing or standby modes.</p> </div>	
121.50	The fuser went over the required temperature during a global over temperature check.	
121.52	The main thermistor temperature is out of range.	
121.53	The main thermistor temperature change rate is out of range.	

Error code	Description	Action
121.71	Open fuser main heater thermistor.	

### Fuser service check

1. Make sure that the voltage rating of the printer matches the power supply voltage of the electrical outlet that the printer is plugged into.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Make sure that the tray insert is properly inserted.
- b. Make sure that the paper type and size settings match the paper type and size set on the tray.
- c. Make sure that the duplex unit is properly inserted.
- d. Make sure that the paper size setting in the duplex unit matches the printer setting.
- e. Make sure that the front and rear doors are fully closed.
- f. Make sure that the output bin is free from obstructions.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Remove the imaging unit and toner cartridge, and then make sure that the paper path is free of jams and obstructions.
- b. Clear all rollers of dirt and contamination.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Perform a POR.
- b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Perform the following tests:

- a. Enter Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Motor tests**

- b. Select **Motor (transport drive)**.  
c. Open the rear door, and then check if the fuser exit rollers turn.  
d. Open the fuser access door, and then check if the hot rollers turn.

Are the rollers properly working?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 7.

6. Perform the following tests:

- a. Check the fuser cables for proper connection and damage.  
b. Check the fuser access door for damage.  
c. Check if the fuser gears are in proper contact with the drive gears.  
d. Make sure that the fuser is compatible with the LVPS.  
e. Check the fuser for proper installation and damage.

Is the fuser properly installed and free of damage?

- **Yes:**  
Go to step 8.
- **No:**  
Go to the next step.

7. Replace the fuser. See [Fuser removal on page 348](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Motor tests**

- b. Select **Fan (main)**.  
c. Check if the fan turns.

Did the fan turn?

- **Yes:**  
Go to the next step.

- **No:**

The problem is solved.

9. Perform the following tests:

- Reseat the fan cable.
- Make sure that the cable is properly connected.
- Make sure that the fan and gears are properly installed.
- Make sure that the fan is free of grease contamination.

Does the problem remain?

- **Yes:**

Go to step 11.

- **No:**

Go to the next step.

10. Replace the fan. See .

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

11. Replace the damaged cable.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

12. Perform the following tests:

- Reseat the cables connected to the LVPS.
- Check the cables for proper connection and damage.
- Check the fuse for continuity.
- Check the electronic components on the LVPS for damage.
- Check the LVPS for proper installation and damage.

Is the LVPS properly installed and free of damage?

- **Yes:**

Go to step 15.

- **No:**

Go to the next step.

13. Perform the following tests:

- Make sure that the LVPS is compatible with the fuser and the printer.
- Make sure that there is voltage coming out of the fuser connector.
- Make sure that the correct power input voltage is applied.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

14. Replace the LVPS. See [LVPS removal on page 326](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

15. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Motor tests**

- b. Select **Motor (transport drive)**.

Did the motor run?

- **Yes:**

Go to the next step.

- **No:**

Go to step 17.

16. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

- b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Duplex > Single**

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

17. Perform the following tests:

- a. Make sure that the main drive is properly installed and free of damage.
- b. Make sure that the main drive gears are properly installed.
- c. Make sure that the drive gears are in proper contact with the gear that they are driving.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

18. Replace the main drive. See [Main drive removal on page 331](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

19. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

20. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## 126 errors

### 126 error messages

Error code	Description	Action
126.05	The LVPS dropped while not sleeping.	See <a href="#">LVPS service check on page 198</a> .
126.06	An LVPS 25 V line error was detected.	
126.07	An LVPS 5 V rail was down during POR.	
126.12	LVPS mismatch. A 120 V power supply is installed but the controller board reports a 220 V power supply.	See <a href="#">LVPS service check on page 198</a> .  <b>Note:</b> Go to step 3 directly.
126.13	LVPS mismatch. A 230 V power supply is installed but the controller board reports a 110 V or 100 V power supply.	

## LVPS service check

1. Perform the following tests:

- a. Remove the imaging unit and toner cartridge, and then make sure that the paper path is free of jams and obstructions.
- b. Clear all rollers of dirt and contamination.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Perform a POR.
- b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Reseat the cables connected to the LVPS.
- b. Check the cables for proper connection and damage.
- c. Check the fuse for continuity.
- d. Check the electronic components on the LVPS for damage.
- e. Check the LVPS for proper installation and damage.

Is the LVPS properly installed and free of damage?

- **Yes:**  
Go to step 6.
- **No:**  
Go to the next step.

4. Perform the following tests:

- a. Make sure that the LVPS is compatible with the fuser and the printer.
- b. Make sure that there is voltage coming out of the fuser connector.
- c. Make sure that the correct power input voltage is applied.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Replace the LVPS. See [LVPS removal on page 326](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

7. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## 140 errors

### 140 error messages

Error code	Description	Action
140.82	Motor (transport drive) failure.	See <a href="#">Motor (transport drive) service check on page 199</a> .

### Motor (transport drive) service check

1. Perform the following tests:

- a. Make sure that the tray insert is properly inserted.
- b. Make sure that the paper type and size settings match the paper type and size set on the tray.
- c. Make sure that the duplex unit is properly inserted.
- d. Make sure that the paper size setting in the duplex unit matches the printer setting.
- e. Make sure that the front and rear doors are fully closed.
- f. Make sure that the output bin is free from obstructions.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Remove the imaging unit and toner cartridge, and then make sure that the paper path is free of jams and obstructions.
- b. Clear all rollers of dirt and contamination.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Perform a POR.
- b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Motor tests**

- b. Select **Motor (transport drive)**.

Does the motor run?

- **Yes:**  
Go to step 6.
- **No:**  
Go to the next step.

5. Perform the following tests:

- a. Reseat the motor cable at both ends.
- b. Make sure that the motor gear is properly aligned with the drive gears.
- c. Check the motor for proper installation and damage.

Is the motor properly installed and free of damage?

- **Yes:**  
Go to the next step.

- **No:**  
Contact the next level of support.
- 6. Check the cables for proper connection and damage.  
Are the cables properly connected and free of damage?
  - **Yes:**  
Go to step 8.
  - **No:**  
Go to the next step.
- 7. Replace the damaged cable.  
Does the problem remain?
  - **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
- 8. Perform the following tests:
  - a. Reseat all the cables on the controller board.
  - b. Check if the controller board LED lights up.
  - c. Check the controller board for proper installation and damage.Is the controller board properly installed and free of damage?
  - **Yes:**  
Contact the next level of support.
  - **No:**  
Go to the next step.
- 9. Replace the controller board. See [.Controller board removal on page 322](#)  
Does the problem remain?
  - **Yes:**  
Contact the next level of support.
  - **No:**  
The problem is solved.

## 6yy errors

### 6yy error messages

Error code	Description	Action
600.01	Toner tally never received.	See <a href="#">Printer declared jam service check on page 203</a> .
600.02	The printhead is not ready to image.	See <a href="#">Printhead error 1 service check on page 205</a> .

Error code	Description	Action
600.04	Duplex paper was never picked.	See <a href="#">Printer declared jam service check on page 203</a> .
600.05	Invalid printhead NVRAM type.	See <a href="#">Printhead error 1 service check on page 205</a> .
600.06	No response from the paper port driver.	See <a href="#">Printer declared jam service check on page 203</a> .
600.07	Page is at the image point before the EP is ready.	See <a href="#">Printhead error 2 service check on page 206</a> .
600.08	Paper jam is caused by a printhead error.	
600.09	EP update error was detected.	Restart the print job. If the error persists, then contact the next level of support.
600.10	EP started a run-in late with less time than it takes to do the motor ramp.	See <a href="#">Printer declared jam service check on page 203</a> .
600.95	<p>The printer intentionally declared a jam.</p> <div> <p><b>Note:</b> This event is typically used to prevent a kiosk user from printing free pages.</p> </div>	
611.02	An Input ISR error occurred and the printhead was not ready.	Restart the print job. If the error persists, then contact the next level of support.
611.32	Lost HSYNC errors were detected. Laser safety interlock system may be the cause.	
611.33	Lost HSYNC during servo.	
611.34	A mirror motor lock error was detected.	
611.35	Mirror motor never got first lock.	See <a href="#">Printhead error 1 service check on page 205</a> .
611.36	Mirror motor lock never stabilized.	

Error code	Description	Action
611.37	Paper reached the sensor (input sensor S3) but the mirror motor was not locked.	
611.38	Paper reached the sensor (input sensor S3) but the printhead startup was not complete.	
621.01	The fuser heater was not hot enough when the paper entered the fuser nip.	Restart the print job. If the error persists, then contact the next level of support.

### Printer declared jam service check

1. Perform the following tests:

- Shake the toner cartridge.
- Clean the toner cartridge smart chip contacts, and then check the contacts for damage.
- Clean the toner cartridge spring contacts, and then check the contacts for damage.
- Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Replace the toner cartridge.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- Shake the imaging unit.
- Clean the imaging unit smart chip contacts, and then check the contacts for damage.
- Clean the imaging unit spring contacts, and then check the contacts for damage.
- Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Check the smart chip for proper installation and damage.

Is the smart chip properly installed and free of damage?

- **Yes:**  
Go to step 6.
- **No:**  
Go to the next step.

5. Replace the imaging unit

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:

- a. Turn off the printer.
- b. Unplug the power cord.
- c. Wait for 20 seconds, and then plug the power cord.
- d. Turn on the printer.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

8. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Printhead error 1 service check

1. Perform the following tests:

- a. Turn off the printer.
- b. Unplug the power cord.
- c. Wait for 20 seconds, and then plug the power cord.
- d. Turn on the printer.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Reseat the two printhead cables at both ends.
- b. Check the printhead cables for proper connection.
- c. Check the printhead for proper installation and damage.
- d. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Make sure that the printhead lens is clean and free of contamination.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Replace the printhead. See [.Printhead removal on page 363](#)

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

6. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

8. Replace the controller board. See [.Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Printhead error 2 service check

1. Perform the following tests:

- a. Make sure that the tray insert is properly inserted.
- b. Make sure that the paper is properly loaded in the tray.
- c. Make sure that the paper type and size settings match the paper type and size set on the tray.
- d. Make sure that the lift plate is properly working.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Reseat the sensor cable.
- b. Enter the Diagnostics menu, and then navigate to:  
**Printer diagnostics & adjustments > Sensor tests**
- c. Find the sensor (staging sensor S2).

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 5.

- **No:**  
Go to the next step.

3. Perform the following tests:

- a. Check the sensor for proper installation and damage.
- b. Check the alignment with the sensor flag.
- c. Check the sensor cable for proper connection and damage.

Is the sensor properly installed and free of damage?

- **Yes:**  
Go to step 5.
- **No:**  
Go to the next step.

4. Replace the sensor.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustment > Sensor tests**

- b. Find the following sensors:

- Sensor (media present in tray1 S1)
- Sensor (input sensor S3)
- Sensor (fuser exit sensor S4)

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 8.
- **No:**  
Go to the next step.

6. Perform the following tests:

- a. Check the sensor flags for proper installation and damage.
- b. Check the sensor flags for proper alignment with the sensors.
- c. Check the sensor flag springs for proper installation and damage.

Are the sensor flags properly installed and free of damage?

- **Yes:**  
Go to step 8.
- **No:**  
Go to the next step.

7. Replace the damaged sensor flag.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Perform the following tests:

- a. Reseat the two printhead cables at both ends.
- b. Check the printhead cables for proper connection.
- c. Check the printhead for proper installation and damage.
- d. Perform a print test.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

9. Make sure that the printhead lens is clean and free of contamination.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

10. Replace the printhead. See [.Printhead removal on page 363](#)

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

11. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**  
Go to step 13.
- **No:**  
Go to the next step.

12. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

13. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

14. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Procedure before starting the 9yy service checks

Retrieve certain information that helps your next level of support in diagnosing the problem before replacing the controller board.

### **Warning—Potential Damage**

Do not replace the controller board unless instructed by your next level of support.

1. Collect the history information and firmware logs (Fwdebug and logs.tar.gz) from the SE menu.
2. Collect the settings from the Menu Settings Page.
3. Collect information from the user.

**Note:** Not all of the items are retrievable from the printer that you are working on.

## A. Collecting the history information from the SE menu

**Note:** Make sure that your printer is connected to a network or to a print server.

1. Open a web browser, type `http://printer_IP_address/se`, and then press **Enter**.

**Note:**

- printer\_IP\_address is the TCP/IP address of the printer.
- se is required to access the printer diagnostic information.

2. Click **History Information**, copy all information, and then save it as a text file.
3. E-mail the text file to your next level of support.

## B. Collecting the firmware logs (Fwdebug and logs.tar.gz) from the SE menu

**Note:**

- Make sure that your printer is connected to a network or to a print server.
- Some printers are designed to restart automatically after a 9yy error. On these printers, you can retrieve the secondary crash code information using the SE menu.

1. Open a web browser, type `http://printer_IP_address/se`, and then press **Enter**.
2. Click **Logs Gzip Compressed**.

**Note:** A logs.tar.gz file is saved to the Downloads folder. The file may take several minutes to save. You may rename the file if a logs.tar.gz already exists in the Downloads folder.

3. E-mail the logs to your next level of support.

**Note:** To download the FWdebug log to a flash drive, see [General SE on page 284](#).

## C. Collecting the settings from the Menu Settings Page

**Note:** The Menu Settings Page is different for each printer. For more information, see the printer *User's Guide*. Your next level of support will tell you which page they want to see.

### Copying the Menu Settings Page from the Embedded Web Server (EWS)

**Note:** Make sure that your printer is connected to a network or to a print server.

1. Open a web browser, type `http://printer_IP_address`, and then press **Enter**.
2. Click **Settings**, and then select one of the settings pages from the links shown on the page.
3. Copy all the information, and then save it as a text file.
4. E-mail the text file to your next level of support.

### Printing the Menu Settings Page

1. From the control panel, navigate to:  
**Settings > Reports > Menu Settings Page**
2. Scan the report, and then send it to your next level of support.

## D. Collecting information from the user

Ask the user for information about the following:

- Print job being run
- Operating system being used
- Print driver being used
- Other information on what was happening when the 9yy error occurred

## 9yy errors

### 9yy error messages

Error code	Description	Action
900.xx	Unrecoverable RIP software error/illegal trap.	See <a href="#">900 error service check on page 214</a> .
910.xx–919.xx	An engine error occurred.	See <a href="#">Engine error service check on page 218</a> .
938.04	Supplies security is not enabled.	See <a href="#">Black imaging unit, photoconductor smart chip, or sensor problem service check on page 163</a> .
940	RIP to engine communication failure.	See <a href="#">Engine error service check on page 218</a> .
941	Engine card failure.	
948	Engine card—Pel clock check failed.	

Error code	Description	Action
949	Engine card—Delay line calibration failure.	
950	<p>Non-Generic FRU installed.</p> <p>Mismatch between system NVRAM part and mirror NVRAM part.</p> <p><b>Note:</b> .xx points to the setting that does not match.</p>	
952	<p>A recoverable NVRAM cyclic redundancy check error occurred.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• n is the offset at which the error occurred.</li> <li>• Performing a POR clears the error.</li> </ul>	
953	NVRAM chip failure with mirror part.	
954	NVRAM chip failure with system part.	
955	<p>The NAND flash failed the cyclic redundancy check or the NAND experienced an uncorrectable multi-bit failure.</p> <p><b>Note:</b> &lt;LOC&gt; indicates the source of the failure.</p>	
956	RIP card failure—Processor failure.	

Error code	Description	Action
957	RIP card failure—ASIC failure.	
958	Controller board NAND failure.	
959	Invalid firmware—Service system board.	
960	RAM memory error—RAM soldered on the card is bad.	
961	RAM memory error—RAM in slot 1 is bad.	
962	RAM memory error—RAM in slot 2 is bad.	
963	RAM memory error—RAM in slot 3 is bad.	
964	Download emulation cyclic redundancy check error—Checksum failure detected in the emulation header or emulation file.	
Error code	Description	Action
975	Network error—Unrecognizable network port.	See <a href="#">Network software error service check on page 219</a> .
976	Network error—Unrecoverable software error in the network port.	
978	Network error—Bad checksum while programming the network port.	
979	Network error—Flash parts failed while programming the network port.	
980	The engine is experiencing an unreliable communication.	See <a href="#">Engine error service check on page 218</a> .
981	Engine protocol violation is detected.	
982	Communications error is detected.	

Error code	Description	Action
983	Invalid command received.	
984	Invalid command parameter received.	
985	RFID media option hardware error.	
990	An equipment check condition has occurred in the printer, but the printer is unable to identify the exact component failure.	
991	A controller board equipment check is detected.	
992	General software error.	

### 900 error service check

1. Perform the following tests:

- a. Perform a POR.
- b. Check if a 900.xx error code appears on the display.

Does a 900.xx error code appear?

- **Yes:**  
Go to step 4.
- **No:**  
Go to the next step.

2. Check if another type of error code appears instead of the 900.xx error code.

Does a different error code appear?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 4.

3. See the error code and its service instructions in the printer *Service Manual*.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Turn off the printer.

- b. At the rear of the printer, disconnect the network cable, USB cable, and fax line.
- c. Turn on the printer.

Does the problem remain?

- **Yes:**  
Go to step 12.
- **No:**  
Go to the next step.

5. Perform the following tests:

- a. From the control panel, navigate to the **Reports** menu.
- b. Select **Device Statistics** and **Device Settings**.

Does the problem remain?

- **Yes:**  
Go to step 12.
- **No:**  
Go to the next step.

6. Check if the printer has a scanner.

Does the printer have a scanner?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 8.

7. Using the scanner, perform a one-page copy job in color.

Does the problem remain?

- **Yes:**  
Go to step 12.
- **No:**  
Go to the next step.

8. Perform the following tests:

- a. Turn off the printer.
- b. At the rear of the printer, connect the network cable, USB cable, and fax line.
- c. Turn on the printer.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 10.

9. Perform the following tests:

- a. Start the printer in **Invalid engine mode**. See .
- b. Check if an Invalid Engine Code message appears.

Does an Invalid Engine Code message appear?

- **Yes:**  
Go to the next step.
- **No:**  
Contact the next level of support.

10. Using the Device Settings report that is printed in step 5, check if the firmware level is older than the latest available version.

Is the firmware version older, and does the customer agree to update the firmware?

- **Yes:**  
Go to the next step.
- **No:**  
Contact the next level of support.

11. Update the firmware to the latest version.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Turn off the printer.
- b. Reseat all FFC type cables on the controller board, and then make sure that the cables are properly connected.
- c. Make sure that all the cables on the controller board and scanner are properly connected.
- d. Turn on the printer.
- e. From the control panel, navigate to the **Reports** menu, and then select **Device Statistics** and **Device Settings**.
- f. For MFPs, perform a one-page copy and scan job in color.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

13. Check if a hard disk is installed.

Is a hard disk installed?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 17.

14. Perform the following tests:

- a. Check for buffered print jobs, and then delete them.
- b. Perform a POR.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

15. Perform the following tests:
- a. Turn off the printer.
  - b. Uninstall the hard disk.
  - c. Perform a POR.

Does the problem remain?

- **Yes:**  
Go to step 17.
- **No:**  
Go to the next step.

16. Replace the hard disk.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

17. Check if the printer has any of the following components installed:

- Memory options
- Fax card
- Modem
- Wireless and network option cards

Is any of the components installed?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 21.

18. Perform the following tests:
- a. Turn off the printer.
  - b. Remove all the installed components.
  - c. Turn on the printer.

Does the problem remain?

- **Yes:**  
Go to step 21.
- **No:**  
Go to the next step.

19. Perform the following tests:
- a. Turn off the printer.
  - b. Install the following components one at a time:

- Memory options
- Fax card
- Modem
- Wireless and network option cards

**Note:** Make sure to perform a POR after installing each component.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

20. Perform the following tests:

- a. Turn off the printer.
- b. Replace the components that caused the error.
- c. Turn on the printer.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

21. Replace the controller board. See [.Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Engine error service check

1. Perform the following tests:

- a. Turn off the printer.
- b. Unplug the power cord.
- c. Wait for 20 seconds, and then plug the power cord.
- d. Turn on the printer.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**

The problem is solved.

2. Make sure that the printer is using the latest firmware version, and update if necessary.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

3. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**

Go to step 5.

- **No:**

Go to the next step.

4. Replace the damaged cable.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

5. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**

Contact the next level of support.

- **No:**

Go to the next step.

6. Replace the controller board. See [.Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

## Network software error service check

1. Perform the following tests:

- a. Turn off the printer.
- b. Unplug the power cord.

- c. Wait for 20 seconds, and then plug the power cord.
- d. Turn on the printer.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Check the network cable for proper connection and damage.
- b. Make sure that the network cable contacts are free from dirt or corrosion.
- c. Make sure that the network cable is active.

Is the network cable properly connected and free of corrosion and damage?

- **Yes:**  
Go to step 4.
- **No:**  
Go to the next step.

3. Replace the network cable.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Check the controller board ports and pins for damage.

Are the controller board ports and pins free of damage?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 9.

5. Perform the following tests:

- a. Make sure that the Wi-Fi is connected to the network.
- b. Make sure that the Wi-Fi setting is correct.
- c. Check the Wi-Fi antenna for proper installation and damage.

Is the Wi-Fi antenna properly installed and free of damage?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 9.

6. Make sure that the printer is using the latest firmware version, and update if necessary.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

7. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**

Go to step 9.

- **No:**

Go to the next step.

8. Replace the damaged cable.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

9. Perform the following tests:

a. Reseat all the cables on the controller board.

b. Check if the controller board LED lights up.

c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**

Contact the next level of support.

- **No:**

Go to the next step.

10. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

## ADF/Scanner hardware errors

### 84y error messages

Error code	Description	Action
840.01	The scanner is disabled by the administrator.	See <a href="#">Scanner disabled and scanner communication error service check on page 231</a> .

Error code	Description	Action
840.02	The scanner is disabled for other reasons. For example, invalid license and too many hardware errors.	
842.00	Non-responsive scanner communication failure.	
842.01	Hardware protocol scanner communication failure.	
842.02	Logical protocol scanner communication failure.	
843.00	<ul style="list-style-type: none"> <li>• Scanner mechanical failure.</li> <li>• The flatbed carriage failed to return to the home position.</li> </ul>	See <a href="#">Flatbed home position service check on page 233</a> .
845.02	Scanner front side communication failure.	See <a href="#">Scanner disabled and scanner communication error service check on page 231</a> .
845.03	Scanner back side communication failure.	

## Sensor (scan) service check

### 1. Perform the following tests:

- Open the ADF cover, and then remove the jammed paper.
- Make sure that the paper path is free of obstructions.
- Raise the ADF assembly, and then make sure that the scan area is free of dust and obstructions.
- Make sure that the scanner paper setting matches the paper loaded.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

### 2. Perform the following tests:

- Clean the ADF pick rollers and separator pad.
- Enter the Diagnostics menu, and then navigate to:

**Scanner diagnostics > Feed test**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Check the ADF pick and feed rollers for wear, damage, and contamination.
- b. Check the ADF pick separator pad for wear, damage, contamination, and spring load.
- c. Check if the ADF cover properly closes.

Is the ADF pick assembly properly installed and free of damage?

- **Yes:**  
Go to step 5.
- **No:**  
Go to the next step.

4. Replace the ADF pick assembly. See [ADF pick assembly removal on page 374](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Scanner diagnostics > Sensor tests**

- b. Find the sensor (ADF scan).

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 8.
- **No:**  
Go to the next step.

6. Perform the following tests:

- a. Make sure that the sensor flag is free of dust or debris.
- b. Reseat all the cables on the controller board.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Replace the ADF assembly. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#) or [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

8. Perform the following tests:

- Make sure that the ADF cover properly closes.
- Check the ADF scan sensor flag for proper installation and damage.

Is the sensor flag properly installed and free of damage?

- **Yes:**

Go to step 10.

- **No:**

Go to the next step.

9. Replace the ADF assembly. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#) or [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

10. Perform the following tests:

- Make sure that the ADF paper path rollers are properly installed and free of damage.
- Make sure that the rollers are free of dust and contamination.

Are the rollers properly installed and free of damage?

- **Yes:**

Go to step 12.

- **No:**

Go to the next step.

11. Replace the ADF assembly. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#) or [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

12. Perform the following tests:

- Enter the Diagnostics menu, and then navigate to:

**Scanner diagnostics > Motor tests**

- Select **Motor (ADF transport)**.

Does the motor run?

- **Yes:**

Go to step 14.

- **No:**

Go to the next step.

13. Perform the following tests:

- Reseat the ADF cable.
- Check the ADF cable for proper connection and damage.
- Check the ADF assembly for proper installation and damage.
- Check the ADF cover sensor for damage.

Is the ADF assembly properly installed and free of damage?

- **Yes:**

Go to step 15.

- **No:**

Go to the next step.

14. Replace the ADF assembly. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#) or [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

15. Perform the following tests:

- Reseat all the cables on the controller board.
- Check if the controller board LED lights up.
- Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**

Contact the next level of support.

- **No:**

Go to the next step.

16. Replace the controller board. See [Controller board removal on page 322](#).

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

## Sensor (ADF top door interlock) service check

1. Perform the following tests:

- Open the ADF cover, and then remove the jammed paper.
- Make sure that the paper path is free of obstructions.
- Raise the ADF assembly, and then make sure that the scan area is free of dust and obstructions.

- d. Make sure that the scanner paper setting matches the paper loaded.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Scanner diagnostics > Sensor tests**

- b. Find the sensor (ADF top door interlock).

Does the sensor status change while toggling the sensor?

- **Yes:**  
Go to step 5.
- **No:**  
Go to the next step.

3. Perform the following tests:

- a. Make sure that the switch actuator is properly installed and free of damage.
- b. Reseat all the ADF and flatbed scanner cables on the controller board.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Replace the ADF assembly. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#) or [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Check the ADF cover sensor flag for proper installation and damage.

Is the sensor flag properly installed and free of damage?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

6. Replace the ADF pick assembly. See [ADF pick assembly removal on page 374](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

7. Perform the following tests:

- a. Clean the ADF pick rollers and separator pad.
- b. Enter the Diagnostics menu, and then navigate to:

**Scanner diagnostics > Feed test**

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

8. Perform the following tests:

- a. Check the ADF pick and feed rollers for wear, damage, and contamination.
- b. Check the ADF pick separator pad for wear, damage, contamination, and spring load.
- c. Check if the ADF cover properly closes.

Is the ADF pick assembly properly installed and free of damage?

- **Yes:**

Go to step 10.

- **No:**

Go to the next step.

9. Replace the ADF pick assembly. See [ADF pick assembly removal on page 374](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

10. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Scanner diagnostics > Motor tests**

- b. Select **Motor (ADF transport)**.

Does the motor run?

- **Yes:**

Go to step 12.

- **No:**

Go to the next step.

11. Perform the following tests:

- a. Reseat the ADF cable.
- b. Check the ADF cable for proper connection and damage.
- c. Check the ADF assembly for proper installation and damage.

- d. Check the ADF cover sensor for damage.

Is the ADF assembly properly installed and free of damage?

- **Yes:**  
Go to step 13.
- **No:**  
Go to the next step.

12. Replace the ADF assembly. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#) or [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

13. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

14. Replace the controller board. See [Controller board removal on page 322](#).

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## ADF feed error service check

1. Perform the following tests:

- a. Open the ADF cover, and then remove the jammed paper.
- b. Make sure that the paper path is free of obstructions.
- c. Raise the ADF assembly, and then make sure that the scan area is free of dust and obstructions.
- d. Make sure that the scanner paper setting matches the paper loaded.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**

The problem is solved.

2. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Scanner diagnostics > Sensor tests**

- b. Find the sensor (ADF media present).

Does the sensor status change while toggling the sensor?

- **Yes:**

Go to step 5.

- **No:**

Go to the next step.

3. Perform the following tests:

- a. Make sure that the paper present sensor actuator is properly installed and free of damage.
- b. Make sure that the actuator is properly aligned with the sensor.
- c. Reseat all the cables on the controller board.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

4. Replace the ADF assembly. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#) or [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

5. Check the ADF paper present sensor flag for proper installation and damage.

Is the sensor flag properly installed and free of damage?

- **Yes:**

Go to step 7.

- **No:**

Go to the next step.

6. Replace the ADF assembly. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#) or [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

7. Perform the following tests:

- a. Clean the ADF pick rollers and separator pad.
- b. Enter the Diagnostics menu, and then navigate to:

**Scanner diagnostics > Feed test**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Perform the following tests:

- a. Check the ADF pick and feed rollers for wear, damage, and contamination.
- b. Check the ADF pick separator pad for wear, damage, contamination, and spring load.
- c. Check if the ADF cover properly closes.

Is the ADF pick assembly properly installed and free of damage?

- **Yes:**  
Go to step 10.
- **No:**  
Go to the next step.

9. Replace the ADF pick assembly. See [ADF pick assembly removal on page 374](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

10. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Scanner diagnostics > Motor tests**

- b. Select **Motor (ADF transport)**.

Does the motor run?

- **Yes:**  
Go to step 12.
- **No:**  
Go to the next step.

11. Perform the following tests:

- a. Reseat the ADF cable.
- b. Check the ADF cable for proper connection and damage.
- c. Check the ADF assembly for proper installation and damage.
- d. Check the ADF cover sensor for damage.

Is the ADF assembly properly installed and free of damage?

- **Yes:**  
Go to step 13.
  - **No:**  
Go to the next step.
12. Replace the ADF assembly. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#) or [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
13. Perform the following tests:
- a. Reseat all the cables on the controller board.
  - b. Check if the controller board LED lights up.
  - c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
  - **No:**  
Go to the next step.
14. Replace the controller board. See [Controller board removal on page 322](#).

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Scanner disabled and scanner communication error service check

1. Perform the following tests:
  - a. Open the ADF cover, and then remove the jammed paper.
  - b. Make sure that the paper path is free of obstructions.
  - c. Raise the ADF assembly, and then make sure that the scan area is free of dust and obstructions.
  - d. Make sure that the scanner paper setting matches the paper loaded.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:
  - a. Reseat all the scanner cables on the controller board.
  - b. Perform a POR.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:
  - a. Enter the Diagnostics menu, and then navigate to:

**Scanner diagnostics > Motor tests**

- b. Select **Motor (ADF transport)**.

Does the motor run?

- **Yes:**  
Go to step 5.
- **No:**  
Go to the next step.

4. Perform the following tests:
  - a. Reseat the ADF cable.
  - b. Check the ADF cable for proper connection and damage.
  - c. Check the ADF assembly for proper installation and damage.
  - d. Check the ADF cover sensor for damage.

Is the ADF assembly properly installed and free of damage?

- **Yes:**  
Go to step 6.
- **No:**  
Go to the next step.

5. Replace the ADF assembly. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#) or [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:
  - a. Reseat all the scanner cables on the controller board.
  - b. Enter the Diagnostics menu, and then navigate to:

**Scanner diagnostics > Motor tests > Flatbed scanner**

Did the motor run?

- **Yes:**  
Go to step 9.

- **No:**  
Go to the next step.

7. Perform the following tests:

- a. Make sure that the flatbed scanner cables are properly connected and free of damage.
- b. Check the flatbed scanner for proper installation and damage.

Is the flatbed scanner properly installed and free of damage?

- **Yes:**  
Go to step 9.
- **No:**  
Go to the next step.

8. Replace the flatbed scanner. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#) or [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

9. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

10. Replace the controller board. See [Controller board removal on page 322](#).

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Flatbed home position service check

1. Raise the ADF assembly, and then make sure that the scan area is free of dust and obstructions.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

2. Perform the following tests:

- Reseat all the scanner cables on the controller board.
- Perform a POR.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

3. Perform the following tests:

- Reseat all the scanner cables on the controller board.
- Enter the Diagnostics menu, and then navigate to:

**Scanner diagnostics > Motor tests > Flatbed scanner**

Did the motor run?

- **Yes:**

Go to step 6.

- **No:**

Go to the next step.

4. Perform the following tests:

- Make sure that the flatbed scanner cables are properly connected and free of damage.
- Check the flatbed scanner for proper installation and damage.

Is the flatbed scanner properly installed and free of damage?

- **Yes:**

Go to step 6.

- **No:**

Go to the next step.

5. Replace the flatbed scanner. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#) or [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

6. Perform the following tests:

- Reseat all the cables on the controller board.
- Check if the controller board LED lights up.
- Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
  - **No:**  
Go to the next step.
7. Replace the controller board. See [Controller board removal on page 322](#).

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Other symptoms

### Base printer symptoms

### Base printer symptoms

Symptom	Action
Front door is closed or open.	See <a href="#">Door switch service check on page 235</a> .
Tray 1 is empty.	See <a href="#">Load tray 1 with A4 plain paper service check on page 237</a> .
Paper did not arrive in the bin.	See <a href="#">Paper did not arrive in the bin service check on page 239</a> .
Tray insert is obstructed.	See <a href="#">Tray insert obstructed service check on page 242</a> .
Unable to remove the toner cartridge.	See <a href="#">Unable to remove toner cartridge service check on page 243</a> .
No display.	See <a href="#">No display service check on page 245</a> .
No power.	See <a href="#">No power service check on page 246</a> .

### Door switch service check

1. Perform the following tests:
    - a. Check the front door flag for damage.
    - b. Check the front door hinge for damage.
- Are the front door flag and hinge free of damage?

- **Yes:**  
Go to step 3.

- **No:**

Go to the next step.

2. Replace the front door. See [Rear door removal on page 345](#)

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

3. Perform the following tests:

- a. Check the HVPS characterization.
- b. Reseat the HVPS cables.
- c. Check the HVPS cables for proper installation and damage.
- d. Check the HVPS spring contact for proper connection to the board.
- e. Check the door switch for damage and proper alignment.

Is the HVPS properly installed and free of damage?

- **Yes:**

Go to step 5.

- **No:**

Go to the next step.

4. Replace the HVPS. See [HVPS removal on page 327](#).

**Note:** Make sure to perform the HVPS characterization when replacing the HVPS.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

5. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check the controller board for proper installation and damage.
- c. Check if the controller board LED lights up.

Is the controller board properly installed and free of damage?

- **Yes:**

Contact the next level of support.

- **No:**

Go to the next step.

6. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

## Load tray 1 with A4 plain paper service check

1. Perform the following tests:

- a. Make sure that the tray insert is properly inserted.
- b. Make sure that the paper is properly loaded in the tray.
- c. Make sure that the paper type and size settings match the paper type and size set on the tray.
- d. Make sure that the lift plate is properly working.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

2. Perform the following tests:

- a. Reseat the sensor cable.
- b. Enter the Diagnostics menu, and then navigate to:  
**Printer diagnostics & adjustments > Sensor tests**
- c. Find the sensor (paper present).

Does the sensor status change while toggling the sensor?

- **Yes:**

Go to step 5.

- **No:**

Go to the next step.

3. Perform the following tests:

- a. Check the sensor for proper installation and damage.
- b. Check the alignment of the sensor with the sensor flag.
- c. Check the sensor cable for proper connection and damage.

Is the sensor properly installed and free of damage?

- **Yes:**

Go to step 5.

- **No:**

Go to the next step.

4. Replace the sensor. See [Sensor \(paper present\) removal on page 366](#).

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

5. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustment > Sensor tests**

- b. Find the following sensors:

- Sensor (media present in tray1 S1)
- Sensor (input sensor S3)
- Sensor (fuser exit sensor S4)

Does the sensor status change while toggling the sensor?

- **Yes:**

Go to step 8.

- **No:**

Go to the next step.

6. Perform the following tests:

- a. Check the sensor flags for proper installation and damage.
- b. Check the sensor flags for proper alignment with the sensors.
- c. Check the sensor flag springs for proper installation and damage.

Are the sensor flags properly installed and free of damage?

- **Yes:**

Go to step 8.

- **No:**

Go to the next step.

7. Replace the damaged sensor flag.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

8. Perform the following tests:

- a. Make sure that the separator roller is free of dust and contamination.
- b. Make sure that the lift plate is properly working.
- c. Make sure that the paper guides are properly working.
- d. Check the tray insert for proper installation and damage.

Is the tray insert properly installed, and free of contamination and damage?

- **Yes:**

Go to step 10.

- **No:**

Go to the next step.

9. Replace the tray insert.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

10. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**  
Go to step 12.
- **No:**  
Go to the next step.

11. Replace the damaged cable.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

13. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Paper did not arrive in the bin service check

1. Perform the following tests:

- a. Make sure that the tray insert is properly inserted.
- b. Make sure that the paper type and size settings match the paper type and size set on the tray.
- c. Make sure that the duplex unit is properly inserted.

- d. Make sure that the paper size setting in the duplex unit matches the printer setting.
- e. Make sure that the front and rear doors are fully closed.
- f. Make sure that the output bin is free from obstructions.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Remove the imaging unit and toner cartridge, and then make sure that the paper path is free of jams and obstructions.
- b. Clear all rollers of dirt and contamination.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Perform a POR.
- b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Check the rear door for proper installation and damage.

Is the door properly installed and free of damage?

- **Yes:**  
Go to step 6.
- **No:**  
Go to the next step.

5. Replace the rear door. See [.Bottom rear door removal on page 347](#)

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

### Printer diagnostics & adjustment > Motor tests

- b. Select **Motor (transport)**.
- c. Check if the exit roller turns.

Did the exit roller turn?

- **Yes:**  
Go to step 9.
- **No:**  
Go to the next step.

7. Perform the following tests:

- a. Make sure that the redrive gears are in proper contact with the printer drive gears.
- b. Check the redrive gears for proper installation and damage.
- c. Check the roller for wear, contamination, and damage.

Is the redrive properly installed and free of damage?

- **Yes:**  
Go to step 9.
- **No:**  
Go to the next step.

8. Replace the redrive. See [.Redrive removal on page 347](#)

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

9. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

### Printer diagnostics & adjustments > Motor tests

- b. Select **Motor (transport drive)**.

Does the motor run?

- **Yes:**  
Go to step 11.
- **No:**  
Go to the next step.

10. Perform the following tests:

- a. Reseat the motor cable at both ends.
- b. Make sure that the motor gear is properly aligned with the drive gears.
- c. Check the motor for proper installation and damage.

Is the motor properly installed and free of damage?

- **Yes:**  
Go to the next step.

- **No:**  
Contact the next level of support.

11. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

- b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Duplex > Single**

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

12. Perform the following tests:

- a. Make sure that the main drive is properly installed and free of damage.
- b. Make sure that the main drive gears are properly installed.
- c. Make sure that the drive gears are in proper contact with the gear they are driving.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

13. Replace the main drive. See [Main drive removal on page 331](#).

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Tray insert obstructed service check

1. Perform the following tests:

- a. Make sure that the tray insert is properly inserted.
- b. Make sure that the paper is properly loaded in the tray.
- c. Make sure that the paper type and size settings match the paper type and size set on the tray.
- d. Make sure that the lift plate is properly working.

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**

The problem is solved.

2. Perform the following tests:

- a. Make sure that the separator roller is free of dust and contamination.
- b. Make sure that the lift plate is properly working.
- c. Make sure that the paper guides are properly working.
- d. Check the tray insert for proper installation and damage.

Is the tray insert properly installed, and free of contamination and damage?

- **Yes:**

Contact the next level of support.

- **No:**

Go to the next step.

3. Replace the tray insert.

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

## Unable to remove toner cartridge service check

1. Perform the following tests:

- a. Check the front door for proper installation and damage.
- b. Check the front door flag for damage.
- c. Check the front door hinge for damage.
- d. Check if the front door properly closes.

Is the front door properly installed and free of damage?

- **Yes:**

Go to step 3.

- **No:**

Go to the next step.

2. Replace the front door. See [Rear door removal on page 345](#)

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

3. Check the front door link for proper installation and damage.

Is the front door link properly installed and free of damage?

- **Yes:**

Go to the next step.

- **No:**

Contact the next level of support.

4. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Motor tests**

- b. Select **Motor (transport drive)**.

Did the motor run?

- **Yes:**

Go to the next step.

- **No:**

Go to step 6.

5. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Tray 1 > Single**

- b. Enter the Diagnostics menu, and then navigate to:

**Input tray quick print > Duplex > Single**

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

6. Perform the following tests:

- a. Make sure that the main drive is properly installed and free of damage.
- b. Make sure that the main drive gears are properly installed.
- c. Make sure that the drive gears are in proper contact with the gear they are driving.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

7. Replace the main drive. See [Main drive removal on page 331](#).

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

### No display service check

1. Perform the following tests:
  - a. Reseat all the cables on the controller board.
  - b. Check if the controller board LED lights up.

Does the controller board LED light up?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 4.

2. Perform the following tests:
  - a. Check the control panel for proper installation and damage.
  - b. Check the control panel cable for proper installation and damage.

Is the control panel properly installed and free of damage?

- **Yes:**  
Go to step 4.
- **No:**  
Go to the next step.

3. Replace the control panel. See [2.8-in. control panel removal on page 340](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:
  - a. Reseat all the cables on the controller board.
  - b. Check if the controller board LED lights up.
  - c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

5. Replace the controller board. See [Controller board removal on page 322](#).

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## No power service check

1. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up when the power is on.

Does the controller board LED light up?

- **Yes:**  
Go to step 5.
- **No:**  
Go to the next step.

2. Perform the following tests:

- a. Reseat the cables connected to the LVPS.
- b. Check the cables for proper connection and damage.
- c. Check the fuse for continuity.
- d. Check the electronic components on the LVPS for damage.
- e. Check the LVPS for proper installation and damage.

Is the LVPS properly installed and free of damage?

- **Yes:**  
Go to step 5.
- **No:**  
Go to the next step.

3. Perform the following tests:

- a. Make sure that the LVPS is compatible with the fuser and the printer.
- b. Make sure that there is voltage coming out of the fuser connector.
- c. Make sure that the correct power input voltage is applied.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Replace the LVPS. See [LVPS removal on page 326](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

5. Check the cables for proper connection and damage.

Are the cables properly connected and free of damage?

- **Yes:**  
Go to step 7.
- **No:**

Go to the next step.

6. Replace the damaged cable.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

7. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**

Contact the next level of support.

- **No:**

Go to the next step.

8. Replace the controller board. See [Controller board removal on page 322](#)

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

## ADF/scanner symptoms

### ADF cover open service check

1. Perform the following tests:

- a. Clean the ADF pick rollers and separator pad.
- b. Enter the Diagnostics menu, and then navigate to:

**Scanner diagnostics > Feed test**

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

2. Perform the following tests:

- a. Check the ADF pick and feed rollers for wear, damage, and contamination.
- b. Check the ADF pick separator pad for wear, damage, contamination, and spring load.
- c. Check if the ADF cover properly closes.

Is the ADF pick assembly properly installed and free of damage?

- **Yes:**  
Go to step 4.
- **No:**  
Go to the next step.

3. Replace the ADF pick assembly. See [ADF pick assembly removal on page 374](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

4. Perform the following tests:

- a. Enter the Diagnostics menu, and then navigate to:

**Scanner diagnostics > Motor tests**

- b. Select **Motor (ADF transport)**.

Does the motor run?

- **Yes:**  
Go to step 6.
- **No:**  
Go to the next step.

5. Perform the following tests:

- a. Reseat the ADF cable.
- b. Check the ADF cable for proper connection and damage.
- c. Check the ADF assembly for proper installation and damage.
- d. Check the ADF cover sensor for damage.

Is the ADF assembly properly installed and free of damage?

- **Yes:**  
Go to step 7.
- **No:**  
Go to the next step.

6. Replace the ADF assembly. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#) or [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.

- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

8. Replace the controller board. See [Controller board removal on page 322](#).

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Fax symptoms

### Cannot send or receive faxes using etherFAX

1. Make sure that the printer is connected to a network and that the network is connected to the Internet.

Can you send or receive faxes using etherFAX?

- **Yes:**  
The problem is solved.
- **No:**  
Go to the next step.

2. Perform the following tests:

- a. From the control panel, navigate to:

**Settings > Fax > Fax Setup > General Fax Settings.**



For non-touch-screen printer models, press  to navigate through the settings.

- b. Make sure that you have the correct fax number.
- c. Make sure that Fax Transport is set to etherFAX.

Can you send or receive faxes using etherFAX?

- **Yes:**  
The problem is solved.
- **No:**  
Go to the next step.

3. Split large documents into smaller file sizes.

Can you send or receive faxes using etherFAX?

- **Yes:**  
The problem is solved.
- **No:**  
Go to <https://www.etherfax.net/lexmark>.

## Fax symptoms

Symptom	Action
Fax not detected.	See <a href="#">Fax not detected service check on page 250</a> .
Cannot set up etherFAX.	See <a href="#">Cannot set up etherFAX on page 251</a> .
Cannot send or receive faxes using etherFAX.	See <a href="#">Cannot send or receive faxes using etherFAX on page 249</a> .
The printer does not transmit faxes.	See <a href="#">Fax transmission service check on page 252</a> .
The printer does not receive faxes.	See <a href="#">Fax reception service check on page 255</a> .
Lost connection to HTTPS fax server when using etherFAX service check.	See <a href="#">Lost connection to HTTPS fax server when using etherFAX service check on page 259</a> .

## Fax not detected service check

**Note:** These instructions apply only to printers that support analog fax. For more information, see [Supported fax on page 31](#).

1. Perform the following tests:
  - a. Reseat all the cables on the top cover.
  - b. Check the top cover for proper installation and damage.
  - c. Check the fax card cable for proper connection and damage.
  - d. Check the cable of the attached controller card switch for proper connection and damage.
  - e. Check all electronics attached to the top cover for proper installation and damage.

Are the top cover and all its electronic components properly installed and free of damage?

  - **Yes:**  
Go to step 3.
  - **No:**  
Go to the next step.
2. Replace the top cover. See [Top cover removal on page 351](#).

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Perform the following tests:

- a. Reseat all the cables on the controller board.
- b. Check if the controller board LED lights up.
- c. Check the controller board for proper installation and damage.

Is the controller board properly installed and free of damage?

- **Yes:**  
Contact the next level of support.
- **No:**  
Go to the next step.

4. Replace the controller board. See [Controller board removal on page 322](#).

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Cannot set up etherFAX

1. Perform the following tests:

- a. Print the Network Setup Page. From the home screen, touch **Settings > Reports > Network > Network Setup Page**.
- b. Check the network status.

Is the printer connected to the network?

- **Yes:**  
Go to step 3.
- **No:**  
Go to the next step.

2. Make sure that the printer is connected to a network and that the network is connected to the Internet.

Can you set up etherFAX?

- **Yes:**  
The problem is solved.
- **No:**  
Go to the next step.

3. Make sure that etherFAX is set up correctly. For more information, see the printer *User's Guide*.

Can you set up etherFAX?

- **Yes:**  
The problem is solved.
- **No:**  
Go to <https://www.etherfax.net/lexmark>.

## Fax transmission service check

**Note:** These instructions apply only to printers that support analog fax. For more information, see [Supported fax on page 31](#).

1. Reseat the telephone cable on the LINE port of the printer and on the wall jack.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Check for a dial tone.

Is there a dial tone?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 5.

3. Check if the telephone line can send and receives calls.

Is the phone line properly working?

- **Yes:**  
Go to step 6.
- **No:**  
Go to the next step.

4. Check if the telephone line is free of static or external noise.

Is the line free of static or external noise?

- **Yes:**  
Go to step 6.
- **No:**  
Go to the next step.

5. Connect the telephone cable to a working wall jack.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

6. Perform the following tests:

- a. From the home screen, navigate to **Settings > Fax > Analog Fax Setup > Fax Receive Settings > Admin Controls > Enable Fax Receive**.
- b. Select **On**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

7. Perform the following tests:

- a. From the home screen, navigate to **Settings > Fax > Analog Fax Setup > Fax Receive Settings > Admin Controls > Answer on**.
- b. Select a ring pattern.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

8. Check if the telephone line is analog.

Is the line analog?

- **Yes:**  
Go to step 11.
- **No:**  
Go to the next step.

9. Check if the telephone line is a VOIP line.

Is the line VOIP?

- **Yes:**  
Go to step 11.
- **No:**  
Go to the next step.

10. Ask the system administrator to check if the VOIP server is configured to receive faxes.

Is the server configured to receive faxes?

- **Yes:**  
Go to the next step.
- **No:**

Contact the next level of support.

11. Check if the printer receives a fax from one specific remote device.

Does the printer receive a fax from one specific remote device?

- **Yes:**  
Go to step 13.

- **No:**  
Go to the next step.

12. Check if a different device can send a fax.

Can the device send a fax?

- **Yes:**  
Contact the next level of support.

- **No:**  
Go to the next step.

13. Perform the following tests:

- a. From the home screen, navigate to **Settings > Fax > Analog Fax Setup > Fax Receive Settings > Admin Controls > Block No Name Fax**.
- b. Select **Off**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

14. Perform the following tests:

- a. From the home screen, navigate to **Settings > Fax > Analog Fax Setup > Fax Receive Settings > Admin Controls > Banned Fax List**.
- b. Check if the remote device number is on the list.

Is the number on the list?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 16.

15. Remove the remote device number from the list.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

16. Perform the following tests:

- a. Enter the Service Engineer menu, and then navigate to:  
**Fax SE > Modem Settings > Receive Thresh**

- b. Adjust the setting in steps of 2 dB.

**Note:** The recommended adjustment range is between -33 dB and -48 dB.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

17. Perform the following tests:

- a. Enter the Service Engineer menu, and then navigate to:

**Fax SE > Fax Settings > AutoPrint T30 Logs**

- b. Check the reported error code. See [Fax not detected service check on page 250](#).
- c. Perform the action suggested for the error.

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Fax reception service check

**Note:** These instructions apply only to printers that support analog fax. For more information, see [Supported fax on page 31](#).

**Note:** Before performing this service check, make sure that the correct country code is selected.

1. Reseat the telephone cable on the LINE port of the printer and on the wall jack.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Check if the telephone line can send and receive calls.

Is the phone line properly working?

- **Yes:**  
Go to step 4.
  - **No:**  
Go to the next step.
3. Connect the telephone cable to a working wall jack.
- Does the problem remain?
- **Yes:**  
Go to the next step.
  - **No:**  
The problem is solved.
4. Check if the telephone line is analog.
- Is the telephone line analog?
- **Yes:**  
Go to step 7.
  - **No:**  
Go to the next step.
5. Check if the telephone line is a VOIP line.
- Is the line VOIP?
- **Yes:**  
Go to the next step.
  - **No:**  
Go to step 7.
6. Ask the system administrator to verify if the VOIP server is configured to receive faxes.
- Is the server configured to receive faxes?
- **Yes:**  
Go to the next step.
  - **No:**  
Contact the next level of support.
7. Check if the printer is on a PABX.
- Is the printer on a PABX?
- **Yes:**  
Go to step 9.
  - **No:**  
Go to the next step.
8. Perform the following tests:
- a. From the home screen, navigate to **Settings > Fax > Analog Fax Setup > Fax Send Settings > Behind a PABX**.
  - b. Select **Yes**.
- Does the problem remain?
- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

9. Perform the following tests:

- a. From the home screen, navigate to **Settings > Fax > Analog Fax Setup > Fax Send Settings > Behind a PABX**.

- b. Select **No**.

- c. Check if access to an outside line needs a dial prefix.

Does access to an outside line need a dial prefix?

- **Yes:**

Go to the next step.

- **No:**

Go to step 11.

10. Send a fax using a dial prefix.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

11. Check if the printer sends a fax to one specific destination.

Does the printer send a fax to one specific destination?

- **Yes:**

Go to step 13.

- **No:**

Go to the next step.

12. Check if the device that does not receive a fax can send a fax.

Can the device send a fax?

- **Yes:**

Go to the next step.

- **No:**

Contact the next level of support.

13. Perform the following tests:

- a. Enter the Service Engineer menu, and then navigate to:

**Fax SE > Fax Settings > AutoPrint T30 Logs**

- b. Check the reported error code. See [Fax error log codes on page 260](#).

- c. Perform the action suggested for the error.

Does the problem remain?

- **Yes:**

Go to the next step.

- **No:**

The problem is solved.

14. Check the TIA/EIA-IS-968 Standard "Technical Requirements for Connection of Terminal Equipment to the Telephone Network" for your geography.

Is it permitted for analog modulated transmitted data to transmit above -9 dBm?


- **Yes:**  
Go to the next step.
- **No:**  
Contact the next level of support.

15. Perform the following tests:

- a. Open a web browser and then type <https://<IP address>/se>.
- b. Navigate to:

**Fax > Settings > Silabs Configuration**

- c. Adjust the Transmit Level setting (A) in steps of  $\pm 1$  dB.

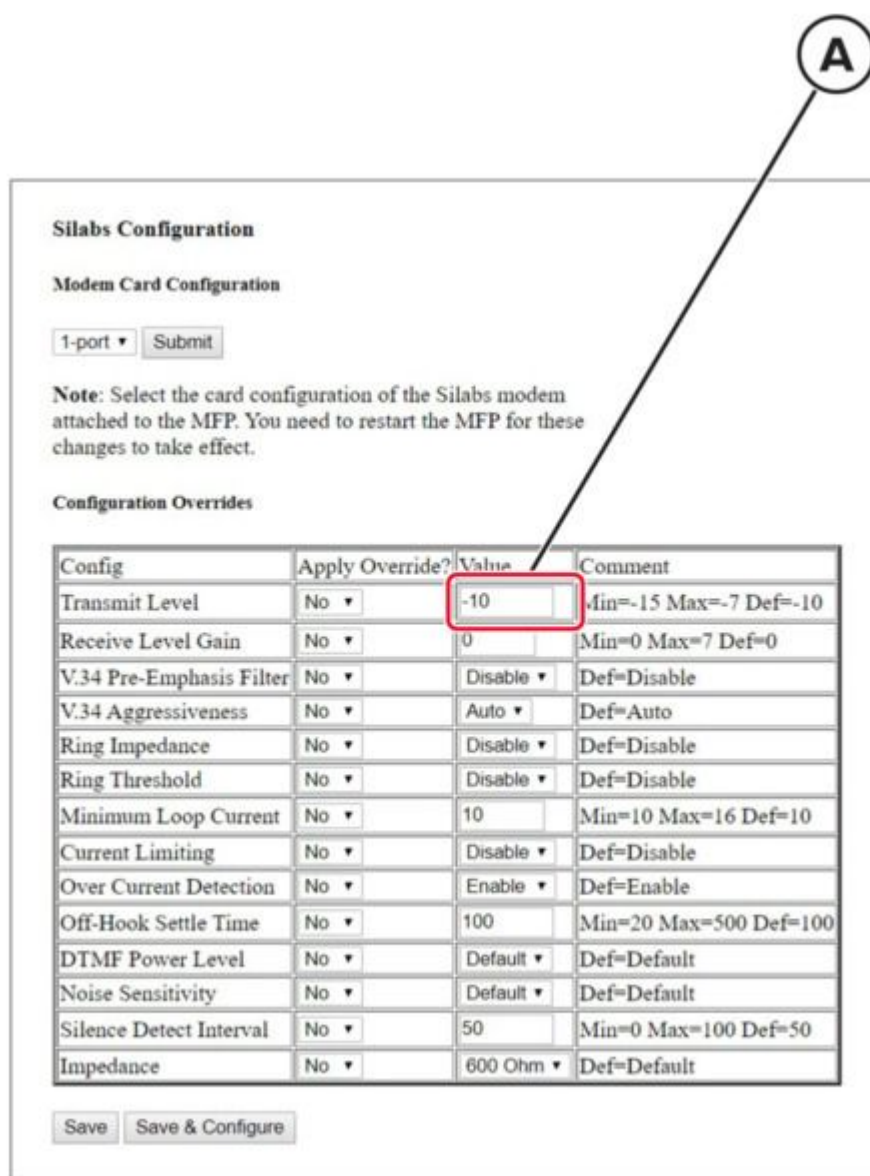

**Silabs Configuration**

**Modem Card Configuration**

1-port ▾

**Note:** Select the card configuration of the Silabs modem attached to the MFP. You need to restart the MFP for these changes to take effect.

**Configuration Overrides**

Config	Apply Override?	Value	Comment
Transmit Level	No ▾	-10	Min=-15 Max=-7 Def=-10
Receive Level Gain	No ▾	0	Min=0 Max=7 Def=0
V.34 Pre-Emphasis Filter	No ▾	Disable ▾	Def=Disable
V.34 Aggressiveness	No ▾	Auto ▾	Def=Auto
Ring Impedance	No ▾	Disable ▾	Def=Disable
Ring Threshold	No ▾	Disable ▾	Def=Disable
Minimum Loop Current	No ▾	10	Min=10 Max=16 Def=10
Current Limiting	No ▾	Disable ▾	Def=Disable
Over Current Detection	No ▾	Enable ▾	Def=Enable
Off-Hook Settle Time	No ▾	100	Min=20 Max=500 Def=100
DTMF Power Level	No ▾	Default ▾	Def=Default
Noise Sensitivity	No ▾	Default ▾	Def=Default
Silence Detect Interval	No ▾	50	Min=0 Max=100 Def=50
Impedance	No ▾	600 Ohm ▾	Def=Default

Does the problem remain?

- **Yes:**  
Contact the next level of support.
- **No:**  
The problem is solved.

## Lost connection to HTTPS fax server when using etherFAX service check

1. Perform the following tests:

- a. Enter the Service Engineer (SE) menu, and then navigate to:

**Fax SE Menu > Fax Settings**

- b. Make sure that the Fax Transport option is set to **etherFAX**.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

2. Perform the following tests:

- a. Make sure that the printer is connected to a stable network.
- b. Perform a POR.

Does the problem remain?

- **Yes:**  
Go to the next step.
- **No:**  
The problem is solved.

3. Check if the printer controller board was previously replaced.

Was the printer controller board previously replaced?

- **Yes:**  
Go to the next step.
- **No:**  
Go to step 5.

4. Perform the following tests:

- a. Go to your etherFAX portal account, and then remove the printer from the etherFAX registry.
- b. Perform a POR.

Does the problem remain?

- **Yes:**  
Go to the next step.

- **No:**

The problem is solved.

5. Make sure that the printer serial number is properly added in your etherFAX portal account.

Does the problem remain?

- **Yes:**

Contact the next level of support.

- **No:**

The problem is solved.

## Fax error log codes

Error code	Description	Action
000	No error occurred during a fax transmission.	No action is needed.
200	An error occurred when transmitting training.	<ul style="list-style-type: none"><li>• Check the line quality.</li><li>• Select a lower Max Speed value under the Fax Send settings.</li><li>• Adjust the transmit level.</li></ul>
3XX	An error occurred when receiving an image data.	<ul style="list-style-type: none"><li>• Check the line quality.</li><li>• Adjust the Receive Threshold.</li><li>• Select a lower Max Speed value under the Fax Receive settings.</li></ul>
4XX	An error occurred when sending an image data.	<ul style="list-style-type: none"><li>• Check the line quality.</li><li>• Adjust the Transmit Level.</li><li>• Select a lower Max Speed value under the Fax Receive settings.</li></ul>
5XX	An unknown response is received from a remote fax device.	No action is needed. The issue is with the other device.

Error code	Description	Action
6XX	An error occurred when receiving a frame.	<ul style="list-style-type: none"> <li>• Check the line quality.</li> <li>• Adjust the Receive Threshold.</li> </ul>
7XX	An error occurred when sending a frame.	<ul style="list-style-type: none"> <li>• Check the line quality.</li> <li>• Adjust the Transmit Level.</li> <li>• Select a lower Max Speed value under the Fax Send settings.</li> </ul>
800	An EOT was unexpectedly received from the modem in V34 mode.	If the error persists, then disable the V34 modulation scheme.
802	Too many time-outs occurred during ECM reception.	If the error persists, then disable the ECM mode.
803	Fax cancelled by the user.	No action is needed.
804	Unexpectedly received a disconnect command from the remote end.	<ul style="list-style-type: none"> <li>• Check the line quality.</li> <li>• Adjust the Transmit Level or Receive Threshold setting.</li> <li>• The remote device could be requesting an unsupported feature.</li> </ul>
805	The remote fax device failed to respond to the DCS command.	<ul style="list-style-type: none"> <li>• Adjust the Transmit Level or Receive Threshold setting.</li> <li>• The remote device could be malfunctioning.</li> </ul>
808	T1 timeout occurred when trying to establish a connection with a remote fax device.	Adjust the Transmit Level or Receive Threshold setting.
809	T2 Timeout occurred due to loss of command/response synchronization.	Adjust the Transmit Level or Receive Threshold setting.

Error code	Description	Action
80A	T5 Timeout occurred when transmitting image data to remote fax device.	<ul style="list-style-type: none"> <li>• Check line quality.</li> <li>• Adjust the Transmit Level setting</li> <li>• Decrease the Max Speed setting under Fax Send settings.</li> </ul>
80B	Too many errors when transmitting in ECM mode.	<ul style="list-style-type: none"> <li>• Check line quality.</li> <li>• Adjust the Transmit Level setting</li> <li>• Select a lower 'Max Speed' value under Fax Send settings.</li> </ul>
80C	Remote device failed to respond to the CTC command.	<ul style="list-style-type: none"> <li>• Decrease the Max Speed setting under Fax Send settings.</li> <li>• Adjust the Transmit Level setting</li> </ul>
80D	Received too many requests from remote end to repeat the previous command sent.	<ul style="list-style-type: none"> <li>• Check line quality.</li> <li>• Adjust the Transmit Level setting</li> <li>• Check if line conditions on remote end will facilitate a good connection.</li> </ul>
80E	Functional limitation-Remote fax device does not support G3 receive capability.	No action needed. Issue with the remote device.
811	Failed to detect a fax device at the remote end.	<ul style="list-style-type: none"> <li>• Verify MFD is answering to fax call and not a voice call.</li> <li>• Decrease the Rings To Answer setting.</li> </ul>
812	No more data rates available in V34 modulation scheme.	Decrease the modulation scheme.
813	Timeout occurred after waiting too long to receive a good frame.	Adjust the Receive Threshold setting.

Error code	Description	Action
814	Tried too many times at selected speed using V34 modulation scheme.	<ul style="list-style-type: none"> <li>Adjust the Transmit Level setting.</li> <li>Decrease the modulation scheme.</li> </ul>
815	Fax transmission was interrupted due to power failure.	Troubleshoot MFP if error persists. See <a href="#">Fax not detected service check on page 250</a> .
818	Fax transmission failed due to insufficient memory to store scanned image.	Adjust the Memory Use setting to allocate more memory for send jobs.
819	Fax transmission failed due to insufficient memory to store received image.	Adjust the Memory Use setting to allocate more memory for receive jobs.
81A	A timeout occurred during transmission of a page in ECM mode.	Decrease the Max Speed setting under Fax Send settings.
880	Failure to transmit training successfully in V17, V29, V27 terminal modulation schemes.	<ul style="list-style-type: none"> <li>Decrease the Max Speed setting under Fax Send settings.</li> <li>Adjust the Transmit Level setting.</li> <li>Check line quality.</li> </ul>
881	Failure to transmit training successfully in V33, V29, V27 terminal modulation schemes.	<ul style="list-style-type: none"> <li>Decrease the Max Speed setting under Fax Send settings.</li> <li>Adjust the Transmit Level setting.</li> <li>Check line quality.</li> </ul>
882	Failure to transmit training successfully in V17, V29 terminal modulation schemes.	<ul style="list-style-type: none"> <li>Decrease the Max Speed setting under Fax Send settings.</li> <li>Adjust the Transmit Level setting.</li> <li>Check line quality.</li> </ul>

Error code	Description	Action
883	Failure to transmit training successfully in V17, V27 terminal modulation schemes.	<ul style="list-style-type: none"> <li>• Decrease the Max Speed setting under Fax Send settings.</li> <li>• Adjust the Transmit Level setting.</li> <li>• Check line quality.</li> </ul>
884	Failure to transmit training successfully in V29, V27 terminal modulation schemes.	<ul style="list-style-type: none"> <li>• Decrease the Max Speed setting under Fax Send settings.</li> <li>• Adjust the Transmit Level setting.</li> <li>• Check line quality.</li> </ul>
885	Failure to transmit training successfully in V17 terminal modulation scheme.	<ul style="list-style-type: none"> <li>• Decrease the Max Speed setting under Fax Send settings.</li> <li>• Adjust the Transmit Level setting.</li> <li>• Check line quality.</li> </ul>
886	Failure to transmit training successfully in V29 terminal modulation scheme.	<ul style="list-style-type: none"> <li>• Decrease the Max Speed setting under Fax Send settings.</li> <li>• Adjust the Transmit Level setting.</li> <li>• Check line quality.</li> </ul>
887	Failure to transmit training successfully in V27 terminal modulation scheme.	<ul style="list-style-type: none"> <li>• Decrease the Max Speed setting under Fax Send settings.</li> <li>• Adjust the Transmit Level setting.</li> <li>• Check line quality.</li> </ul>
888	Failure to transmit training successfully at 2400 bps in V27 terminal modulation scheme.	<ul style="list-style-type: none"> <li>• Adjust the Transmit Level setting.</li> <li>• Check line quality.</li> </ul>
889	Failed to connect at the minimum speed supported by the MFP.	<ul style="list-style-type: none"> <li>• Adjust the Transmit Level setting.</li> <li>• Incompatible connection.</li> </ul>


Error code	Description	Action
88A	Failed to connect using V.34 modulation scheme.	<ul style="list-style-type: none"> <li>• Check line quality.</li> <li>• Decrease the modulation scheme.</li> <li>• Adjust the Transmit Level or Receive Threshold settings.</li> </ul>
901	No fax tones detected from remote end.	<ul style="list-style-type: none"> <li>• Verify destination phone number.</li> <li>• Verify that the remote fax is authorized to receive faxes.</li> </ul>
902	No dial tone detected.	<ul style="list-style-type: none"> <li>• Check by enabling Behind a PABX setting.</li> <li>• Check phone line.</li> <li>• Check MFD modem hardware.</li> </ul>
903	Busy tone detected.	Check with remote end if successive attempts fail.
904	Hardware error detected.	See <a href="#">Fax not detected service check on page 250</a> .
905	A timeout occurred after dialing the number and waiting for a response.	Check with remote end if successive attempts fail.
906	Fax cancelled by user.	No action needed.
907	Modem detected a digital line connection.	Verify that the MFP is connected to an analog line. See <a href="#">Fax transmission service check on page 252</a> .
908	Phone line was disconnected	Restore phone line connection.
A00	Received request for unsupported function from remote fax device.	No action needed.
A01	Received request for unsupported image width from remote fax device.	No action needed.

Error code	Description	Action
A02	Received request for unsupported image resolution from remote fax device.	No action needed.
A03	Received request for unsupported compression type from remote fax device.	No action needed.
A04	Received request for unsupported image length from remote fax device.	No action needed.
F00	Unknown error occurred.	No action needed.

# Service menus

## Understanding the printer control panel

### Lexmark MB2236adw MFP

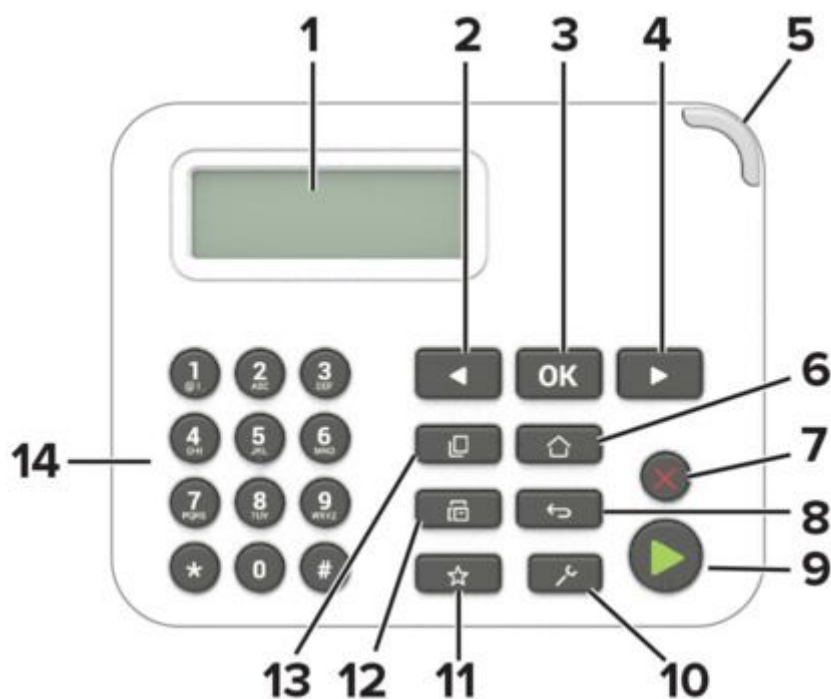

	Control panel part	Function
1	Display	<ul style="list-style-type: none"> <li>• View printer messages and supply status.</li> <li>• Set up and operate the printer.</li> </ul>
2	Left arrow button	<ul style="list-style-type: none"> <li>• Scroll through menus or move between screens and menu options.</li> <li>• Decrease the numeric value of a setting.</li> </ul>

	Control panel part	Function
<b>3</b>	Select button	<ul style="list-style-type: none"> <li>• Select a menu option.</li> <li>• Save the changes in a setting.</li> </ul>
<b>4</b>	Right arrow button	<ul style="list-style-type: none"> <li>• Scroll through menus or move between screens and menu options.</li> <li>• Increase the numeric value of a setting.</li> </ul>
<b>5</b>	Indicator light	Check the status of the printer.
<b>6</b>	Home button	Go to the home screen.
<b>7</b>	Stop or Cancel button	Stop the current job.
<b>8</b>	Back button	Return to the previous screen.
<b>9</b>	Start button	Start a job, depending on which mode is selected.
<b>10</b>	Menu button	Access the printer menus.
<b>11</b>	Shortcuts button	Access shortcuts to frequently used functions with previously saved settings.
<b>12</b>	Fax button	Enter Fax mode.
<b>13</b>	Copy button	Enter Copy mode.
<b>14</b>	Numeric keypad	Enter numbers or symbols in an input field.

## Lexmark MB2236adwe, Lexmark MB2236i MFPs



	Control panel part	Function
1	Home button	Go to the home screen.
2	Back button	Return to the previous screen.
3	Start button	Start a job, depending on which mode is selected.
4	Indicator light	Check the status of the printer.
5	Display	<ul style="list-style-type: none"><li>• View printer messages and supply status.</li><li>• Set up and operate the printer.</li></ul>

### Understanding the status of the power button and indicator light

Power button light	Printer status
Off	The printer is off, ready, or processing data.

Power button light	Printer status
White	The printer is in Sleep mode.

### Lexmark MB2236adw MFP Panel with 2-line LCD

Indicator light	Printer status
Off	The printer is off or in Sleep mode.
Green	The printer is on or ready.
Blinking green	The printer is processing data.
Blinking red	The printer requires user intervention.

### Lexmark MB2236adwe, Lexmark MB2236i MFPs Panel with touch-screen display

Indicator light	Printer status
Off	The printer is off or in Sleep mode.
Blue	The printer is on or ready.
Blinking blue	The printer is processing data.
Blinking red	The printer requires user intervention.

## Diagnostics menu

### Entering the Diagnostics menu

The Diagnostics menu contains tests that are used to help isolate issues with the printer. To access the Diagnostics menu in MB2236adw printers, perform the following:

- To access the Diagnostics menu from POST, press and hold **Left arrow** and **OK** on the control panel.
- To access the Diagnostics menu from the home screen, press **Back**, **Right arrow**, **Back**, and **Right arrow** on the control panel.

To access the Diagnostics menu in MB2236adwe printers, perform the following:

- To access the Diagnostics menu from POST:
  1. Unplug the printer.
  2. Open tray 1.

**Note:** Make sure that paper is present in the tray.

3. Plug the printer.

When the display shows the following icon, close tray 1.



4. A menu appears on the display.

Select **Diagnostics\_Mode**, and then select **Boot**.

- To access the Diagnostics menu from the home screen, press these buttons in the following sequence:

**Back, Back, Start, Start**

## Reports

### Device Settings

This report lists all the current printer settings.  
Enter the Diagnostics menu, and then navigate to:  
**Reports > Device > Device Settings**

For non-touch-screen printer models, press  to navigate through the settings.

### Installed Licenses

This setting lists all the installed licenses and their feature data.  
Enter the Diagnostics menu, and then navigate to:  
**Reports > Licenses > Installed Licenses**

For non-touch-screen printer models, press  to navigate through the settings.

### Advanced Print Quality Samples

This setting prints a list of the printer settings and sample pages to check print quality.  
Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

For non-touch-screen printer models, press  to navigate through the settings.

## Format Fax Storage

This setting deletes stored fax jobs.

Enter the Diagnostics menu, and then navigate to:

**Format Fax Storage > Format Fax Storage**

For non-touch-screen printer models, press  to navigate through the settings.

## Event Log

### Display Log

This setting displays the panel text that appears when the event occurs.

Enter the Diagnostics menu, and then navigate to:

**Event Log > Display Log**

For non-touch-screen printer models, press  to navigate through the settings.

### Print Log

This setting lists an extended version of the various printer events.

Enter the Diagnostics menu, and then navigate to:

**Event Log > Print Log**

For non-touch-screen printer models, press  to navigate through the settings.


**Note:** The events that appear in the report vary depending on the operational history of the printer.

### Print Log Summary

This setting lists a brief summary of the various printer events.

Enter the Diagnostics menu, and then navigate to:

**Event Log > Print Log Summary**

For non-touch-screen printer models, press  to navigate through the settings.

**Note:** The events that appear in the report vary depending on the operational history of the printer.


### Mark Log

This setting allows you to create a service, maintenance, or custom log entry. Each log entry is added in the printer event log.

1. Enter the Diagnostics menu, and then navigate to:

**Event Log > Mark Log**



For non-touch-screen printer models, press  to navigate through the settings.

2. Select a log that you want to create.

### Input tray quick print

This setting lets you print a single or continuous Quick test page in either duplex or simplex mode.

1. Enter the Diagnostics menu, and then select **Input tray quick print**.



For non-touch-screen printer models, press  to navigate through the settings.

2. Select where you want to print the pages from.
3. Select whether to print a single or continuous test page.


### Output bin quick feed

This setting lets you feed a single or continuous page from the standard bin.

1. Enter the Diagnostics menu, and then navigate to:

**Output bin quick feed > Standard bin**



For non-touch-screen printer models, press  to navigate through the settings.

2. Select whether to print a single or continuous test page.

### Printer Setup

#### Printed page count (mono)

This setting displays the amount of pages printed in mono.

1. Enter the Diagnostics menu, and then navigate to:

**Printer Setup > Printed page count (mono)**

2. View the printed page count for mono.

### Permanent page count

This setting displays the total number of pages printed. After all the print tests are completed, this value resets to zero.

1. Enter the Diagnostics menu, and then navigate to:

**Printer Setup > Permanent page count**

2. View the permanent page count.

### Processor ID

This setting indicates the ID of the processor on the controller board.

1. Enter the Diagnostics menu, and then navigate to:

**Printer Setup > Processor ID**

2. View the processor ID.

### Serial number

This setting displays a read-only value of the printer serial number.

1. Enter the Diagnostics menu, and then navigate to:

**Printer Setup > Serial number**

2. View the serial number.

### Model name

This setting displays the model name of the printer.

1. Enter the Diagnostics menu, and then navigate to:

**Printer Setup > Model name**

2. View the model name.

### Engine setting [x]

#### **Warning—Potential Damage**

Do not change this setting without specific instructions from the next level of support.

This setting allows you to select a printer engine setting. Possible values are 0–255. 0 is the default.



For non-touch-screen printer models, press  to navigate through the settings.

1. Enter the Diagnostics menu, and then navigate to:

**Printer Setup > Engine setting [x]**

2. Select a setting, and then enter a value.

## EP setup

### **Warning—Potential Damage**

Do not change this setting without specific instructions from the next level of support.

This setting allows you to adjust the EP setup of the printer.



For non-touch-screen printer models, press  to navigate through the settings.

1. Enter the Diagnostics menu, and then navigate to:

**Printer Setup > EP setup**

2. Select a setting.

## Printer diagnostics & adjustments

### Sensor tests

1. Enter the Diagnostics menu, and then select **Printer diagnostics & adjustments**.

A list of sensor tests appears.

2. Find, and then manually toggle the sensor.

#### **Note:**

- The sensor status on the screen toggles between **1** and **0** when the sensor is properly working.
- If a sensor test fails, the test failure may not indicate a failed sensor. Further troubleshooting may be required. Check the boards and cables for possible issues.
- For the fuser exit sensor actuator, toggle it toward the rear door.

### List of sensor tests


Sensor (front door)
---------------------

Sensor (media present in tray1 S1)
Sensor (staging sensor S2)
Sensor (input sensor S3)
Sensor (fuser exit sensor S4)


## Motor tests

1. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Motor tests**

- For non-touch-screen printer models, press  to navigate through the settings.
2. Select a motor.

### Note:

- If the motor is activated, then it is properly working.
- Some motors require automatic deactivation to avoid secondary issues such as possible damage and contamination.
- Some tests require a special action to activate a motor such as removing a major component.
- If the motor fails, the test failure may not indicate a failed motor. Further troubleshooting may be required. Check the boards and cables for possible issues.
- To stop a running motor in non-touch-screen printer models , press .

## List of motor tests

Motor (transport drive)
Feed solenoid
Skew correction solenoid
Fan (main)

## Registration adjust

This setting lets you adjust the skew, margins, or print a Quick test page.

For non-touch-screen printer models, press  to navigate through the settings.

1. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Registration adjust**

2. Select a setting to adjust.

## Universal Override

This setting allows the user to feed custom media sizes to a Custom Media Tray.

For non-touch-screen printer models, press  to navigate through the settings.

1. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > Universal Override**

2. Select a setting to adjust.

## HVPS adjust

This setting allows the HVPS calibration data to be recovered or entered for the specific HVPS installed. The HVPS calibration data must come from the next level of support.

For non-touch-screen printer models, press  to navigate through the settings.

1. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > HVPS adjust**

2. Select a setting to adjust.

## Scanner Diagnostics

### Motor Tests

1. Enter the Diagnostics menu, and then navigate to:

**Scanner Diagnostics > Motor Tests**

- For non-touch-screen printer models, press  to navigate through the settings.
2. Select a motor.

### Note:

- If the motor is activated, then it is properly working.
- Some motors require automatic deactivation in order to avoid secondary issues such as possible damage and contamination.
- Some tests require a special action to activate a motor such as removing a major component.
- If the motor fails, the test failure may not indicate a failed motor. Further troubleshooting may be required. Check the boards and cables for possible issues.

## List of motor tests

Flatbed Scanner
ADF Transport

## Sensor Tests

This test verifies the status of the scanner sensors.

1. Enter the Diagnostics menu, and then navigate to:

**Scanner Diagnostics > Sensor Test**



For non-touch-screen printer models, press

2. Select a sensor.

3. Find, and then manually toggle the sensor.

### Note:

- The sensor status on the screen toggles between **1** and **0** when the sensor is properly working.
- If a sensor test fails, the test failure may not indicate a failed sensor. Further troubleshooting may be required. Check the boards and cables for possible issues.

## List of sensor tests

Sensor (FB CCD home)
Sensor (ADF closed)
Sensor (ADF media present)

Sensor (ADF 1st scan)
Sensor (ADF top door interlock)

## Feed Test

This test allows for a continuous feed from the ADF or flatbed.

1. Enter the Diagnostics menu, and then navigate to:

**Scanner Diagnostics > Feed Test**



For non-touch-screen printer models, press  to navigate through the settings.


2. Select a paper size.
3. Select **Feed Test**.

## Scanner Calibration Reset

Before starting the test, make sure that the scanner glass and scanner glass pad are clean. For more information, see [Cleaning the scanner on page 405](#).

1. Enter the Diagnostics menu, and then select **Scanner Diagnostics**.



For non-touch-screen printer models, press  to navigate through the settings.

2. Select **Sensor Calibration Reset**.

To verify the result, do the following:

1. Load the ADF with a document containing light and dark content.
2. Print both sides of the document.

### Note:

- If the back side of the copy has vertical streaks, then clean the scanner glass and scanner glass pad, and then print another copy.
- If the streaks still appear, then repeat the cleaning and verification procedure or replace the ADF.

# Config menu

## Entering the Config menu

The Config menu consists of menus, settings, and operations that are used to configure the printer.

- To access the Config menu in MB2236adw printers, press and hold **Right arrow** and **OK** on the control panel, and then turn on the printer.
- To access the Config menu in MB2236adwe printers, from the control panel, navigate to:

**Settings > Device > Maintenance > Config Menu**

## Config Menu

Menu item	Description
<b>USB Configuration</b> USB PnP 1* 2	Change the USB driver mode of the printer to improve its compatibility with a personal computer.
<b>USB Configuration</b> USB Scan to Local On* Off	Set whether the USB device driver enumerates as a USB Simple device (single interface) or as a USB Composite device (multiple interfaces).
<b>USB Configuration</b> USB Speed Full Auto*	Set the USB port to run at full speed and disable its high-speed capabilities.
<b>Tray Configuration</b> Show Tray Insert Message Off Only for unknown sizes* Always	Show message about the tray status.
<b>Tray Configuration</b> A5 Loading Short Edge Long Edge*	Specify the page orientation when loading A5 paper size.

Menu item	Description
<b>Tray Configuration</b> Paper Prompts Auto* Manual Paper	Set the paper source that the user fills when a prompt to load paper appears.
<b>Tray Configuration</b> Envelope Prompts Auto* Manual Envelope	Set the paper source that the user fills when a prompt to load envelope appears.
<b>Tray Configuration</b> Action for Prompts Prompt user* Continue Use current	Set the printer to resolve paper- or envelope-related change prompts.
<b>Reports</b> Menu Settings Page Event Log Event Log Summary	Print reports about printer menu settings, status, and event logs.
<b>Supply Usage And Counters</b> Clear Supply Usage History	Reset the supply page counter or view the total printed pages.
<b>Printer Emulations</b> PS Emulation Off* On	Set the printer to recognize and use the PS data stream. <div> <b>Note:</b> This menu item appears only in some printer models.             </div>
<b>Printer Emulations</b> Emulator Security Page Timeout (60*)	Set the page timeout during emulation.
<b>Printer Emulations</b> Emulator Security Reset Emulator After Job (Off*)	Reset the emulator after a print job.

Menu item	Description
<b>Printer Emulations</b> Emulator Security Disable Printer Message Access (On*)	Disable access to the printer message during emulation.
<b>Fax Configuration</b> Fax Low Power Support  Disable Sleep Permit Sleep Auto*	Specify the printer power setting when it is in fax mode.
<b>Print Configuration</b> Font Sharpening  0–150 (24*)	Set a text point-size value below which the high-frequency screens are used when printing font data.
<b>Print Configuration</b> Print Density  Disabled 1–5 (3*) Copy Density  Disabled 1–5 (3*)	Adjust the toner density when printing or copying documents.
<b>Device Operations</b> Quiet Mode  On Off*	Set the printer to reduce the amount of noise that it makes when printing. <div> <b>Note:</b> Enabling this setting slows down the overall performance of the printer. </div>
<b>Device Operations</b> Panel Menus Enable* Disable	Set the printer to enable access to the control panel menus. <div> <b>Note:</b> This menu item appears only in the Embedded Web Server. </div>
<b>Device Operations</b> Clear Custom Status	Erase all custom messages.
<b>Device Operations</b> Clear all remotely-installed messages	Erase messages that were remotely installed.

Menu item	Description
<b>Device Operations</b> Automatically Display Error Screens On* Off	Show existing error messages on the display after the printer remains inactive on the home screen for a length of time equal to the Screen Timeout setting.  <div> <b>Note:</b> This menu item appears only in some printer models.         </div>
<b>Scanner Configuration</b> Scanner Manual Registration Print Quick Test	Print a Quick Test target page.  <div> <b>Note:</b> Make sure that the margin spacing on the target page is uniform all the way around the target. If it is not, then the printer margins may need to be reset.         </div>
<b>Scanner Configuration</b> Scanner Manual Registration Front ADF Registration Flatbed Registration	Manually register the flatbed and ADF after replacing the ADF, scanner glass, or controller board.
<b>Scanner Configuration</b> Edge Erase ADF Edge Erase 0–6 (3*) Flatbed Edge Erase 0–6 (3*)	Set the size, in millimeters, of the no-print area around an ADF or flatbed scan job.
<b>Scanner Configuration</b> Disable Scanner Enabled* Disabled ADF Disabled	Disable the scanner if it is not working properly.
<b>Scanner Configuration</b> Tiff Byte Order CPU Endianness* Little Endian Big Endian	Set the byte order of a TIFF-formatted scan output.

Menu item	Description
<b>Scanner Configuration</b> Exact Tiff Rows Per Strip On* Off	Set the RowsPerStrip tag value of a TIFF-formatted scan output.
<b>Note:</b> An asterisk (*) next to a value indicates the factory default setting.	

## Service Engineer menu

### Entering the Service Engineer (SE) menu

This contains several functions that a service engineer may need in order to diagnose and fix problems on the printer.

To access the Service Engineer (SE) menu in MB2236adw printers, perform the following:

- From the home screen, press these buttons in the following sequence:

**Back, Left arrow, Back, and Left arrow**

To access the Service Engineer (SE) menu in MB2236adwe printers, perform the following:

- From the home screen, press these buttons in the following sequence:

**Back, Back, Home, Home**

### General SE

This setting allows you to save a log file to a USB drive.

Enter the Service Engineer (SE) menu, and then navigate to:

**General SE > Capture Logs to USB Drive**

### Network SE

Enter the Service Engineer (SE) menu, and then select **Network SE**.

**Note:** Use these settings as directed by the next level of support.

Top-level menu	Intermediate menu
Print SE Menus	Print SE Menus

Top-level menu	Intermediate menu
History	<ul style="list-style-type: none"> <li>• Print History</li> <li>• Mark History</li> </ul>
MAC	<ul style="list-style-type: none"> <li>• Set Card Speed</li> <li>• LAA</li> <li>• Keep Alive</li> </ul>
NPAP	Print Alerts
TCP/IP	<ul style="list-style-type: none"> <li>• netstat</li> <li>• arp</li> <li>• Allow SNMP Set</li> <li>• MTU</li> <li>• Meditech Mode</li> <li>• RAW LPR Mode</li> </ul>
Wireless	Enable Wi-Fi Direct Sigma Control Agent
Ping Test	<ul style="list-style-type: none"> <li>• Ping</li> <li>• Ping6</li> </ul>
Other Actions	<ul style="list-style-type: none"> <li>• ifconfig</li> <li>• IPtables [Firewall Dump]</li> <li>• IP6tables [Firewall Dump]</li> <li>• IPsec Dump</li> </ul>

## Fax SE Menu

Use this menu to help resolve fax transmission and reception issues. Enter the SE menu, and then touch **Fax SE Menu**.

**Note:** Use these settings as directed by the next level of support.

**Note:** For printers with firmware version FW7.1 and up, adjust the Transmit Level setting via EWS SE. See [EWS SE Menu on page 286](#)

Top-level menu	Intermediate menu
Agency Test Menu	<ul style="list-style-type: none"><li>• Go Off Hook</li><li>• Ring Detect</li><li>• Generate Tones</li><li>• Modulations</li></ul>
Fax Settings	<ul style="list-style-type: none"><li>• Fax Modulations</li><li>• FOIP Settings</li><li>• Miscellaneous Settings</li><li>• Reset Fax Settings</li></ul>
Modem Settings	<ul style="list-style-type: none"><li>• Caller ID Pattern</li></ul> <div><b>Note:</b> Changing the value of this setting also changes the value of the Caller ID setting in the Fax Settings.</div> <ul style="list-style-type: none"><li>• Pulse Dial Type</li><li>• Disable Sending CRP</li></ul>
Fax logs	<ul style="list-style-type: none"><li>• Print all T30 Logs</li><li>• Print CallerID Log</li><li>• Print Call Log</li><li>• Print Fax Settings</li><li>• Print Job Log</li><li>• Print All T30 Log Errors</li><li>• Print All Auto Captured Logs On</li><li>• Print T38 Trace Log</li></ul> <ul style="list-style-type: none"><li>• Clear T38 Trace Log</li></ul>
Reboot System	N/A

## Scan SE

This setting displays the current scanner registration values for each scanner source (flatbed, ADF front, ADF rear).

Enter the Service Engineer (SE) menu, and then navigate to:

**Scan SE > Scanner Info**

## EWS SE Menu

Enter this setting to help resolve customer communication related printing issues.

To access the Silabs configuration:

1. Open a web browser and then type `https://<IP address>/se` .
2. Navigate to:

**Fax > Settings > Silabs Configuration**

## Entering Invalid engine mode

This mode allows the printer to load the correct firmware code.

To access the Invalid engine mode in MB2236adw printers, perform the following:


1. Turn off the printer.
2. From the control panel, press and hold **3**, **4**, and **6** while turning on the printer.
3. Release the buttons after 10 seconds.

To access the Invalid engine mode in MB2236adwe printers, perform the following:

1. Turn off the printer.
2. Open tray 1.

**Note:** Make sure that paper is present in the tray.

3. Perform a POR.
4. When the display shows the following icon, close tray 1.

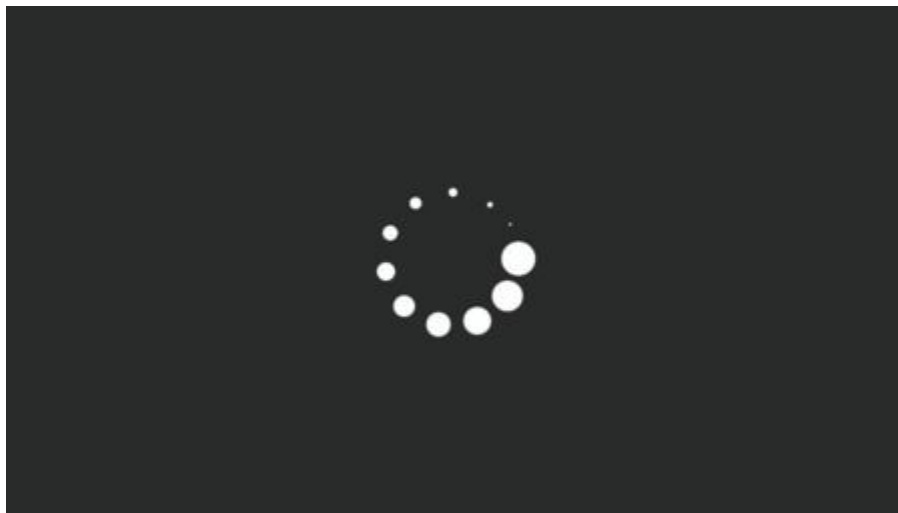

5. A menu appears on the display.

Select **->** to navigate the menu, and then select **ENGINE\_FLASH**.

**Note:** ENGINE\_FLASH turns green when selected.

6. Select **Boot**.

## Entering Recovery mode

This mode allows the printer to boot from a secondary set of instructions and flash firmware code. While in this mode, you can only flash firmware code through a USB cable directly connected to a PC.


Depending on your printer model, do any of the following:

### For LED display

1. Turn off the printer.
2. Open the front door.
3. Press and hold the **Stop** button.
4. Turn on the printer.
5. When all the icons flash, release the button.


### For 2-line display

1. Turn off the printer.
2. Press and hold the **OK** and **Back** buttons.
3. Turn on the printer.
4. When the display shows the following icon, release the buttons.

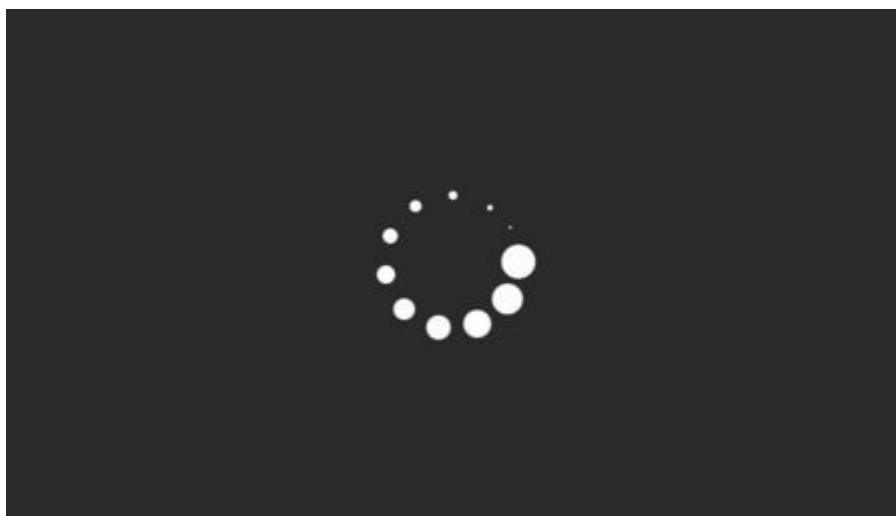

### For 2.4-, 4.3-, 7-, and 10-inch displays with number pads

1. Turn off the printer.
2. Press and hold the **2**, **7**, and **8** buttons.
3. Turn on the printer.
4. When the display shows the following icon, release the buttons.

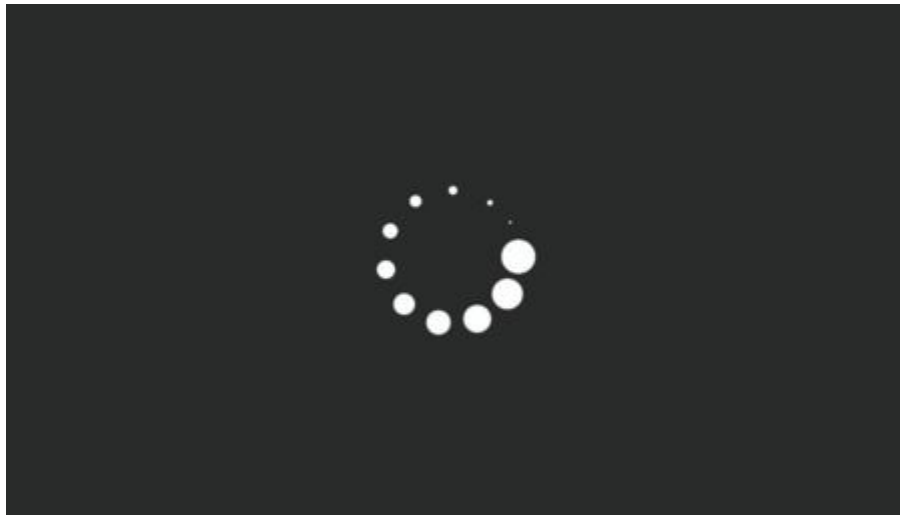

### For 2.8-, 4.3-, 7-, and 10-inch displays without number pads

1. Turn off the printer.
2. Open tray 1.

**Note:** Make sure that paper is loaded in the tray.

3. Turn on the printer.
4. When an ellipses appears on the upper-left corner of the display, close tray 1.

**Note:** If tray 1 is not closed, then the printer boots normally.

# Parts removal

## Important removal information

### Removal precautions

**CAUTION—SHOCK HAZARD**

The low-voltage power supply (LVPS) and the high-voltage power supply (HVPS) may have residual voltage present. To avoid the risk of electrical shock, do not touch their circuit components or the solder side of the board. Only handle them by their outer edges or metal housing.

**CAUTION—SHOCK HAZARD**

This product uses an electronic power switch. It does not physically disconnect the input AC voltage. To avoid the risk of electrical shock, always remove the power cord from the printer when removal of the input AC voltage is required.

**CAUTION—SHOCK HAZARD**

To avoid the risk of electrical shock and to prevent damage to the printer, remove the power cord from the electrical outlet and disconnect all connections to any external devices before you connect or disconnect any cable, electronic board, or assembly.

**CAUTION—HOT SURFACE**

The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.

**CAUTION—PINCH HAZARD**

To avoid the risk of a pinch injury, use caution in areas marked with this label. Pinch injuries may occur around moving parts, such as gears, doors, trays, and covers.

## Précautions de retrait



### CAUTION—SHOCK HAZARD

Une tension résiduelle peut être présente dans le bloc d'alimentation basse tension (LVPS) et le bloc d'alimentation haute tension (HVPS). Pour éviter tout risque d'électrocution, ne touchez pas les composants du circuit ou le côté soudure de la carte. Tenez-les uniquement par leurs extrémités ou le boîtier en métal.



### CAUTION—SHOCK HAZARD

Ce produit utilise un commutateur d'alimentation électronique. Il ne déconnecte pas physiquement la tension d'alimentation CA. Pour éviter tout risque d'électrocution, débranchez toujours le cordon d'alimentation de l'imprimante lorsque vous devez déconnecter la tension d'alimentation CA.



### CAUTION—SHOCK HAZARD

Pour éviter tout risque d'électrocution et éviter d'endommager l'imprimante, débranchez le cordon d'alimentation de la prise électrique et déconnectez toute connexion à tout périphérique externe avant de brancher ou débrancher des câbles ou circuits et assemblages électroniques.



### CAUTION—HOT SURFACE

L'intérieur de l'imprimante risque d'être brûlant. Pour réduire le risque de brûlure, laissez la surface ou le composant refroidir avant d'y toucher.



### CAUTION—PINCH HAZARD

Pour éviter tout risque de blessure par pincement, agissez avec précaution au niveau des zones signalées par cette étiquette. Les blessures par pincement peuvent se produire autour des pièces mobiles telles que les engrenages, portes, tiroirs et capots.

## Precauciones durante la extracción



### CAUTION—SHOCK HAZARD

La fuente de alimentación de bajo voltaje (LVPS) y la fuente de alimentación de alto voltaje (HVPS) pueden presentar voltaje residual. Para evitar el riesgo de descarga eléctrica, no toque los componentes del circuito ni el lateral soldado de la placa. Manipule solo los bordes exteriores o la carcasa metálica.

**CAUTION—SHOCK HAZARD**

Este producto utiliza un interruptor de corriente electrónico. No desconecta físicamente la entrada de voltaje de CA. Para evitar el riesgo de descarga eléctrica, desenchufe siempre el cable de alimentación de la impresora cuando sea necesario retirar la entrada de voltaje de CA.

**CAUTION—SHOCK HAZARD**

Para evitar el riesgo de descargas eléctricas y daños en la impresora, retire el cable de alimentación de la toma eléctrica y desconecte todas las conexiones a dispositivos externos antes de conectar o desconectar cualquier cable, placa electrónica o conjunto.

**CAUTION—HOT SURFACE**

El interior de la impresora podría estar caliente. Para evitar el riesgo de heridas producidas por el contacto con un componente caliente, deje que la superficie se enfríe antes de tocarlo.

**CAUTION—PINCH HAZARD**

Para evitar el riesgo de lesión por atrapamiento, preste atención en las áreas marcadas con esta etiqueta. Las lesiones por atrapamiento se pueden producir en torno a partes móviles, tales como engranajes, puertas, bandejas y cubiertas.

## Vorsichtsmaßnahmen bei der Demontage

**CAUTION—SHOCK HAZARD**

Im Niederspannungsnetzteil (LVPS) und Hochspannungsnetzteil (HVPS) liegt unter Umständen Restspannung vor. Um das Risiko eines elektrischen Schlags zu vermeiden, berühren Sie keine umliegenden Bauteile oder die Lötseite der Platine. Fassen Sie sie nur an den Außenkanten oder am Metallgehäuse an.

**CAUTION—SHOCK HAZARD**

Dieses Produkt verwendet einen elektronischen Leistungsschalter. Er trennt die Eingangswechselspannung nicht physikalisch. Um das Risiko eines elektrischen Schlags zu vermeiden, ziehen Sie stets das Netzkabel vom Drucker ab, wenn eine Abtrennung der Eingangswechselspannung erforderlich ist.



### **CAUTION—SHOCK HAZARD**

Um das Risiko eines elektrischen Schlags und Schäden am Drucker zu vermeiden, ziehen Sie das Netzkabel aus der Steckdose und trennen Sie alle Verbindungen zu jeglichen externen Geräten, bevor Sie Kabel, Elektronikplatinen oder Baugruppen einstecken oder abziehen.



### **CAUTION—HOT SURFACE**

Das Innere des Druckers kann sehr heiß sein. Vermeiden Sie Verletzungen, indem Sie heiße Komponenten stets abkühlen lassen, bevor Sie ihre Oberfläche berühren.



### **CAUTION—PINCH HAZARD**

Um das Risiko einer Quetschung zu vermeiden, gehen Sie in Bereichen, die mit diesem Etikett gekennzeichnet sind, mit Vorsicht vor. Quetschungen können im Bereich von beweglichen Komponenten auftreten, wie z. B. Zahnrädern, Klappen, Fächern und Abdeckungen.

## Handling ESD-sensitive parts

Many electronic products use parts that are known to be sensitive to electrostatic discharge (ESD). To prevent damage to ESD-sensitive parts, do the following:

- Turn off the printer before removing logic boards.
- Keep the parts in their original packing material until you are ready to install them into the printer.
- Make the least possible movements with your body to prevent an increase of static electricity from clothing fibers, carpets, and furniture.
- Put the ESD wrist strap on your wrist. Connect the wrist band to the system ground point. This action discharges any static electricity in your body to the printer.
- Hold the parts by their edge connector shroud. Do not touch its pins. If you are removing a pluggable module, then use the correct tool.
- If possible, keep all parts in a grounded metal cabinet.
- Do not place the parts on the printer cover or on a metal table. If you need to put down the parts, then put them into their packing material.
- Prevent parts from being accidentally touched by other personnel. Cover the printer when you are not working on it.
- Be careful while working with the parts when cold-weather heating is used. Low humidity increases static electricity.

## Critical information for controller board or control panel replacement (for MB2236adwe only)



### CAUTION—POTENTIAL INJURY

The lithium battery in this product is not intended to be replaced. There is a danger of explosion if a lithium battery is incorrectly replaced. Do not recharge, disassemble, or incinerate a lithium battery. Discard used lithium batteries according to the manufacturer's instructions and local regulations.



### CAUTION—POTENTIAL INJURY

La batterie lithium de ce produit n'est pas destinée à être remplacée. Il existe un risque d'explosion si une batterie lithium est placée de façon incorrecte. Ne rechargez pas, ne démontez pas et n'incinerez pas une batterie lithium. Mettez les batteries lithium usagées au rebut selon les instructions du fabricant et les réglementations locales.



### CAUTION—POTENTIAL INJURY

La batería de litio de este producto no debe reemplazarse. Existe riesgo de explosión si se sustituye incorrectamente una batería de litio. No recargue, desmonte ni incinere una batería de litio. Deseche las baterías de litio según las instrucciones del fabricante y las normativas locales.



### CAUTION—POTENTIAL INJURY

Die Lithiumbatterie in diesem Produkt darf nicht ausgetauscht werden. Wird eine Lithiumbatterie nicht ordnungsgemäß ausgetauscht, besteht Explosionsgefahr. Lithiumbatterien dürfen auf keinen Fall wieder aufgeladen, auseinander genommen oder verbrannt werden. Befolgen Sie zum Entsorgen verbrauchter Lithiumbatterien die Anweisungen des Herstellers und die örtlichen Bestimmungen.

### Warning—Potential Damage

Observe all precautions when handling ESD sensitive parts. See [Handling ESD-sensitive parts on page 293](#).

### Warning—Potential Damage

Carefully remove cables and connectors. Make sure they are not damaged.

### **Warning—Potential Damage**

To avoid damaging the part or experience NVRAM mismatch issues, replace only one of the following components at a time:

- Control panel
- Controller board

To replace a component and to test whether the problem is resolved:

1. Replace the affected component.

### **Warning—Potential Damage**

Do not perform a Power-On Reset (POR) until the problem is resolved. If a POR is performed at this point, then the replacement part can no longer be used in another printer and must be returned to the manufacturer.

2. Enter the Diagnostics menu. The Diagnostics menu allows you to temporarily use the replacement part.

### **Warning—Potential Damage**

Some printers perform automatically a POR if the Diagnostics menu is not opened within five seconds. If a POR is performed at this point, then the replacement part can no longer be used in another printer and must be returned to the manufacturer.

3. Use the Diagnostics menu to test the replacement part. Do a feed test to check if the problem is resolved.
  - If the problem is not resolved—Turn off the printer, and then install the old part.
  - If the problem is resolved—Perform a POR.

## Restoring the printer configuration

Restore the printer to its correct configuration to complete the replacement service. Use the Service Restore Tool to download the software bundle, and then flash the printer settings and embedded solutions.

### Notes:

- If you do not have access to Service Restore Tool, then contact your next level of support.
- The software bundle contains the latest version of the firmware, applications, and software licenses from the Lexmark CFM and Package Builder. The printer firmware may be at a different level from what is used before replacement of the part.

### Using the Service Restore Tool

1. Go to <https://iss.lexmark.com/cdp/service-restore-tool/>.
2. Log in using your Lexmark or partner login.  
If your login fails, then contact your next level of support.
3. Enter the printer serial number, and then submit the information.



**Note:** Make sure that the serial number that appears on the verification screen is correct.



4. Save the zip file.

**Note:** Make sure that the serial number in the zip file matches the serial number of the printer being restored.



5. Extract the contents of the zip file, open the *Readme* file, and then follow the instructions in the file.

### Note:

- Perform the install instructions on the *Readme* file in the exact order shown. Restart the printer only if the file says so.
- For more information on how to flash the downloaded files, see [Updating the printer firmware on page 297](#).
- To load the zip files that are extracted from the Service Restore Tool, see [Restoring solutions, licenses, and configuration settings on page 297](#).



6. If the printer had eSF apps previously installed, then confirm from the customer if all the eSF apps have been installed after performing the installation instructions in the *Readme* file.

### Note:

- If you are unable to access the administrative menus to verify that the printer is restored, then ask the customer for access rights.
- If a 10.00 error appears after you restart the printer, then contact the next level of support.

## Restoring solutions, licenses, and configuration settings

To load the zip files that are extracted from the Service Restore Tool, do the following:

1. Open a web browser, and then type the printer IP address.



2. Click **Import Configuration**, and then click **Browse**.



3. Navigate to the folder where the zip files are extracted from the Service Restore Tool.



4. Select the file to import, and then click **Import**.
5. Repeat step 2 through step 4 for the other files that are included in the extracted zip file.

## Updating the printer firmware

### Warning—Potential Damage

Before updating the printer firmware, ask the next level of support for the correct code. Using an incorrect code level may damage the printer.

## Using a flash drive

**Note:** The printer must be in ready state to update the firmware.

This option is available only in printer models with front USB port.

1. Insert the flash drive into the USB port.
2. Depending on the printer model, do any of the following:
  - From the control panel, navigate to **USB Menu: Print from USB > Accept** or **OK**, and then select the file that you need to flash.
  - Select the firmware file.

**Note:** Do not turn off the printer while the update is going on.

## Using a network computer

### Using the File Transfer Protocol (FTP)

**Note:** The printer must be in ready state to update the firmware.

1. Turn on the printer.
2. Obtain the IP address from the home screen.
3. From the command prompt of a network computer, open an FTP session to the printer IP address.
4. Use a PUT command to place the firmware file on the printer.

The printer performs a POR sequence and terminates the FTP session.

### Using the Embedded Web Server

**Note:** The printer must be in ready state to update the firmware.

1. Open a web browser, and then type the printer IP address.
2. Click **Settings > Device > Update Firmware**.
3. Select the file to use.

The printer performs a POR sequence and terminates the EWS session.

## Using a USB cable connection

**Note:** Make sure that the cable is connected to the rear USB port.

### Using USB Flash Utility

1. Go to [support.lexmark.com](http://support.lexmark.com), and then download USB Flash Utility.
2. Extract, and then run the utility.
3. Click **Browse Files**, and then browse to the firmware file directory.
4. Select the firmware file.

5. Select the source printer.
6. Click **Start**.

### Using USButil

1. Go to [support.lexmark.com](http://support.lexmark.com), and then download USButil.
2. Extract, and then drag and drop the firmware file onto the USButil icon.
3. A command prompt window appears briefly.

**Note:** Make sure to disconnect other USB devices when using USButil.

## Backing up eSF solutions and settings

**Note:** Export the eSF solutions and settings from the printer before replacing the controller board.

### Exporting eSF solutions and settings file

1. Reset the printer into Invalid engine mode. See [Entering Invalid engine mode on page 287](#).
2. Open a web browser, and then type the printer IP address.

**Note:** If the web page cannot be accessed or an error occurs when starting the printer into Invalid engine mode, then data backup is not an option. Inform the customer that the data cannot be saved.

3. Click **Apps**, click **Export Configuration**, and then select one of the options in the dropdown menu.
4. Click **Export**.

**Note:** The size limit of the export file is 128 KB.

## Ribbon cable connectors

### Zero Insertion Force (ZIF) connectors

These connectors are used on the boards and cards that are installed in the printer. To avoid damaging the connectors and their cables, observe the following:

- Do not insert the cables where the contacts are facing the locking actuator.
- Do not insert the cables diagonally into the ZIF socket.
- Avoid using a fingernail or sharp object to open the locking actuator.

- Avoid pressing against the cables when opening the locking actuator.

These are the types of the ZIF connectors that are used in this printer:

- Horizontal top contact connector
- Horizontal bottom contact connector
- Vertical mount contact connector
- Horizontal sliding connector

## Horizontal top contact connector


This connector uses a back flip locking actuator to lock the ribbon cable into the ZIF connector.

### Warning—Potential Damage

When opening or closing this type of actuator, lift or close the two tabs located on each end of the actuator. The two tabs should be moved simultaneously. Do not close the actuator from the center.

## Removing the cable

1. Unlock the actuator.

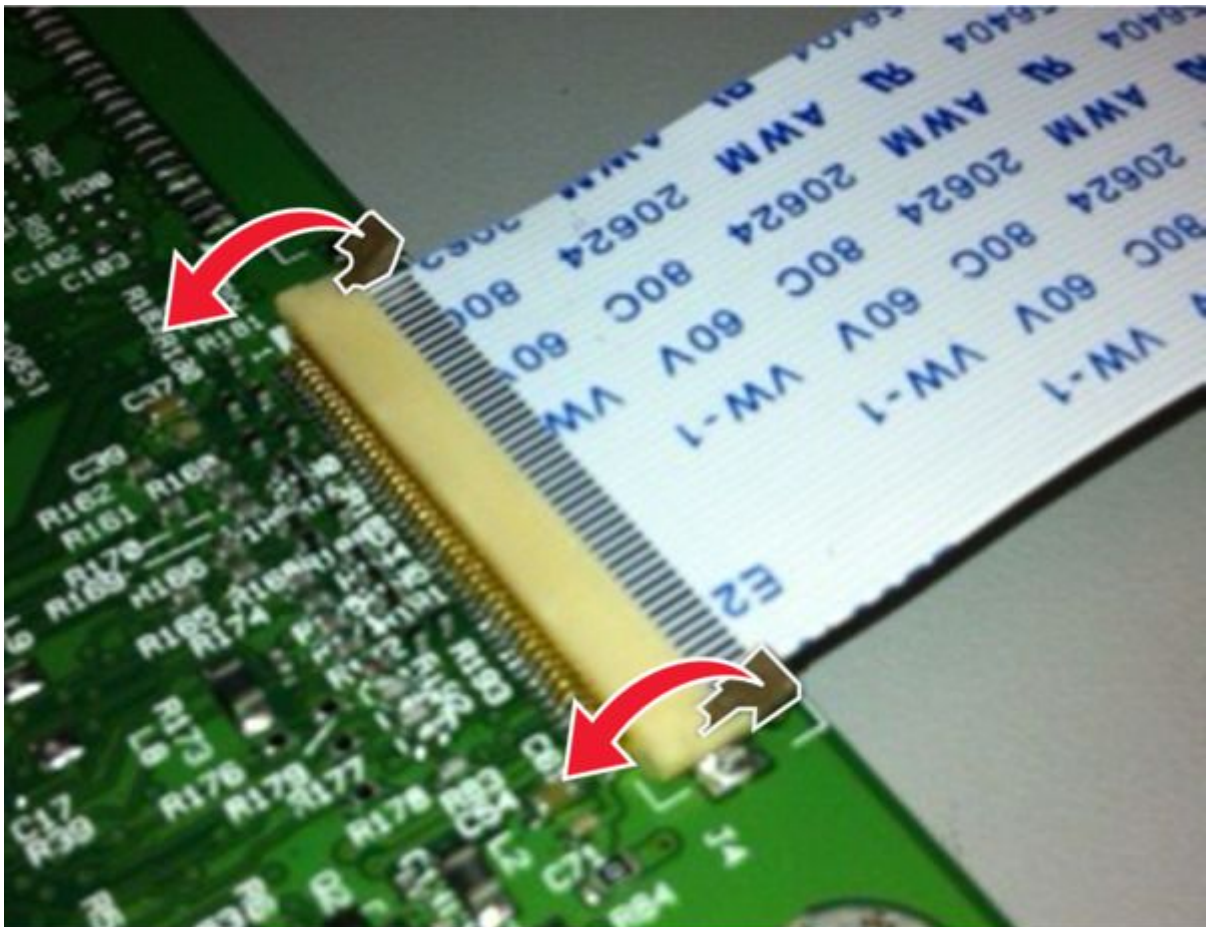


2. Remove the cable.

### Inserting the cable

Make sure that the actuator is unlocked before installing the cable. The tabs are vertical when the actuator is locked.

1. Insert the cable on top of the actuator with the contacts facing up.


**Note:** Make sure that the cable is installed squarely into the connector to avoid intermittent failures.

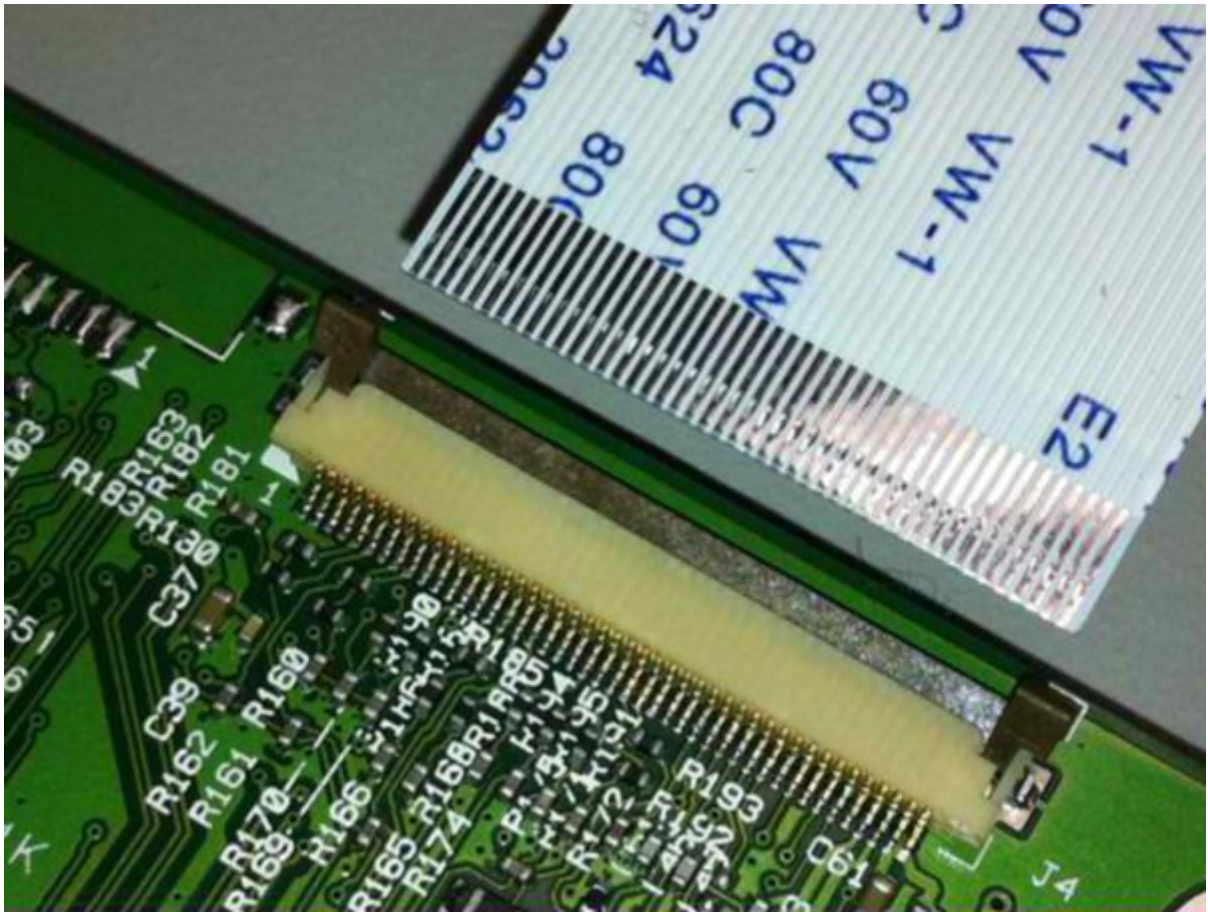

2. Rotate the locking actuator to the locked position.

**Note:**

- Do not move the cable while locking the actuator.
- If the cable moves, open the actuator, reposition the cable, and then close the actuator.

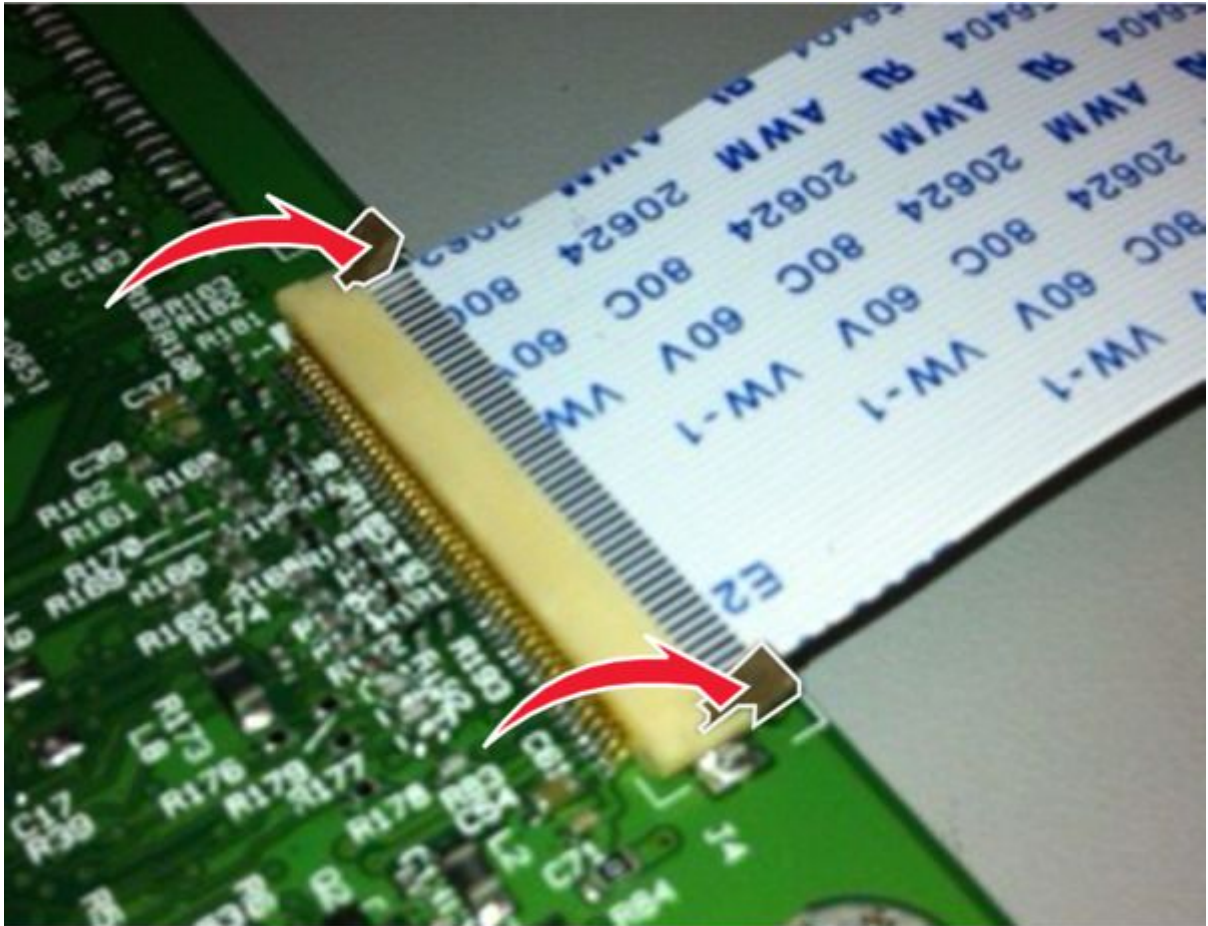

### Horizontal bottom contact connector


This connector uses a flip locking actuator to lock the ribbon cable into the ZIF connector.

#### **Warning—Potential Damage**

When opening or closing this type of actuator, gently lift the center of the actuator using your finger. Do not use a fingernail or screwdriver to open the actuator to avoid damaging the ribbon cable. Do not close the actuator from its ends.

#### Removing the cable

1. Unlock the actuator.

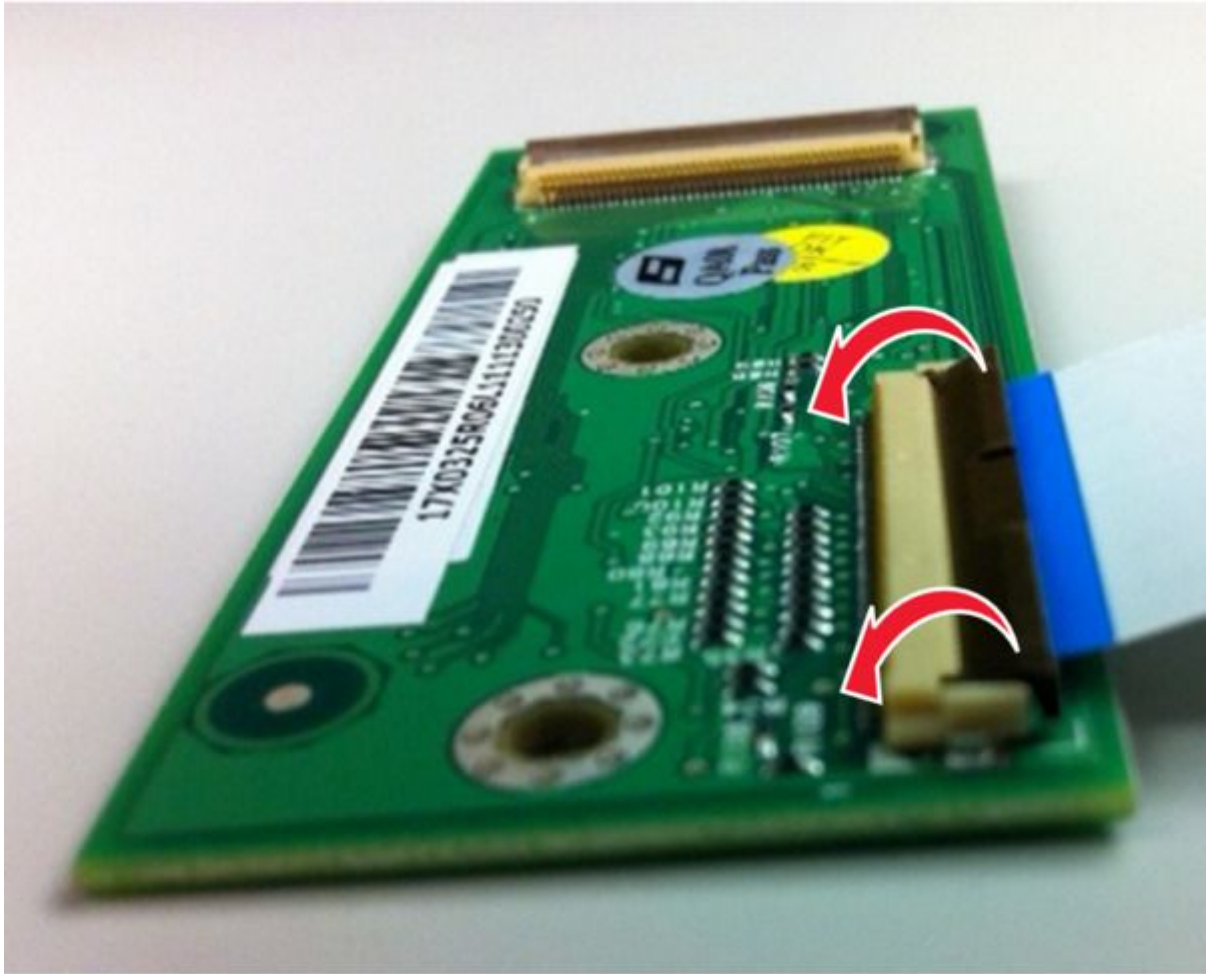

2. Remove the cable.

### Inserting the cable

1. Make sure that the actuator is in the open position.




2. Insert the cable below the actuator with the contacts facing downward and away from the locking actuator.

**Note:** Make sure that the cable is installed squarely into the connector to avoid intermittent failures.



3. Rotate the locking actuator to the locked position.

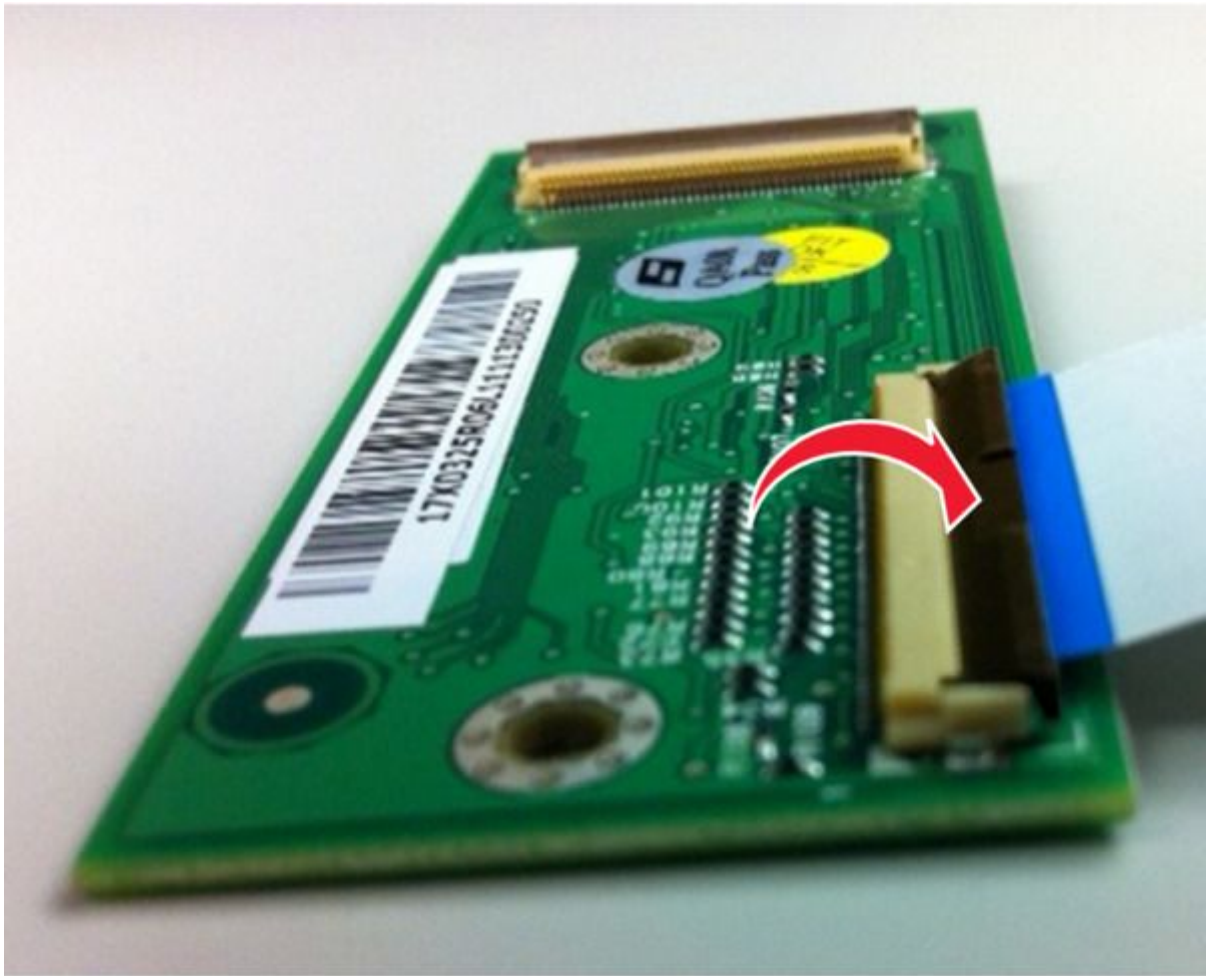

### Vertical mount contact connector


This connector uses a back flip locking actuator to lock the ribbon cable into the ZIF connector.

#### **Warning—Potential Damage**

When opening or closing this type of actuator, gently lift the center of the actuator using your finger. Do not use a fingernail or screwdriver to open the actuator to avoid damaging the ribbon cable. Do not close the actuator from its ends.

### Removing the cable

1. Rotate the locking actuator from the center of the actuator to the unlocked position.

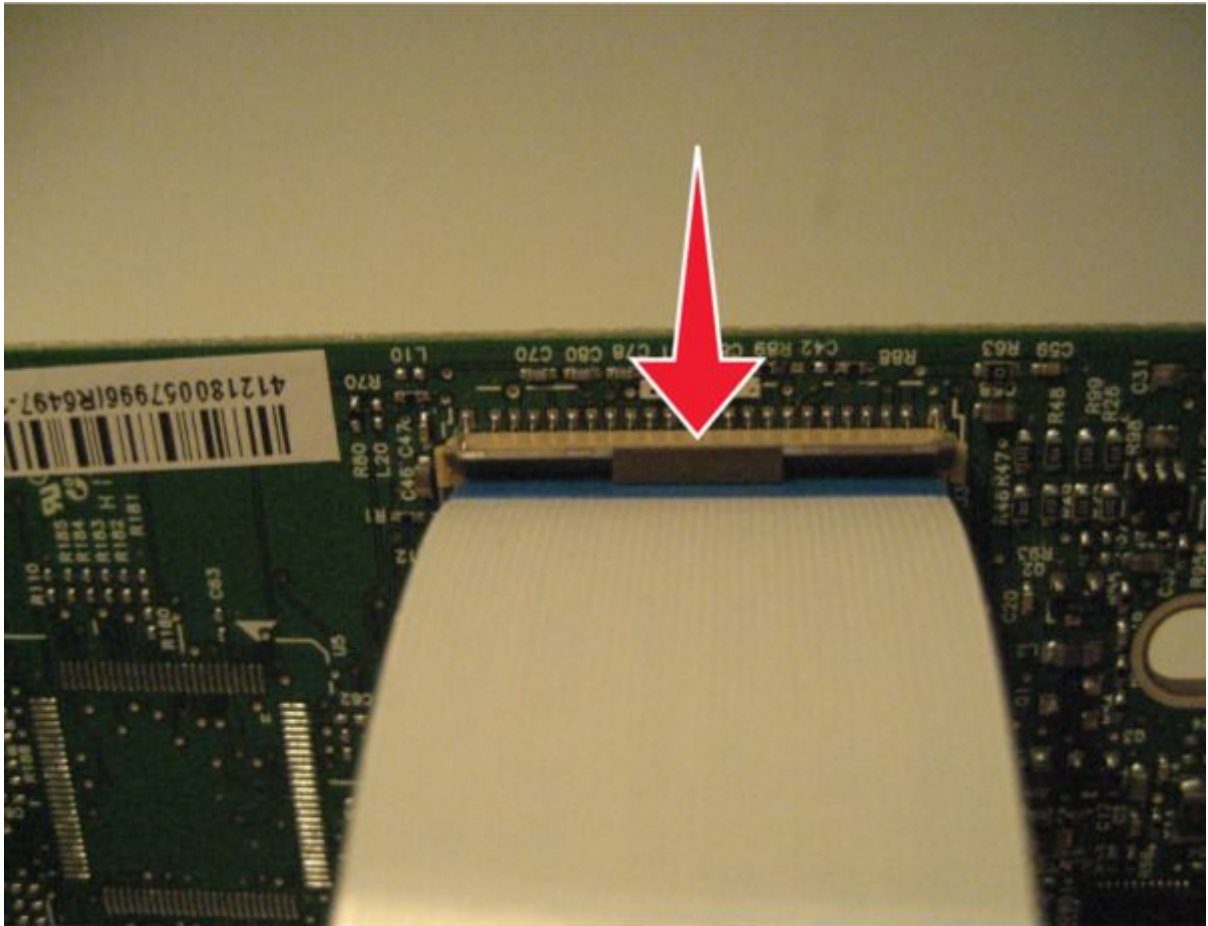

2. Remove the cable.

### Inserting the cable

1. Make sure that the locking actuator is in the open position.



2. Insert the cable on top of the actuator with the contacts facing away from the locking actuator.


**Note:** Make sure that the cable is installed squarely into the connector to avoid intermittent failures.



3. Rotate the locking actuator to the locked position.

**Note:**

- Do not move the cable while locking the actuator.
- If the cable moves, open the actuator, reposition the cable, and then close the actuator.

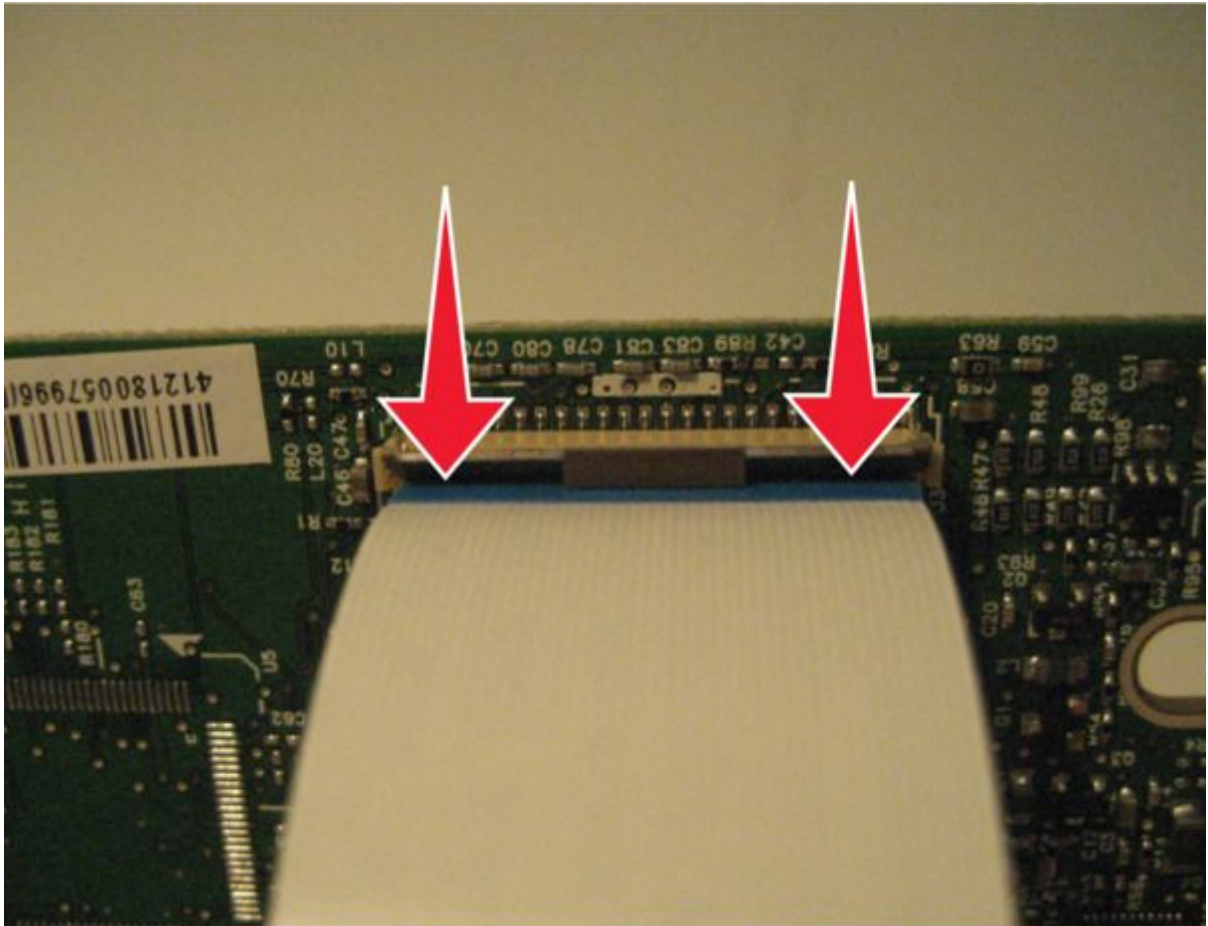

### Horizontal sliding contact connector


This connector uses a slide locking actuator to lock the ribbon cable into the ZIF connector.

#### **Warning—Potential Damage**

When opening or closing this type of actuator, gently push or pull the two tabs located on each end of the actuator. Do not close the actuator from the center of the actuator. Do not use a screwdriver to open or close the actuator to avoid damage to the cable or connector.

### Removing the cable


1. Slide the tabs away from the connector.

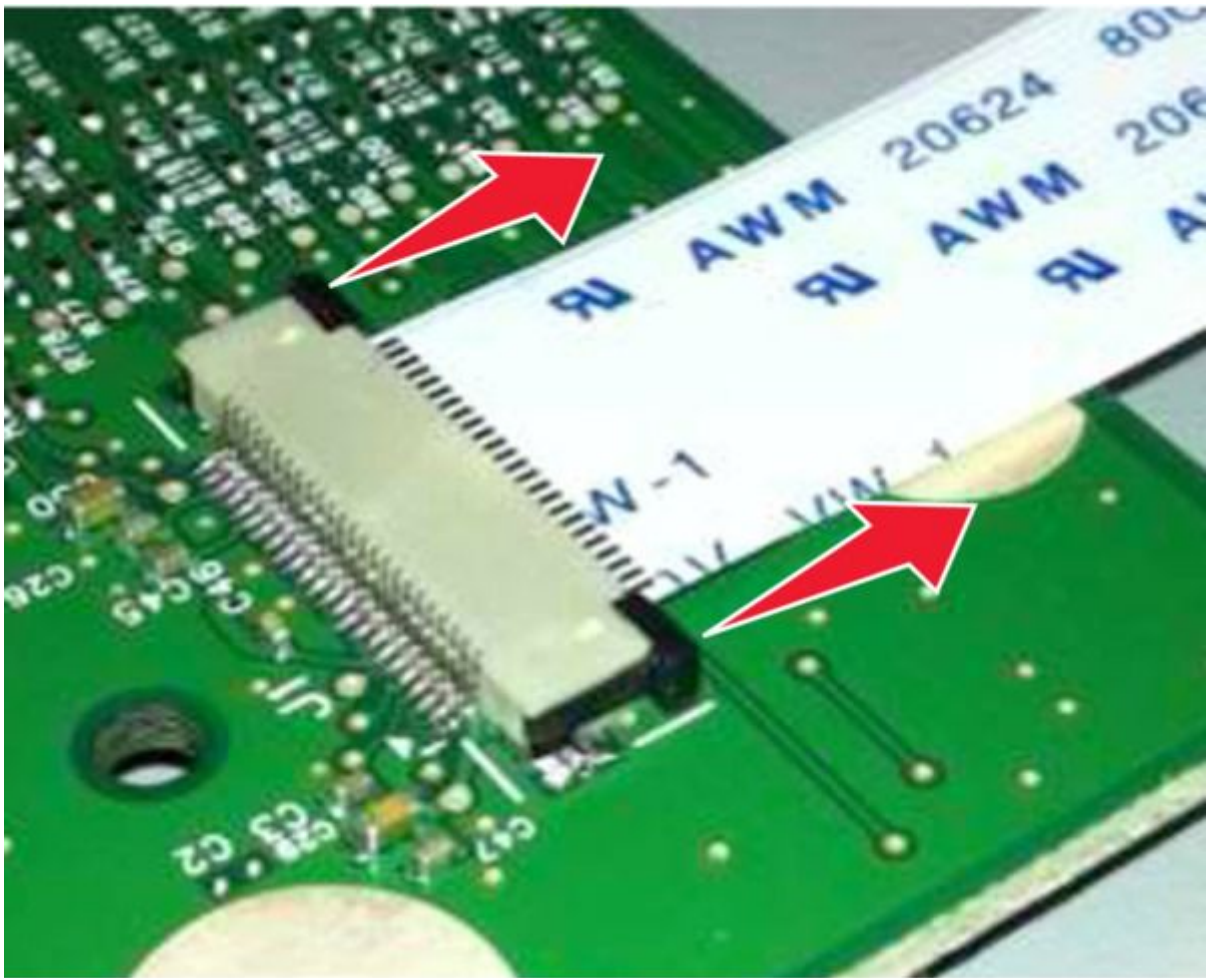

2. Remove the cable.

### Inserting the cable

1. Make sure that the locking actuator is in the open position. If you are opening the connector, then pull back the end tabs using equal force to avoid breaking the connector.

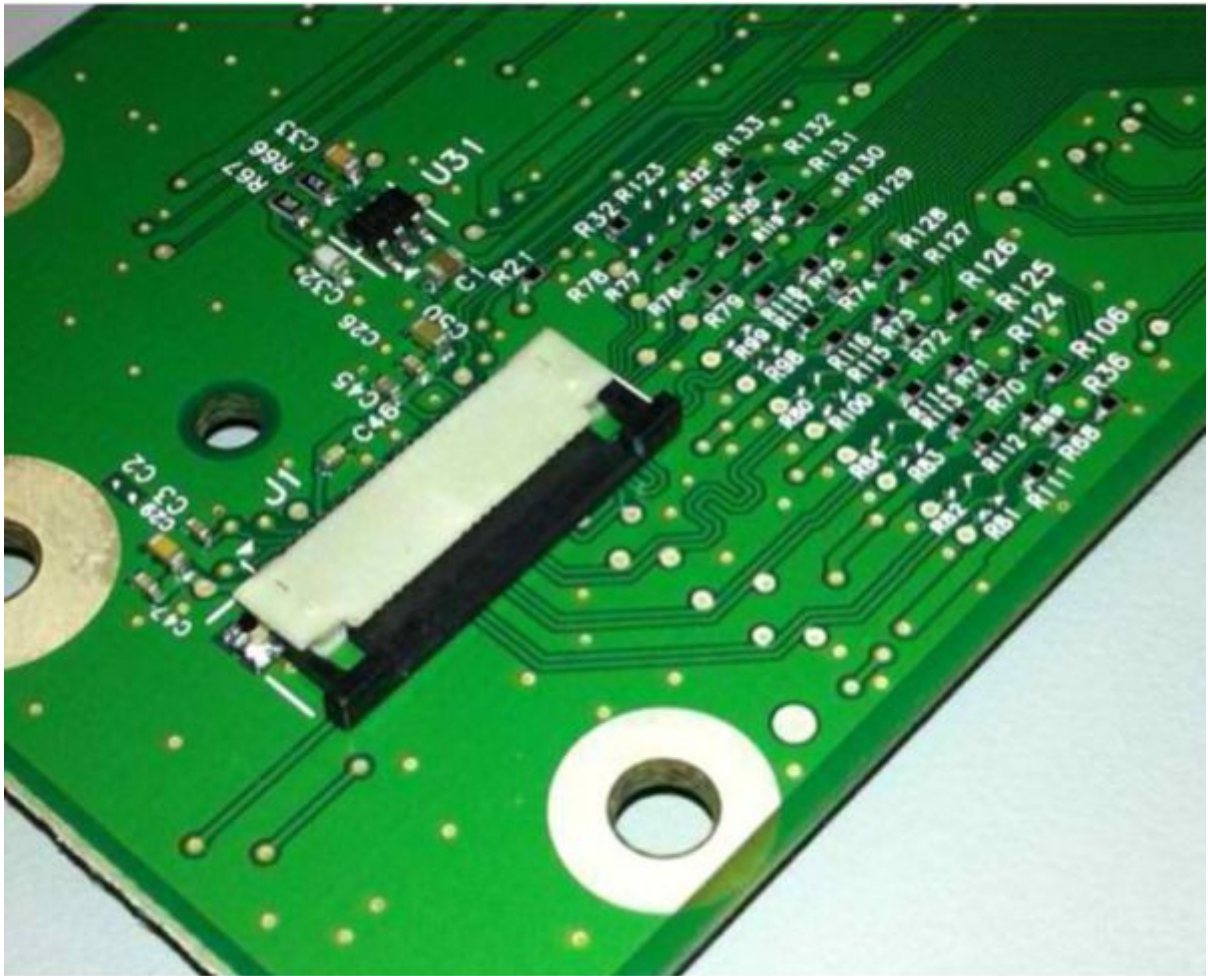


2. Insert the cable on top of the actuator with the contacts facing away from the locking actuator.



3. Slide the locking actuator toward the connector to lock the cable.

**Note:**

- Do not move the cable while locking the actuator.
- If the cable moves, open the actuator, reposition the cable, and then close the actuator.

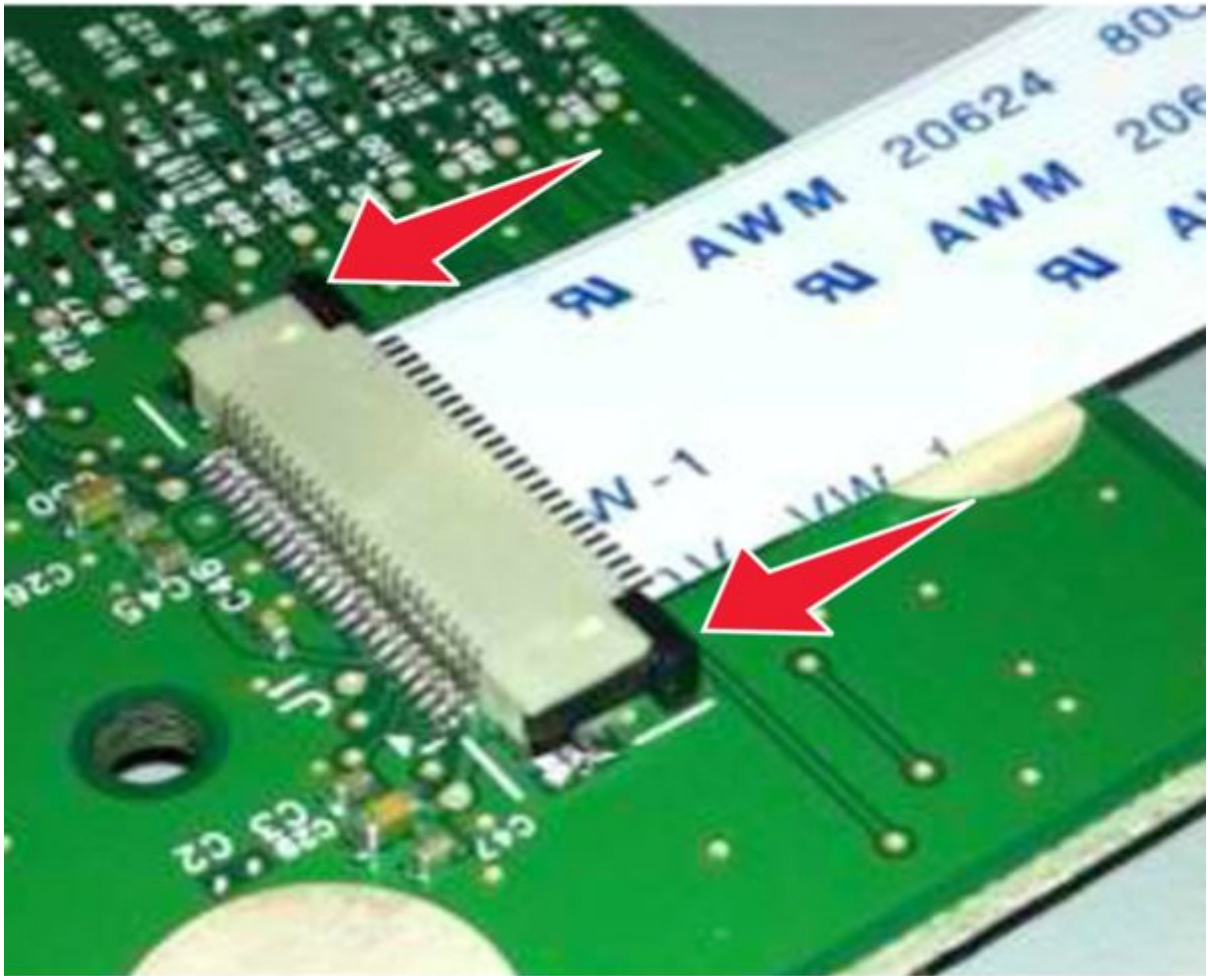


## Low insertion force (LIF) connector

### **Warning—Potential Damage**

When installing a cable into an LIF connector, avoid bending the edges of the cables and damaging the contacts on the cables.


### Inserting the cable

1. Make sure that the contacts of the controller board and connectors are on the same side.

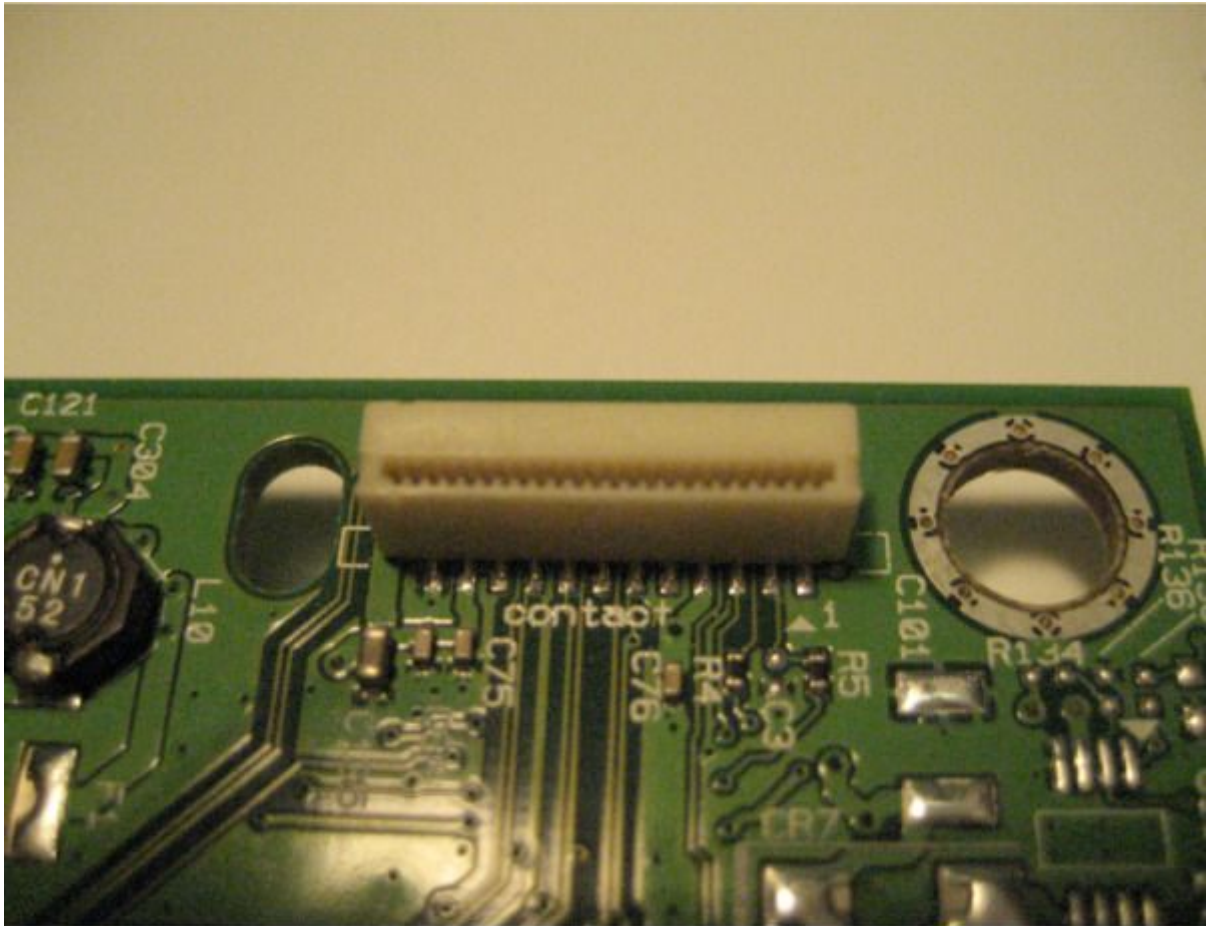

2. Insert the cable.


**Note:** Make sure that the cable is installed straight into the connector to avoid intermittent failures.

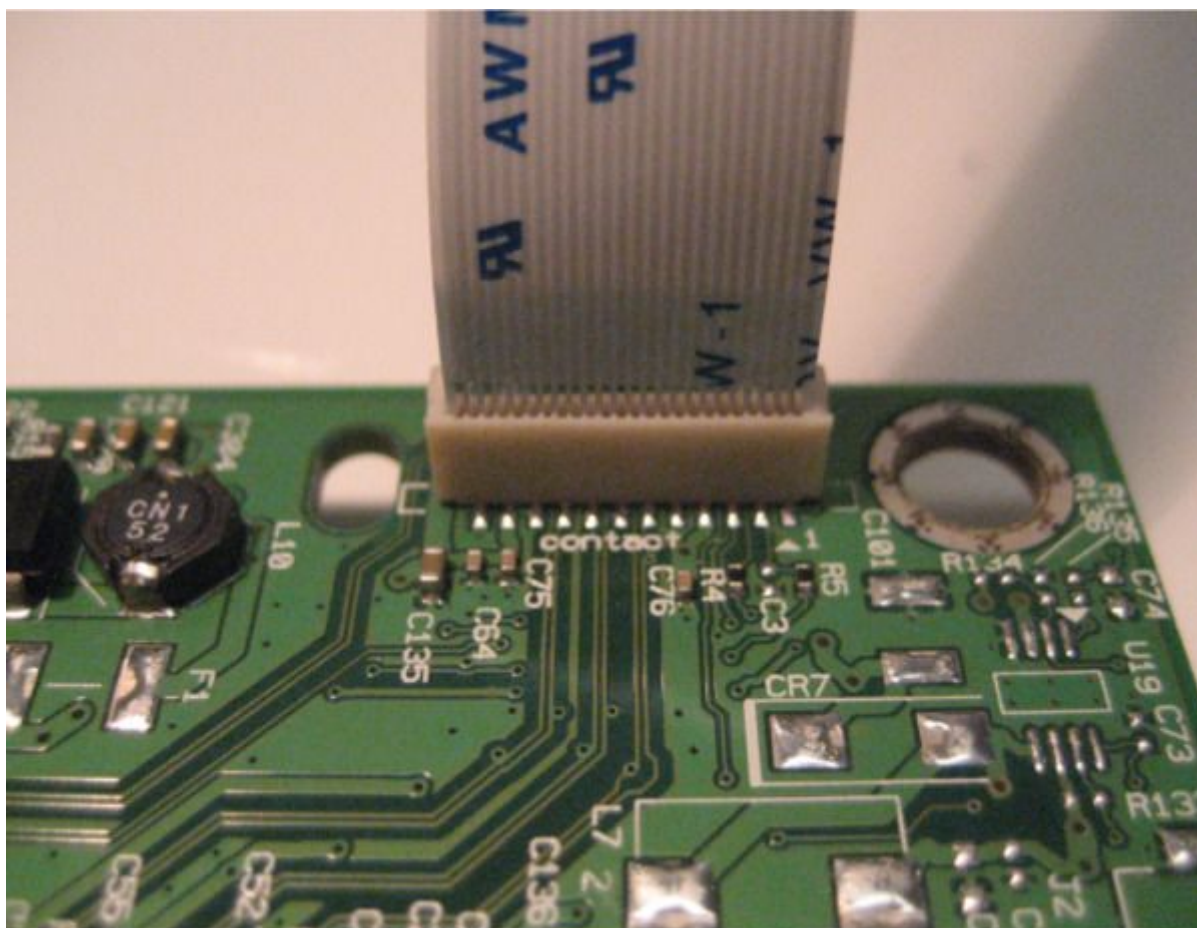

## Printhead assembly adjustment

A printhead must be correctly positioned after it has been removed. Use a sharp pencil or a small, flat-blade screwdriver to mark the location of the old printhead on the printer frame. Align the new printhead relative to the location of the old printhead.

**Note:** Skew is caused by a sheet being fed through the printer while misaligned. The entire image is rotated relative to the sheet edges. However, a mechanically misaligned printhead causes the horizontal lines to appear skewed, while the vertical lines remain parallel to the vertical edges. The skew cannot be adjusted. Check the pick tires for wear, the paper path for obstructions, the fuser for proper setting, and the tray paper guides for proper setting.

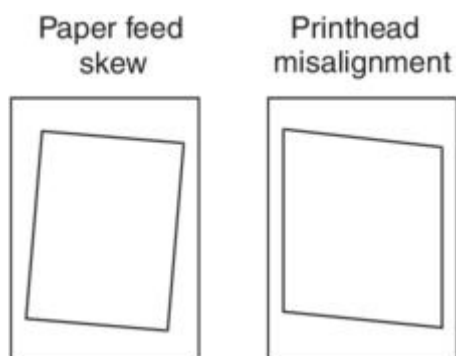


To adjust the printhead:


1. Perform a POR.
2. Enter the Diagnostics menu, and then print a Quick test page:

**Diagnostics Menu > Print Tests > Tray 1 > Single**

3. Fold the printed test page on the left side so that a few millimeters of grid lines wrap around the outside of the fold.
4. Make a second vertical fold near the center so that the left side top edge aligns with the right side top edge.

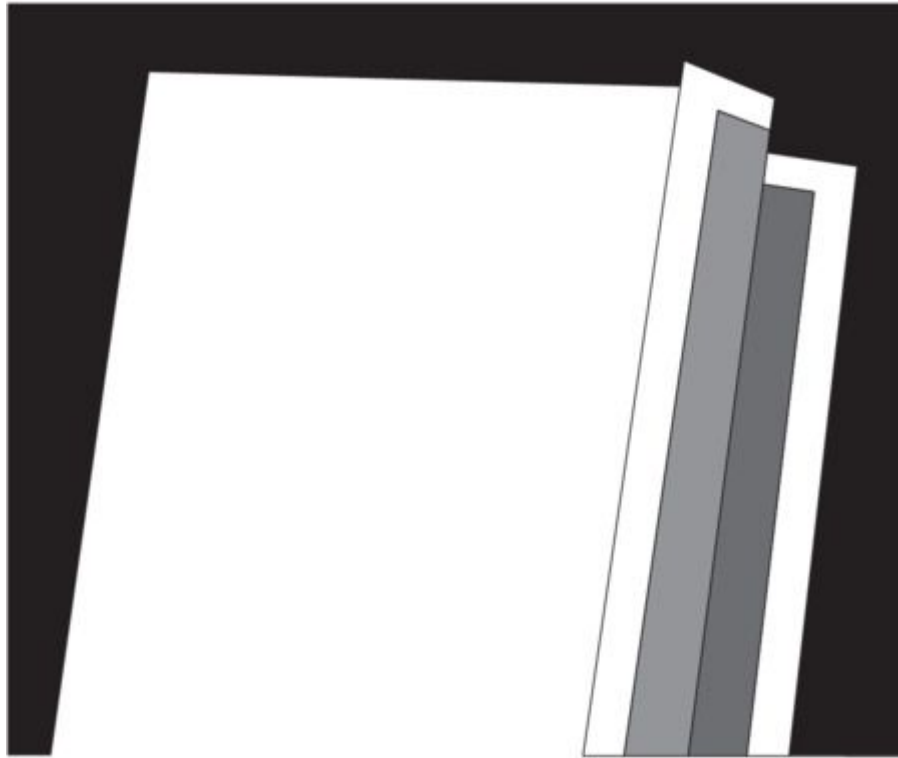

5. If the grid lines of the right flap align below the corresponding lines on the left side, then adjust the printhead clockwise relative to the printer, and recheck. If the grid lines of the left flap align below the corresponding lines of the right side, then adjust the printhead counterclockwise.

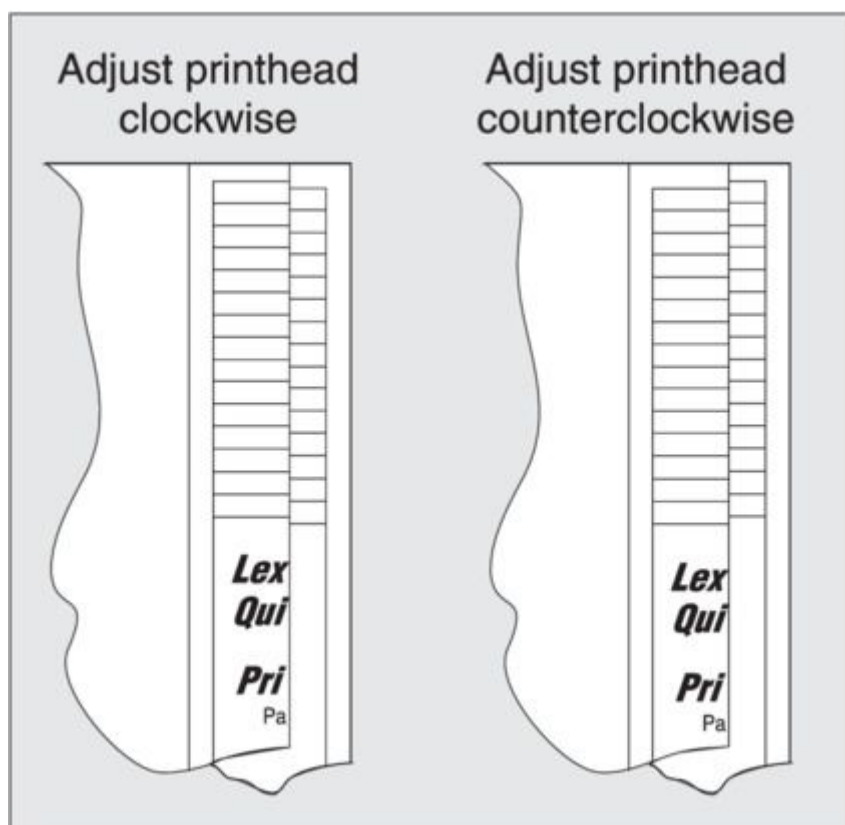

6. Print another Quick test page, and check if adjustments are still needed.
7. After obtaining a properly adjusted image on the paper, tighten all the screws.

**Note:** If necessary, print a Quick test page again and perform the Registration adjust procedure to correct the skew and misalignments. See [Registration adjust on page 276](#).

## Performing the HVPS characterization

Make sure to perform the following procedure when replacing the HVPS.


1. Enter the Diagnostics menu, and then navigate to:

**Reports > Device > Device settings**

2. Take note of the HVPS adjust values.
3. Turn off the printer.
4. Remove the old HVPS.
5. Install the new HVPS.
6. Perform a POR.
7. Enter the Diagnostics menu, and then navigate to:

**Printer diagnostics & adjustments > HVPS adjust**

8. For each letter under the HVPS adjust section, enter the values as indicated on the sticker of the new HVPS.

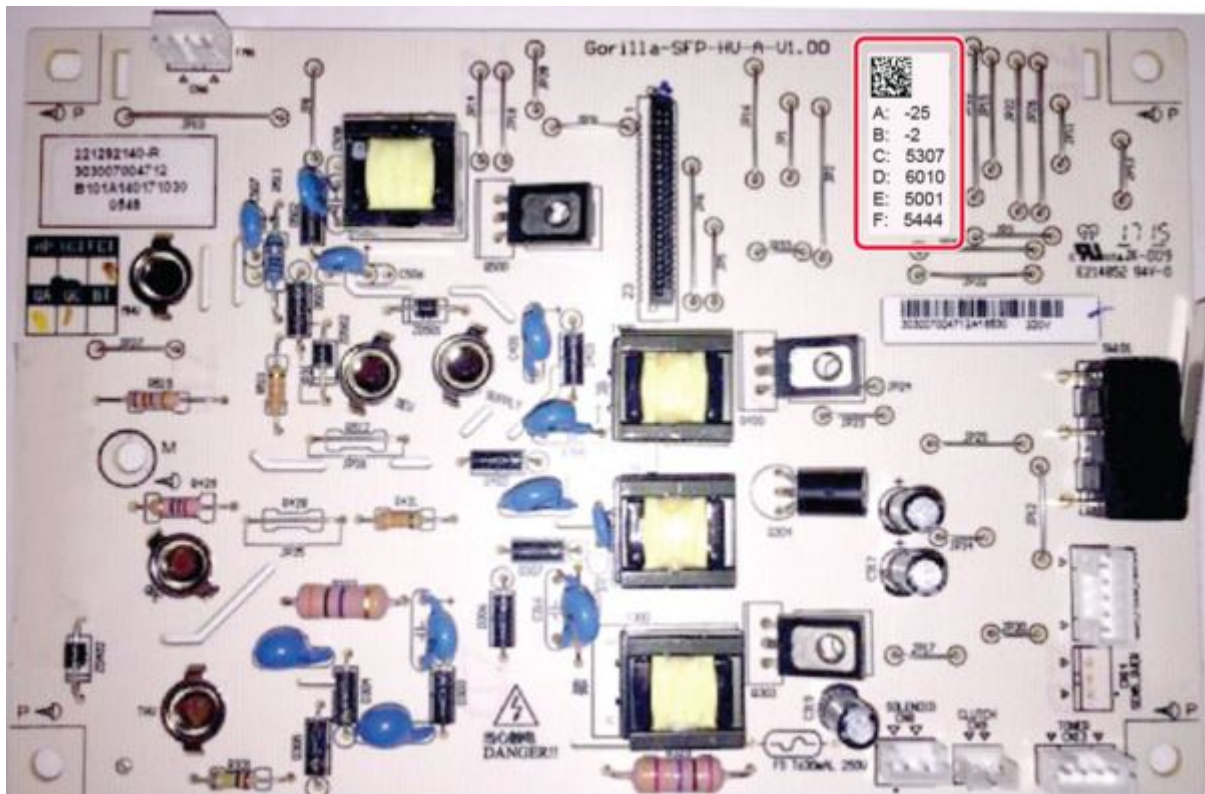

9. Perform a POR.
10. Enter the Diagnostics menu, and then navigate to:

**Reports > Device > Device settings**

11. Check if the new HVPS adjust values were saved.

## Removal procedures

Keep the following tips in mind as you replace parts:

- Some removal procedures require removing cable ties. You must replace cable ties during reassembly to avoid pinching wires, obstructing the paper path, or restricting mechanical movement.
- Remove the toner cartridges, imaging kit, and trays before removing other printer parts. The imaging kit must be carefully set on a clean, smooth, and flat surface. It must also be protected from light while out of the printer.
- Disconnect all external cables from the printer to prevent possible damage during service.
- Unless otherwise stated, reinstall the parts in reverse order of removal.
- When reinstalling a part held with several screws, start all screws before the final tightening.
- For printers that have a electronic power switch, make sure to unplug the power cord after powering off.

## Left side removals

### Left cover removal

1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the rear door. See [Bottom rear door removal on page 347](#).


## Parts removal

---

4. Remove the bottom rear door. See [Bottom rear door removal on page 347](#).
5. Remove the left cover.





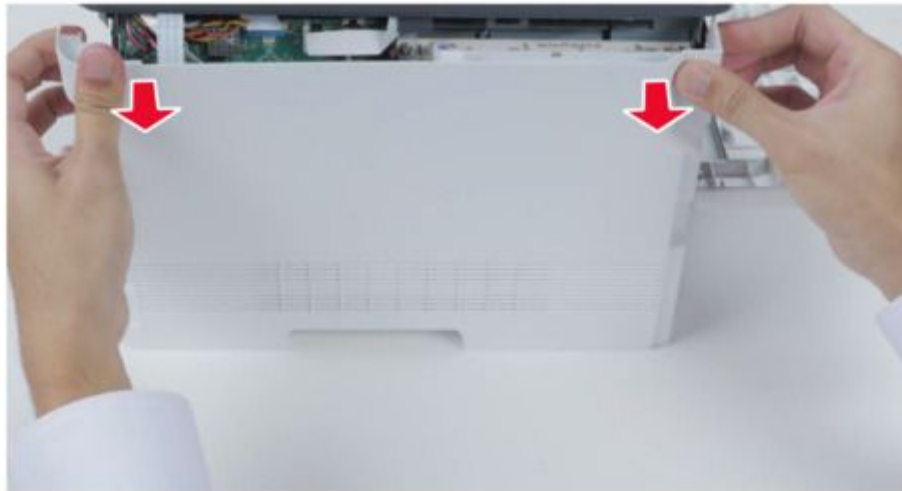

## Controller board removal

**Note:** For a video demonstration, see [Controller board removal](#).

### **Warning—Potential Damage**

When replacing or removing the controller board with PN 41X2461, do not replace or remove the toner cartridge to avoid losing printer settings and information.

### Warning—Potential Damage

When replacing or removing the controller board with PN 41X2515, do not replace or remove the control panel. See [Critical information for controller board or control panel replacement \(for MB2236adwe only\) on page 294](#).


1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the rear door. See [Bottom rear door removal on page 347](#).
4. Remove the bottom rear door. See [Bottom rear door removal on page 347](#).
5. Remove the left cover. See [Left cover removal on page 319](#).
6. Disconnect all cables.



7. Remove the controller board.



8. Remove the Wi-Fi antenna.

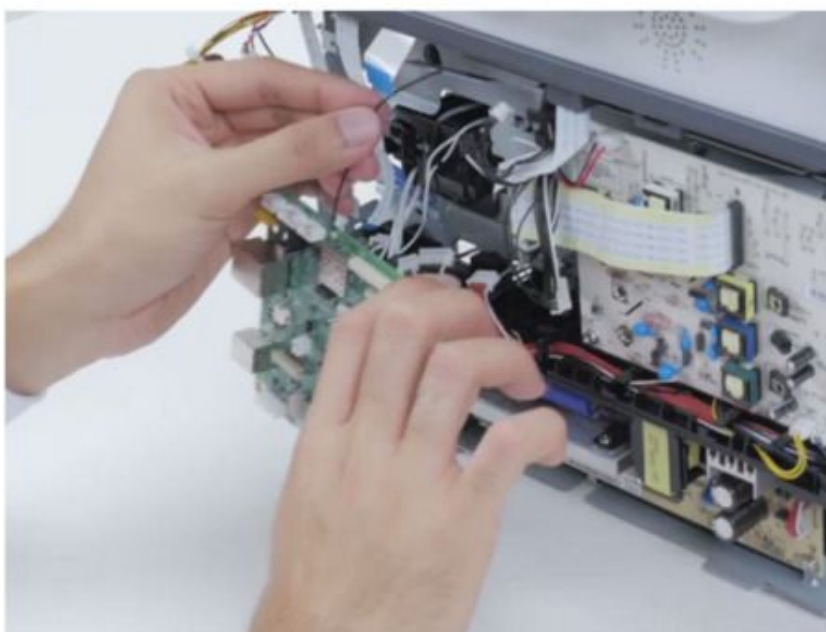

### Installation Note

After replacing the controller board, perform the following:

- Make sure that the toner cartridge is installed.
- Enter the Diagnostics menu. See [Entering the Diagnostics menu on page 270](#).
- Wait for 30 seconds.
- Navigate to **Printer Setup > Serial number**.

- e. Check if the correct printer serial number is displayed on the screen.

**Note:** If the serial number is not updated to the correct one after 10 minutes, update the printer firmware to the latest version, and then check the serial number again.

- f. Perform a POR.
- g. Restore the printer configuration. See [Restoring the printer configuration on page 295](#).

## LVPS removal

1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the rear door. See [Bottom rear door removal on page 347](#)
4. Remove the bottom rear door. See [Bottom rear door removal on page 347](#)
5. Remove the left cover. See [Left cover removal on page 319](#).
6. Remove the LVPS.




## HVPS removal

**Note:** Make sure to perform the HVPS characterization when replacing the HVPS. See [Performing the HVPS characterization on page 318](#).

1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the rear door. See [Bottom rear door removal on page 347](#).
4. Remove the bottom rear door. See [Bottom rear door removal on page 347](#).
5. Remove the left cover. See [Left cover removal on page 319](#).
6. Disconnect all the cables.




7. Remove the HVPS.

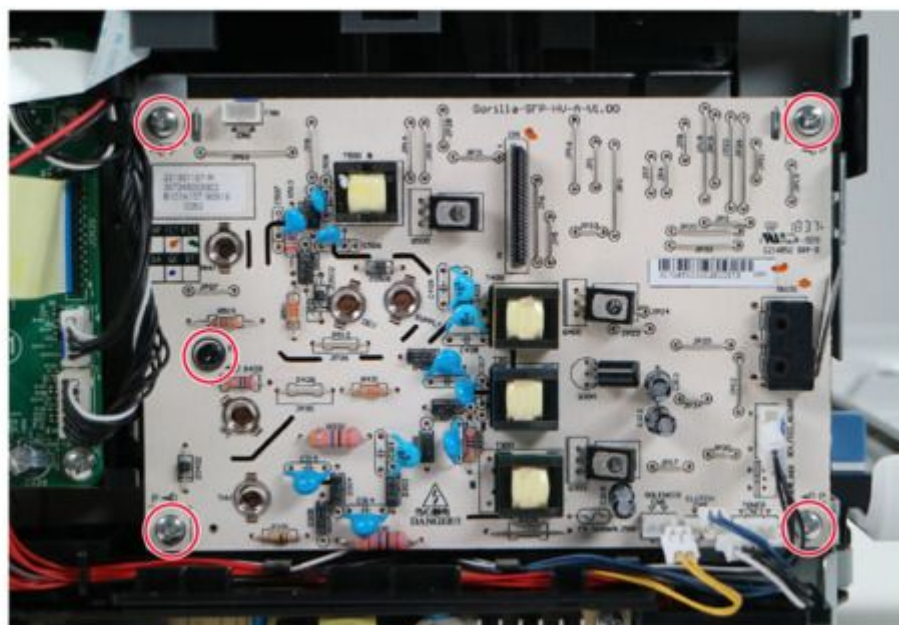

### Installation Note

Make sure that the spring contacts on the printer (A) are properly aligned with the contacts on the HVPS (B).

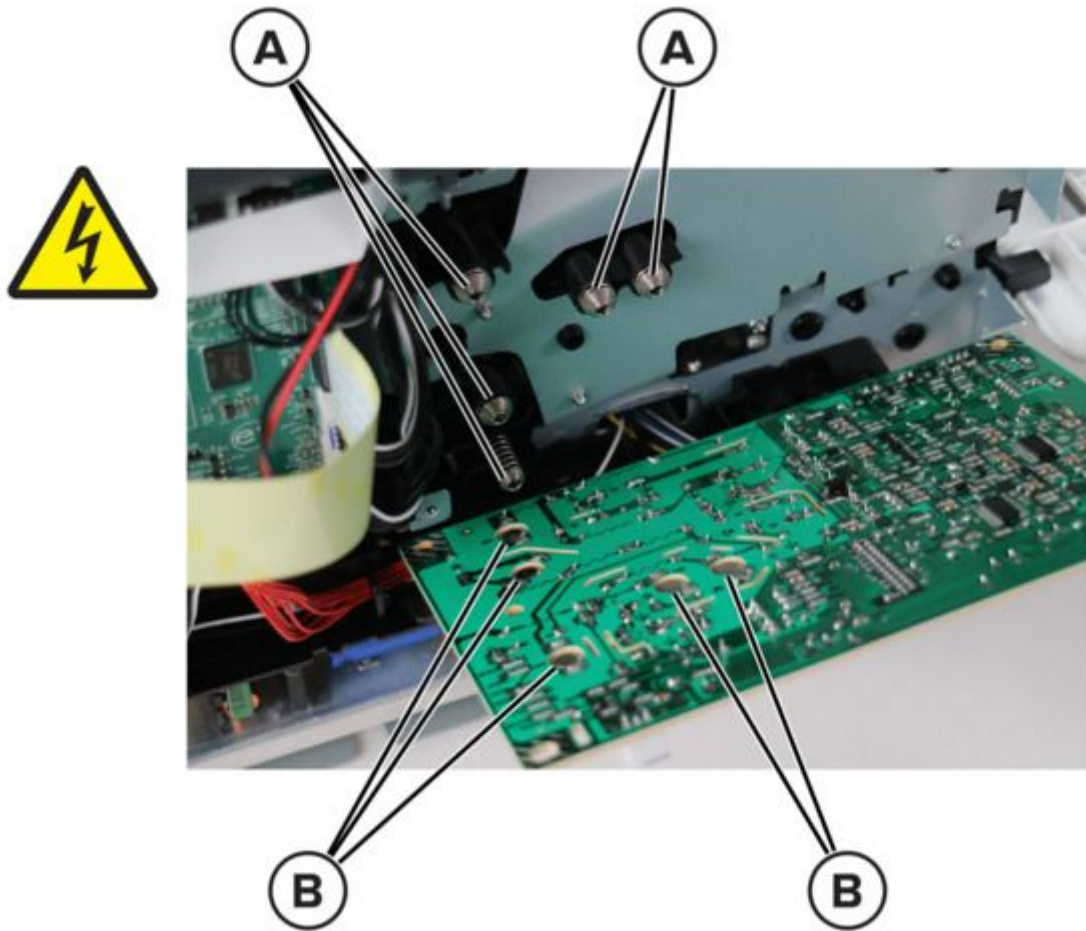

## Right side removals

### Right cover removal

1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the right cover.







## Main drive removal

**Note:** For a video demonstration, see [Main drive removal](#).

1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the rear door. See [Bottom rear door removal on page 347](#).
4. Remove the bottom rear door. See [Bottom rear door removal on page 347](#).
5. Remove the right cover. See [Right cover removal on page 329](#).
6. Remove the main drive.

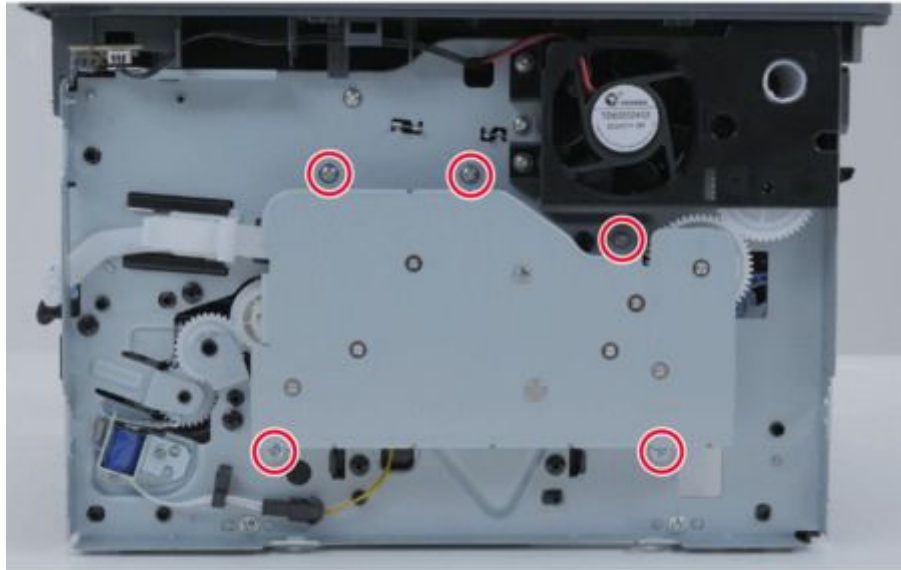


7. Remove the three gears (A).

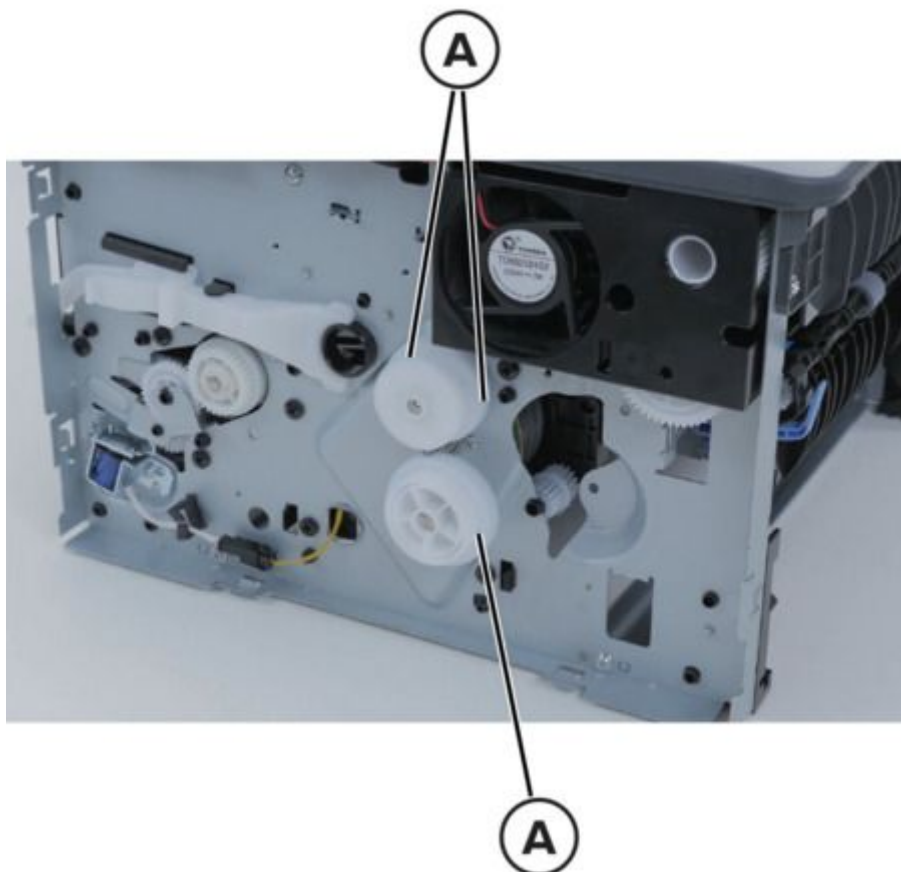


### Installation Note

Pay attention on how the gears are installed on the main drive and on the printer. Some gears may have a coupler within them. For more information, see the *Main drive removal* video.

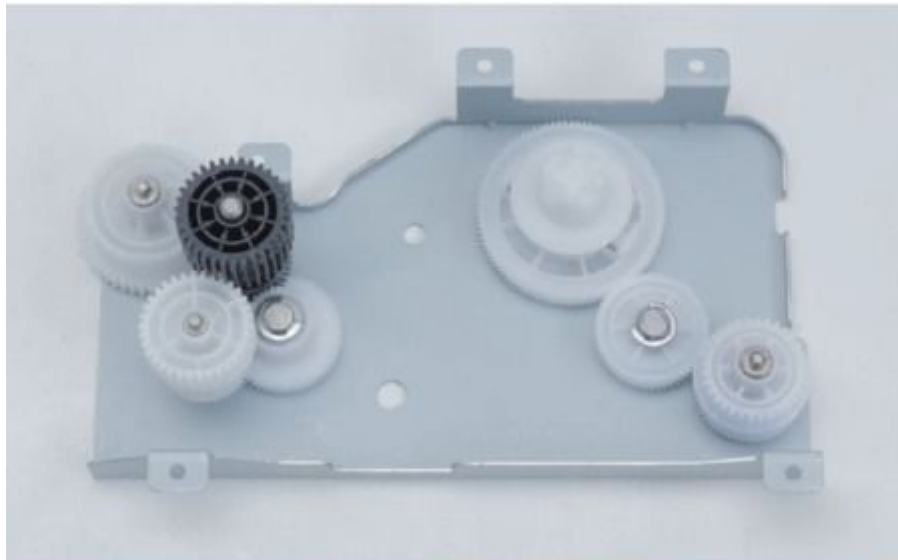


## Pick solenoid removal

1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the right cover. See . [Right cover removal on page 329](#)
4. Remove the pick solenoid.


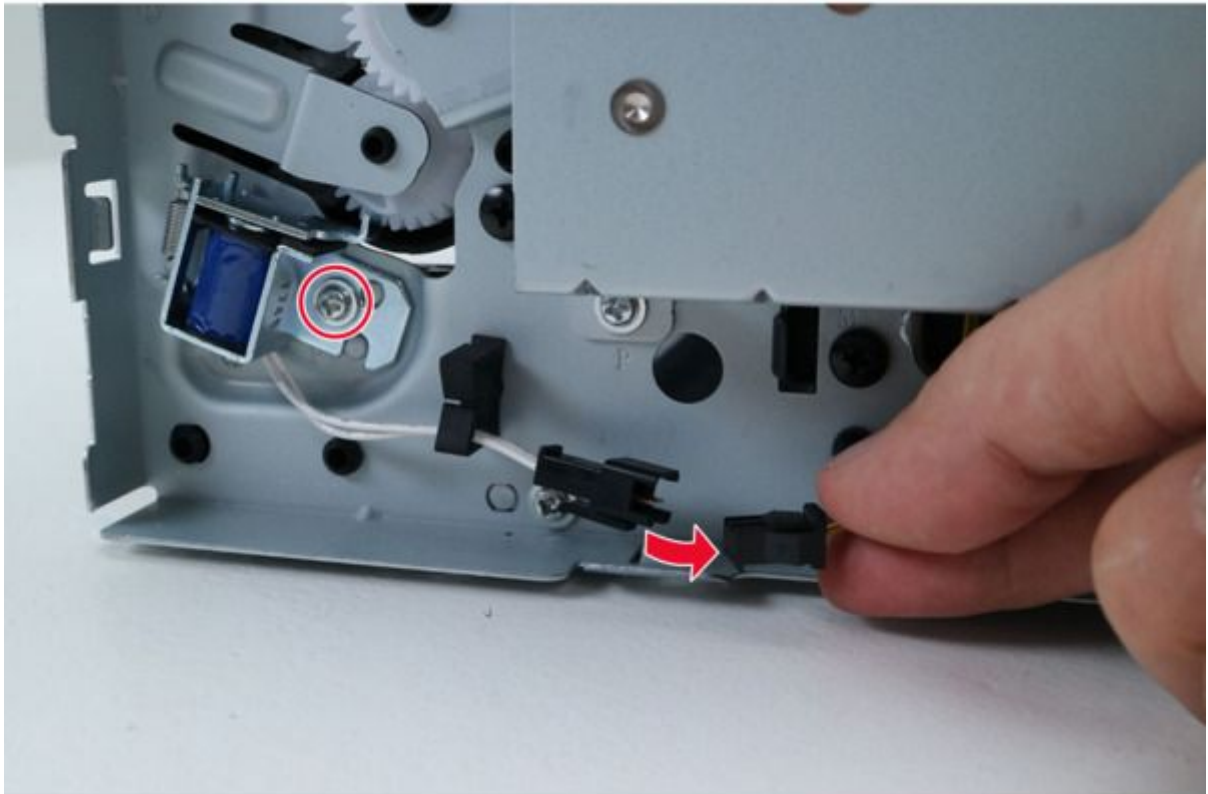


## Fan assembly removal

1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the rear door. See [Bottom rear door removal on page 347](#).
4. Remove the bottom rear door. See [Bottom rear door removal on page 347](#).
5. Remove the left cover. See [Left cover removal on page 319](#).
6. Remove the right cover. See [Right cover removal on page 329](#).
7. Remove the top cover. See [Top cover removal on page 351](#).
8. Disconnect the cable, and then remove it from the frame.

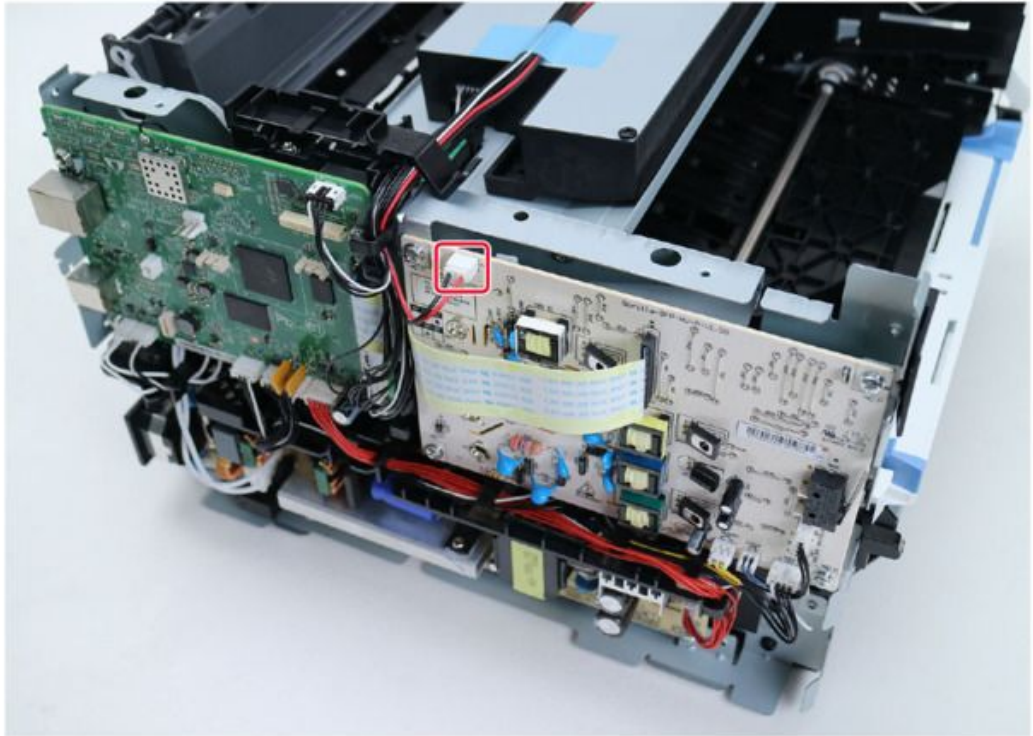

9. Remove the fan, and then remove the gear.

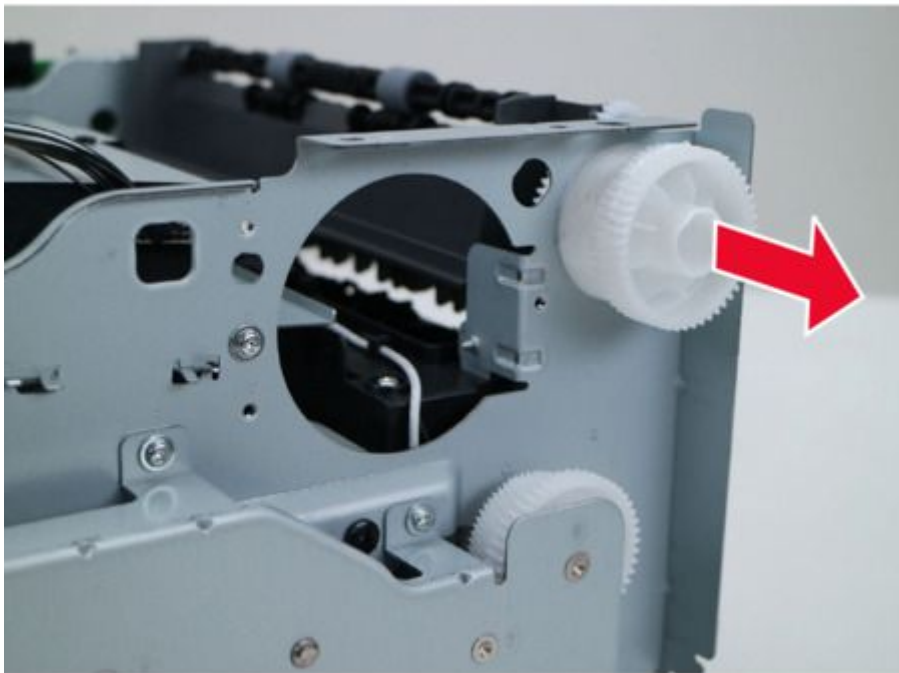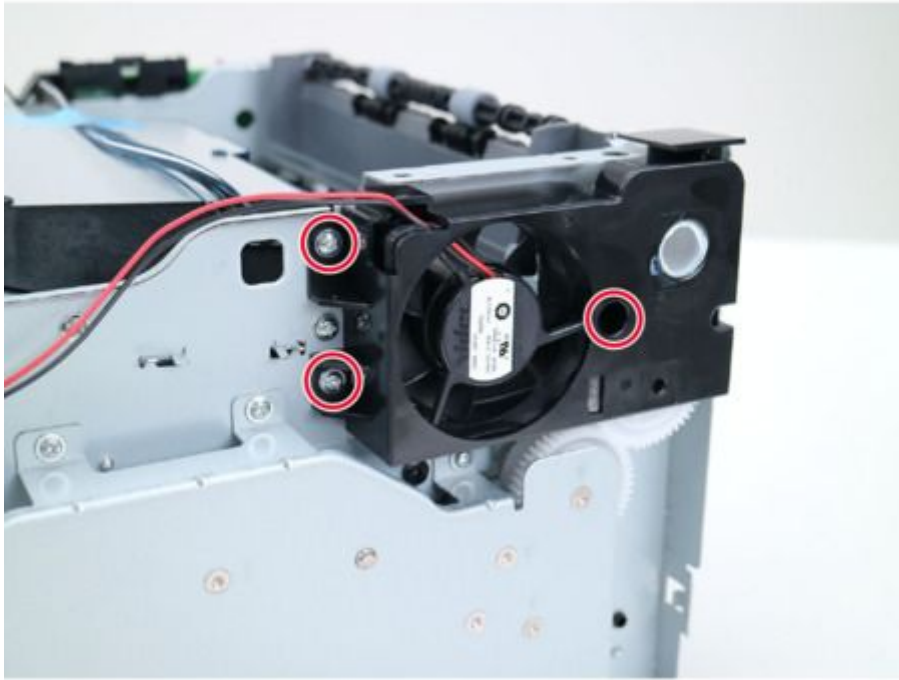

### Installation Note

Before installing the gear, make sure that it is properly greased.

## Front removals

### 2-line control panel removal

1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the rear door. See [Bottom rear door removal on page 347](#).
4. Remove the bottom rear door. See [Bottom rear door removal on page 347](#).
5. Remove the left cover. See [Left cover removal on page 319](#).
6. Remove the right cover. See [Right cover removal on page 329](#).
7. Disconnect the cable, and then detach the ADF link.



8. Remove the control panel.




## 2.8-in. control panel removal


### **Warning—Potential Damage**

Do not replace or remove the controller board when replacing or removing the control panel. See [Critical information for controller board or control panel replacement \(for MB2236adwe only\) on page 294](#).

1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the rear door. See [Bottom rear door removal on page 347](#).
4. Remove the bottom rear door. See [Bottom rear door removal on page 347](#).
5. Remove the left cover. See [Left cover removal on page 319](#).
6. Remove the right cover. See [Right cover removal on page 329](#).
7. Disconnect the cable, and then detach the ADF link.

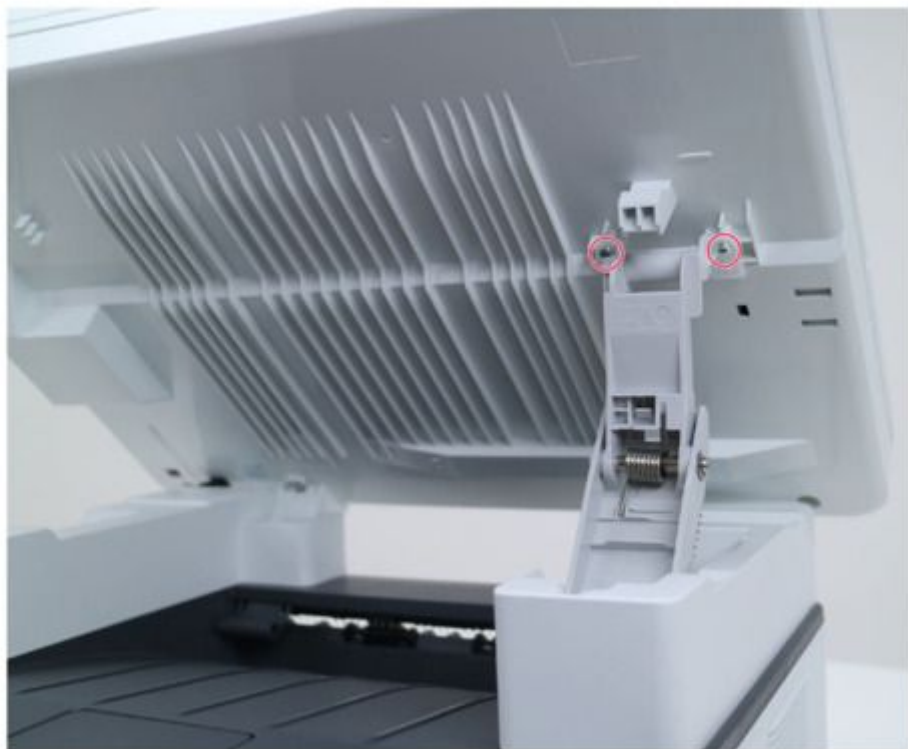

8. Remove the control panel.

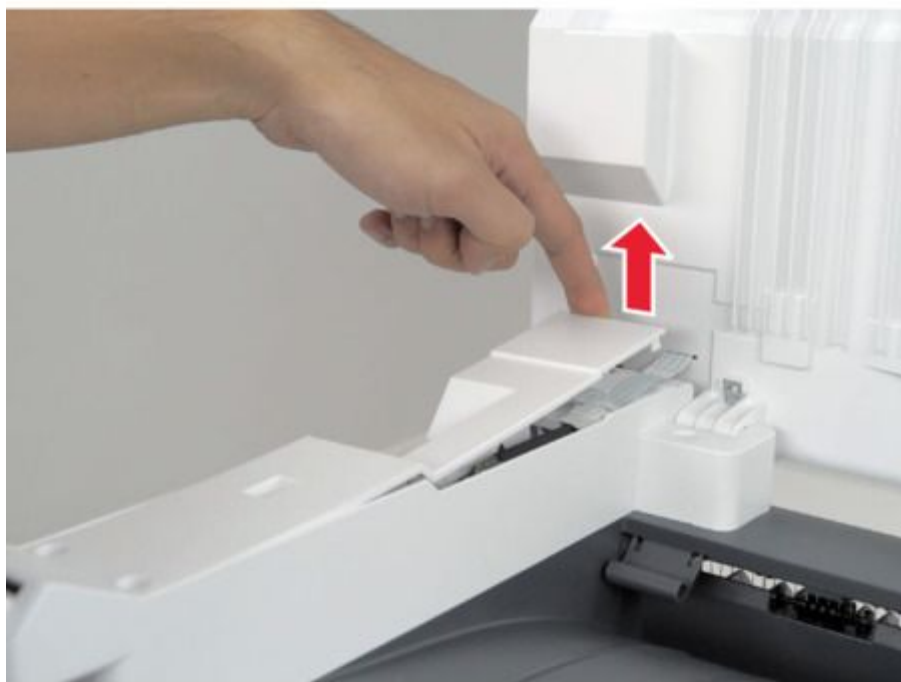

## Front door removal

1. Detach the door strap.



2. Remove the front door.



## Transfer roller removal

1. Remove the toner cartridge.
2. Remove the transfer roller.



### Installation Note

- Do not touch the foam on the roller.
- The shaft is greased. To avoid contaminating the roller, do not touch the shaft.
- Make sure that the spring is properly installed on the right side of the roller.



## Rear removals


### Rear door removal

1. Remove the duplex unit.
2. Detach the upper rear latch of the right cover to remove the rear door.



## Duplex unit removal

Remove the duplex unit.

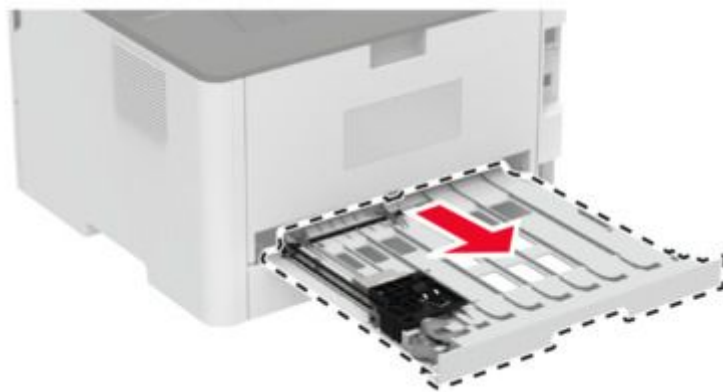

## Bottom rear door removal

1. Remove the duplex unit.
2. Remove the rear door. See [Rear door removal on page 345](#).
3. Remove the bottom rear door.



## Redrive removal

1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the left cover. See [Left cover removal on page 319](#).
4. Remove the right cover. See [Right cover removal on page 329](#).
5. Remove the rear door. See [Bottom rear door removal on page 347](#).
6. Remove the bottom rear door. See [Bottom rear door removal on page 347](#).
7. Remove the redrive.




## Fuser removal


**Note:** For a video demonstration, see [Fuser removal](#).

1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the front door. See [Rear door removal on page 345](#).
4. Remove the rear door. See [Rear door removal on page 345](#).
5. Remove the bottom rear door. See [Bottom rear door removal on page 347](#).
6. Remove the left cover. See [Left cover removal on page 319](#).
7. Remove the redrive. See [Redrive removal on page 347](#).
8. Remove the fuser.

### Installation Note


Pay attention to the cable routing.

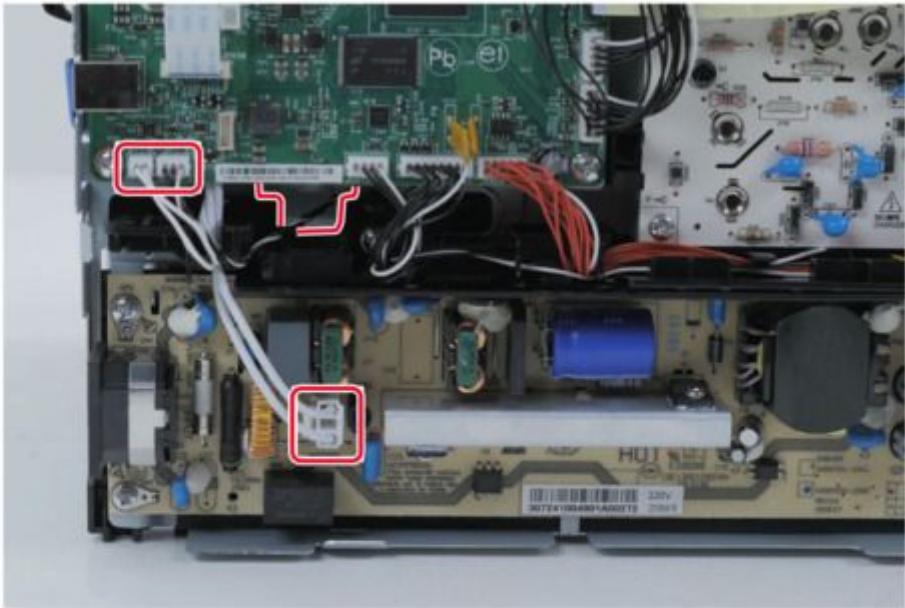

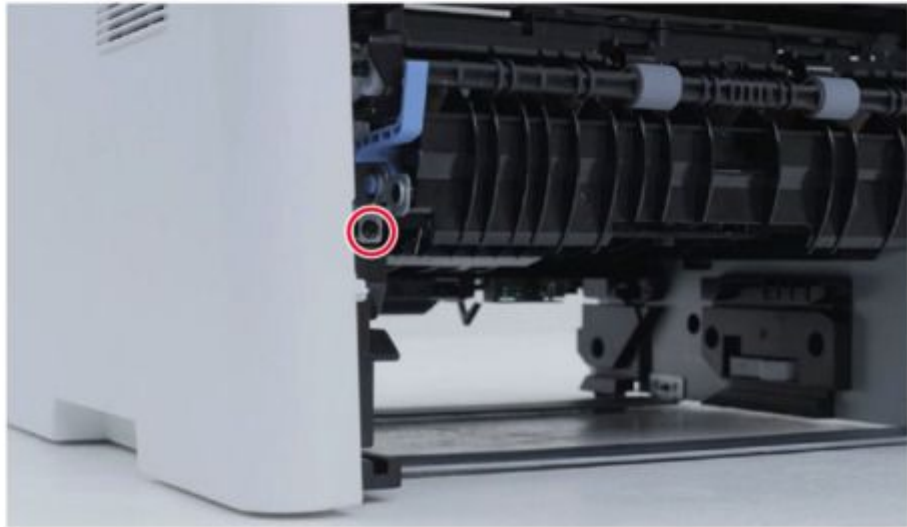

## Fuser exit flag removal

1. Remove the rear door. See [Bottom rear door removal on page 347](#)
2. Open the fuser door.
3. Remove the fuser exit flag.

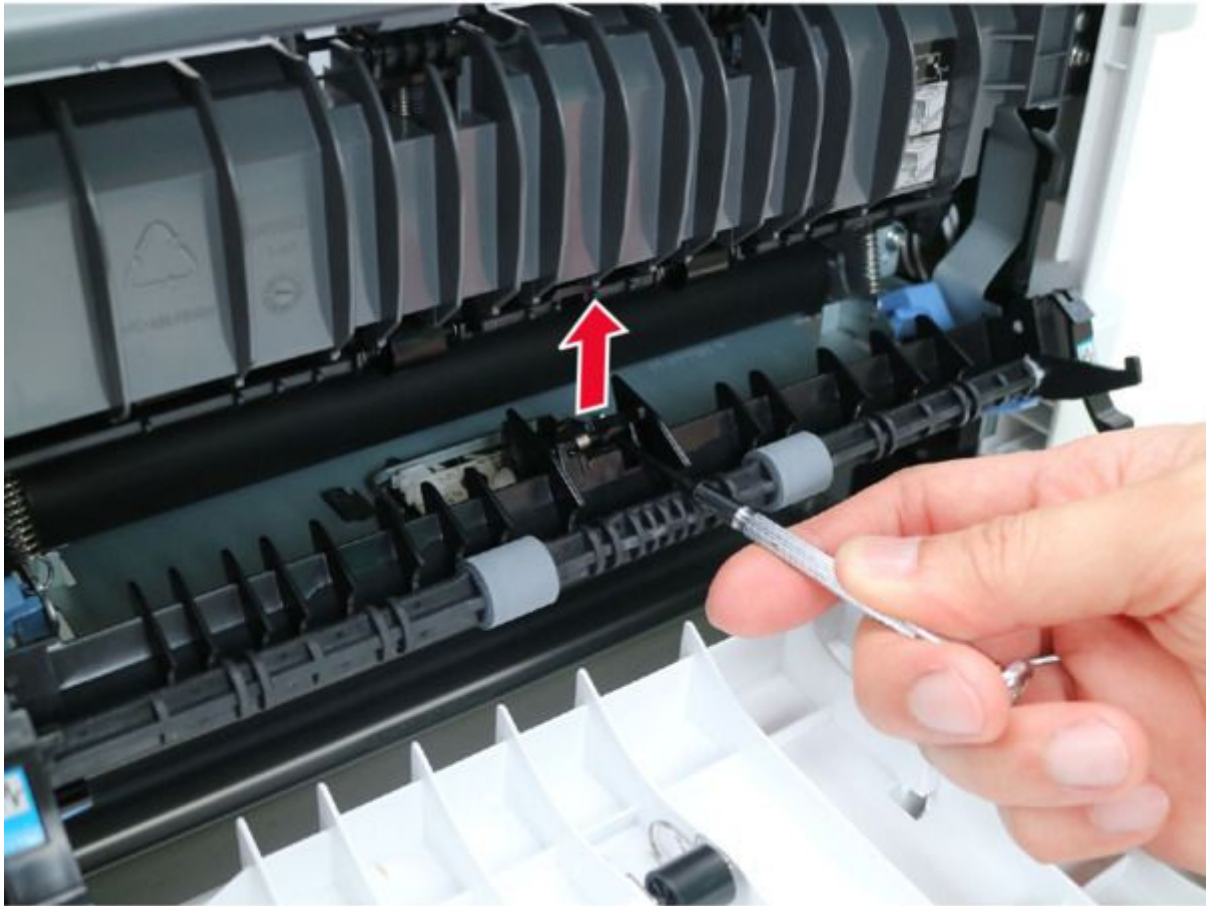

## Top removals


### Top cover removal

#### MB2236adw top cover removal

1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the front door. See [Front door removal on page 343](#).
4. Remove the rear door. See [Bottom rear door removal on page 347](#).
5. Remove the bottom rear door. See [Bottom rear door removal on page 347](#).
6. Remove the left cover. See [Left cover removal on page 319](#).
7. Remove the right cover. See [Right cover removal on page 329](#).
8. Remove the ADF scanner and flatbed scanner. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#) or [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

### Installation Note

Make sure to reinstall the toroids on the ADF and flatbed scanner cables, after removing the ADF and flatbed scanner.

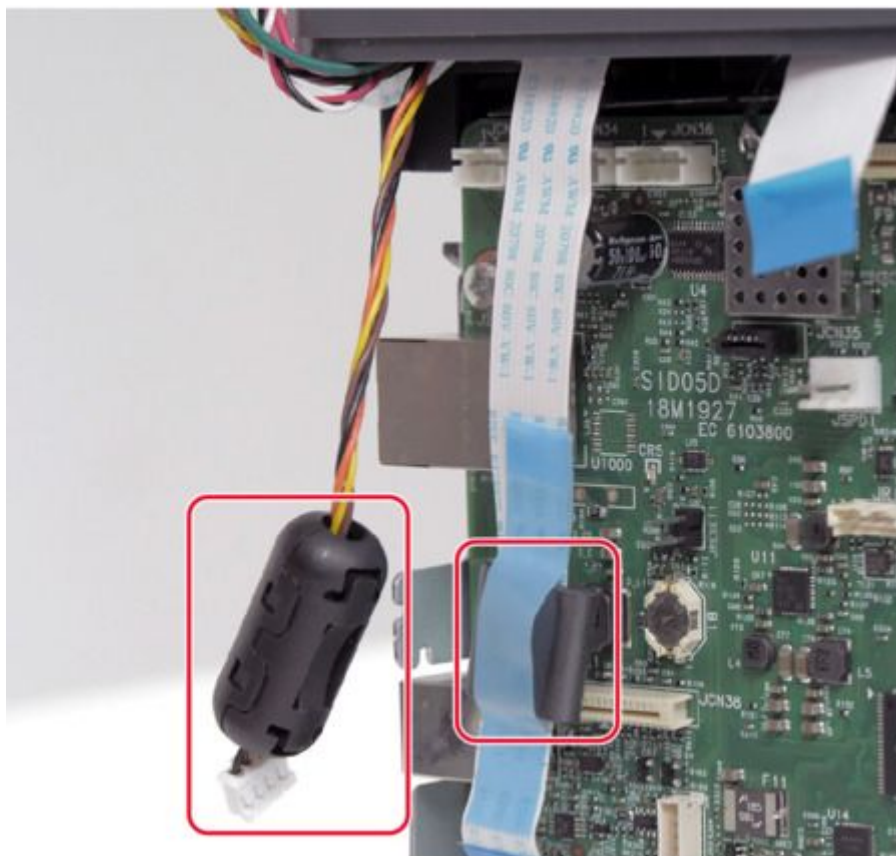


9. Remove the control panel. See [2-line control panel removal on page 337](#).
10. Disconnect the cable from the right side of the printer.



**Note:** Make sure to release the right side cable from the frame.

11. Remove the top cover.

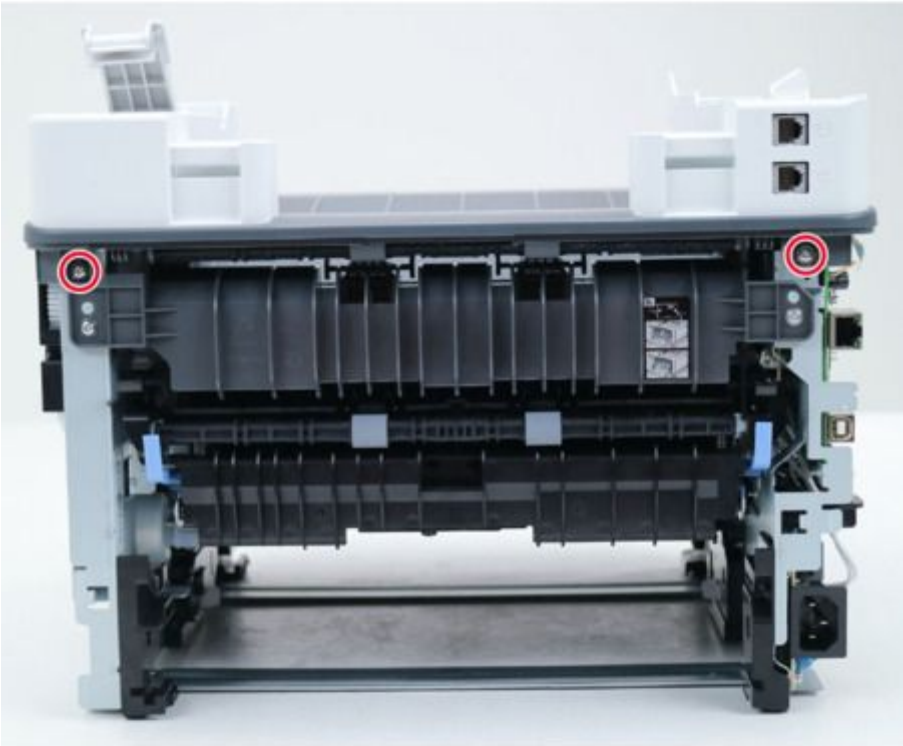


### MB2236adwe top cover removal


1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the front door. See [Front door removal on page 343](#).
4. Remove the rear door. See [Bottom rear door removal on page 347](#).
5. Remove the bottom rear door. See [Bottom rear door removal on page 347](#).
6. Remove the left cover. See [Left cover removal on page 319](#).
7. Remove the right cover. See [Right cover removal on page 329](#).
8. Remove the ADF scanner and flatbed scanner. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#) or [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

#### Installation Note

Make sure to reinstall the toroids on the ADF and flatbed scanner cables, after removing the ADF and flatbed scanner.

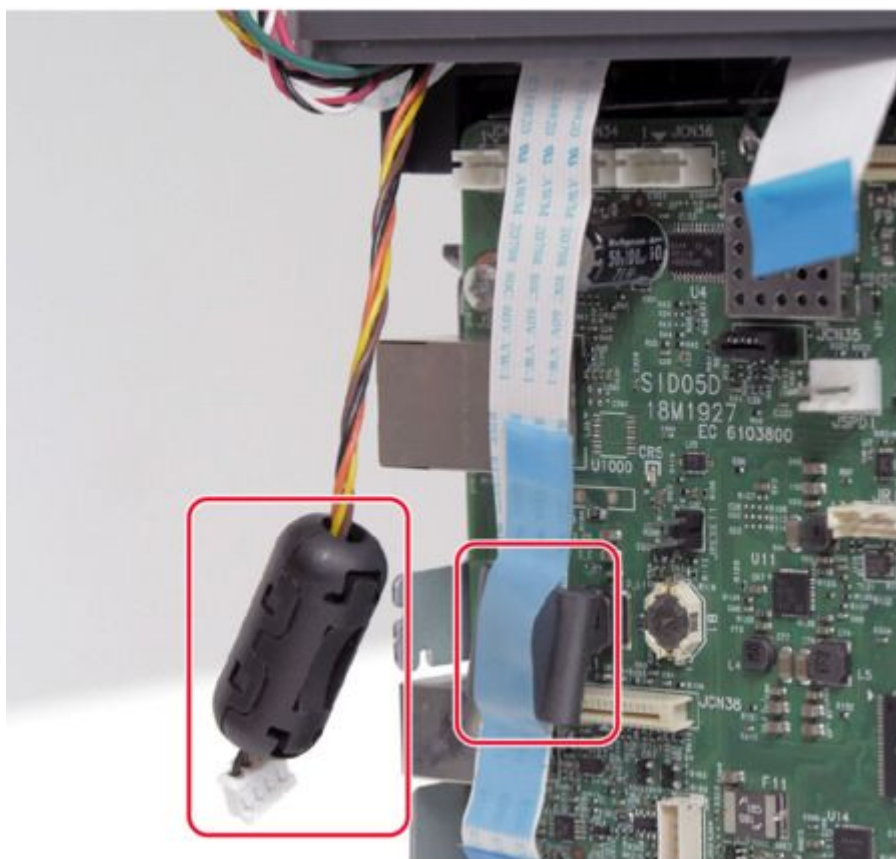


9. Remove the control panel. See [2.8-in. control panel removal on page 340](#).
10. Disconnect the cable from the left and right sides of the printer.

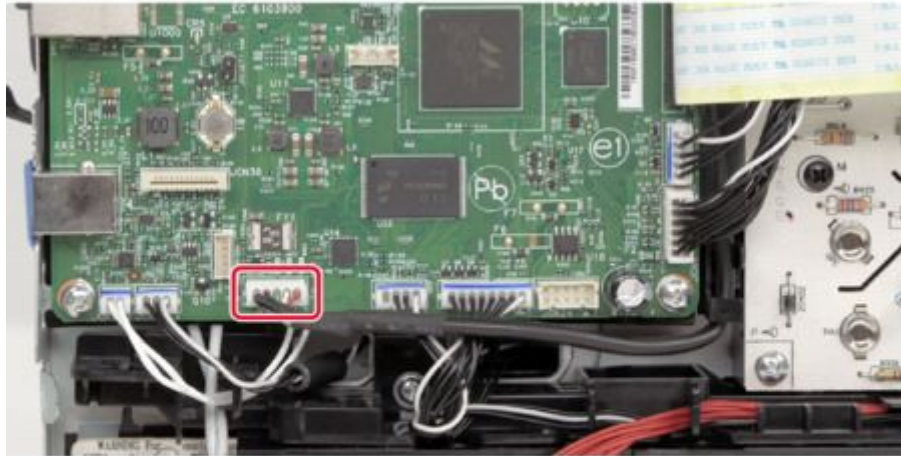


**Note:** Make sure to release the right side cable from the frame.

11. Remove the screws, and then remove the fax card holder (A).

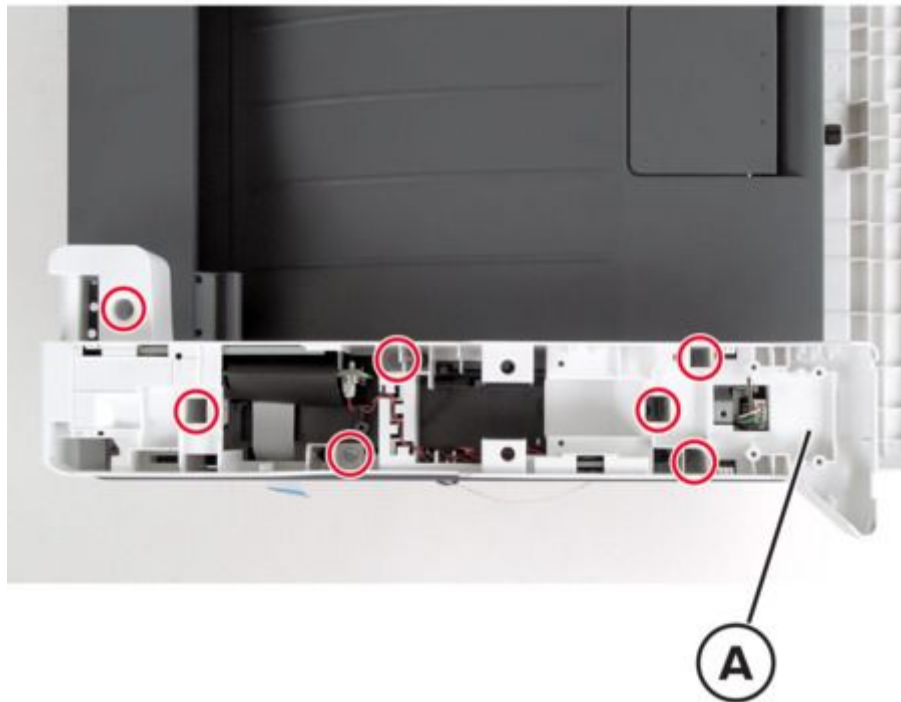

12. Remove the screws, and then remove the USB cable (B) from the guides.

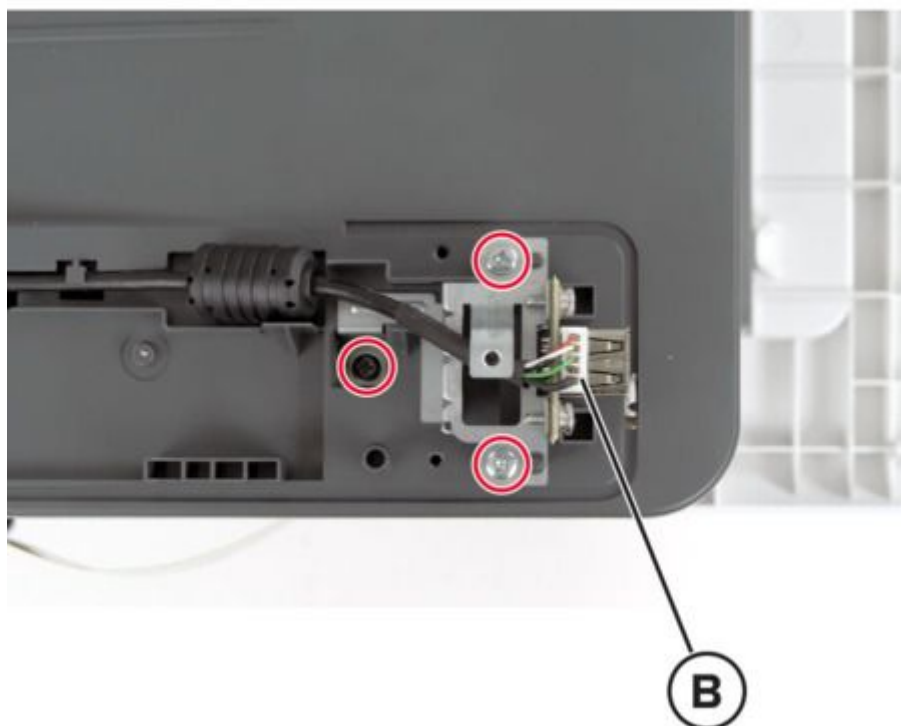

13. Remove the top cover.



### Installation Note

Remove the USB port cover.




### MB2236i top cover removal

1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the front door. See [Front door removal on page 343](#).
4. Remove the rear door. See [Bottom rear door removal on page 347](#).
5. Remove the bottom rear door. See [Bottom rear door removal on page 347](#).
6. Remove the left cover. See [Left cover removal on page 319](#).
7. Remove the right cover. See [Right cover removal on page 329](#).
8. Remove the ADF scanner and flatbed scanner. See [ADF scanner \(old\) and flatbed scanner \(old\) removal on page 376](#) or [ADF scanner \(new\) and flatbed scanner \(new\) removal on page 386](#).

#### Installation Note

Make sure to reinstall the toroids on the ADF and flatbed scanner cables, after removing the ADF and flatbed scanner.

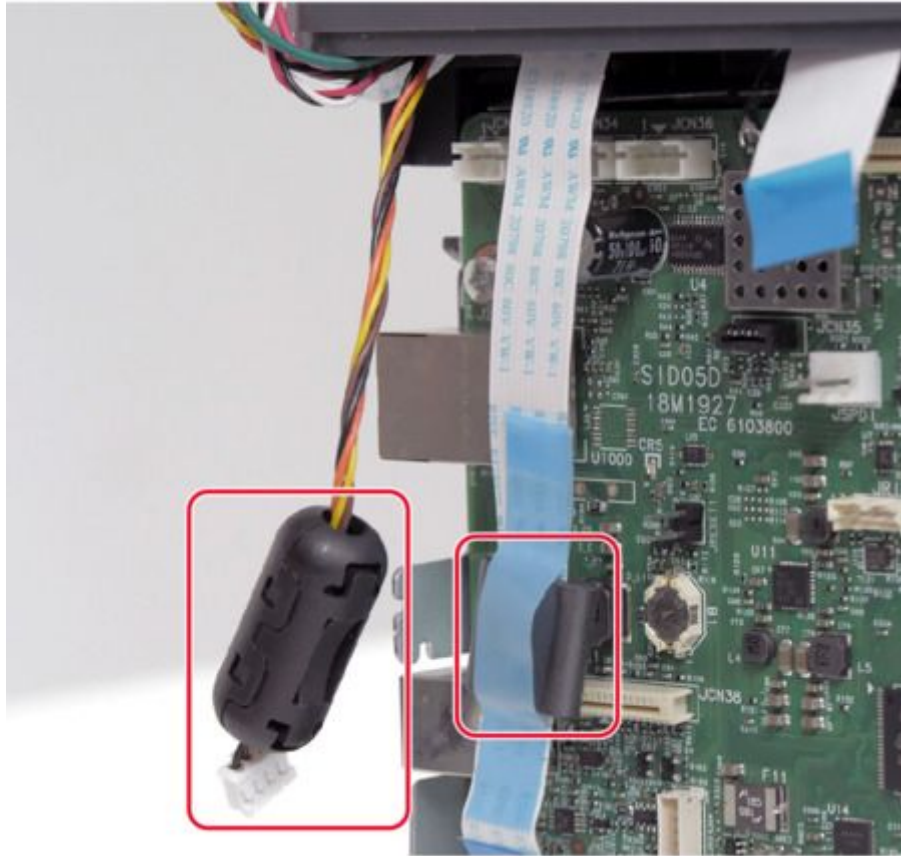


9. Remove the control panel. See [2.8-in. control panel removal on page 340](#).
10. Disconnect the cable from the left and right sides of the printer.



**Note:** Make sure to release the right side cable from the frame.

11. Remove the top cover.

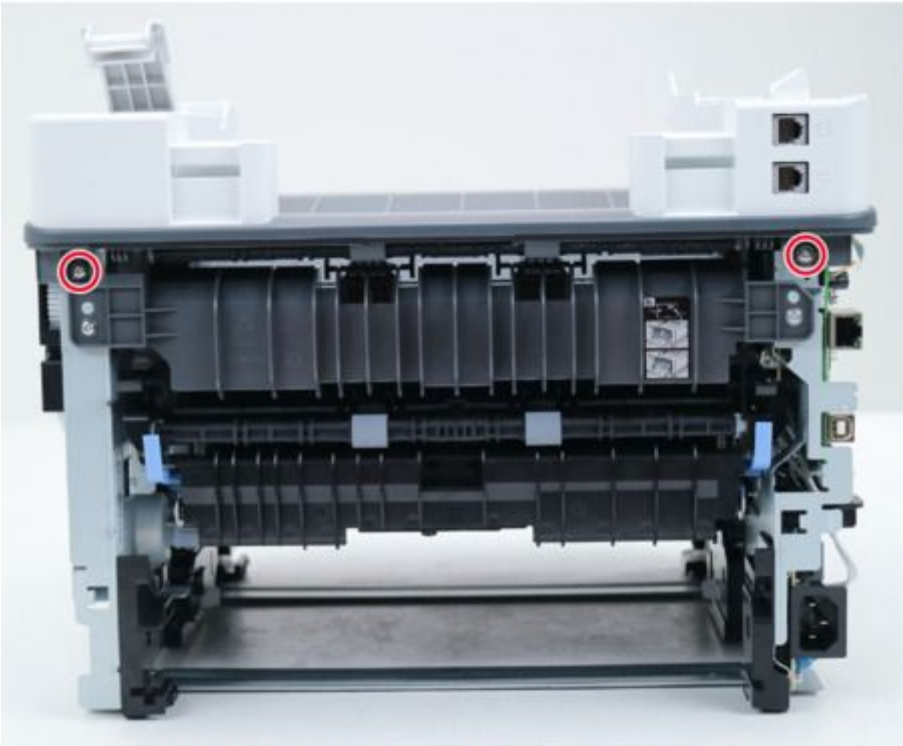

## Printhead removal

**Note:** If the printhead is like the one shown, then replace the printhead with PN 41X2843, and then make sure to replace the printhead cables and install the EMC bracket.





1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the left cover. See [Left cover removal on page 319](#).
4. Remove the right cover. See [Right cover removal on page 329](#).
5. Remove the rear door. See [Bottom rear door removal on page 347](#).
6. Remove the bottom rear door. See [Bottom rear door removal on page 347](#).
7. Remove the top cover. See [Top cover removal on page 351](#).
8. Remove the printhead.

**WARNING:** Class 3b invisible laser radiation when open and interlocks defeated. Avoid exposure to the beam.

**AVERTISSEMENT:** Rayonnement laser invisible de classe 3b - en cas d'ouverture et de verrouillage defectueux. Evitez toute exposition au faisceau.

**ADVERTENCIA:** Radiación láser invisible de clase 3b en caso de apertura y neutralización de la seguridad. Evitar exposición al haz.


**WARNUNG:** Unsichtbare Strahlung von Laser Klasse 3b wenn offen und Verriegelungen entriegelt. Kontakt mit Laserstrahl vermeiden.

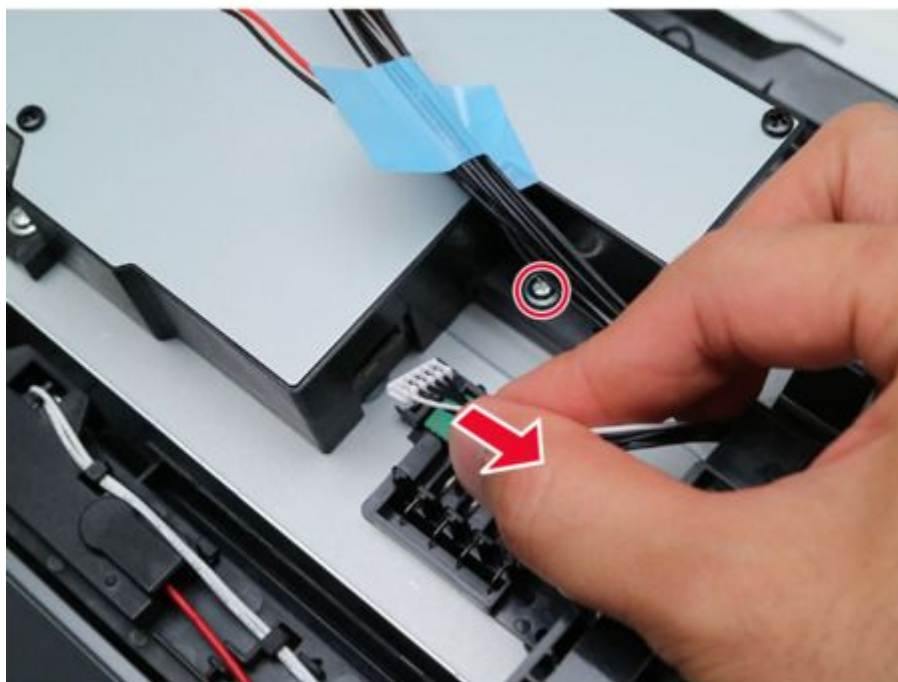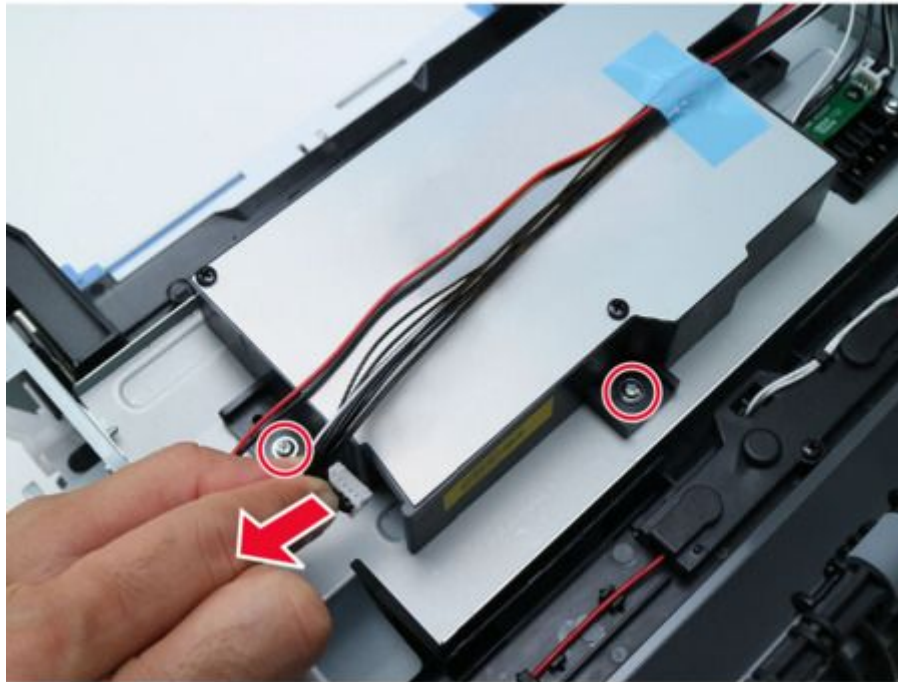

9. Remove the printhead.

### Installation Note

Make sure that the EMC clip is properly installed.

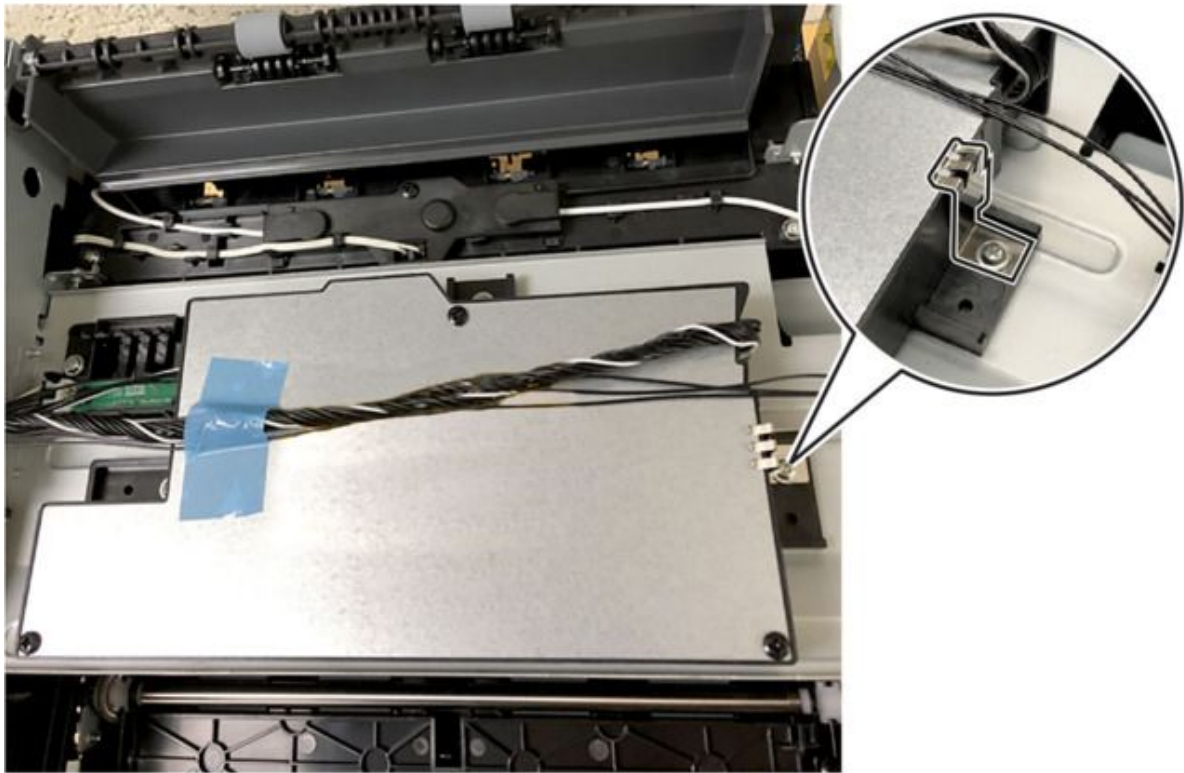

## Bottom removals


### Sensor (fuser exit) removal

1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the rear door. See . [Bottom rear door removal on page 347](#)
4. Remove the bottom rear door. See . [Bottom rear door removal on page 347](#)
5. Place the printer on its front, and then remove the sensor.




### Sensor (paper present) removal

1. Remove the tray insert.
2. Remove the duplex unit.
3. Place the printer on its rear, and then remove the sensor.

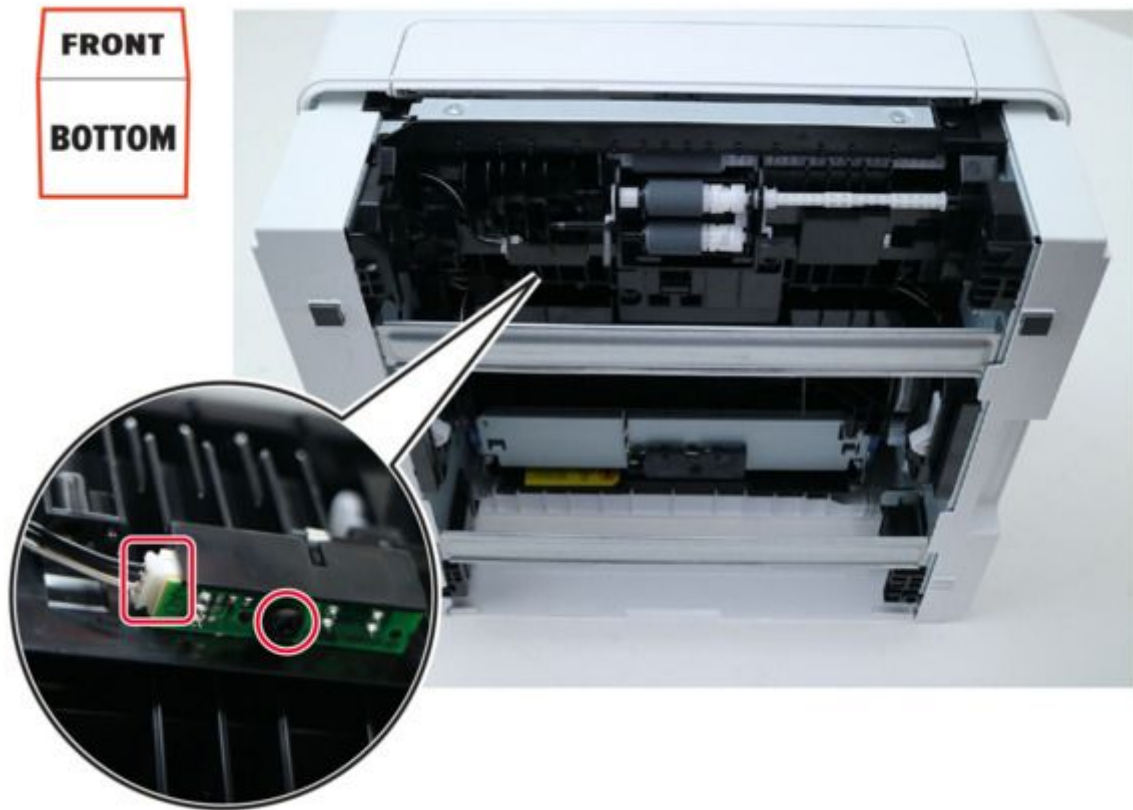


### Sensor (staging and input) removal

1. Remove the tray insert.
2. Remove the duplex unit.
3. Place the printer on its rear, and then remove the sensor cover.

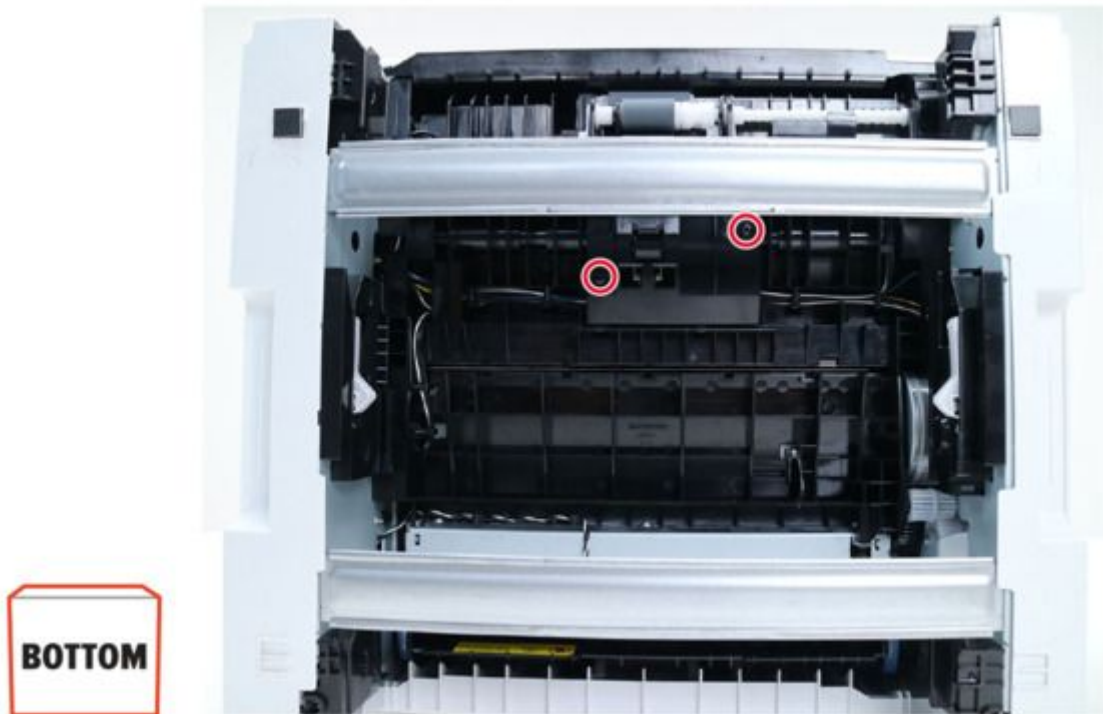


4. Remove the sensor.

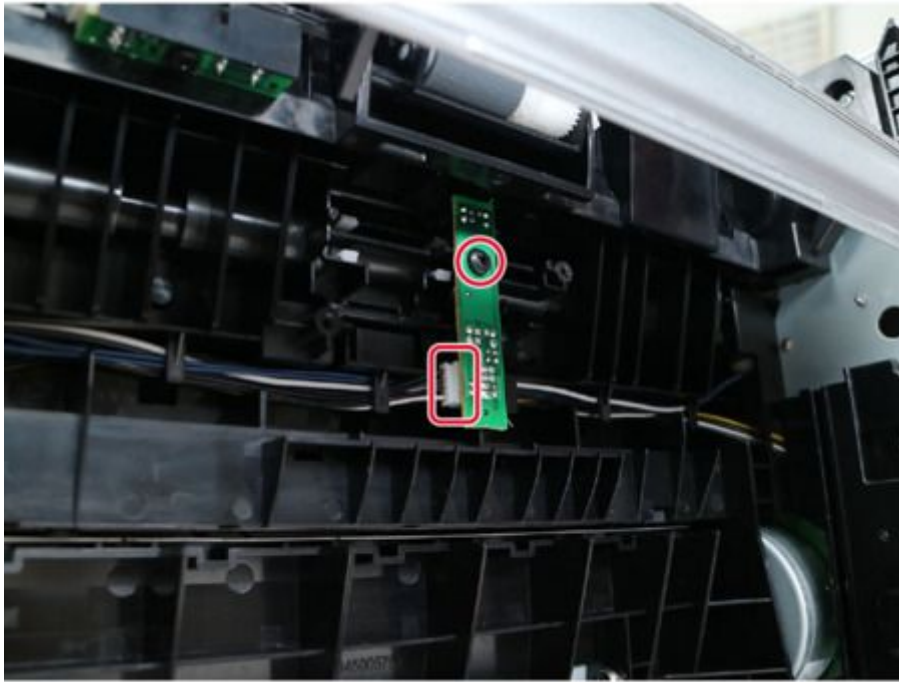


### Input sensor flags removal

1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the sensor (staging and input). See [Sensor \(staging and input\) removal on page 367](#).
4. Remove the two sensor flags.

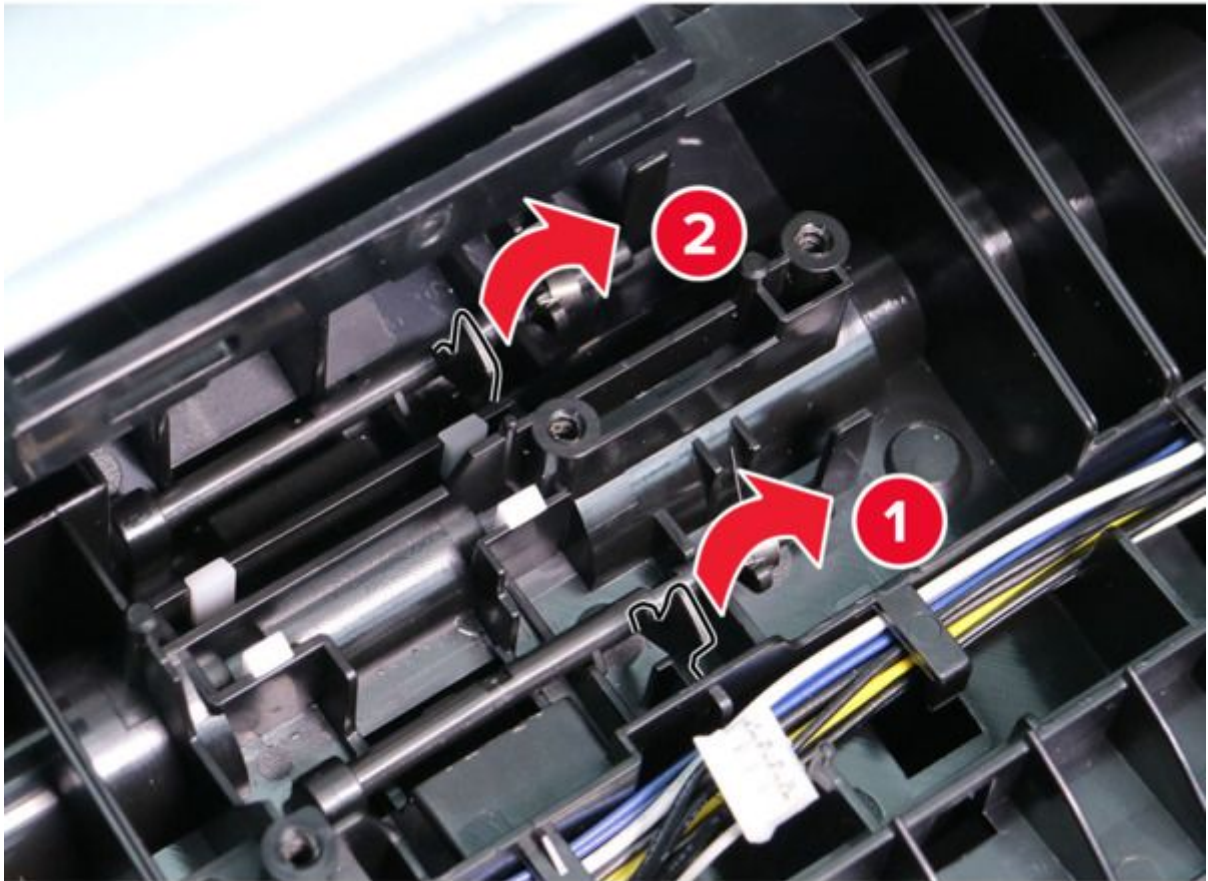

**Installation Note**


Pay attention to the position of the spring on each flag.

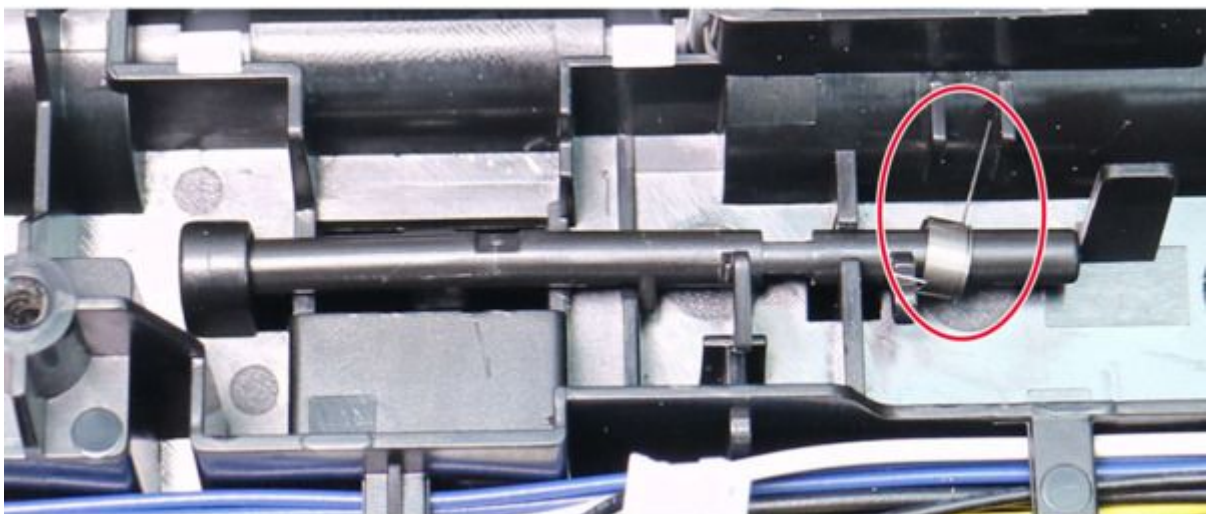


## Pick rollers removal

**Note:** For a video demonstration, see [Pick roller removal](#).


1. Remove the tray insert.
2. Place the printer on its rear.

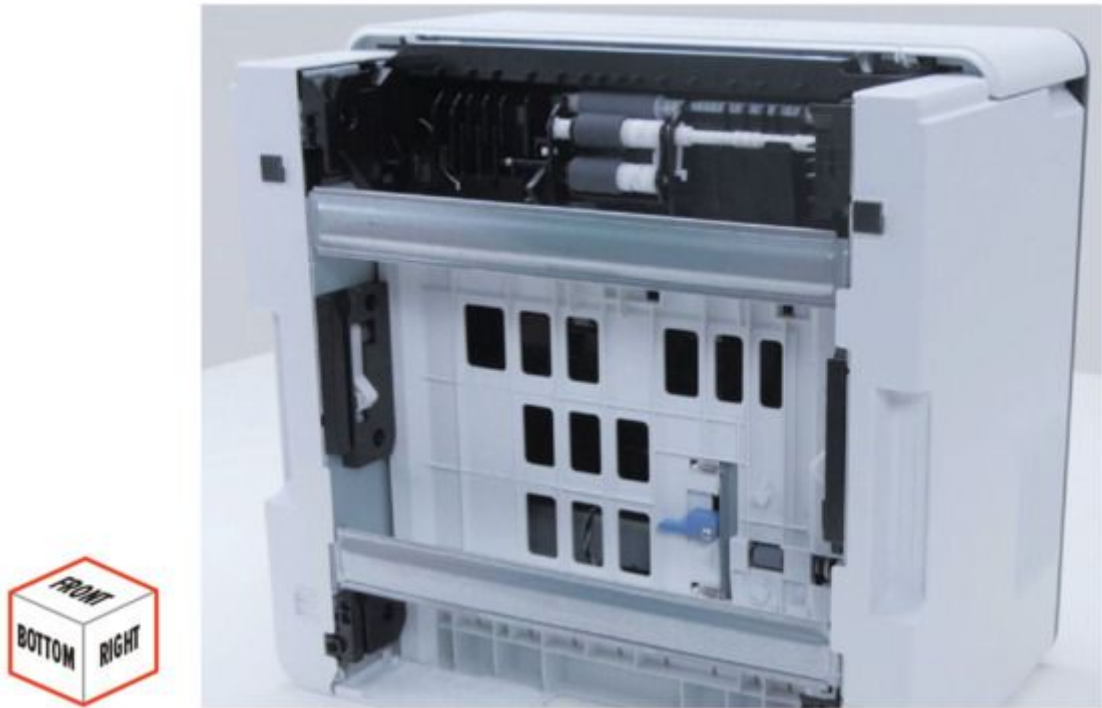

3. Remove the right pick roller retainers.

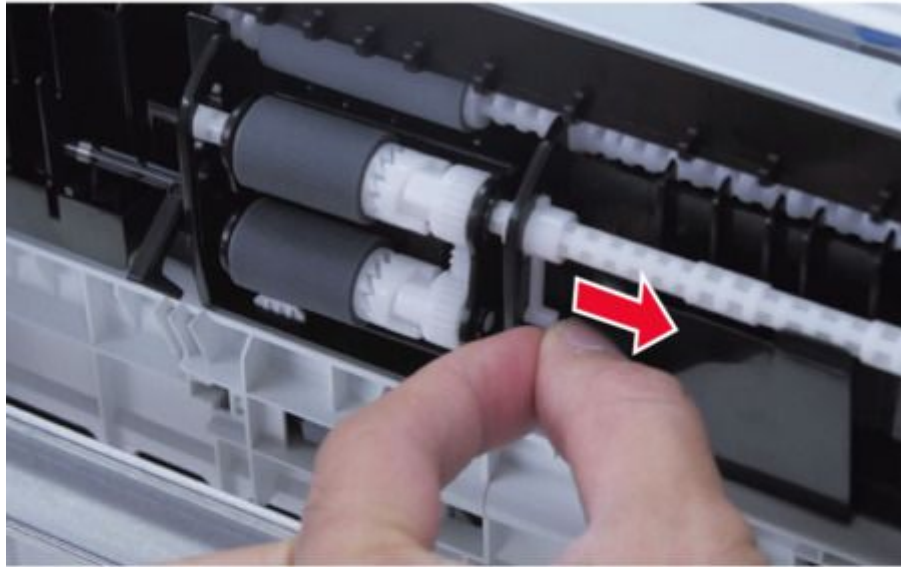

**Note:** Perform the same procedure to remove the left pick roller retainer.

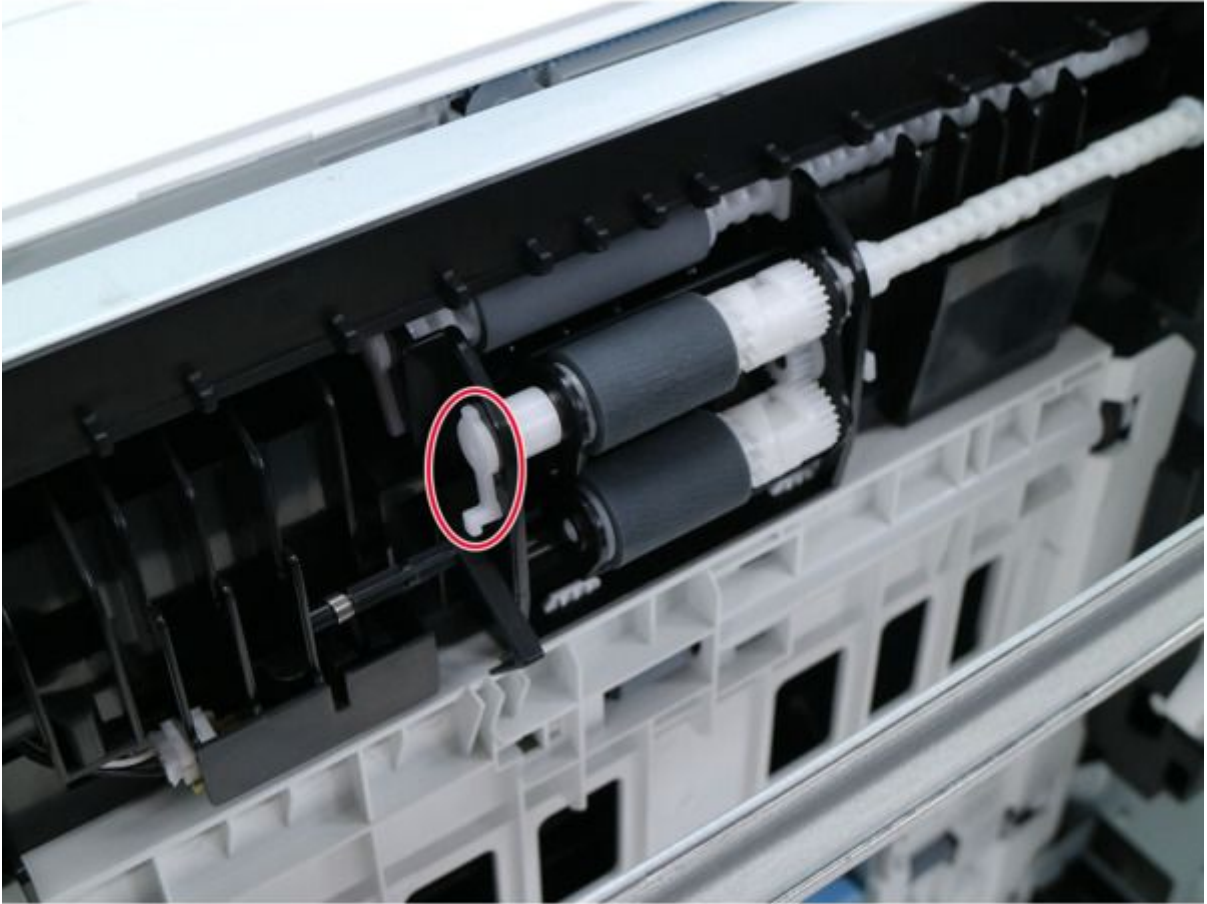

4. Remove the two pick rollers.

## ADF and scanner

### Scanner stand removal

1. Raise the ADF and scanner assembly.
2. Remove the scanner stand.



### ADF pick assembly removal

1. Open the ADF cover.
2. Remove the separator pad.



**Note:**

- Pay attention to the position of the spring under the pad.
- Do not lose the spring.

3. Remove the ADF pick assembly.



## ADF scanner (old) and flatbed scanner (old) removal


### Installation Note


Before replacing the ADF scanner and flatbed scanner, do the following:

1. Look for the printer serial number, and then check the printer version.

Printer serial number	Printer version
The 8 <sup>th</sup> digit of the serial number is 1.	Old
The 8 <sup>th</sup> digit of the serial number is 2.	New

2. Check the category of the installed ADF hinge (A).

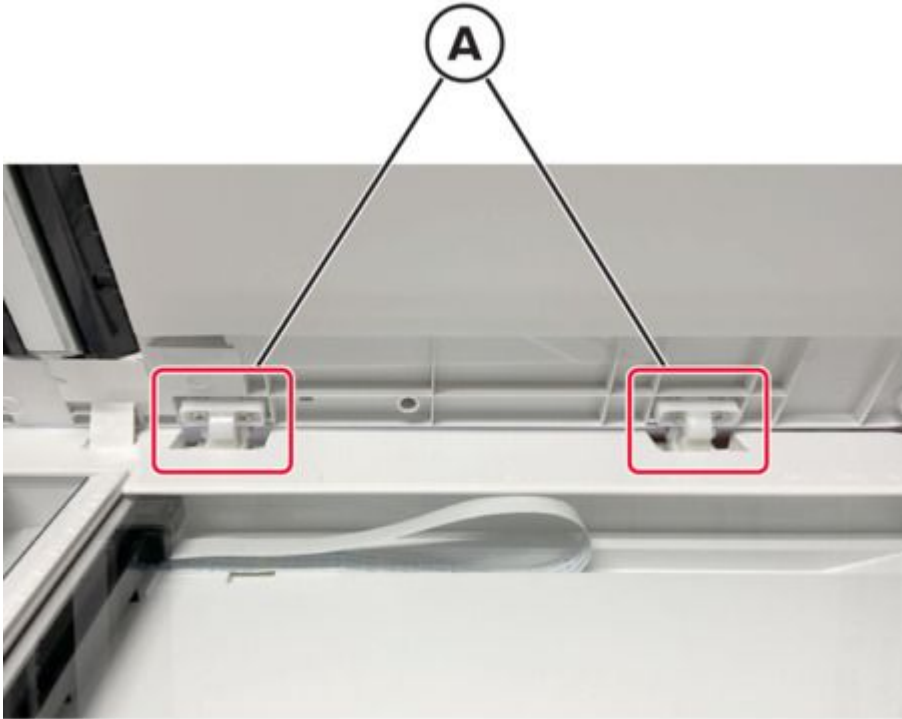Part	Category
	Old

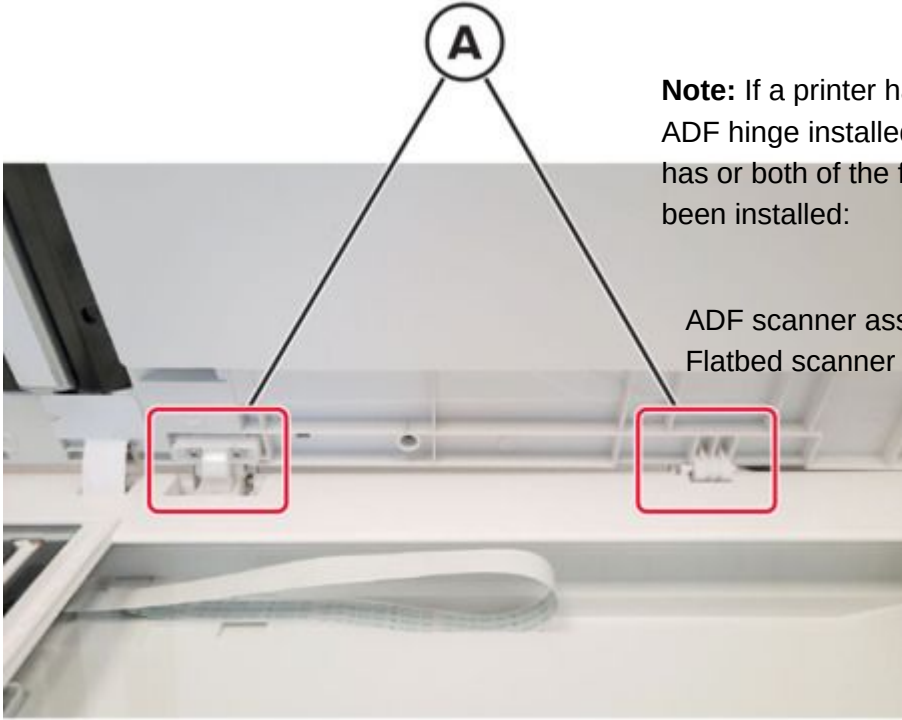Part	Category
	New

**Note:** If a printer has the new ADF hinge installed, then either has or both of the following have been installed:

- ADF scanner assembly (new)
- Flatbed scanner (new)

3. To select the correct parts for your printer, refer to the following:

**Note:**

- If any of the old parts is out of stock, then you must replace both of them with the new parts.
- The old flatbed scanner is only compatible with the old ADF scanner assembly. The same is true for the new flatbed scanner and new ADF scanner assembly.

Parts	Part number	Compatibility
ADF scanner assembly (old)	P/N 41X2476	Either part is compatible with the following: <ul style="list-style-type: none"><li>◦ Old version printers.</li><li>◦ Printers with the old ADF hinge installed.</li></ul>
Flatbed scanner (old)	P/N 41X2478	

Parts	Part number	Compatibility
ADF scanner assembly (new)	P/N 41X4494	Either part is compatible with the following: <ul style="list-style-type: none"><li>◦ New version printers.</li><li>◦ Old version printers.</li><li>◦ Printers with the new ADF hinge installed.</li></ul>
Flatbed scanner (new)	P/N 41X4495	

## Removal procedure

**Note:** For a how-to video on removing the part, see [ADF/scanner assembly removal](#).


1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the rear door. See [Bottom rear door removal on page 347](#).
4. Remove the bottom rear door. See [Bottom rear door removal on page 347](#).
5. Remove the left cover. See [Left cover removal on page 319](#).
6. Detach the scanner stand, and then remove the fax card cover.




7. Disconnect the flatbed scanner FFC cable.




8. Remove the two toroids from the ADF and flatbed scanner cables.

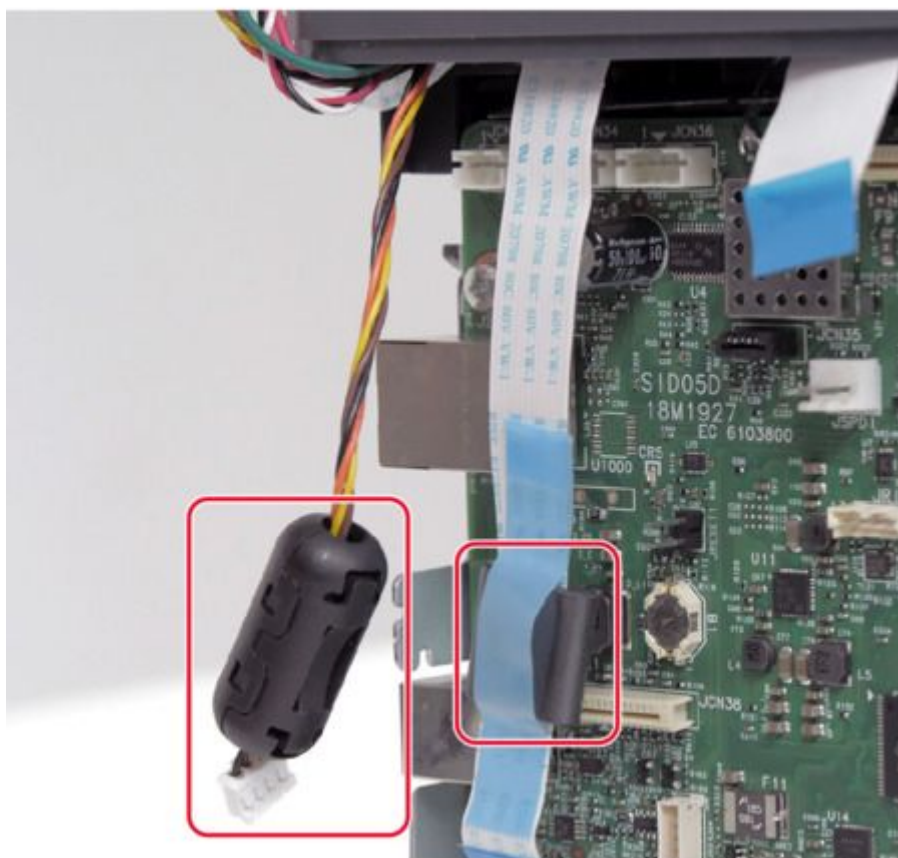

9. Disconnect the four cables, and then remove the screw securing the two ground cables.

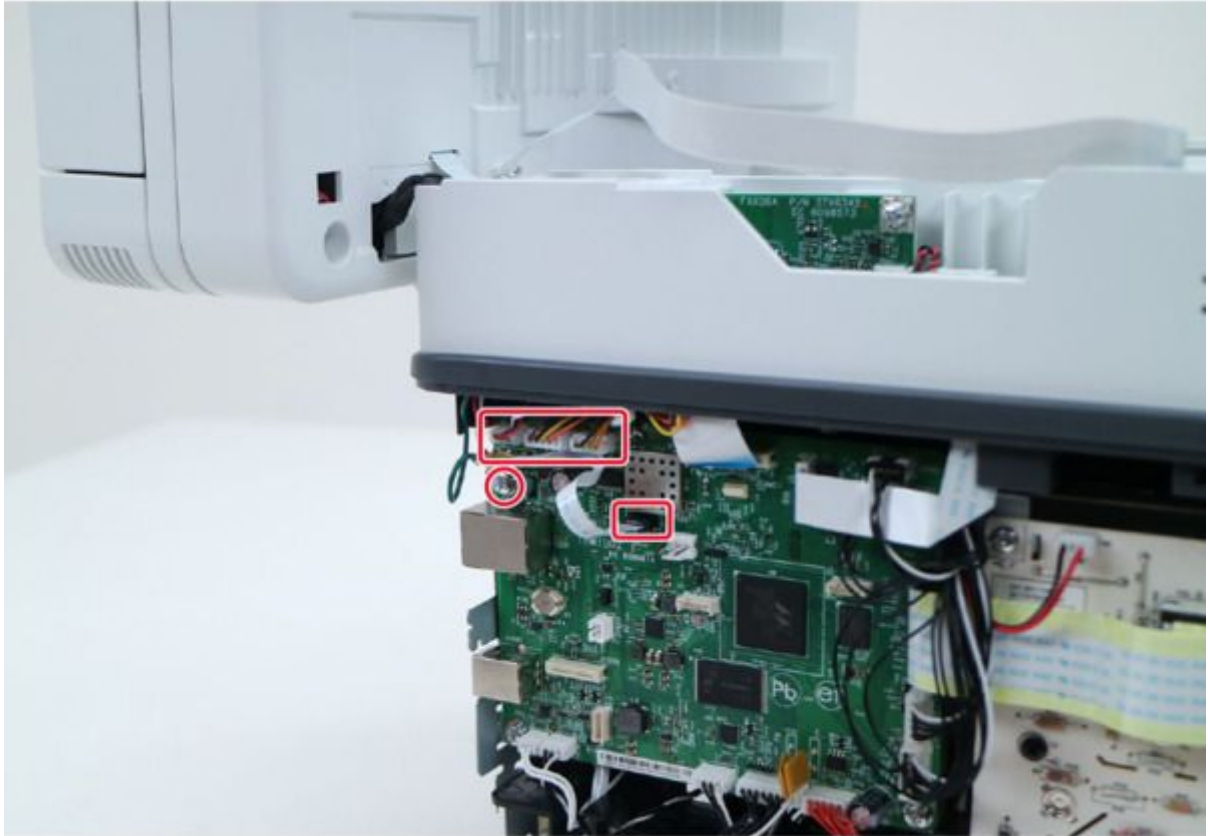


10. Remove the ADF and flatbed scanner cables from the printer, and then remove the ADF and flatbed scanner assembly.

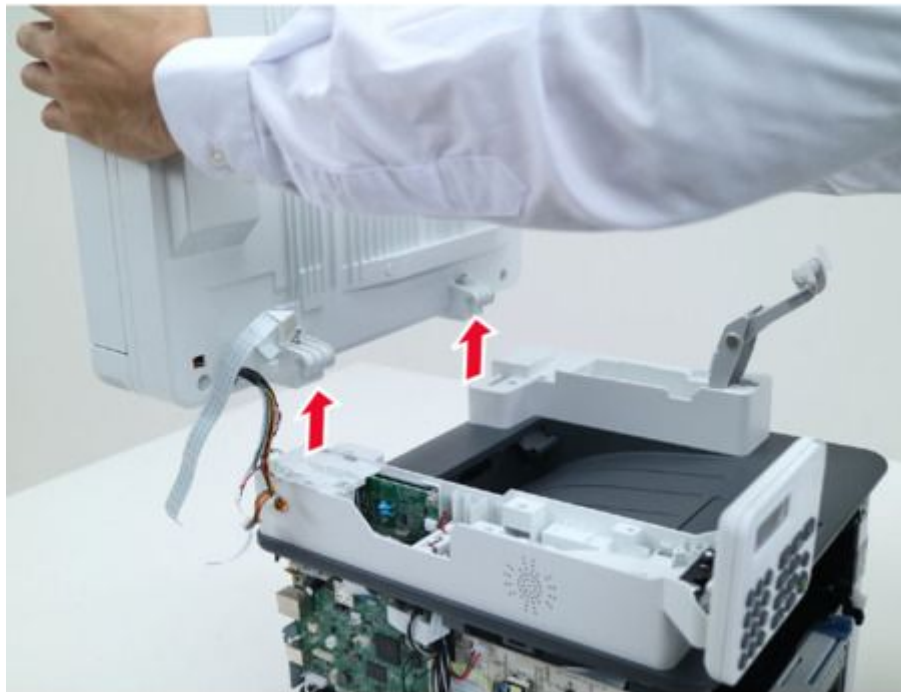

11. Remove the screw. Detach the ADF scanner from the flatbed scanner.



**Note:** Do not lose the two brackets.

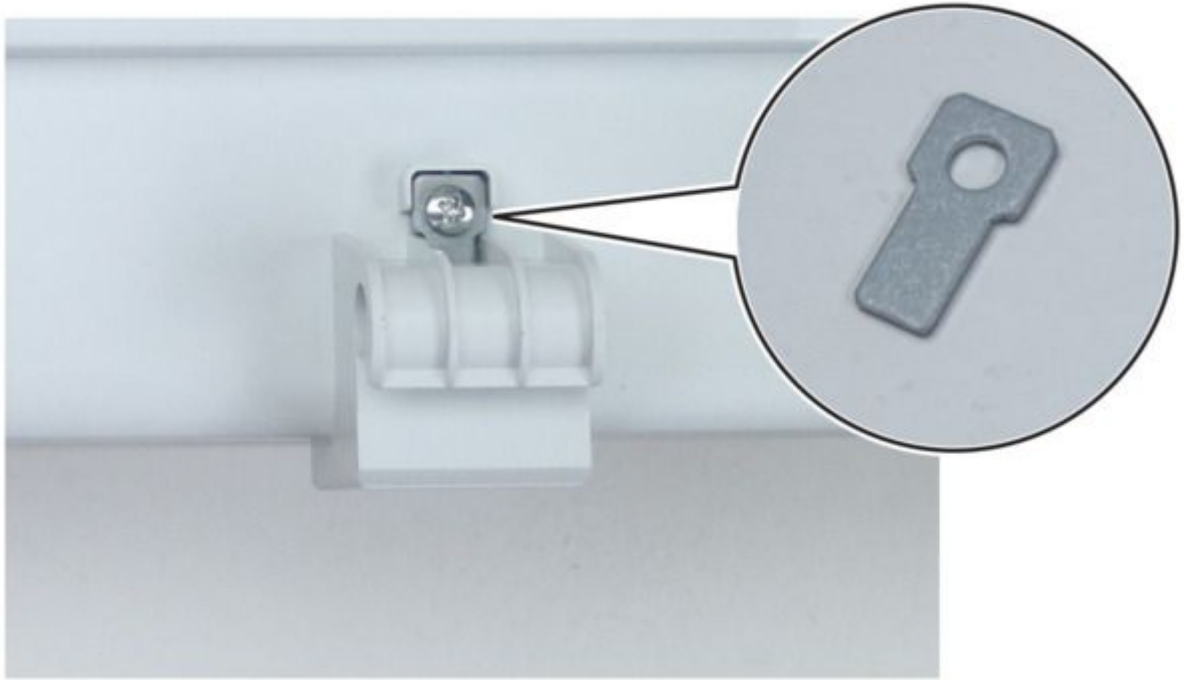

12. Lift the ADF scanner at a 45-degree angle and then pull it from the flatbed scanner.



## ADF scanner (new) and flatbed scanner (new) removal



### Installation Note

Before replacing the ADF scanner and flatbed scanner, do the following:

1. Look for the printer serial number, and then check the printer version.

Printer serial number	Printer version
The 8 <sup>th</sup> digit of the serial number is 1.	Old
The 8 <sup>th</sup> digit of the serial number is 2.	New

2. Check the category of the installed ADF hinge (A).

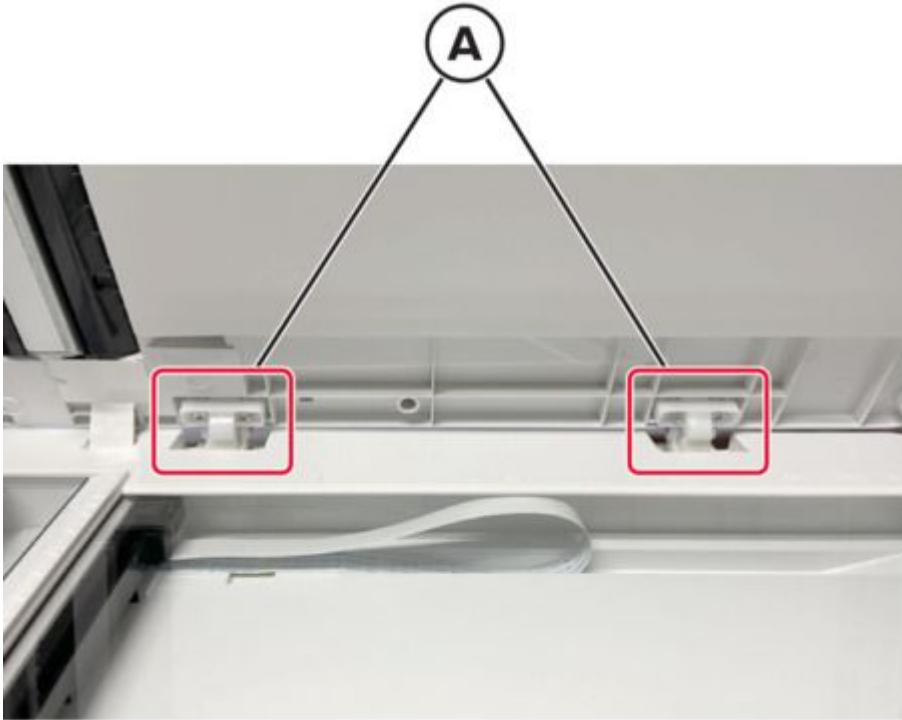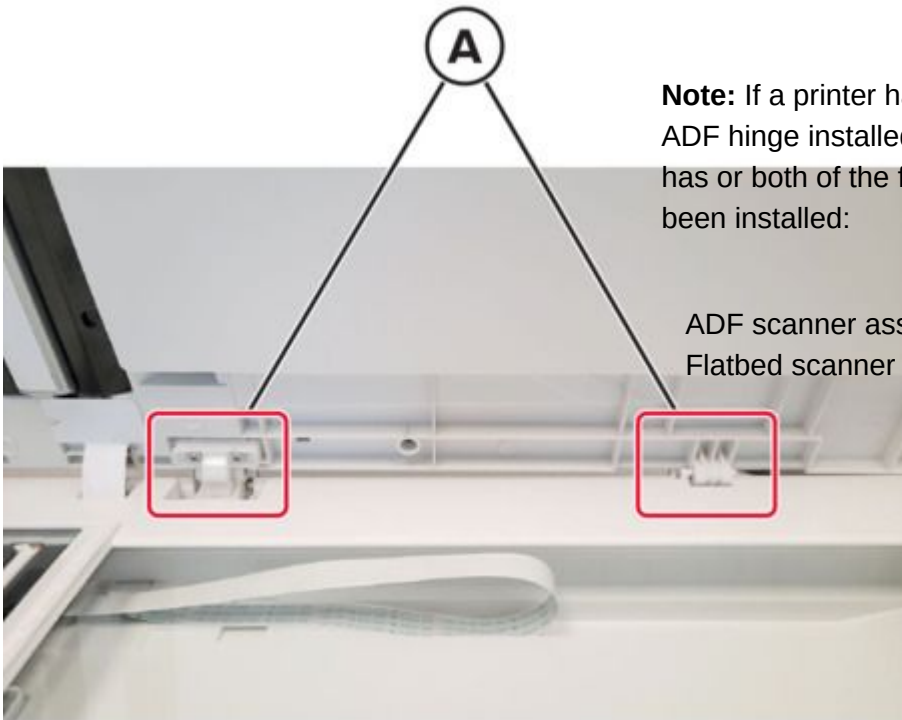Part	Category
	Old
	New

**Note:** If a printer has the new ADF hinge installed, then either has or both of the following have been installed:

- ADF scanner assembly (new)
- Flatbed scanner (new)

3. To select the correct parts for your printer, refer to the following:

**Note:**

- If any of the old parts is out of stock, then you must replace both of them with the new parts.
- The old flatbed scanner is only compatible with the old ADF scanner assembly. The same is true for the new flatbed scanner and new ADF scanner assembly.

Parts	Part number	Compatibility
ADF scanner assembly (old)	P/N 41X2476	Either part is compatible with the following: <ul style="list-style-type: none"><li>◦ Old version printers.</li><li>◦ Printers with the old ADF hinge installed.</li></ul>
Flatbed scanner (old)	P/N 41X2478	
ADF scanner assembly (new)	P/N 41X4494	Either part is compatible with the following: <ul style="list-style-type: none"><li>◦ New version printers.</li><li>◦ Old version printers.</li><li>◦ Printers with the new ADF hinge installed.</li></ul>
Flatbed scanner (new)	P/N 41X4495	

## Removal procedure

**Note:** For a how-to video on removing the part, see [ADF/scanner assembly removal](#).


1. Remove the tray insert.
2. Remove the duplex unit.
3. Remove the rear door. See [Bottom rear door removal on page 347](#).
4. Remove the bottom rear door. See [Bottom rear door removal on page 347](#).
5. Remove the left cover. See [Left cover removal on page 319](#).
6. Detach the scanner stand, and then remove the fax card cover.




7. Disconnect the flatbed scanner FFC cable.




8. Remove the two toroids from the ADF and flatbed scanner cables.

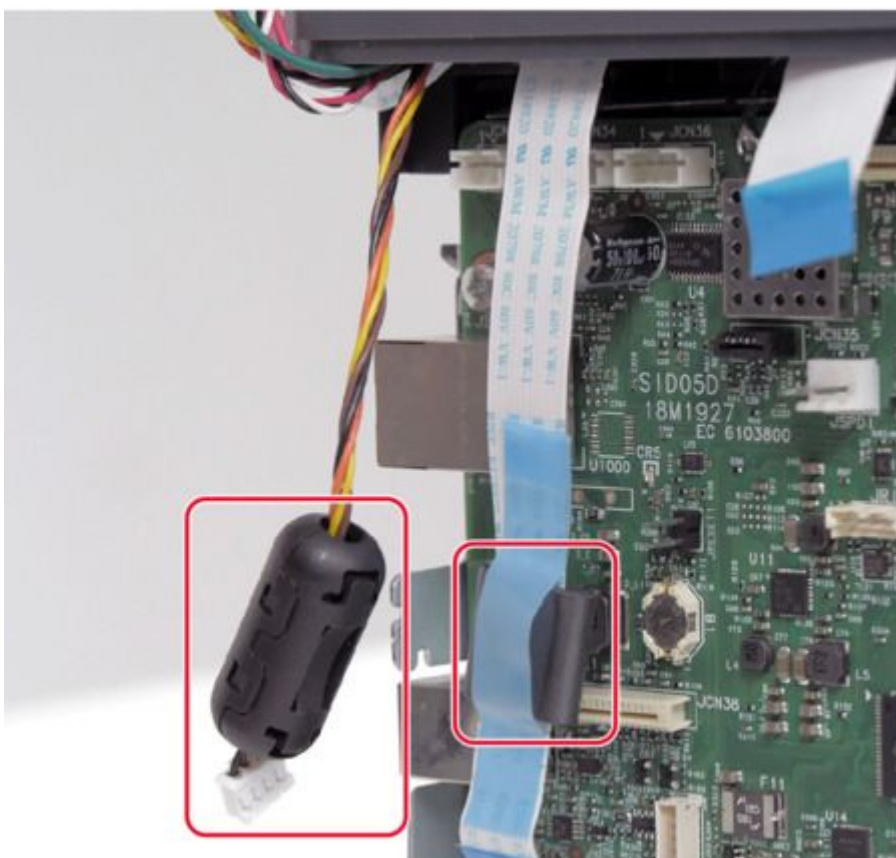

9. Disconnect the four cables, and then remove the screw securing the two ground cables.

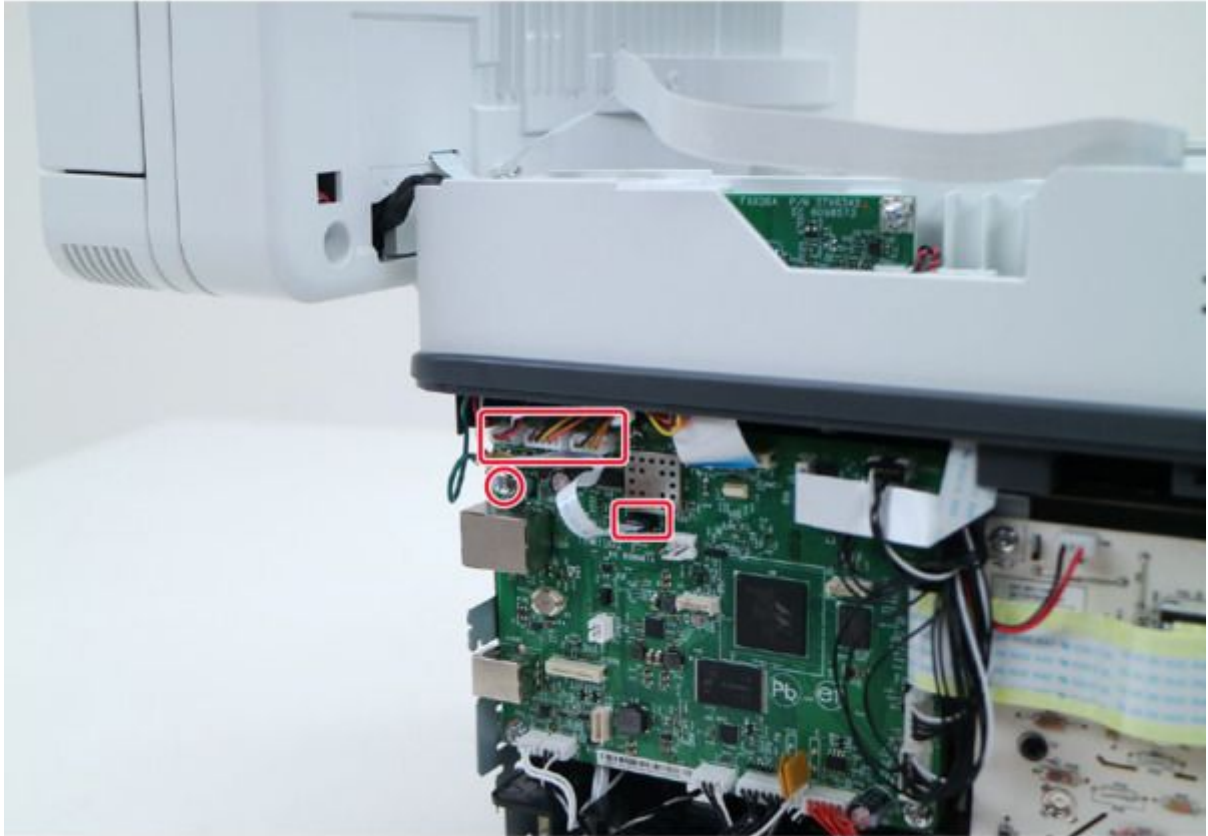


10. Remove the ADF and flatbed scanner cables from the printer, and then remove the ADF and flatbed scanner assembly.

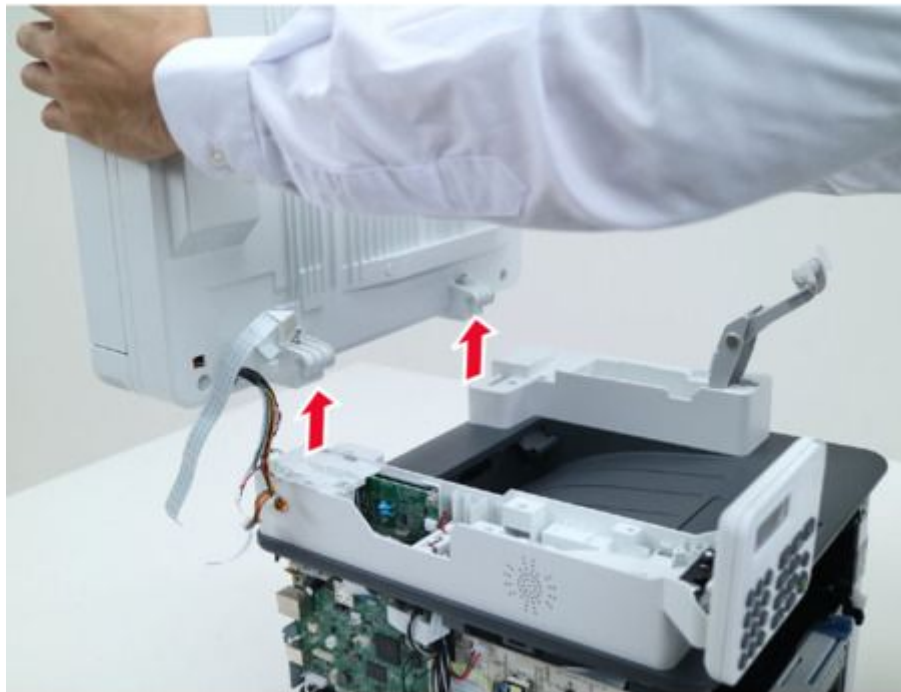


11. Remove the screw. Detach the ADF scanner from the flatbed scanner.




**Note:** Do not lose the two brackets.

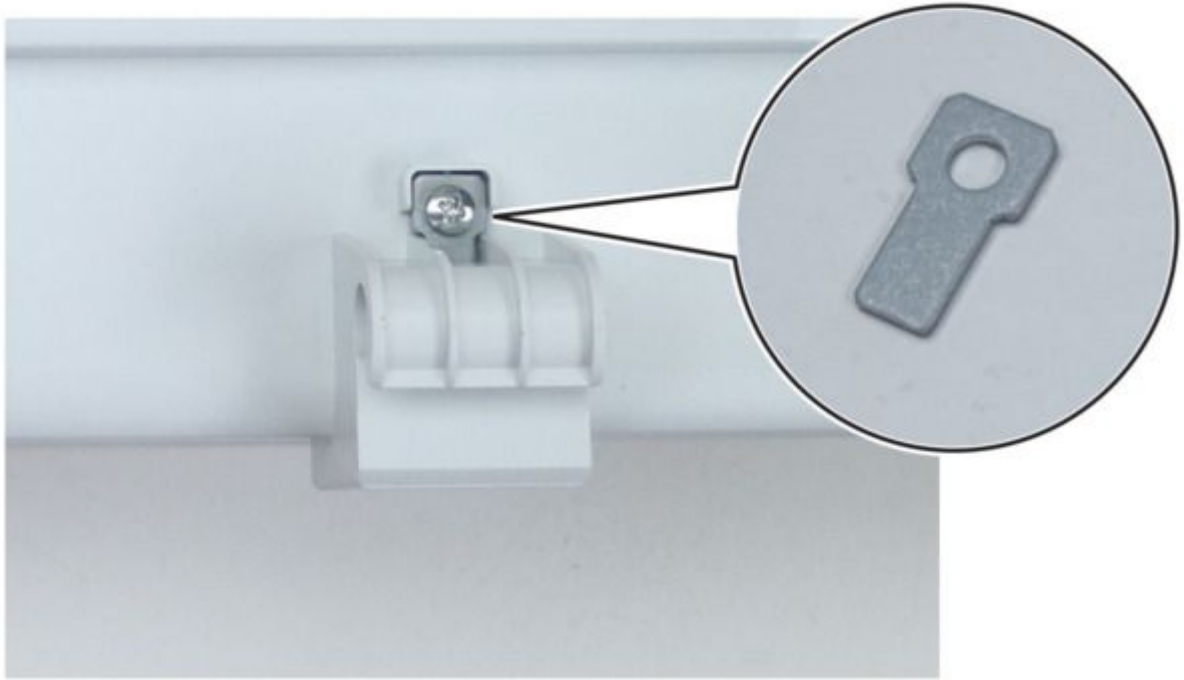

12. Lift the ADF scanner at a 45-degree angle and then pull it from the flatbed scanner.

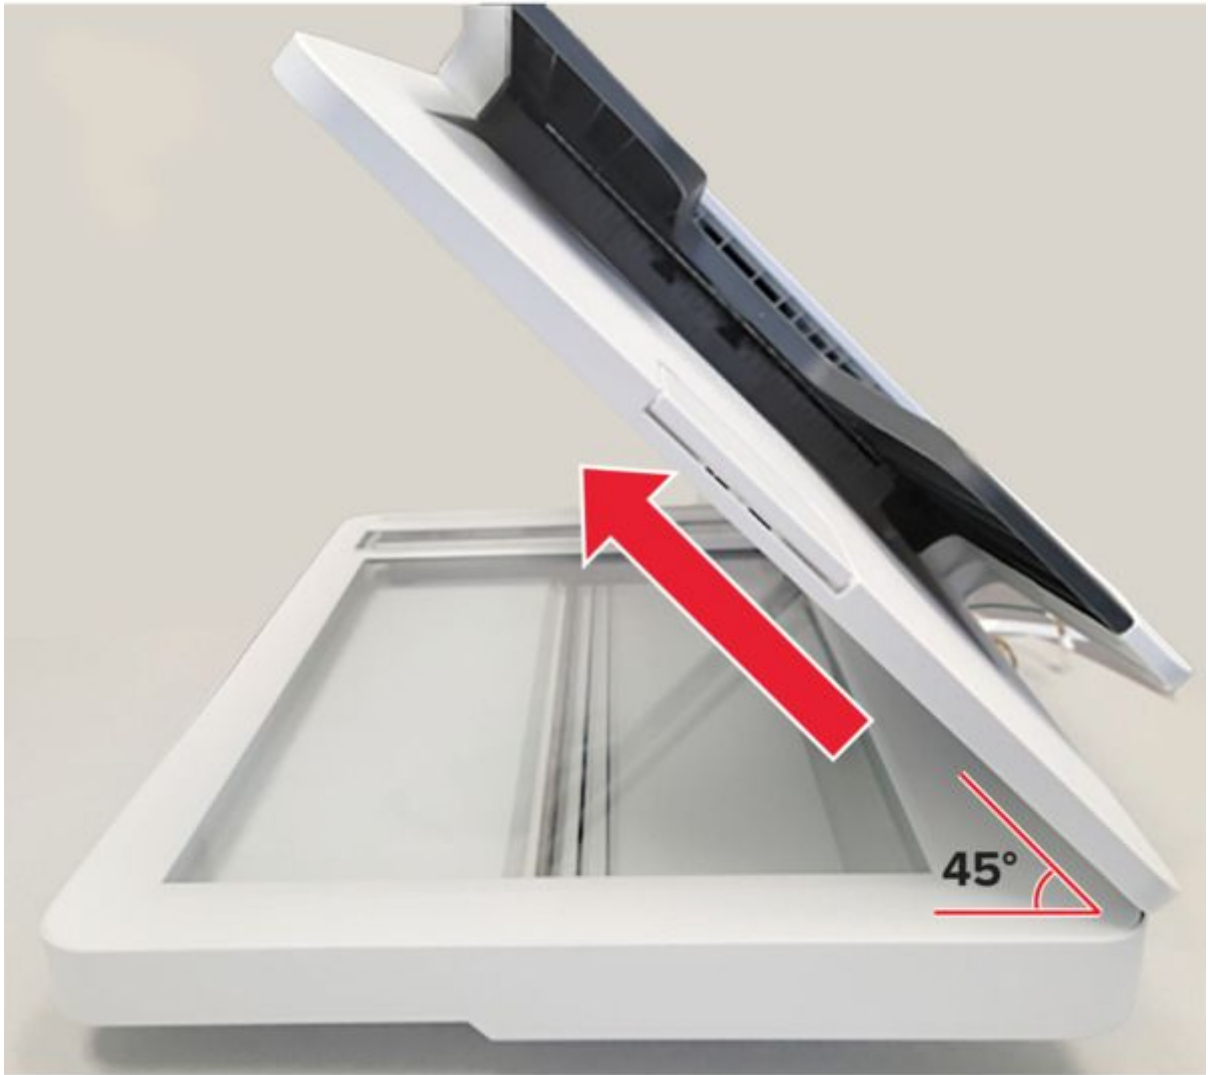

13. Remove the ADF scanner from the flatbed scanner.

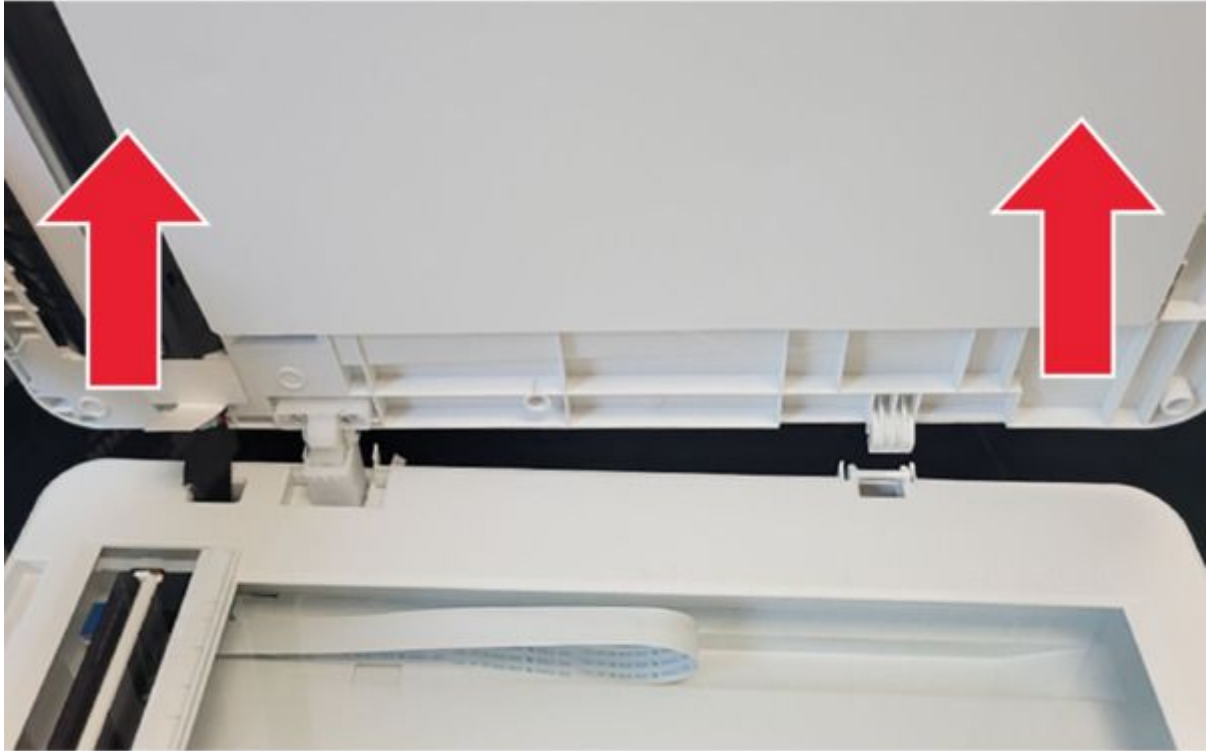

# Component locations

## Printer configuration



1	Automatic document feeder (ADF)
2	ADF tray
3	ADF bin
4	Standard bin
5	Power button
6	Manual feeder
7	250-sheet tray
8	Control panel

**Note:** The appearance may vary depending on your printer model.

## Controller board connectors

**Note:** Fax connector is applicable only to specific models.

Connector	Connects to	Pin number	Signal
JCN37	Sensor (flatbed)	1	1.2 V
		2	GROUND
		3	FB home Sns
JCN34	Motor (ADF)	1	ADF BOUT1
		2	ADF BOUT2
		3	ADF AOUT1
		4	ADF AOUT2
		5	Not used
JCN36	Motor (flatbed)	1	FB BOUT1
		2	FB BOUT2
		3	FB AOUT1
		4	FB AOUT2
JCN35	Sensor (ADF)	1	ADF ENTRYN C
		2	ADF COVER OPEN C
		3	3 V
		4	GROUND
		5	ADF FEEDN C
JCN38	CIS scanner	1	JCIS P1
		2	GROUND
		3	GROUND
		4	3.3 V
		5	SCAN VREF
		6	JCIS P6
		7	FB CIS PCLK2

## Component locations

Connector	Connects to	Pin number	Signal
		8	5 V
		9	JCIS P9
		10	JCIS P10
		11	JCIS P11
		12	GROUND
JCN6	Fax	1	3.3 V FUSED RIP
		2	GROUND
		3	5 V FUSED
		4	FAX POR
		5	FAX IRQ
		6	3.3 V FUSED RIP
		7	GROUND
		8	BSPI CLK FAX
		9	GROUND
		10	BSPI TXD FAX
		11	GROUND
		12	BSPI RXD
		13	GROUND
		14	BSP1 CS FAX
		15	RING FAX
		16	SLEEP
		17	FAX RELAY
JCN25 (for MB2236adw only) / JOP1 (for MB2236i and MB2236adwe only)	Control panel	1	COL3
		2	COL2
		3	COL1
		4	COL0
		5	GROUND
		6	ROW7

## Component locations

Connector	Connects to	Pin number	Signal	
		7	ROW6	
		8	ROW5	
		9	ROW4	
		10	ROW3	
		11	ROW2	
		12	ROW1	
		13	ROW0	
		14	LCD ON	
		15	LCD SDA	
		16	LCD SCK	
		17	LCD RSTN	
		18	OP PAN DETECT	
		19	LCD CD	
		20	LCD CS	
		21	LCD BK	
		22	GROUND	
		23	3.3 V	
		24	3.3 V	
JCN31				13-2 13-2 unit cost
	2	IU SDA C		
	3	IU SCL C		
	4	GROUND		
JCN21	Power switch	1	5 V	
		2	POWER LED OUT	
		3	GROUND	
JCN39	HVPS	1	25 V	
		2	25 V	
		3	GROUND	

## Component locations

Connector	Connects to	Pin number	Signal
		4	HVPS ID C
		5	3.3 V_ENG
		6	3.3 V_SCHIP
		7	CART SDA C
		8	CART SCL C
		9	FDOOR OPEN C
		10	FAN EN C
		11	3.3 V ENG SNS
		12	PICK EN C
		13	BUMP ROLL EN C
		14	INPUT SNSN C
		15	BUMP SNSN C
		16	(NO CONNECTION)
		17	UNUSED SNSN C
		18	DEV PWM C
		19	XFR PWM C
		20	CHG PWM C
		21	XFR POS C
		22	A XFR SERVO C
		23	GROUND
JCN5	Printhead (mirror motor)	1	MMTR REFCLK C
		2	MMTR LOCKN C
		3	MMTR STARTN C
		4	GROUND
		5	25 V SW
JCN4	Printhead (video)	1	VDO HSYNCNC
		2	GROUND
		3	VDO ADJ0N C

## Component locations

Connector	Connects to	Pin number	Signal
		4	VDO K1 -C
		5	VDO ADJ1N C
		6	VDO K1 +C
		7	VDO LENAN C
		8	GROUND
		9	VDO LPOW C
		10	VDO K0 -C
		11	VDO PWR C 3.3 V
		12	VDO K0 +C
JCN24	LVPS	1	25 V CONT
		2	25 V CONT
		3	25 V CONT
		4	GROUND
		5	GROUND
		6	GROUND
		7	LV SLEEPN C
		8	LV HEAT C
		9	25 V SW
		10	AC RELAY ON C 3 V
JCN3	Motor (main)	1	GROUND
		2	GROUND
		3	25 V SW
		4	25 V SW
		5	BLDC LOCKN C
		6	BLDC ENN C
		7	BLDC PWM C
		8	BLDC DIR C

## Component locations

---

Connector	Connects to	Pin number	Signal	
JCN10	Sensor (tray empty)	1	TRAY EMPTY LED C 1.1 V	
		2	TRAY EMPTY C	
		3	GROUND	
		4	No connection	
JCN1	Sensor (fuser exit)	1	3.3 V	
		2	EXIT SNS C	
		3	GROUND	
JCN2	Sensor (fuser)	1	A FUSER THERM C 1.8 V	
		2	GROUND	

# Maintenance

## Cleaning printer parts

### Cleaning the printer

**CAUTION—SHOCK HAZARD**

To avoid the risk of electrical shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.

**Note:**

- Perform this task after every few months.
- Damage to the printer caused by improper handling is not covered by the printer warranty.

1. Turn off the printer, and then unplug the power cord from the electrical outlet.
2. Remove paper from the standard bin.
3. Remove any dust, lint, and pieces of paper around the printer using a soft brush or vacuum.
4. Wipe the outside of the printer with a damp, soft, lint-free cloth.

**Note:**

- Do not use household cleaners or detergents, as they may damage the finish of the printer.
- Make sure that all areas of the printer are dry after cleaning.


5. Connect the power cord to the electrical outlet, and then turn on the printer.

**CAUTION—POTENTIAL INJURY**

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

## Cleaning the scanner

1. Open the scanner cover.

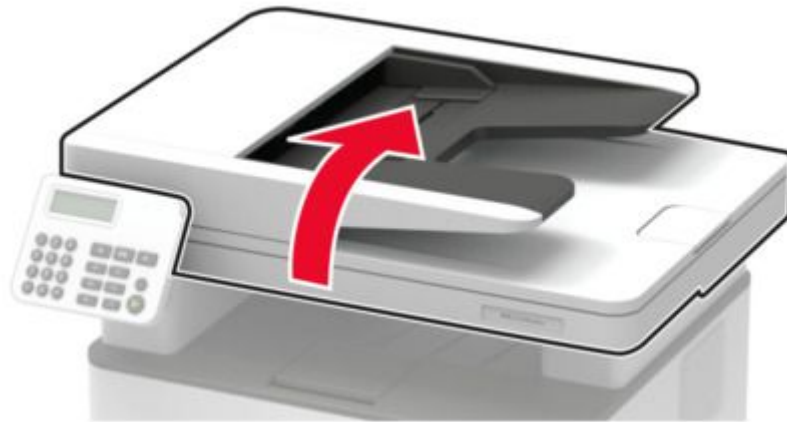

2. Using a damp, soft, lint-free cloth, wipe the following areas:

- ADF glass



- ADF glass pad



- Scanner glass



- Scanner glass pad



3. Close the scanner cover.

# Parts catalog

## Legend


The following column headings are used in the parts catalog:

- **Asm-index**—Identifies the item in the illustration.
- **Part number**—Identifies the unique number that correlates with the part.
- **Units/mach**—Refers to the number of units actually used in the base machine or product.
- **Units/FRU**—Refers to the number of units in a particular FRU.
- **Description**—Describes the part.

The following abbreviations are used in the parts catalog:

- **NS** (not shown) in the Asm-index column indicates that the part is procurable but is not pictured in the illustration.
- **PP** (parts packet) in the Description column indicates that the part is contained in a parts packet.


# Covers (MB2236adw)

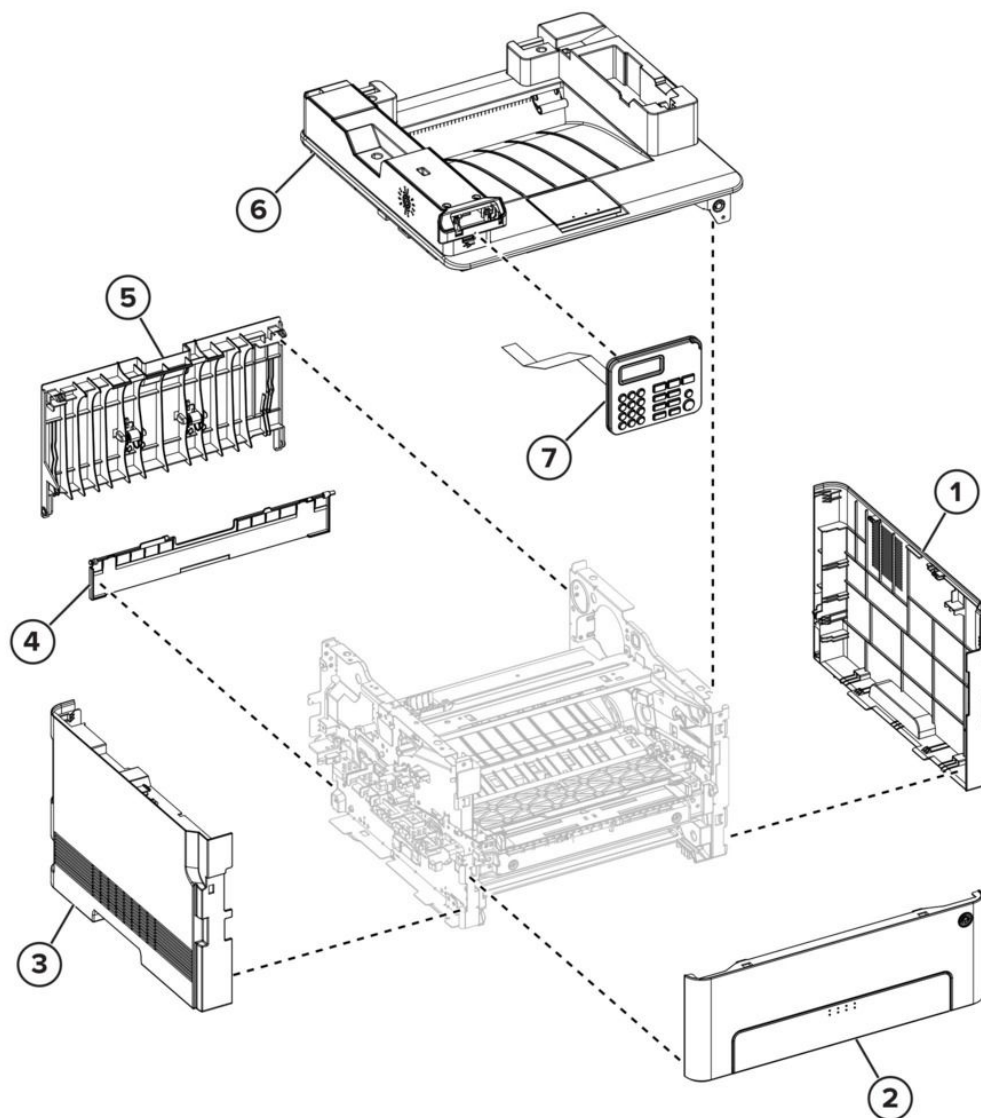

Asm-index	P/N	Units/ mach	Units/ FRU	Description	Removal procedure
1	41X2449	1	1	Right cover	<a href="#">Right cover removal on page 329</a>
2	41X2450	1	1	Front door	<a href="#">Front door removal on page 343</a>
3	41X2451	1	1	Left cover	<a href="#">Left cover removal on page 319</a>
4	41X2448	1	1	Bottom rear door	<a href="#">Bottom rear door removal on page 347</a>
5	41X2447	1	1	Rear door	<a href="#">Bottom rear door removal on page 347</a>
6	41X2446	1	1	Top cover	<a href="#">Top cover removal on page 351</a>

Asm-index	P/N	Units/ mach	Units/ FRU	Description	Removal procedure
7	41X2479	1	1	2-line control panel	<a href="#">2-line control panel removal on page 337</a>


## Covers (MB2236adwe, MB2236i)

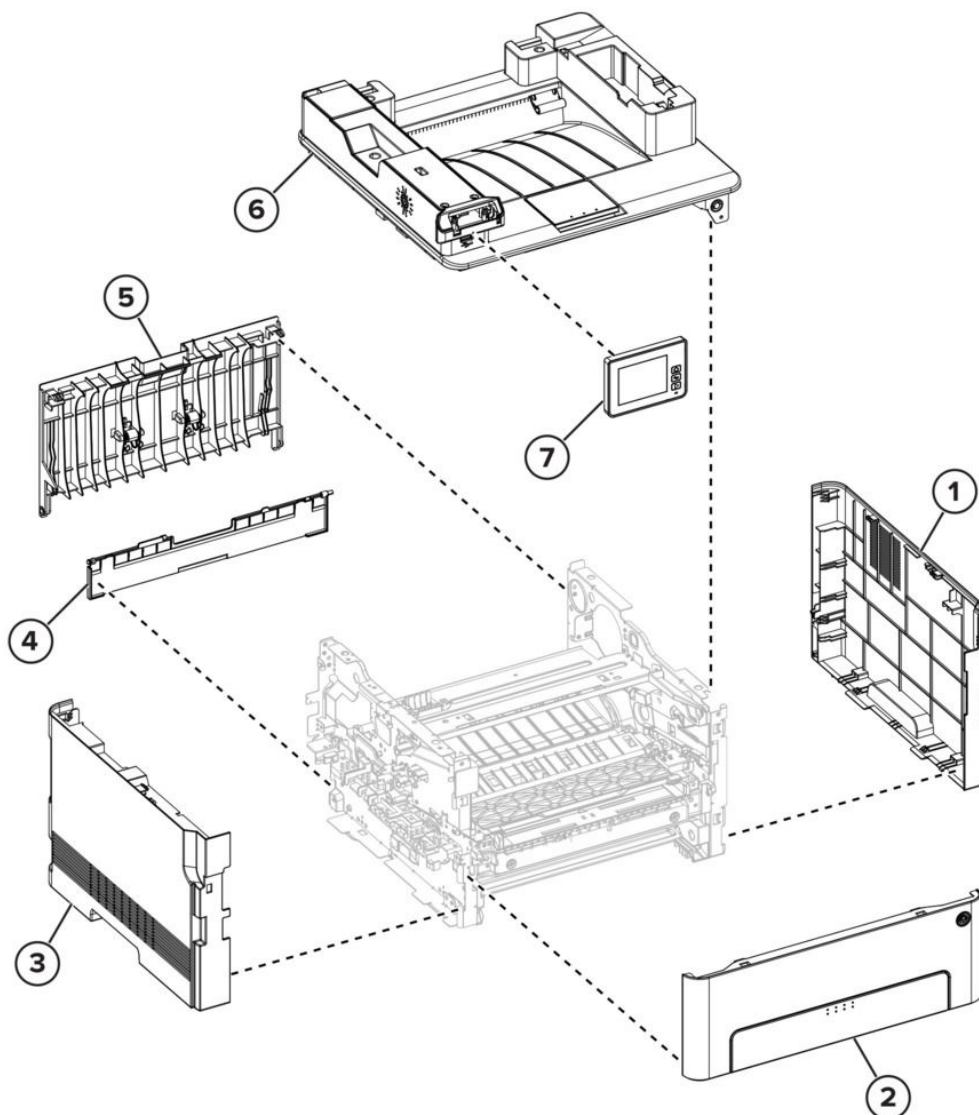

Asm-index	P/N	Units/ mach	Units/ FRU	Description	Removal procedure
1	41X2449	1	1	Right cover	<a href="#">Right cover removal on page 329</a>
2	41X2450	1	1	Front door	<a href="#">Front door removal on page 343</a>
3	41X2451	1	1	Left cover	<a href="#">Left cover removal on page 319</a>
4	41X2448	1	1	Bottom rear door	<a href="#">Bottom rear door removal on page 347</a>
5	41X2447	1	1	Rear door	<a href="#">Bottom rear door removal on page 347</a>


Asm-index	P/N	Units/ mach	Units/ FRU	Description	Removal procedure
6	41X2446	1	1	Top cover (MB2236adwe)	<a href="#">Top cover removal on page 351</a>
6	41X2979	1	1	Top cover (MB2336i)	<a href="#">Top cover removal on page 351</a>
7	41X2516	1	1	2.8-in. control panel	<a href="#">2.8-in. control panel removal on page 340</a>

## Paper path

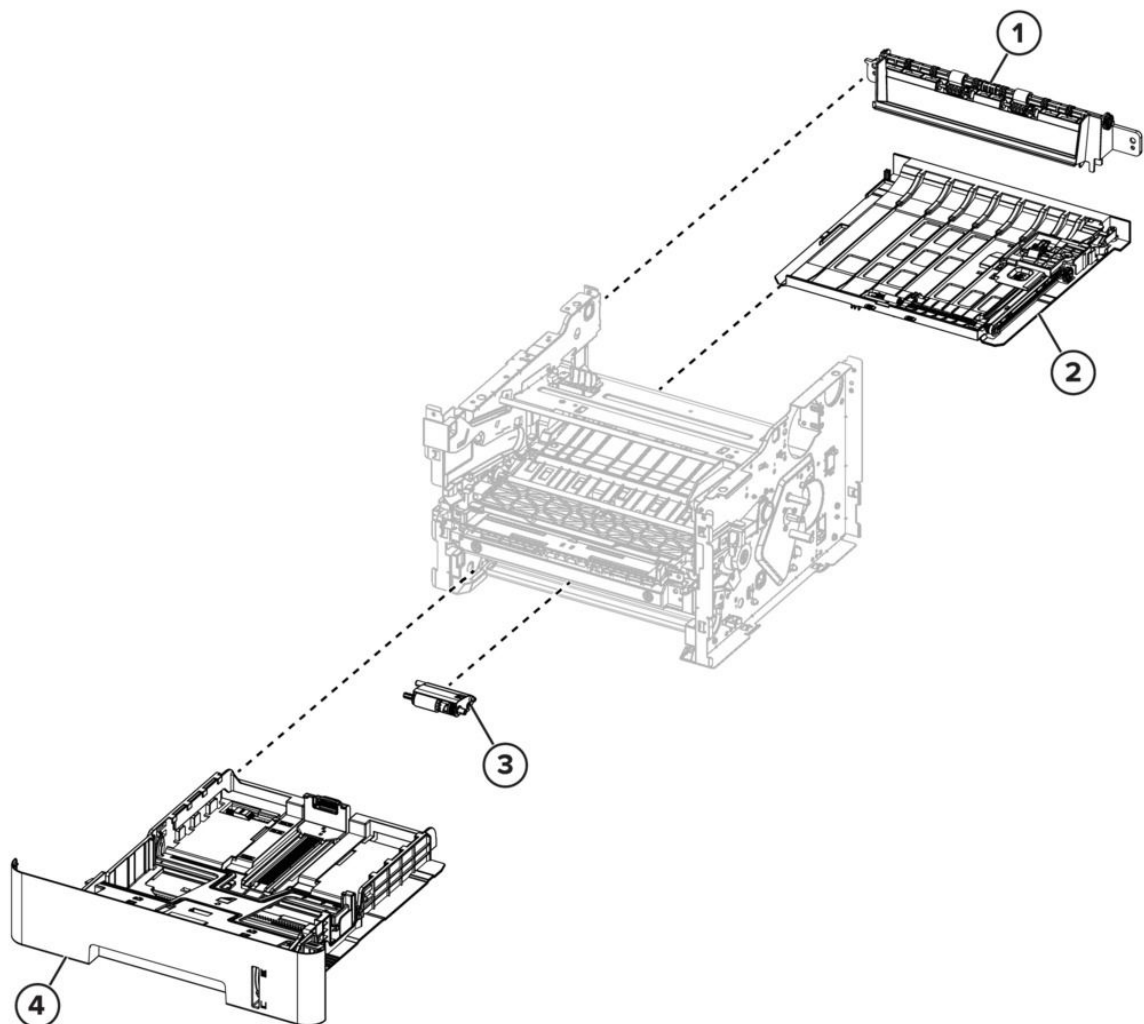


Asm-index	P/N	Units/ mach	Units/ FRU	Description	Removal procedure
1	41X2453	1	1	Redrive	<a href="#">Redrive removal on page 347</a>
2	41X2454	1	1	Duplex unit	<a href="#">Duplex unit removal on page 346</a>
3	41X2455	1	1	Pick roller	<a href="#">Pick rollers removal on page 371</a>
4	41X2452	1	1	Tray insert	--

# Drive

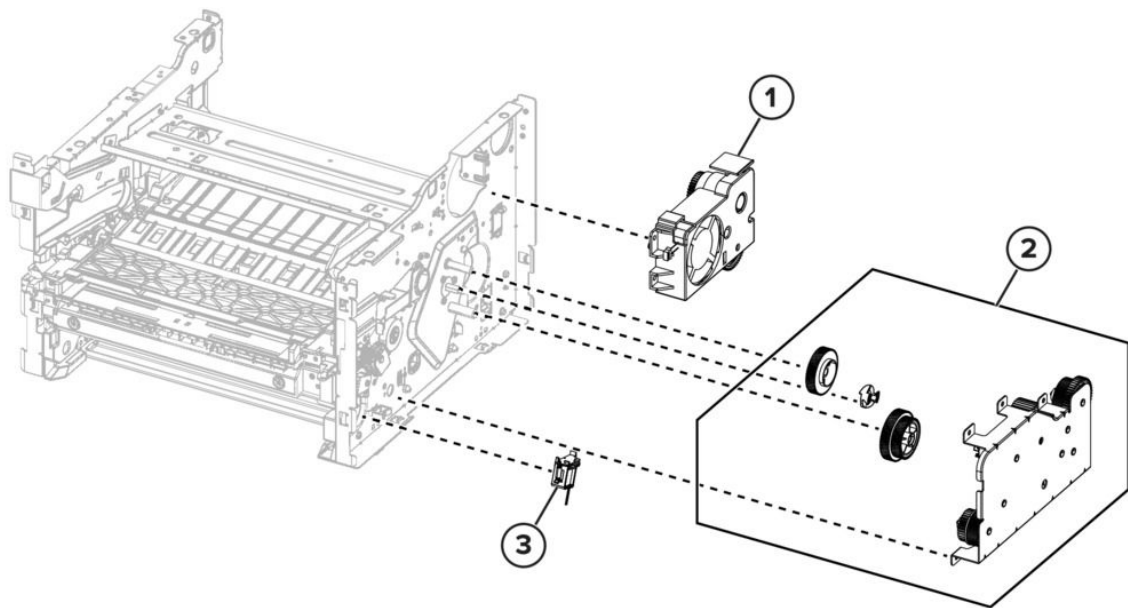


Asm-index	P/N	Units/ mach	Units/ FRU	Description	Removal procedure
1	41X2470	1	1	Fan assembly	
2	41X2471	1	1	Main drive	<a href="#">Main drive removal on page 331</a>
3	41X2472	1	1	Pick solenoid	<a href="#">Pick solenoid removal on page 333</a>

# Sensors

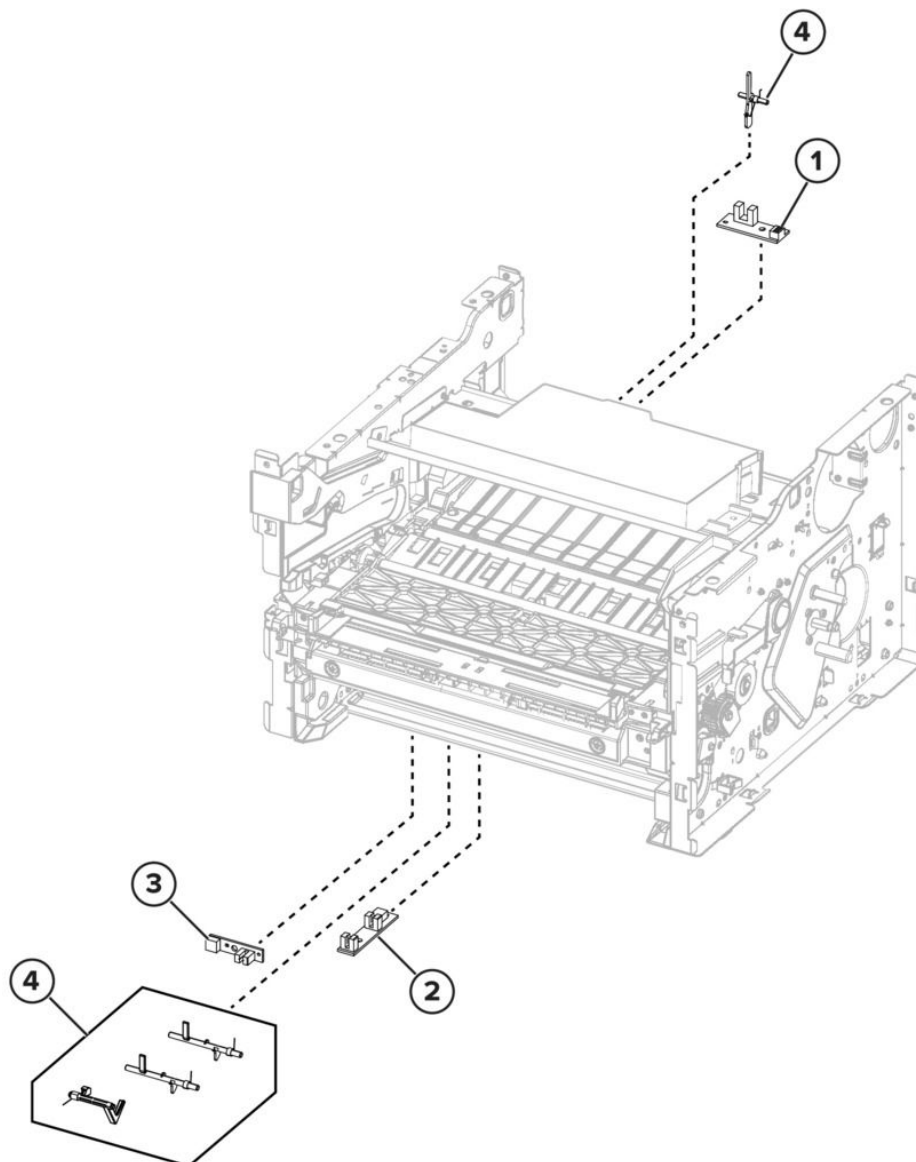

Asm-index	P/N	Units/ mach	Units/ FRU	Description	Removal procedure
1	41X2468	1	1	Sensor (fuser exit)	<a href="#">Sensor (fuser exit) removal on page 365</a>
2	41X2467	1	1	Sensor (staging and input)	<a href="#">Sensor (staging and input) removal on page 367</a>
3	41X2466	1	1	Sensor (paper present)	<a href="#">Sensor (paper present) removal on page 366</a>
4	41X2469	1	1	Sensor flags	<a href="#">Input sensor flags removal on page 369</a> <a href="#">Fuser exit flag removal on page 350</a>


# Electronics

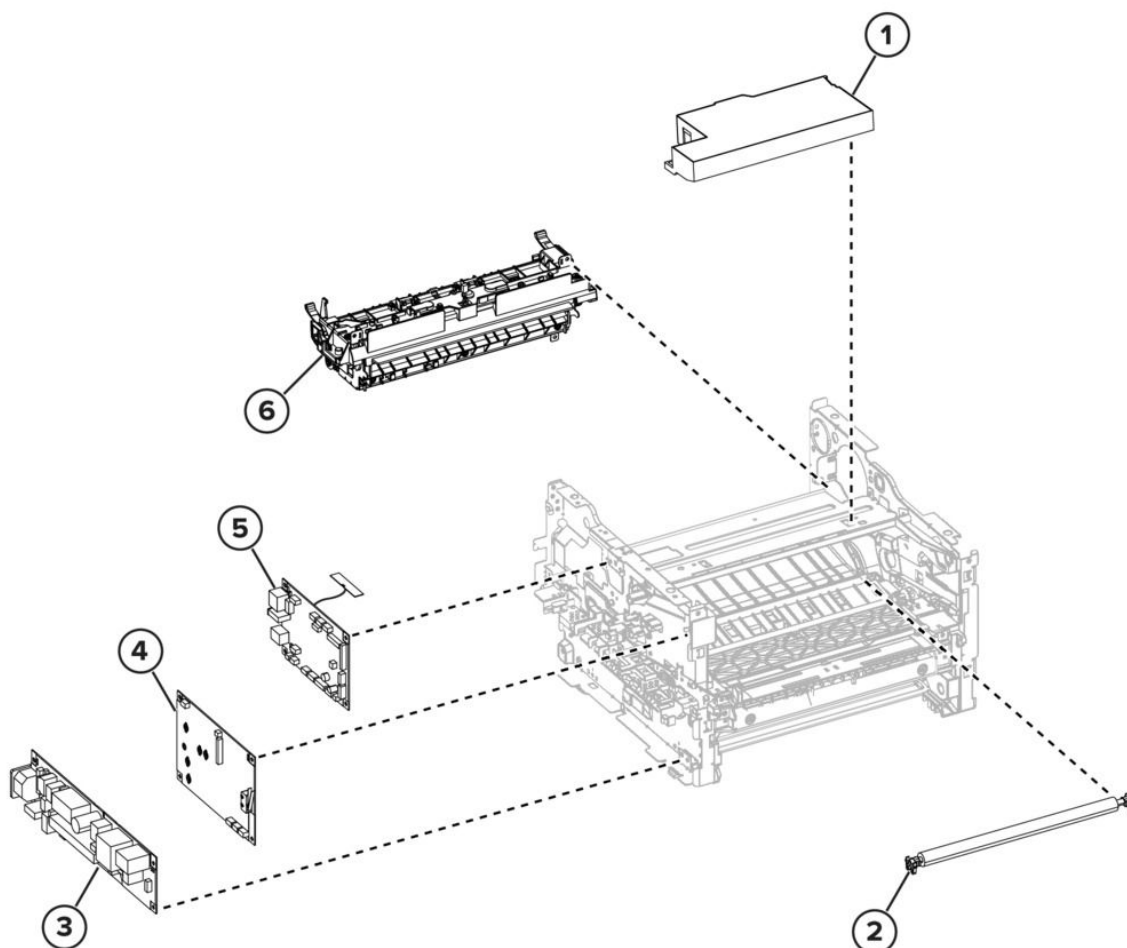

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X2843	1	1	Printhead	<a href="#">Printhead removal on page 363</a>
2	41X2457	1	1	Transfer roller	<a href="#">Transfer roller removal on page 344</a>
3	41X2459	1	1	LVPS, 110 V	<a href="#">LVPS removal on page 326</a>
3	41X2460	1	1	LVPS, 220 V	<a href="#">LVPS removal on page 326</a>
4	41X2458	1	1	HVPS	<a href="#">HVPS removal on page 327</a>
5	41X2461	1	1	Controller board (MB2236adw)	<a href="#">Controller board removal on page 322</a>

Asm-index	P/N	Units/ mach	Units/ FRU	Description	Removal procedure
5	41X2973	1	1	Controller board (MB2236adw)  <b>Note:</b> Make sure to upgrade the firmware to version FW 074.038 or later.	<a href="#">Controller board removal on page 322</a>
5	41X2515	1	1	Controller board (MB2236adwe)	<a href="#">Controller board removal on page 322</a>
5	41X2974	1	1	Controller board (MB2236adwe)  <b>Note:</b> Make sure to upgrade the firmware to version FW 074.038 or later.	<a href="#">Controller board removal on page 322</a>
6	41X2463	1	1	Fuser, 110 V	<a href="#">Fuser removal on page 348</a>
6	41X2464	1	1	Fuser, 220 V	<a href="#">Fuser removal on page 348</a>
NS	41X2482	1	1	Cable kit parts pack	--
NS	41X2634	1	1	Control panel and fax FFC cable	--
NS	41X2617	1	1	Front USB cable	--

# Scanner

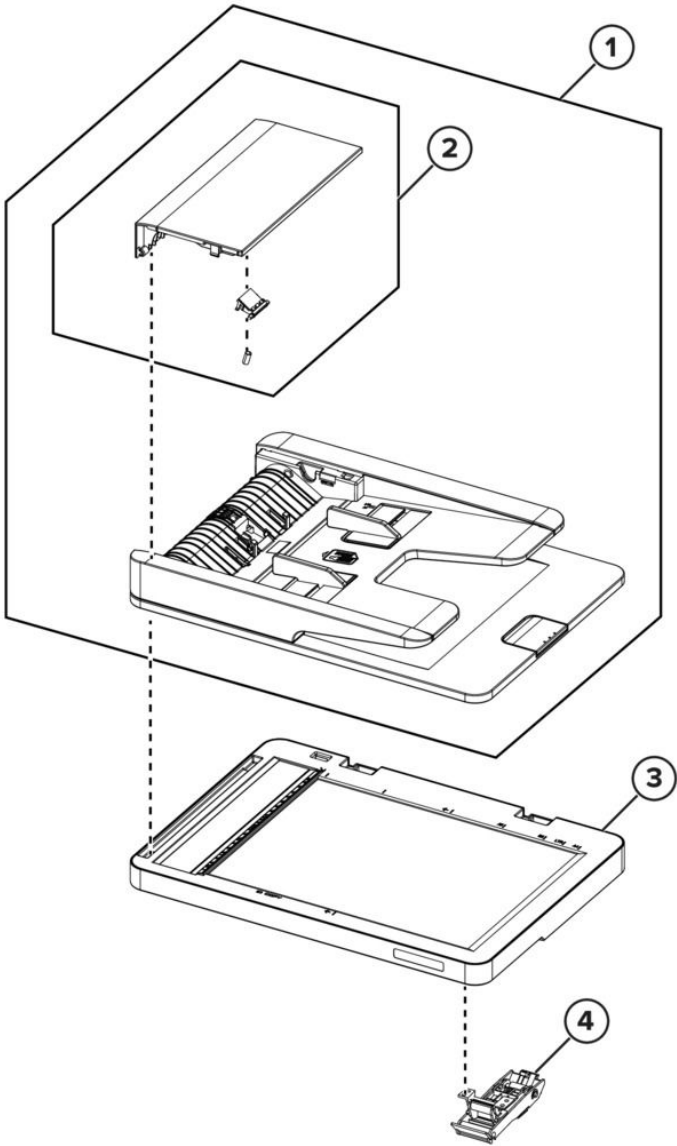

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X2476	1	1	<div>ADF scanner assembly (old)</div> <div><b>Note:</b> Before replacing the part, refer to the compatibility information in the removals.</div>	<a href="#">ADF scanner (old) and flatbed scanner (old) removal on page 376</a>

Asm-index	P/N	Units/ mach	Units/ FRU	Description	Removal procedure
1	41X4494	1	1	ADF scanner assembly (new) <div> <b>Note:</b> Before replacing the part, refer to the compatibility information in the removals.           </div>	<a href="#">ADF scanner (new) and flatbed scanner (new) removal on page 386</a>
2	41X2480	1	1	ADF pick assembly	<a href="#">ADF pick assembly removal on page 374</a>
3	41X2478	1	1	Flatbed scanner (old) <div> <b>Note:</b> Before replacing the part, refer to the compatibility information in the removals.           </div>	<a href="#">ADF scanner (old) and flatbed scanner (old) removal on page 376</a>
3	41X4495	1	1	Flatbed scanner (new) <div> <b>Note:</b> Before replacing the part, refer to the compatibility information in the removals.           </div>	<a href="#">ADF scanner (new) and flatbed scanner (new) removal on page 386</a>
4	41X2629	1	1	Scanner stand	<a href="#">Scanner stand removal on page 373</a>

## Miscellaneous

Asm-index	P/N	Units/ mach	Units/ FRU	Description	Removal procedure
NS	40X0278	1	1	Power cord, straight—Austria and Russia	N/A
NS	40X0282	1	1	Power cord, straight—PRC	N/A
NS	40X0286	1	1	Power cord, straight—Ireland, Bahrain, Cyprus, Kuwait, Lebanon, Malta, Oman, Qatar, United Arab Emirates, and United Kingdom (England, Scotland, Wales, and Northern Ireland)	N/A
NS	40X0297	1	1	Power cord, straight (6 feet)—US, Canada, and Latin America (Colombia, Costa Rica, Dominican Republic, Ecuador, El Salvador, Guatemala, Honduras, Mexico, Nicaragua, Panama, Puerto Rico, Venezuela, and the US Virgin Islands)	N/A
NS	40X4596	1	1	Power cord, 3-wire (10A, 2500 mm)—Brazil	N/A
NS	40X1792	1	1	Power cord, straight (8 feet)—Korea	N/A
NS	40X0296	1	1	Power cord, straight—Australia  <b>Note:</b> This part is obsolete.	N/A
NS	40X0279	1	1	Power cord, straight—Denmark	N/A
NS	40X0271	1	1	Power cord, straight—United Kingdom	N/A
NS	40X1791	1	1	Power cord, straight (8 feet)—Taiwan	N/A

# Printer specifications

## Power consumption

### Product power consumption

The following table documents the power consumption characteristics of the product.

**Note:** Some modes may not apply to your product.

Mode	Description	Power consumption (Watts)	
		MB2236adw	MB2236adwe
Printing	The product is generating hard-copy output from electronic inputs.	460	460
Copy	The product is generating hard-copy output from hard-copy original documents.	460	460
Scan	The product is scanning hard-copy documents.	14.5	14.5
Ready	The product is waiting for a print job.	5.5	6.0
Sleep Mode	The product is in a high-level energy-saving mode.	1.2	1.1
Hibernate	The product is in a low-level energy-saving mode.	N/A	0.2
Off	The product is plugged into an electrical outlet, but the power switch is turned off.	0.1	0.1

The power consumption levels listed in the previous table represent time-averaged measurements. Instantaneous power draws may be substantially higher than the average. Values are subject to change. See [www.lexmark.com](http://www.lexmark.com) for current values.

## Sleep Mode

This product is designed with an energy-saving mode called **Sleep Mode**. The Sleep Mode saves energy by lowering power consumption during extended periods of inactivity. The Sleep Mode is automatically engaged after this product is not used for a specified period of time, called the **Sleep Mode Timeout**.

Factory default Sleep Mode Timeout for this product (in minutes):	15
-------------------------------------------------------------------	----

By using the configuration menus, the Sleep Mode Timeout can be modified between 1 minute and 120 minutes. If the print speed is less than or equal to 30 pages per minute, then you can set the timeout only up to 60 minutes. Setting the Sleep Mode Timeout to a low value reduces energy consumption, but may increase the response time of the product. Setting the Sleep Mode Timeout to a high value maintains a fast response, but uses more energy.

## Hibernate Mode

This product is designed with an ultra-low power operating mode called **Hibernate mode**. When operating in Hibernate Mode, all other systems and devices are powered down safely.

The Hibernate mode can be entered in any of the following methods:

- Using the Hibernate Timeout
- Using the Schedule Power modes

Factory default Hibernate Timeout for this product in all countries or regions	3 days
--------------------------------------------------------------------------------	--------

The amount of time the printer waits after a job is printed before it enters Hibernate mode can be modified between one hour and one month.

## Off mode

If this product has an off mode which still consumes a small amount of power, then to completely stop product power consumption, disconnect the power supply cord from the electrical outlet.

## Total energy usage

It is sometimes helpful to estimate the total product energy usage. Since power consumption claims are provided in power units of Watts, the power consumption should be multiplied by the time the product spends in each mode in order to calculate energy usage. The total product energy usage is the sum of each mode's energy usage.

# Selecting a location for the printer

- Leave enough room to open trays, covers, and doors and to install hardware options.
- Set up the printer near an electrical outlet.
- Make sure that airflow in the room meets the latest revision of the ASHRAE 62 standard or the CEN Technical Committee 156 standard.
- Provide a flat, sturdy, and stable surface.
- Keep the printer:
  - Clean, dry, and free of dust
  - Away from stray staples and paper clips
  - Away from the direct airflow of air conditioners, heaters, or ventilators
  - Free from direct sunlight and humidity extremes
- Observe the temperature range.

Operating temperature	10 to 32.2°C (50 to 90°F)
-----------------------	---------------------------

- Allow the following recommended amount of space around the printer for proper ventilation:



1	Top	360 mm (14 in.)
2	Rear	260 mm (10 in.)
3	Right side	200 mm (8 in.)

4	Front	550 mm (22 in.)
<b>Note:</b> The minimum space needed in front of the printer is 76 mm (3 in.).		
5	Left side	200 mm (8 in.)

## Noise emission levels

The following measurements were made in accordance with ISO 7779 and reported in conformance with ISO 9296.

**Note:** Some modes may not apply to your product.

1-meter average sound pressure, dBA	
Printing	One-sided: 52; Two-sided: 50
Scanning	52
Copying	55
Ready	14

Values are subject to change. See [www.lexmark.com](http://www.lexmark.com) for current values.

## Temperature information

Ambient operating temperature	10 to 32.2°C (50 to 90°F)
Shipping temperature	-40 to 43.3°C (-40 to 110°F)
Storage temperature and relative humidity	-40 to 43.3°C (-40 to 110°F) 8 to 80% RH

## Applicability of Regulation (EU) 2019/2015 and (EU) 2019/2020

Per Commission Regulation (EU) 2019/2015 and (EU) 2019/2020, the light source contained within this product or its component is intended to be used for Image Capture or Image Projection only, and is not intended for use in other applications.


# Theory of operation

## POR sequence

As the printer turns on, the engine code goes through a series of tests to verify hardware integrity. If a hardware failure is detected, then it is reported to the printer. If the POR sequence cannot be completed successfully, then the printer may post an error message. The message states that service may be needed.

## Print cycle operation


### Print engine layout

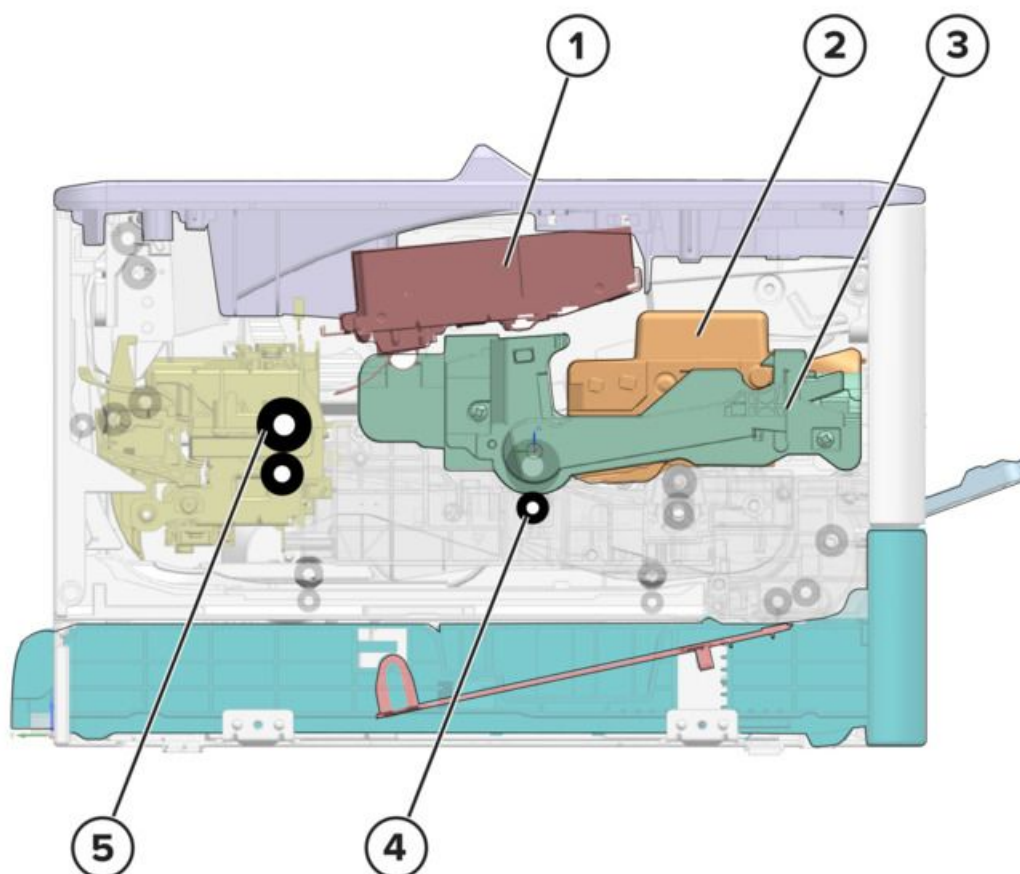


1	Printhead
2	Toner cartridge
3	Imaging unit
4	Transfer roller

## Print cycle

### Flowchart

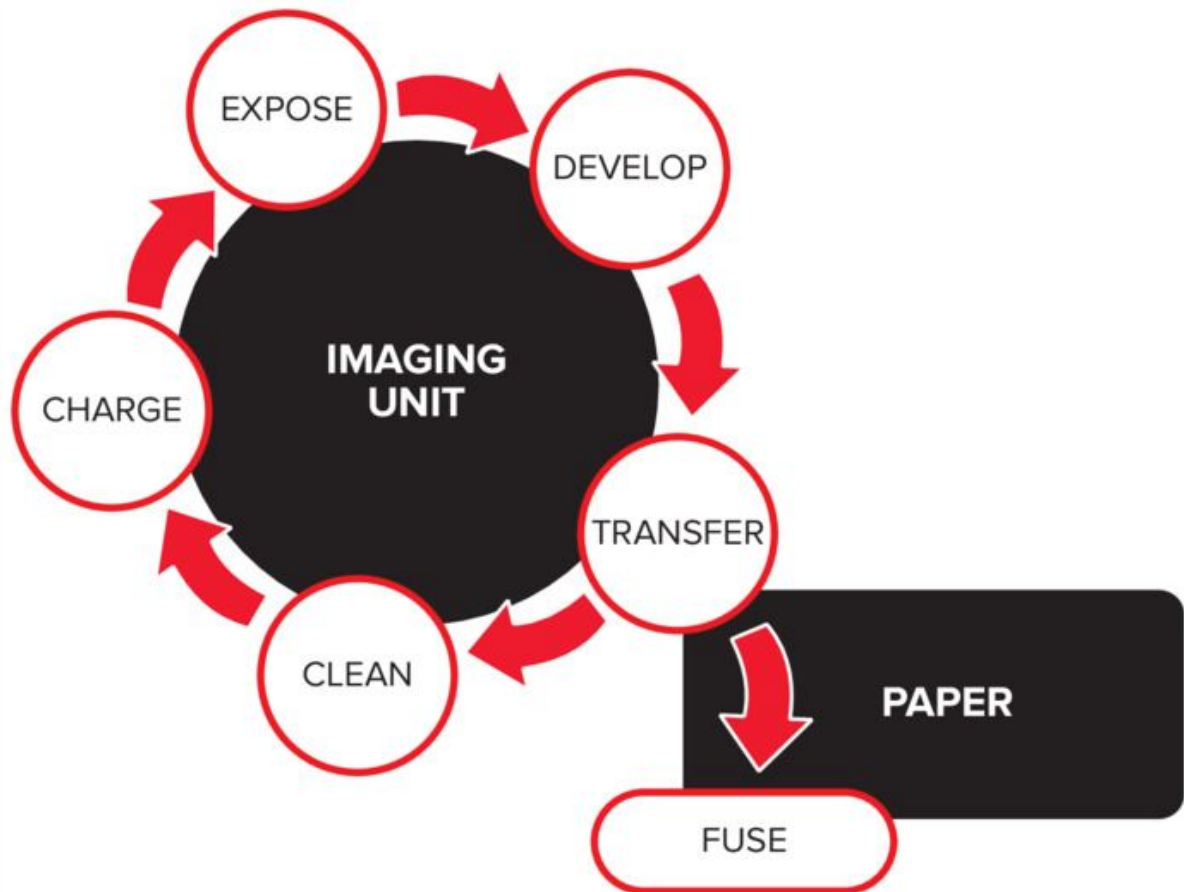


## Charge

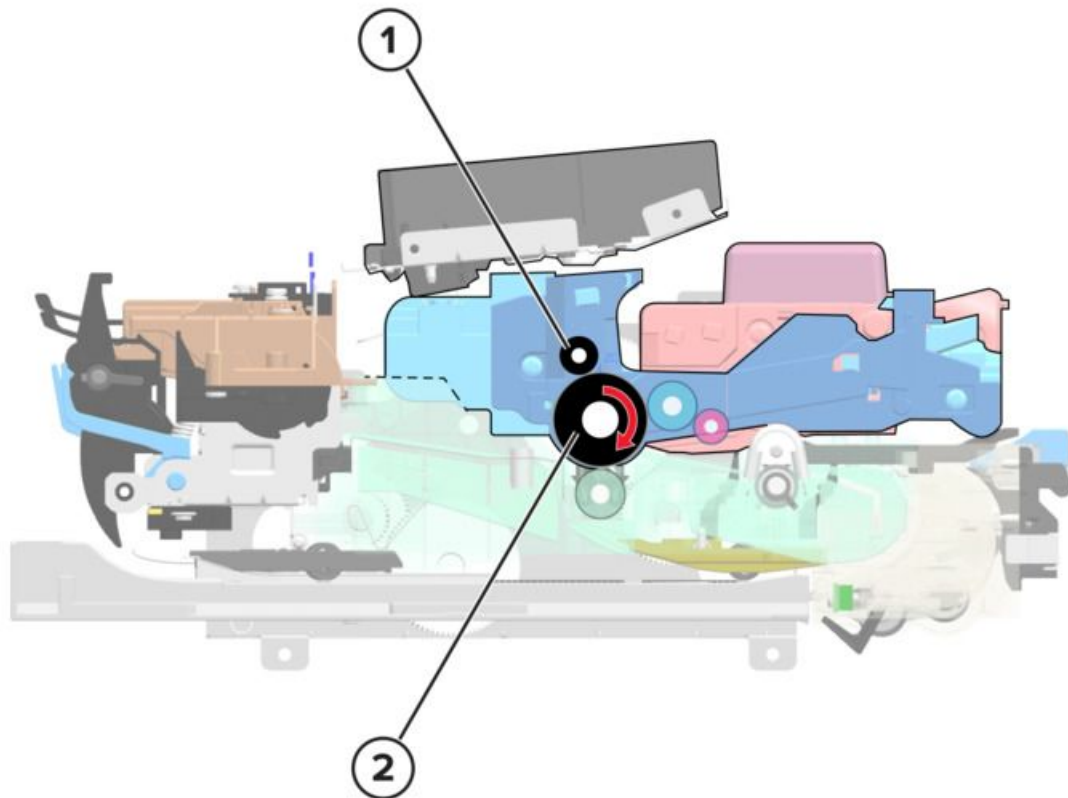

1	Charge roller
2	Photoconductor drum

The charge roller applies a uniform negative electrical charge to the surface of the photoconductor drum. The photoconductive properties of the surface material allow it to hold the charge as long as it is not exposed to light.


## Expose

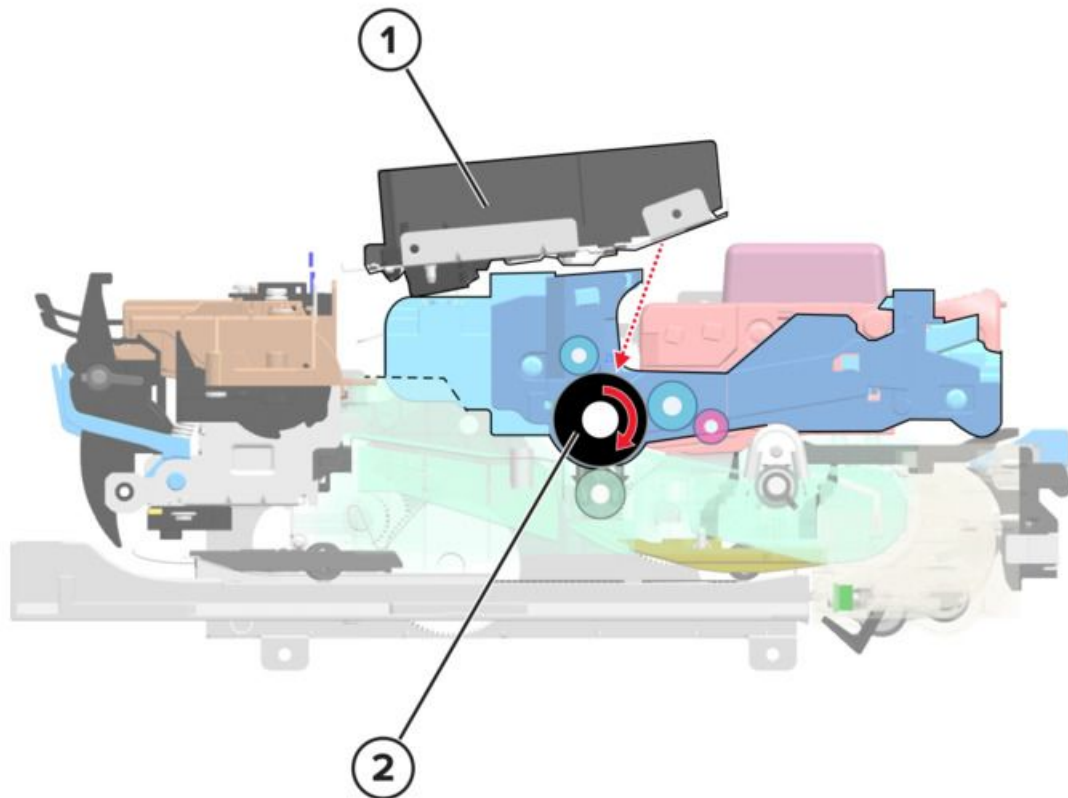

1	Printhead
2	Photoconductor drum

The printhead emits the light that contacts the surface of the photoconductor drum. The light turns on or off coinciding with the digital latent image. The light causes areas of the photoconductor drum surface to lose charge, resulting in a relative opposite polarity.


## Develop

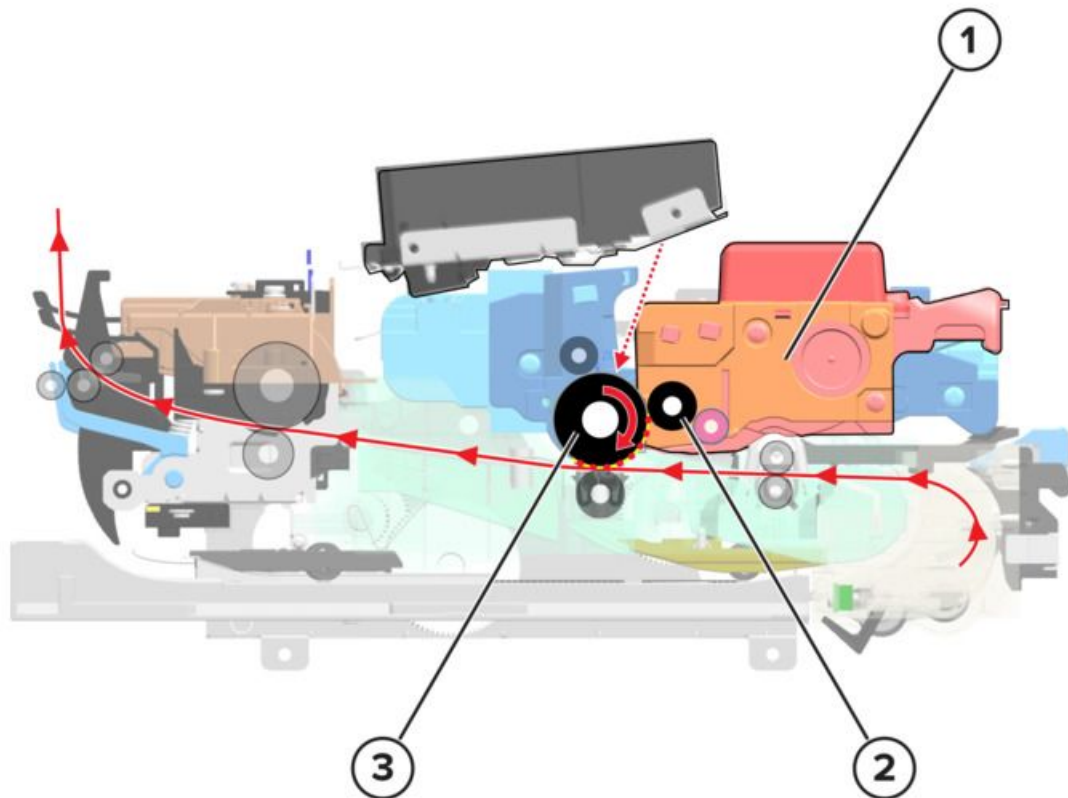

1	Toner cartridge
2	Developer roller
3	Photoconductor drum

The developer unit applies the toner from the toner cartridge to the photoconductor drum. The difference in charge causes the toner particles to attract to the photoconductor drum areas which are exposed to light.

### Transfer

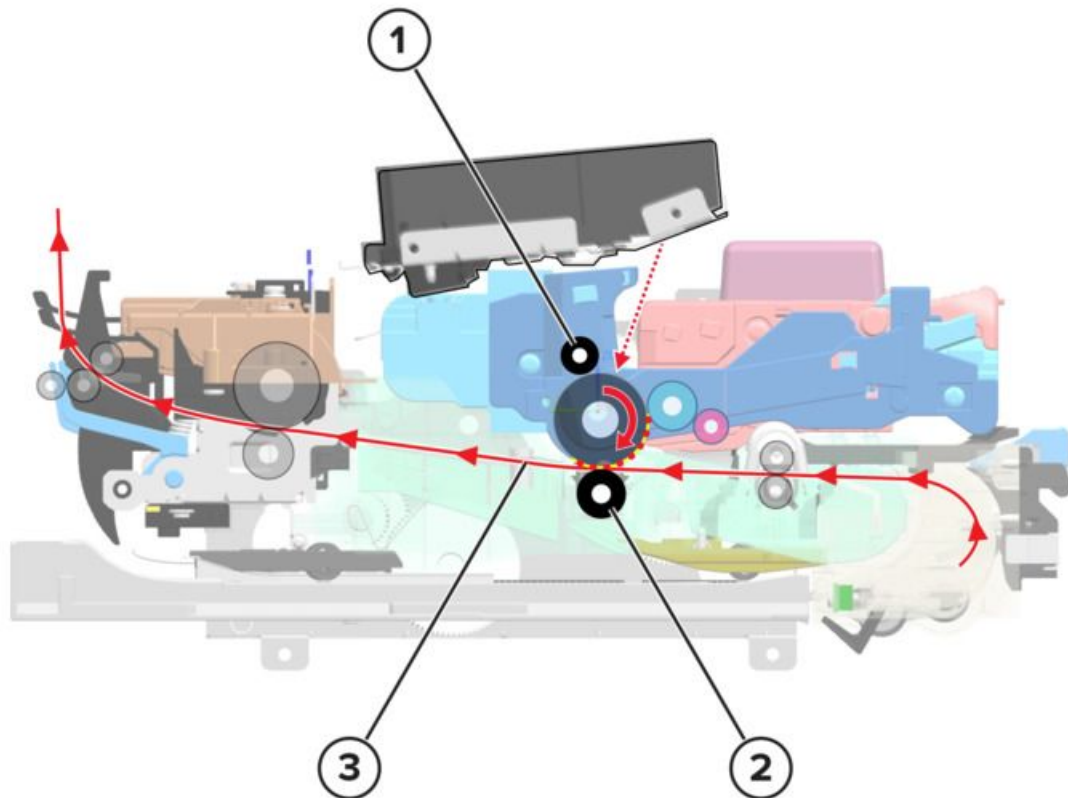


1	Charge roller
2	Transfer roller
3	Paper

The transfer roller applies a positive charge to the paper, which is pressed between the transfer roller and the photoconductor drum. Due to relative opposite polarities between the paper from the transfer roller, and the photoconductor drum from the charge roller, the charge attracts the toner to the paper.

### Clean

The cleaning blade removes the residual toner from the photoconductor after the transfer. After cleaning, the process moves again to the charge process and repeats each cycle until the entire image is transferred to a side of the paper.

## Fuse

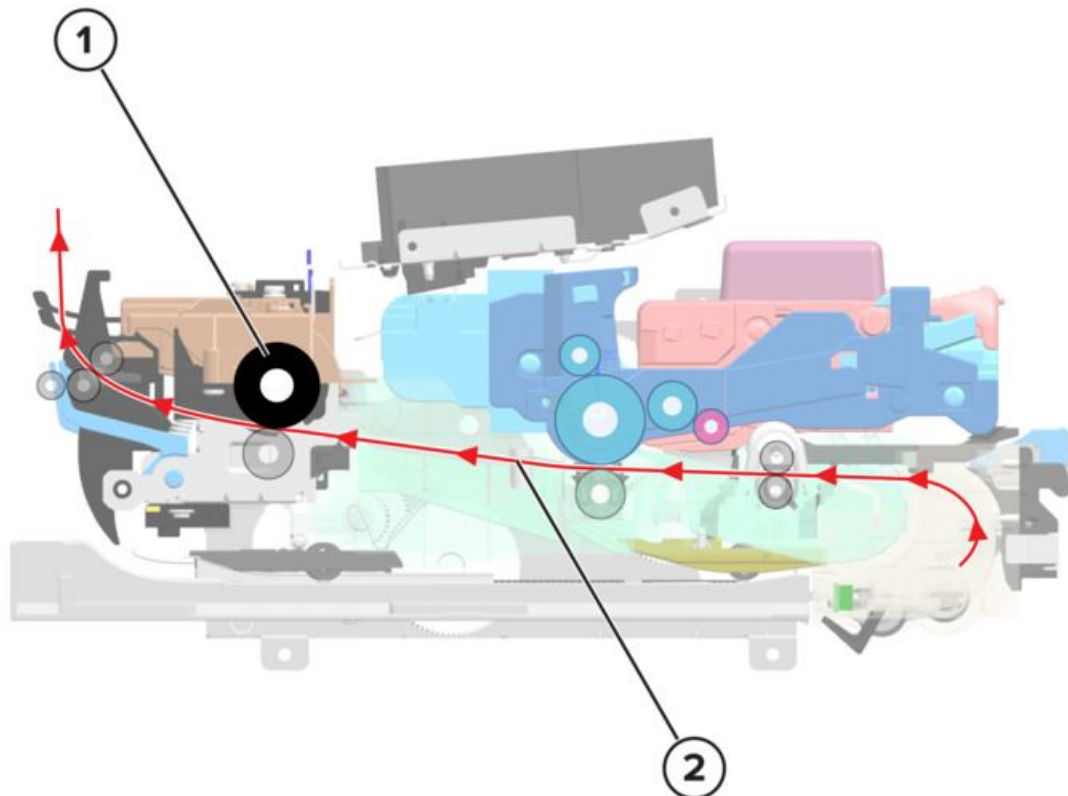


1	Fuser
2	Paper

Even if the toner image is already on the paper, the toner particles are not yet permanently bonded to the surface. For the final part of printing, the paper is transported to the fuser where heat and pressure are applied to it. As a result, the toner particles melt and permanently fuse with the paper, completing the print process. The print cycle repeats for the succeeding pages.

# Printer operation


## Printer sections

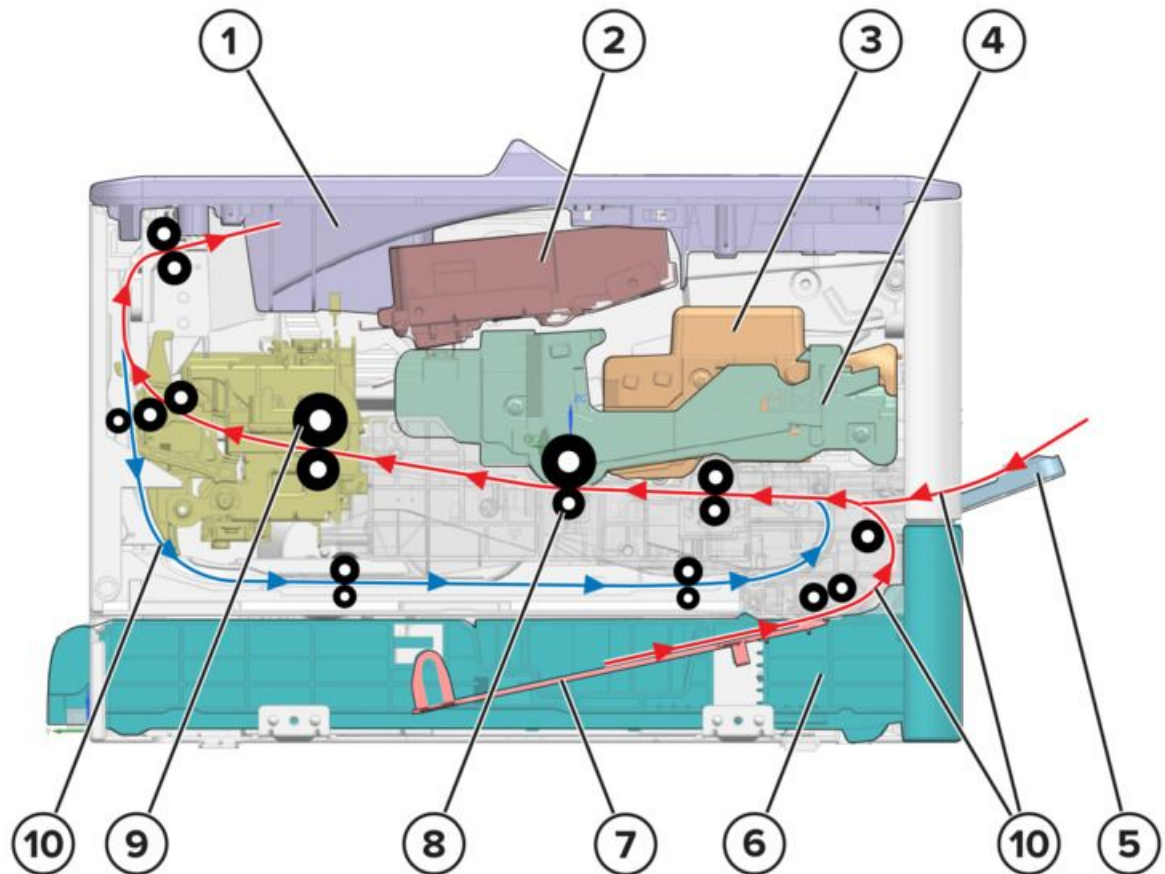

1	Output bin
2	Printhead
3	Toner cartridge
4	Imaging unit
5	Manual feeder
6	Tray
7	Lift plate
8	Transfer roller
9	Fuser
10	Paper paths

## Printer paper path

### Simplex print job

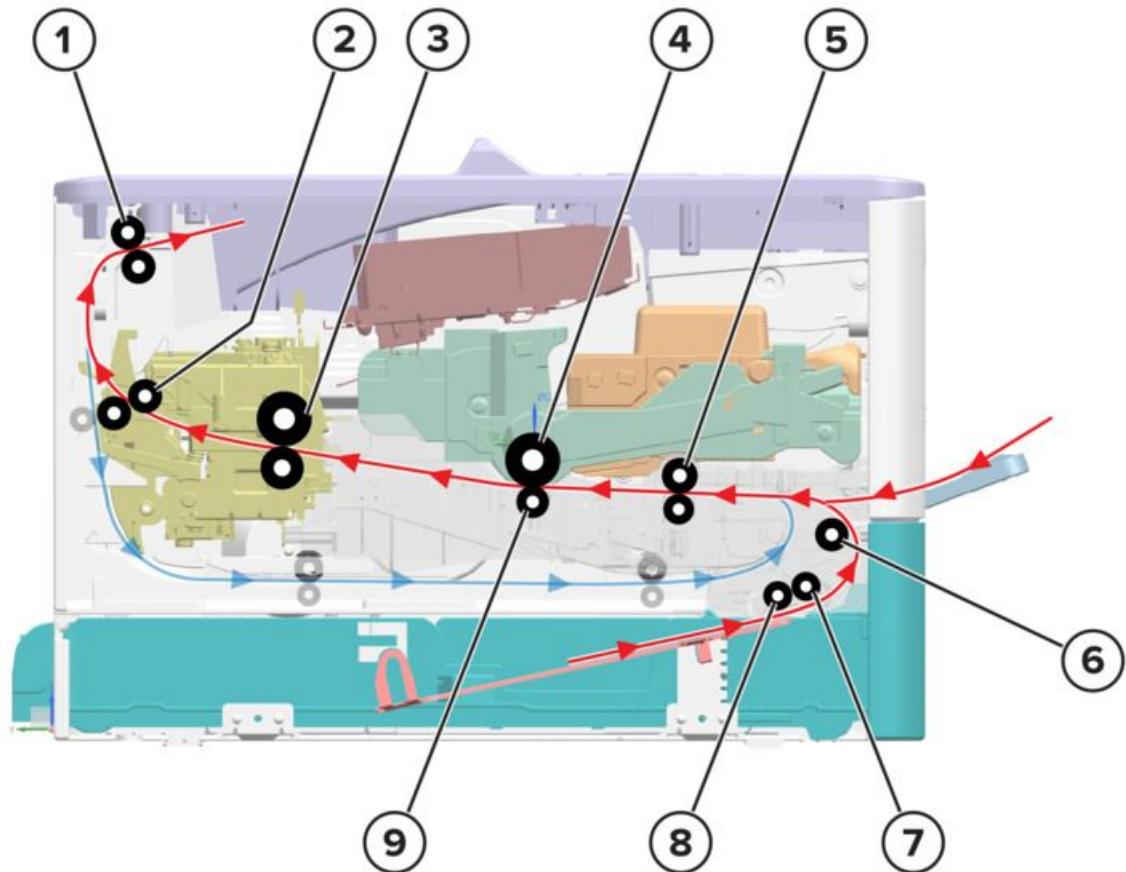

1	Paper exit roller
2	Fuser exit roller
3	Fuser
4	Photoconductor drum
5	Deskew roller
6	Transport roller
7	Feed roller
8	Pick roller
9	Transfer roller

The pick and feed rollers pick the paper, and then feeds it to the transport roller. The transport roller moves the paper to the deskew roller where the paper skew is corrected.


The deskew shutter along the deskew roller corrects the paper skew.

The deskew roller feeds the paper to the transfer roller for image transfer. At the transfer roller, the photoconductor drum transfers the developed image to the paper to create the printed image.

As the paper passes the fuser, heat and pressure are applied to bond permanently the toner to the paper.

After the image transfer process is complete, the paper is transported to the fuser exit roller, to the paper exit roller, and then to the output bin.

### Duplex print job

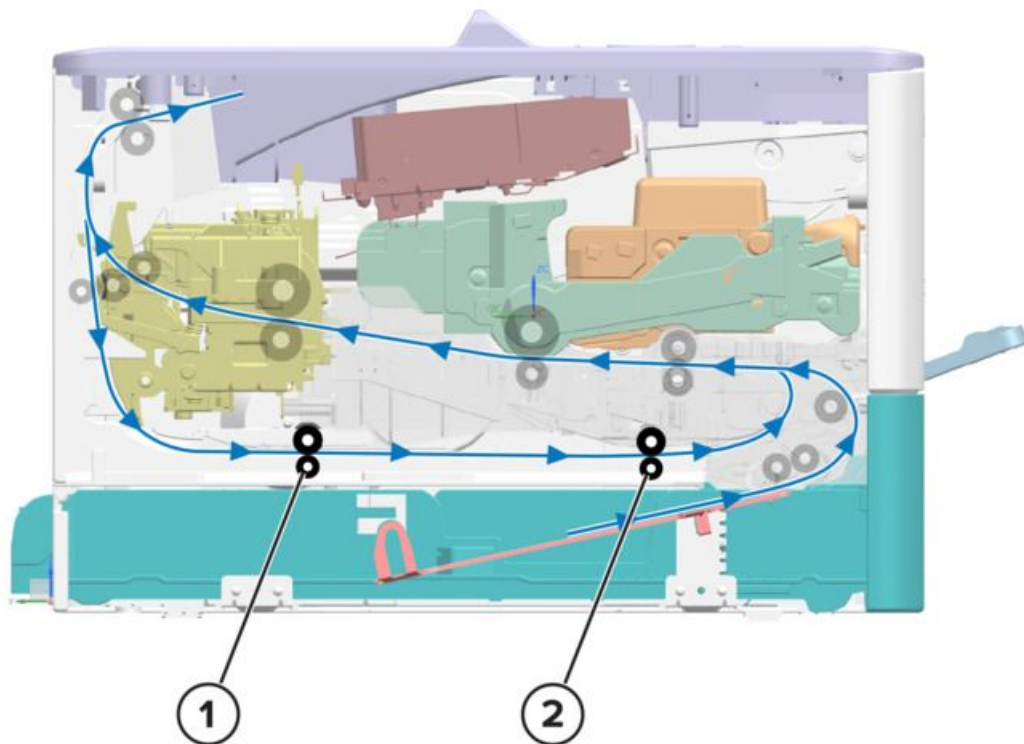


1	Duplex rear roller
2	Duplex front roller

After the first side is printed, the paper stops at the output bin while still in the exit roller. The paper is fed back into the duplex paper path to have the opposite page printed.


The paper travels along the duplex path until it reenters the second input roller. From there, the paper continues its path until the print job is done.

## Printer paper path sensors

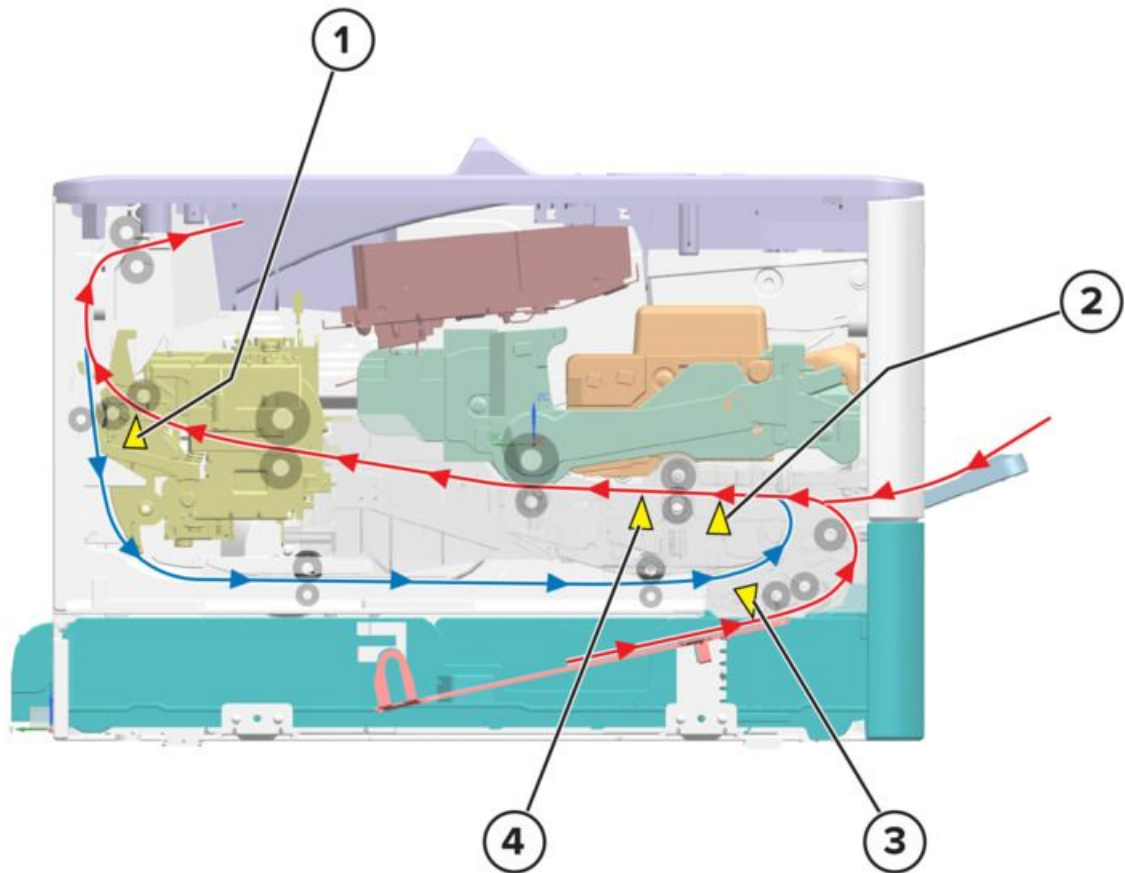

#	Sensor	Function
1	Sensor (fuser exit)	Detects the paper exiting the fuser
2	Sensor (staging)	Detects the paper travelling between the pick rollers and the deskew roller
3	Sensor (paper present)	Detects paper presence in the tray
4	Sensor (input)	Detects the paper travelling between the deskew roller and the transfer roller

## Main drive

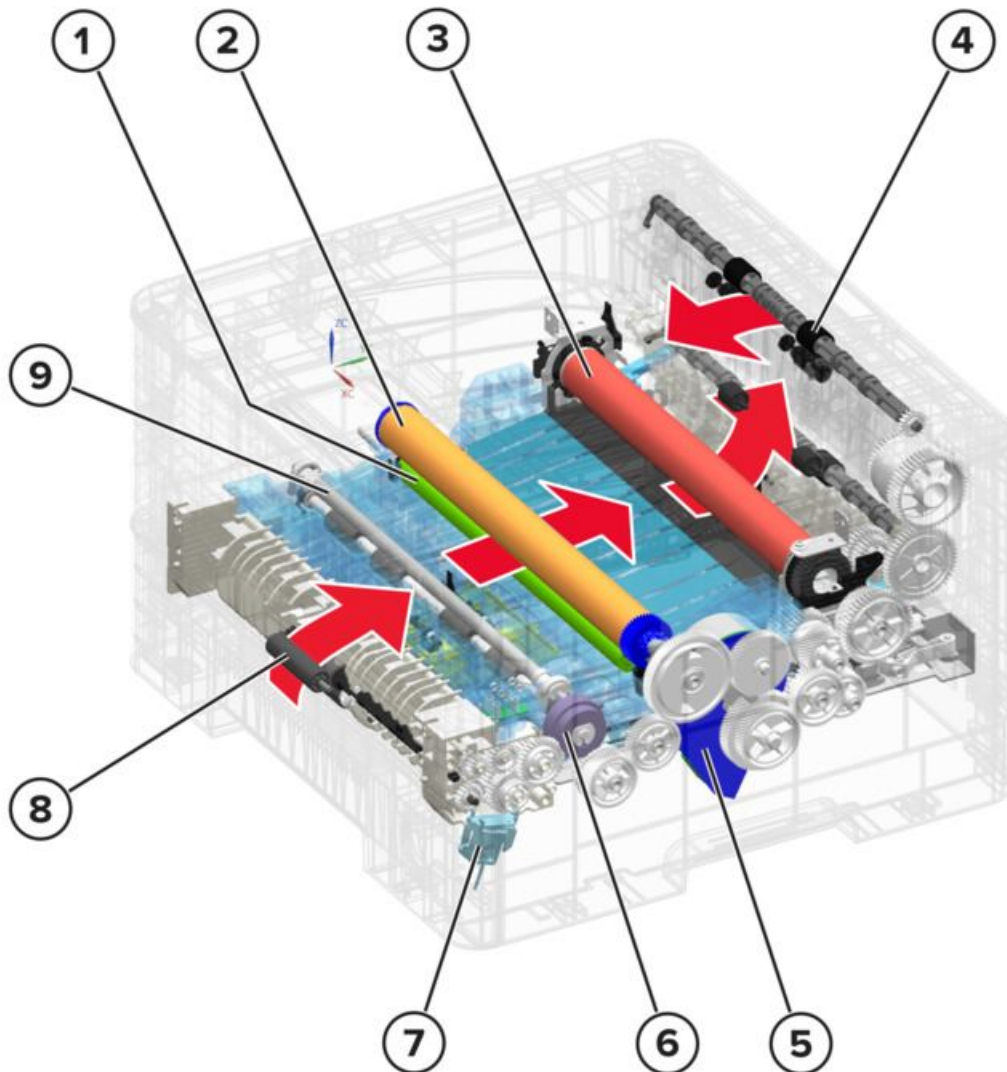


1	Transfer roller
2	Photoconductor
3	Fuser
4	Paper exit
5	Motor (main drive)
6	Deskew solenoid
7	Pick solenoid
8	Transport roller
9	Deskew roller

The motor (main drive) powers the drive mechanism of the printer. The gearbox provides mechanical power to the printer which transfers power through several gears to the following parts:

- Manual feeder
- Paper pick using the pick solenoid
- Paper feed using the deskew solenoid
- Transport roller
- Toner cartridge
- Photoconductor
- Fuser
- Duplex unit
- Redrive

## ADF and scanner operation

### Flatbed scanner drive

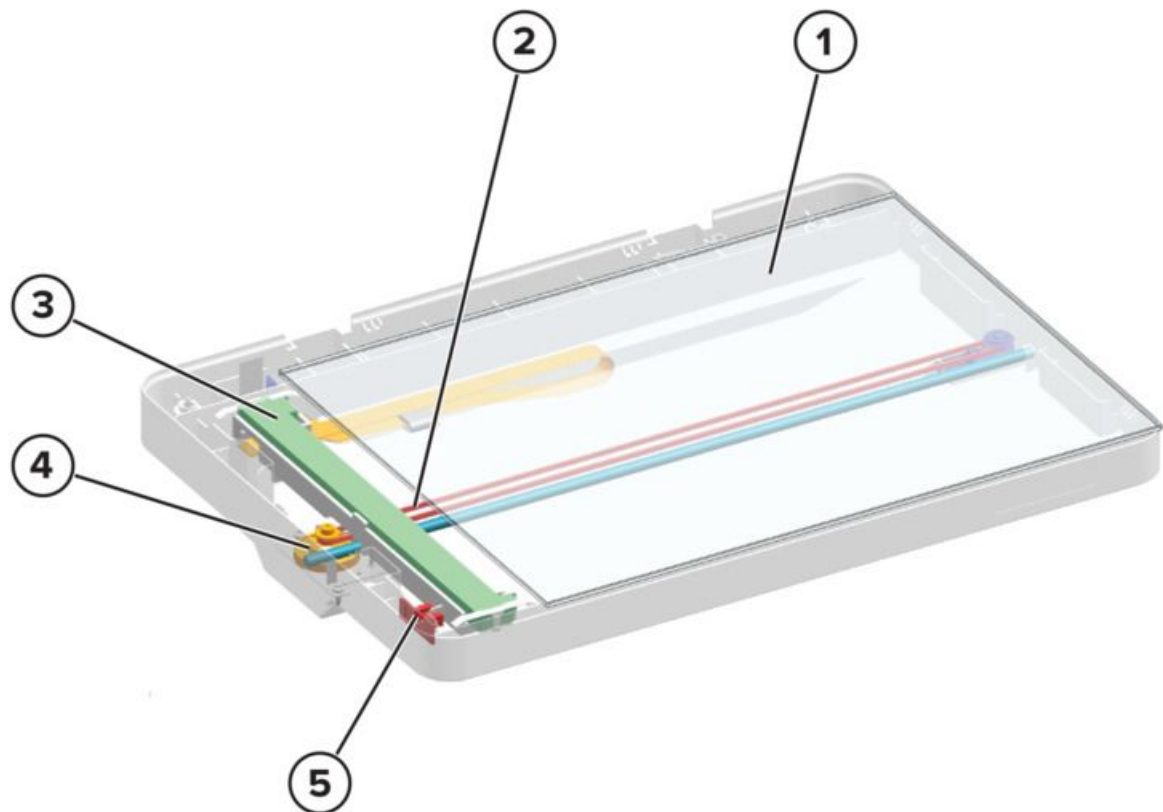


1	Scanner glass
2	Belt
3	Scanner lamp
4	Motor (scanner)
5	Sensor (scanner home)

The flatbed scanner has a scanner lamp that illuminates the surface of the document. The reflections produced are processed to create the scan image.

For flatbed scan jobs, the flatbed scanner moves across the scanner glass area to scan the front side of the document. The motor (scanner) drives the belt and controls the scanner position. The sensor (scanner home) detects the scanner at its home position. For ADF scan jobs, the scanner lamp stays at the left side to scan the document.

### ADF paper path

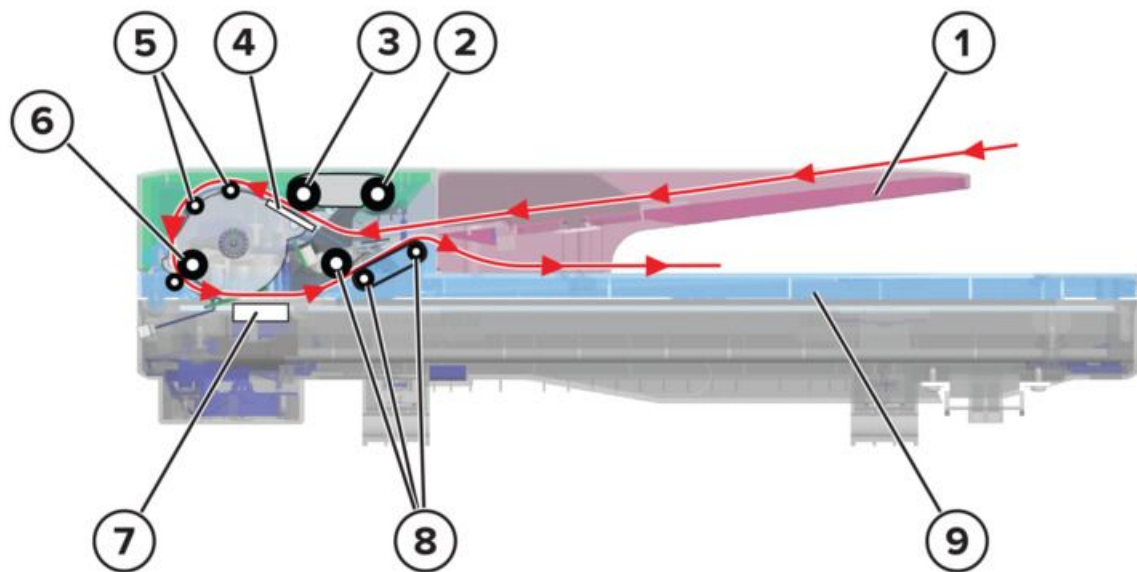

1	ADF tray
2	Pick roller
3	Feed roller
4	Separator pad
5	Transport rollers
6	Scanner roller
7	Scan area
8	Exit rollers
9	ADF bin

After the sensor (ADF paper present) detects paper in the ADF tray, the pick roller moves the paper into the ADF.


The paper passes through the feed roller and separator pad. The separator pad minimizes the possibility of feeding multiple sheets.

The paper passes through the transport rollers, and then actuates the sensor (ADF scan). The scan roller moves the paper to the scan area, and then the document is scanned.

The scan rollers continue to move the paper to the scan area until the trailing edge of the paper reaches the sensor (ADF scan). When the trailing edge of the paper reaches the sensor (ADF scan), the sensor goes to the off position. Scanning continues for a predetermined length of time.

The exit rollers move the paper into the ADF bin.

### ADF paper path sensors

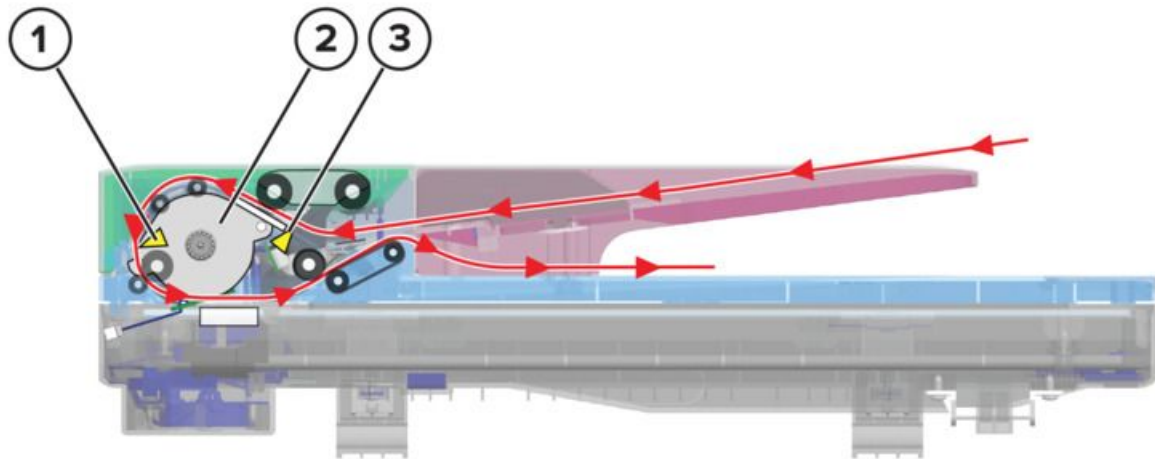

#	Sensor	Function
1	Sensor (ADF paper present)	Detects paper presence in the ADF tray
2	Motor (ADF transport)	Drives the rollers that transport paper through the ADF
3	Sensor (ADF scan)	Detects paper for scanning

# Index

## A

avoiding paper jams [118](#)  
advanced print quality samples [271](#)

### ADF theory

paper path sensors [439](#)  
paper path [438](#)

## C

### configurations

printer models [26](#)

change history [21](#)

### config menu

accessing [280](#)

### controller board

critical information [294](#)

### control panel

critical information [294](#)

cannot send or receive faxes using etherFAX  
[249](#)

### connectors

controller board [398](#)

cleaning the printer [404](#)

clean [430](#)

cleaning the scanner [405](#)

charge [427](#)

## D

data security notice [37](#)

### diagnostics menu

scanner calibration reset [279](#)

feed test [279](#)

accessing [270](#)

develop [429](#)

## E

### error codes

200 paper jam messages [119](#)

202 paper jam messages [127](#)

206 paper jam messages [141](#)

232 paper jam messages [151](#)

electrostatic-sensitive parts [293](#)

ESD-sensitive parts [293](#)

eSF solutions [299](#)

embedded solutions [299](#)

### event log

display log [272](#)

print log summary [272](#)

mark log [273](#)

print log [272](#)

emission notices [424](#)

expose [428](#)

## F

### fax

supported [31](#)

finding the printer serial number [26](#)

### fax troubleshooting

cannot set up etherFAX [251](#)

cannot send or receive faxes using etherFAX  
249

fax error log codes 260

format fax storage 272

fuse 431

## H

horizontal top contact connector 300

horizontal bottom contact connector 302

horizontal sliding contact connector 310

## I

invalid engine mode

accessing 287

invalid code, fixing 287

## J

jams

avoiding 118

## L

low insertion force (LIF) connector 314

## M

menu

Config Menu 280

moving the printer 423

## N

Non-Lexmark supply 156

notices 421, 422, 422, 424, 424

noise emission levels 424

## P

printer model

configurations 26

paper sizes

supported 27

paper types

supported 30

paper weights

supported 30

printer messages

Non-Lexmark supply 156

print quality

initial check 38

paper jams

avoiding 118

printer status 269

printer setup

printed page count (mono) 273

permanent page count 274

model name 274

process ID 274

serial number 274

engine setting [x] 274

EP setup 275

printer diagnostics & adjustments

sensor tests 275

universal override 277

motor tests 276

print quality troubleshooting

fax transmission service check 252

fax reception service check 255

printer diagnostics

input tray quick print 273

- output bin quick feed [273](#)
- printer diagnostics and adjustments
  - HVPS adjust [277](#)
  - registration adjust [276](#)
- performing the HVPS characterization [318](#)
- printer parts
  - cleaning [404](#)
- parts catalog legend [408](#)
- POR sequence [425](#)
- print cycle [426](#)
- print cycle
  - clean [430](#)
  - flowchart [426](#)
  - charge [427](#)
  - develop [429](#)
  - expose [428](#)
  - transfer [430](#)
  - fuse [431](#)
- printer configuration [397](#)
- print engine layout [425](#)
- printer sections [432](#)
- paper path, simplex [433](#)
- paper path, duplex [433](#)
- printer
  - selecting a location [423](#)
  - minimum clearances [423](#)
  - moving [423](#)
- R**
- resetting
  - supply usage counters [156](#)
  - resetting the supply usage counters [156](#)
  - resetting the printer
    - without admin credentials [37](#)
- restoring
  - license file [297](#)
  - configuration file [297](#)
- removal procedures
  - tips [319](#)
- restoring configuration [295](#)
- reports
  - device settings [271](#)
  - installed licenses [271](#)
- removals
  - left cover [319](#)
  - controller board [322](#)
  - HVPS [327](#)
  - right cover [329](#)
  - fan assembly [334](#)
  - control panel [337](#)
  - rear door [345](#)
  - duplex unit [346](#)
  - transfer roller [344](#)
  - bottom rear door [347](#)
  - 2.8-in. control panel [340](#)
  - redrive [347](#)
  - front door [343](#)
  - printhead [363](#)
  - top cover [351](#)
  - sensor (staging and input) [367](#)
  - input sensor flags [369](#)
  - sensor (paper present) [366](#)

- pick rollers [371](#)
- main drive [331](#)
- pick solenoid [333](#)
- LVPS [326](#)
- fuser exit flag [350](#)
- fuser removal [348](#)
- sensor (fuser exit) [365](#)
- ADF scanner (old) and flatbed scanner (old) [376](#)
- ADF scanner (new) and flatbed scanner (new) [386](#)
- scanner stand [373](#)
- ADF pick assembly [374](#)
- recovery mode
  - accessing [288](#)
- S**
- supported paper sizes [27](#)
- supported paper types [30](#)
- supported paper weights [30](#)
- supported fax [31](#)
- supply usage counters
  - resetting [156](#)
- service checks troubleshooting
  - 111 service error messages [190](#)
  - 121 service error messages [191](#)
  - 126 service error messages [197](#)
  - 600 service error messages [201](#)
  - 140 service error messages [199](#)
  - 900 service error messages [211](#)
  - 84y service error messages [221](#)
- serial number, printer
  - finding [26](#)
- service engineer (SE) menu
  - accessing [284](#)
  - network SE [284](#)
  - general SE [284](#)
  - EWS SE menu [286](#)
  - scan SE [286](#)
  - fax SE menu [285](#)
- symptoms
  - printer [235](#)
- scanner diagnostics
  - motor tests [277](#)
  - scanner calibration reset [279](#)
  - feed test [279](#)
  - sensor tests [278](#)
- scanner
  - cleaning [405](#)
- sensors, paper path [435](#)
- scanner theory
  - flatbed [437](#)
- selecting a location for the printer [423](#)
- T**
- tools, required [31](#)
- troubleshooting, service checks
  - 111 service error messages [190](#)
  - 121 service error messages [191](#)
  - 126 service error messages [197](#)
  - 600 service error messages [201](#)
  - 140 service error messages [199](#)
  - 900 service error messages [211](#)

- 84y service error messages [221](#)
- troubleshooting
  - initial check [36](#)
  - fax symptoms [250](#)
- troubleshooting, fax
  - cannot set up etherFAX [251](#)
  - cannot send or receive faxes using etherFAX [249](#)
- troubleshooting, print quality
  - fax transmission service check [252](#)
  - fax reception service check [255](#)
- transfer [430](#)
- theory
  - simplex paper path [433](#)
  - duplex paper path [433](#)
  - paper path sensors [435](#)
  - main drive [436](#)
- theory, ADF paper path sensors [439](#)
- theory, flatbed scanner [437](#)
- theory, ADF paper path [438](#)
- U**
  - user attendance messages
    - 8–12 user attendance messages [157](#)
    - 31–33 user attendance messages [161](#)
    - 34–41 user attendance error messages [168](#)
    - 42 user attendance error messages [172](#)
    - 55 user attendance messages [175](#)
    - 71 user attendance messages [177](#)
    - 84 user attendance messages [180](#)
    - 88 user attendance messages [183](#)
    - non-supply user attendance messages [184](#)
- understanding the status
  - indicator light [269](#)
  - power button light [269](#)
- updating the printer firmware
  - using a flash drive [297](#)
  - using a network computer [297](#)
  - using a USB cable connection [297](#)
- using the control panel
  - Lexmark MB2236adw MFP [267](#)
  - panel with 2-line LCD [267](#)
  - Lexmark MB2236adwe MFP [269](#)
  - Lexmark MB2236i MFP [269](#)
  - panel with touch-screen display [269](#)
- V**
  - vertical mount contact connector [306](#)
- Z**
  - zero insertion force (ZIF) connectors [299](#)

# **Service Manual**