


Registration Replacement

HP CP2025/CM2320MFP/M351/M451/M375MFP/M475MFP/M476MFP

- Follow the service manual for removal of all covers, control panel, toners, toner tray & formatter




On the DC Controller (or interconnect board for CM2320MFP), unplug the cables from connectors: J162, J163, J164, J165, J166, and J155


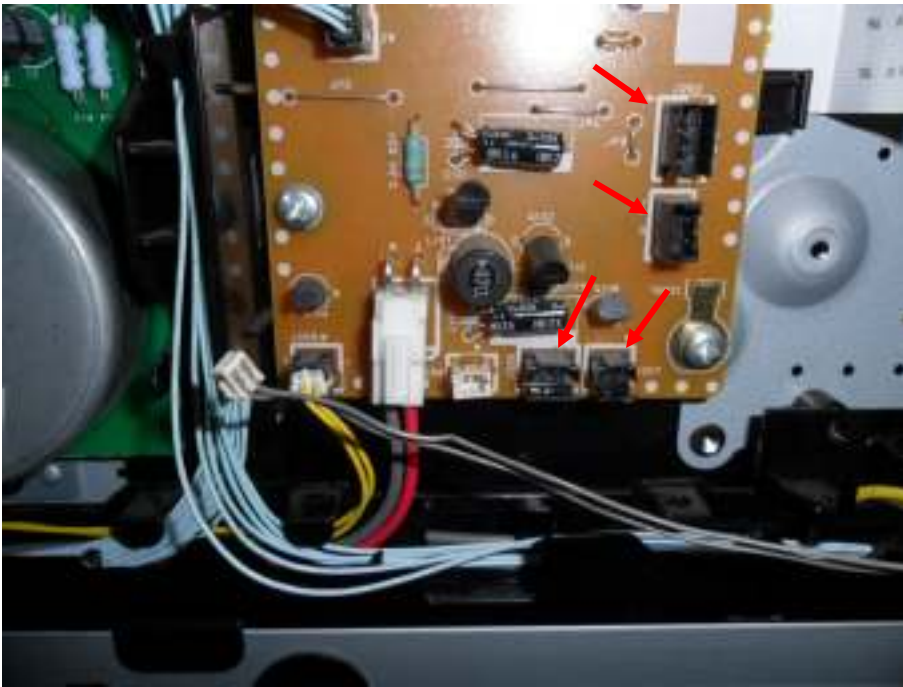


Unplug the cables on the Driver PCA from connectors J202, J203, J206, and J207

Once cables are unplugged, remove from the cabling harness on the Low Volt Power Supply

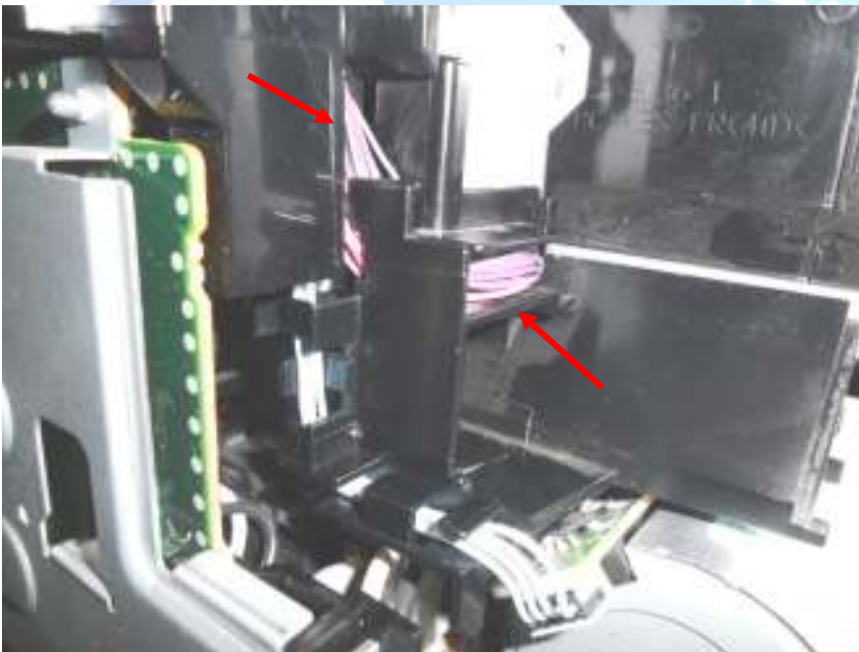


Remove the cables from the cable harness

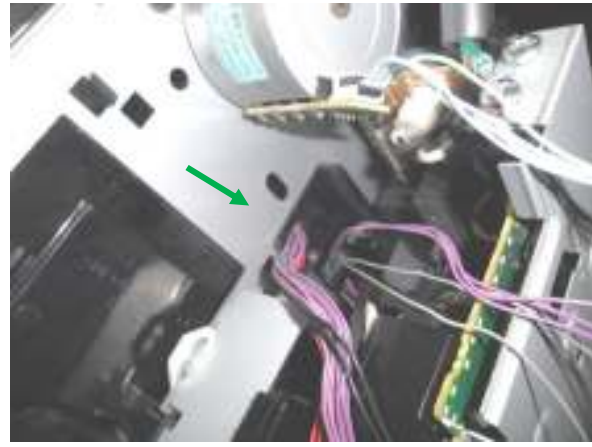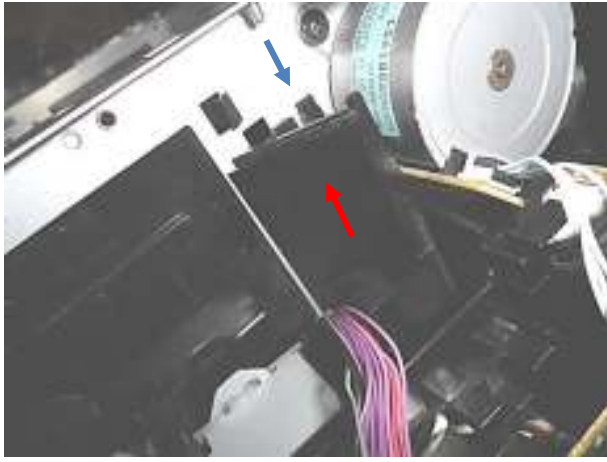

Release the tab {Blue arrow} Slide cable guide out to back of printer

Once Pickup Assembly is removed, route cables through the frame {Green arrow}

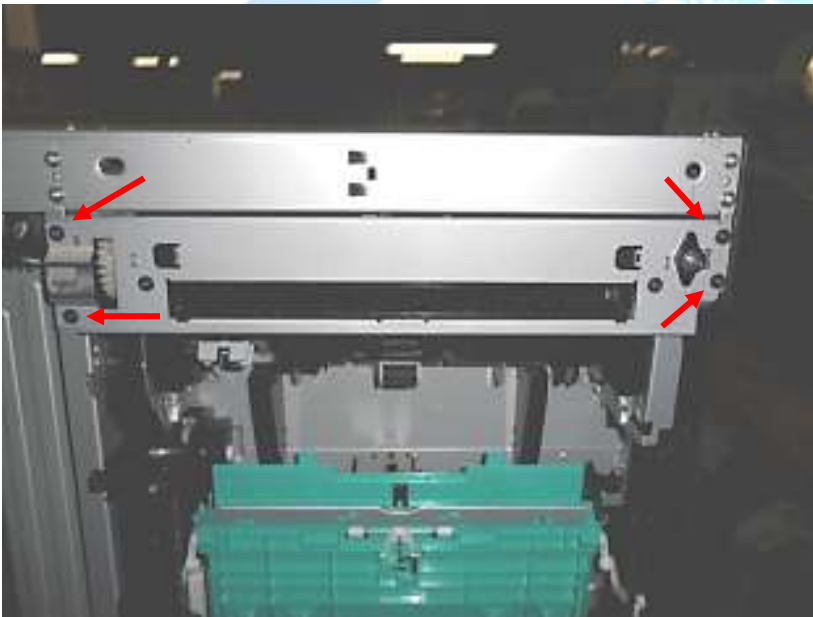



Remove 4 screws



Remove the locking tabs from left side and right side




Unhook the spring from the lift arm and the frame on both sides

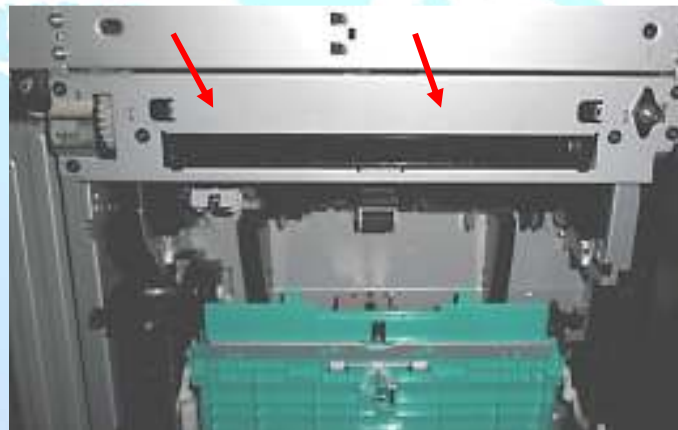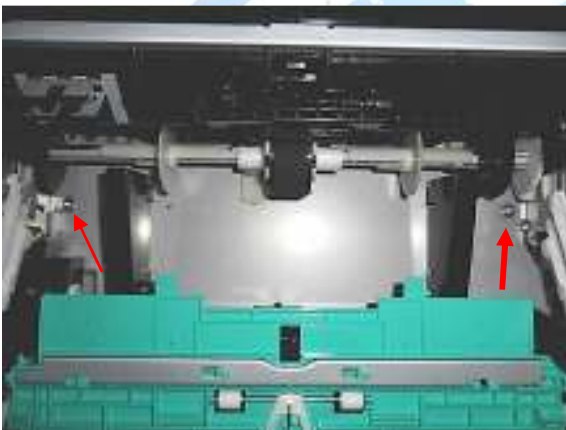

Remove 2 screws, and Pickup Assembly by lifting up on metal plate.

Be sure cables are free on left side

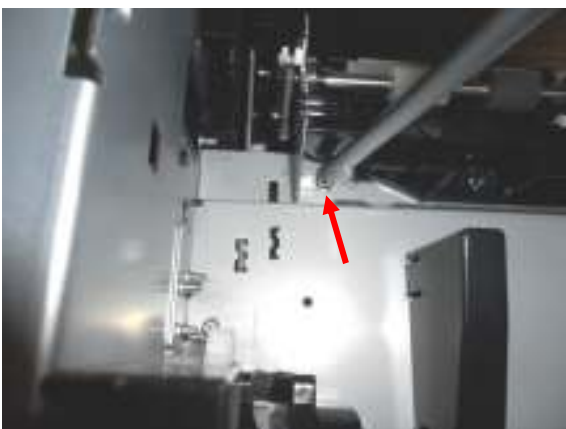

Remove 2 screws on the registration to remove registration