

# **Lexmark MS310 Series**

# Machine Type 4514-220, -230

# **Service Manual**

- Start diagnostics
- Maintenance
- Safety and notices
- Trademarks
- Index

October 17, 2012 www.lexmark.com

#### **Product information**

Product name:

Lexmark MS310 Series

Machine type:

4514

Model(s):

220, 230

#### **Edition notice**

October 17, 2012

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

#### Trademarks

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries

Mac and the Mac logo are trademarks of Apple Inc., registered in the U.S. and other countries.

PCL® is a registered trademark of the Hewlett-Packard Company.

All other trademarks are the property of their respective owners.

© 2012 Lexmark International, Inc.

All rights reserved.

P/N 12G2991

# **Table of contents**

Product information	2
Edition notice	2
Notices and safety information	11
Laser notices	11
Safety	14
Preface	19
Service manual conventions	19
General information	<mark>21</mark>
Media guidelines	
Paper guidelines	
Using recycled paper and other office papers	<mark>23</mark>
Using specialty media	<b>2</b> 4
Supported paper sizes, types, and weights	<mark>2</mark> 6
Data security notice	<b>2</b> 8
Tools required for service	28
Diagnostic information	31
Troubleshooting overview	<mark>31</mark>
Performing the initial troubleshooting check	31
Power-on reset (POR) sequence	31
Using the printer control panel	32
Light sequences and error messages	<b>3</b> 3
Light sequences and error messages	
Light sequences	33
Status screens	33
Status messages	34
User attendance messages	
Paper jams	
Service errors	
Understanding the printer messages	
Toner cartridge messages	
Imaging unit messages	
Paper loading messages.	
Printer communication error messages	

Insufficient memory error messages	47
Miscellaneous messages	48
Fixing print quality issues	<mark>48</mark>
Initial print quality check	48
Print quality checks	49
Paper jams	57
Avoiding jams	
Accessing jam areas	
200 paper jams	<mark>59</mark>
201 paper jams	66
202 paper jams	68
230 paper jams	
240 paper jams	74
250 paper jams	82
User attendance messages (0-99.99)	84
User attendance messages (0-99.99)	
Toner cartridge smart chip contact service check	
Imaging unit smart chip contact service check	
Media size mismatch service check	88
Printer/cartridge mismatch service check	88
Insufficient memory service check	89
Printer hardware errors	90
1xx error messages	
111.xx LSU service check	
Fuser service check	93
LVPS service check	<mark>94</mark>
Toner density sensor service check	<mark>94</mark>
CTLS service check	95
Main drive gearbox service check	95
Cartridge gearbox service check	96
9xx error messages	96
System software error service check	99
NVRAM mismatch failure service check	104
Input option errors	1 <mark>05</mark>
3xx error messages	1 <mark>05</mark>
Option tray pick/lift motor service check	106
Option tray separator/passthrough motor service check	107
Option tray ACM motor service check	108
Option tray controller card service check	108
Symptoms	108
Base printer symptoms	
Cooling fan service check	
Dead machine service check	

	Controller board service check	110
	Control panel service check	111
	USB print service check	112
	Network service check	112
S	ervice menus	117
	Understanding the control panel and menus	117
	Navigating through the Service menus	117
	Diagnostics menu	
	Entering the Diagnostics menu	117
	Print Diagnostics Menu Instruction Sheet	117
	Prt Quality Pgs	118
	Defaults	118
	Edge to Edge	118
	Cont Prt Simplex Tray 1	118
	Cont Prt Duplex Tray 1	118
	Cont Prt Simplex Tray 2	
	Cont Prt Duplex Tray 2	
	Par 1 Strobe Adj	
	Print Event Log	
	Auto Dark Adj	119
	Configuration menu	119
	Entering the Configuration menu	119
	Print Configuration Menu Instruction Sheet	120
	Restore Base	
	Restore STD NET	
	Hex Trace	
	Prt Quality Pgs	
	A5 Loading	
	Reduced Curl	
	PPDS Emulation	
	Demo Mode	
	Auto CR after LF	
	Auto LF after CR	
	Energy Conserve	
	Wipe All Settings	
	Font Share and a second	
	Font Sharpening	
	Parallel Mode 2	
	Parallel Mode 2	
	MAC Binary PS USB Speed	
	USB PnP	
	Set Network Card Speed	123

Entering Invalid engine mode	124
Entering Recovery mode	124
Service engineer menu	124
Accessing the service engineer (SE) menu	124
Service engineer (SE) menu	
Repair information	<mark>127</mark>
Removal precautions	127
Data security notice	127
Handling ESD-sensitive parts	1 <mark>27</mark>
RIP board/operator panel replacement	128
Ribbon cable connectors	1 <mark>29</mark>
Zero Insertion Force (ZIF) connectors	1 <mark>29</mark>
Horizontal top contact connector	130
Horizontal bottom contact connector	1 <mark>33</mark>
Vertical mount contact connector	136
Horizontal sliding contact connector	1 <mark>39</mark>
Low Insertion Force (LIF) connector	142
Printhead assembly mechanical adjustment	143
Removal procedures	144
Left side removals	144
Left cover removal	144
Main drive gearbox removal	145
MPF solenoid removal	147
MPF gearbox removal	1 <mark>49</mark>
Reverse solenoid removal	152
ACM clutch removal	153
Cartridge gearbox removal	158
Duplex gear assembly removal	158
Right side removals	160
Right cover removal	160
Cooling fan duct removal	161
Cooling fan removal	161
Controller board removal	162
Toner cartridge smart chip contact removal	<u>164</u>
Front removals	166
Left front mount removal	166
Right front mount removal	
Transfer roll removal	
Cartridge plunger removal	
Bezel removal	
Nameplate removal	
Control panel assembly removal	174

UICC removal	<b>176</b>
MPF assembly removal	177
MPF pick roller cover removal	180
MPF pick roller removal	
Bail removal	181
Jam access cover removal	
Front door removal	
Front access cover removal	
Front door sensor removal	
Front input guide removal	
Separator pad removal	
Bottom removals	
Power supply removal	
Power supply shield removal	
Duplex removal	
Duplex sensor and input sensor removal	
Toner density sensor removal	
Trailing edge sensor removal	
ACM assembly removal	
Rear side removals	
Dust cover removal	
Rear door and cover removal	
Narrow media/bin full sensor removal	
Redrive assembly removal	
Fuser removal	
Top side removals	
Top cover removal	
Laser scanning unit (LSU) removal	
250/550-sheet tray removals	213
Pick roller removal	213
Separator roll assembly removal	
ACM assembly removal	216
Component locations	219
Exterior locations	<mark>219</mark>
Front view	219
Rear view	220
Maintenance	<mark>22</mark> 1
Inspection guide	<mark>22</mark> 1
Lubrication specification	
Cleaning the printer	222

Parts catalog	<mark>224</mark>
Legend	224
Assembly 1: Covers	<mark>225</mark>
Assembly 2: Electronics 1	227
Assembly 3: Electronics 2	229
Assembly 4: Frame	231
Assembly 5: Option trays	233
Assembly 6: Power cords	235
Appendix A: Printer specifications	237
Product power consumption	237
Electrical specifications	237
Operating clearances	<mark>238</mark>
Acoustics	238
Operating environment	239
Appendix B: Options and features	241
Available internal options	241
Media handling options	<mark>241</mark>
Appendix C: Theory of operation	<mark>243</mark>
POR sequence	243
Printer control	243
Paper path information	243
Input tray	
Multipurpose feeder (MPF)	
Simplex printing	
Duplex printing  Media handling components	
Main drive gearbox	
Autocompensator mechanism (ACM)	
Key components	246
Sensors	246
Other key components	247
Electrophotographic process (EP process)	249
Appendix D: Acronyms	<mark>253</mark>
Acronyms	252

Index	25
Part number index	259
Part name index	263

# **Notices and safety information**

# Laser notices

#### Laser notice

The printer is certified in the U.S. to conform to the requirements of DHHS 21 CFR, Chapter I, Subchapter J for Class I (1) laser products, and elsewhere is certified as a Class I laser product conforming to the requirements of IEC 60825-1.

Class I laser products are not considered to be hazardous. The printer contains internally a Class IIIb (3b) laser that is nominally a 7 milliwatt gallium arsenide laser operating in the wavelength of 655-675 nanometers. The laser system and printer are designed so there is never any human access to laser radiation above a Class I level during normal operation, user maintenance, or prescribed service condition.

#### Laser-Hinweis

Der Drucker wurde in den USA zertifiziert und entspricht den DHHS-Vorschriften 21 CFR, Kapitel I, Unterkapitel J für Laserprodukte der Klasse I (1); andernorts ist er als Laserprodukt der Klasse I zertifiziert, das den IEC 60825-1-Anforderungen entspricht.

Laserprodukte der Klasse I werden nicht als gefährlich eingestuft. Der Drucker enthält im Inneren einen Laser der Klasse IIIb (3b), und zwar einen 7-Milliwatt-Gallium-Arsenid-Laser, der im Wellenlängenbereich von 655 bis 675 Nanometern arbeitet. Das Lasersystem und der Drucker sind so konstruiert, dass unter normalen Betriebsbedingungen, bei der Wartung durch den Benutzer oder bei den vorgeschriebenen Wartungsbedingungen Menschen keiner Laserstrahlung ausgesetzt sind, die die Werte für Klasse I überschreitet.

## Avis relatif à l'utilisation du laser

L'imprimante est certifiée conforme aux exigences de la réglementation des Etats-Unis relative aux produits laser (DHHS 21 CFR, Chapter I, Subchapter J for Class I (1)). Pour les autres pays, elle est certifiée conforme aux exigences des normes IEC 60825-1 relatives aux produits laser de classe I.

Les produits laser de Classe I ne sont pas considérés comme dangereux. L'imprimante contient un laser de classe IIIb (3b), laser arséniure de gallium 7 milliwatts opérant sur une longueur d'onde de l'ordre de 655 à 675 nanomètres. Le système laser ainsi que l'imprimante ont été conçus de manière à ce que personne ne soit exposé à des rayonnements laser dépassant le niveau de classe I dans le cadre d'un fonctionnement normal, de l'entretien par l'utilisateur ou de la maintenance.

# Avvertenze sui prodotti laser

La stampante è certificata negli Stati Uniti come stampante conforme ai requisiti DHHS 21 CFR, Capitolo I, Sottocapitolo J per i prodotti laser di Classe I (1), mentre in altri paesi è certificata come prodotto laser di Classe I conforme ai requisiti IEC 60825-1.

I prodotti laser di Classe I non sono considerati pericolosi. La stampante contiene un laser di Classe IIIb (3b), che è nominalmente un laser ad arseniuro di gallio a 7 milliwatt funzionante a una lunghezza d'onda di 655-675 nanometri. Il sistema laser e la stampante sono stati progettati in modo da impedire l'esposizione a radiazioni laser superiori al livello previsto dalla Classe I durante le normali operazioni di stampa, manutenzione o assistenza.

### Aviso de láser

Esta impresora se ha certificado en EE. UU. de conformidad con los requisitos de DHHS 21 CFR, capítulo I, subcapítulo J, para los productos láser de Clase I (1), y en otros países está certificada como un producto láser de Clase I de acuerdo con los requisitos de IEC 60825-1.

Los productos láser de Clase I no se consideran peligrosos. La impresora contiene un láser interno de Clase IIIb (3b) que nominalmente es un láser de arseniuro de galio de 7 milivatios que funciona en una longitud de onda de 655-675 nanómetros. El sistema láser y la impresora se han diseñado para que ningún individuo acceda nunca a las radiaciones láser por encima del nivel de Clase I durante su uso normal, ni en tareas de mantenimiento o intervenciones de servicio técnico prescritas.

### Aviso sobre laser

A impressora foi certificada nos EUA por estar em conformidade com os requisitos do DHHS 21 CFR, capítulo I, subcapítulo J, para produtos a laser de Classe I (1) e, nos demais países, foi certificada como produto a laser de Classe I em conformidade com os requisitos da IEC 60825-1.

Os produtos a laser de Classe I não são considerados perigosos. A impressora contém, internamente, um laser de Classe IIIb (3b) que é um laser de arsenieto de gálio de 7 miliwatts operando no comprimento de onda de 655-675 nanômetros. O sistema do laser e a impressora foram projetados para que jamais haja acesso humano à radiação do laser acima do nível da Classe I durante a operação normal ou a manutenção pelo usuário ou sob as condições de manutenção prescritas.

#### Laserinformatie

Deze printer is in de Verenigde Staten gecertificeerd als een product dat voldoet aan de vereisten van DHHS 21 CFR, hoofdstuk 1, paragraaf J voor laserproducten van klasse I (1). Elders is de printer gecertificeerd als een laserproduct van klasse I dat voldoet aan de vereisten van IEC 60825-1.

Laserproducten van klasse I worden geacht geen gevaar op te leveren. De printer bevat intern een laser van klasse IIIb (3b), een galliumarsenide laser met een nominaal vermogen van 7 milliwatt en een golflengtebereik van 655-675 nanometer. Het lasersysteem en de printer zijn zodanig ontworpen dat gebruikers nooit blootstaan aan laserstraling die hoger is dan het toegestane niveau voor klasse I-apparaten, tijdens normaal gebruik, onderhoudswerkzaamheden door de gebruiker of voorgeschreven servicewerkzaamheden.

# Lasererklæring

Denne printer er certificeret i USA i henhold til kravene i DHHS 21 CFR, afsnit I, underafsnit J, for Klasse I-laserprodukter (1) og certificeret andetsteds som et Klasse I-laserprodukt i henhold til kravene i IEC 60825-1.

Klasse I-laserprodukter anses ikke for at være farlige. Printeren indeholder internt en klasse IIIb (3b)-laser, der nominelt er en 7 milliwatt galliumarsenid-laser, som fungerer i bølgelængdeområdet 655-675 nanometer. Lasersystemet og printeren er udviklet på en sådan måde, at der ikke er en direkte laserstråling, der overskrider Klasse I-niveauet under normal brug, brugers vedligeholdelse eller de foreskrevne servicebetingelser.

#### Laserilmoitus

Tämä tulostin on sertifioitu Yhdysvalloissa DHHS 21 CFR, Chapter I, Subchapter J -standardin mukaiseksi luokan I (1) - lasertuotteeksi ja muualla IEC 60825-1 -standardin mukaiseksi luokan I lasertuotteeksi.

Luokan I lasertuotteita ei pidetä haitallisina. Tulostimen sisällä on luokan IIIb (3b) laser, joka on nimellisteholtaan 7 mW:n galliumarsenidilaser ja toimii 655–675 nanometrin aallonpituuksilla. Laserjärjestelmä ja tulostin ovat rakenteeltaan sellaisia, että käyttäjä ei joudu alttiiksi luokkaa 1 suuremmalle säteilylle normaalin käytön, ylläpidon tai huollon aikana.

### Lasermeddelande

Skrivaren är certifierad i USA enligt kraven i DHHS 21 CFR, avsnitt I, underavsnitt J för laserprodukter av klass I (1) och i andra länder är den certifierad som en laserprodukt av klass I som uppfyller kraven i IEC 60825-1.

Laserprodukter av klass I anses inte vara skadliga. Skrivaren innehåller en klass IIIb (3b)-laser, vilket är en 7 mW galliumarseniklaser som arbetar inom en våglängd på 655–675 nm. Lasersystemet och skrivaren är utformade så att människor aldrig utsätts för laserstrålning över klass I-nivå under normala förhållanden vid användning, underhåll eller service.

### Lasermerknad

Skriveren er sertifisert i USA for samsvar med kravene i DHHS 21 CFR, kapittel I, underkapittel J for laserprodukter av klasse I (1), og er andre steder sertifisert som et laserprodukt av klasse I som samsvarer med kravene i IEC 60825-1.

Laserprodukter av klasse I anses ikke som helseskadelige. Skriveren inneholder en intern laser av klasse IIIb (3b) som nominelt er en 7 milliwatt galliumarsenid-laser, og som opererer i bølgelengder på 655-675 nanometer. Lasersystemet og skriveren er utformet slik at mennesker ikke utsettes for laserstråling utover nivået i klasse I under normal drift, vedlikehold eller foreskrevet service.

### Avís sobre el làser

Als EUA, la impressora està certificada de conformitat amb els requisits del capítol I, apartat J del CFR 21 del Departament de Salut i Serveis Humans per a productes làser de classe I (1) i a la resta de països està certificada com a producte làser de classe I d'acord amb els requisits de la norma IEC 60825-1.

Els productes làser de classe I no es consideren perillosos. A l'interior de la impressora hi ha un làser de classe IIIb (3b) que nominalment es un arsenur de galió de 7 mil·liwatts que funciona a una longitud d'ona de 655-675 nanòmetres. El sistema làser y la impressora s'han dissenyat amb l'objectiu d'impedir l'accés humà de la radiació làser superior al nivell de classe I durant un funcionament normal, el manteniment per part de l'usuari o les condicions de servei prescrites.

# レーザーに関する通知

本機は、米国においてクラス I (1) レーザー製品に対する DHHS 21 CFR、Chapter I、Subchapter J の要件に準拠し、その他の国では IEC 60825-1 の要件に準拠するクラス I レーザー製品として認可されています。

クラス I レーザー製品は、危険性がないとみなされています。 本機には、クラス IIIb(3b) レーザーが内蔵されています。これは、655~675 ナノメートルの波長で動作する定格 7 ミリワットのガリウムヒ素レーザーです。 レーザーシステムとプリンタは、通常の操作、ユーザーによるメンテナンス、または所定のサービス条件の下で、ユーザーがクラス I レベルを超えるレーザー放射に絶対にさらされないように設計されています。

# 레이저 관련 공지

이 프린터는 미국에서 DHHS 21 CFR, Chapter I, Subchapter J 의 요구 사항을 준수하는 클래스 I(1) 레이저 제품으로 승인되었으며 이외 지역에서 IEC 60825-1 의 요구 사항을 준수하는 클래스 I 레이저 제품으로 승인되었습니다.

Class I 레이저 제품은 위험한 제품으로 간주되지 않습니다. 프린터에는 655-675 나노미터의 파장 영역에서 작동하는 공칭 7 밀리와트 갈륨 비소 레이저인 클래스 IIIb(3b) 레이저가 내부에 포함되어 있습니다. 레이저 시스템과 프린터는 정상적인 작동, 사용자 유지 관리 또는 사전 설명된 서비스 조건에는 사람에게 클래스 I 수준 이상의 레이저 방사가 노출되지 않도록 설계되었습니다.

# 激光注意事项

本打印机在美国**认证**合乎 DHHS 21 CFR Chapter I, Subchapter J 对分类 I(1)激光产品的标准,而在其他地区则被**认证**是合乎 IEC 60825-1 的分类 I 激光产品。

一般**认为**分类 I 激光产品不具有危险性。本打印机内部含有分类 IIIb(3b)的激光,在操作**过**程中会产生**额**定 7 毫瓦的砷化**镓**激光,其波长范围在 655-675nm 之间。本激光系统及打印机的设计,在一般操作、使用者**维护**或规定内的维修情况下,不会使人体接触分类 I 以上等级的辐射。

# 雷射聲明

本印表機係經過美國核可,符合 DHHS 21 CFR,Chapter I,Subchapter J 規定的 I (1) 級雷射**產**品激光注意事**项**;在美國以外的地區,為符合 IEC 60825-1 規定的 I 級雷射**產**品。

根據 I 級雷射產品的規定,這類產品不會對人體造成傷害。本機所採用之 IIIb (3b) 級雷射只會產生 7 百萬分之一瓦特 (milliwatt)、波長 655 至 675 億分之一米 (nanometer) 的鎵砷放射線 (gallium arsenide laser)。使用者只要以正確的方法操作及維護保養,並依照先前所述之維修方式進行修護,此印表機與其雷射系統絕不會產生 I 級以上的放射線,而對人體造成傷害。

# Safety

# **Safety information**

- The safety of this product is based on testing and approvals of the original design and specific components. The manufacturer is not responsible for safety in the event of use of unauthorized replacement parts.
- The maintenance information for this product has been prepared for use by a professional service person and is not intended to be used by others.
- There may be an increased risk of electric shock and personal injury during disassembly and servicing of this product. Professional service personnel should understand this and take necessary precautions.



#### **CAUTION—POTENTIAL INJURY**

The lithium battery in this product is not intended to be replaced. There is a danger of explosion if a lithium battery is incorrectly replaced. Do not recharge, disassemble, or incinerate a lithium battery. Discard used lithium batteries according to the manufacturer's instructions and local regulations.

# Consignes de sécurité

- La sécurité de ce produit repose sur des tests et des agréations portant sur sa conception d'origine et sur des composants particuliers. Le fabricant n'assume aucune responsabilité concernant la sécurité en cas d'utilisation de pièces de rechange non agréées.
- Les consignes d'entretien et de réparation de ce produit s'adressent uniquement à un personnel de maintenance qualifié.
- Le démontage et l'entretien de ce produit pouvant présenter certains risques électriques, le personnel d'entretien qualifié devra prendre toutes les précautions nécessaires.

#### **AVERTISSEMENT—RISQUE DE BLESSURE**



La batterie lithium de ce produit n'est pas destinée à être remplacée. Il existe un risque d'explosion si une batterie lithium est placée de façon incorrecte. Ne rechargez pas, ne démontez pas et n'incinérez pas une batterie lithium. Mettez les batteries lithium usagées au rebut selon les instructions du fabricant et les réglementations locales.

#### Norme di sicurezza

- La sicurezza del prodotto si basa sui test e sull'approvazione del progetto originale e dei componenti specifici. Il produttore non è responsabile per la sicurezza in caso di sostituzione non autorizzata delle parti.
- Le informazioni riguardanti la manutenzione di questo prodotto sono indirizzate soltanto al personale di assistenza autorizzato.
- Durante lo smontaggio e la manutenzione di questo prodotto, il rischio di subire scosse elettriche e danni alla persona è più elevato. Il personale di assistenza autorizzato deve, quindi, adottare le precauzioni necessarie.



#### ATTENZIONE — PERICOLO DI LESIONI

La batteria al litio presente del prodotto non deve essere sostituita. In caso di sostituzione errata della batteria al litio, potrebbe verificarsi un'esplosione. Non ricaricare, smontare o bruciare batterie al litio. Smaltire le batterie al litio usate seguendo le istruzioni del produttore e le norme locali.

### Sicherheitshinweise

- Die Sicherheit dieses Produkts basiert auf Tests und Zulassungen des ursprünglichen Modells und bestimmter Bauteile. Bei Verwendung nicht genehmigter Ersatzteile wird vom Hersteller keine Verantwortung oder Haftung für die Sicherheit übernommen.
- Die Wartungsinformationen für dieses Produkt sind ausschließlich für die Verwendung durch einen Wartungsfachmann bestimmt.
- Während des Auseinandernehmens und der Wartung des Geräts besteht ein zusätzliches Risiko eines elektrischen Schlags und körperlicher Verletzung. Das zuständige Fachpersonal sollte entsprechende Vorsichtsmaßnahmen treffen.



#### VORSICHT - VERLETZUNGSGEFAHR

Die Lithiumbatterie in diesem Produkt darf nicht ausgetauscht werden. Wird eine Lithiumbatterie nicht ordnungsgemäß ausgetauscht, besteht Explosionsgefahr. Lithiumbatterien dürfen auf keinen Fall wieder aufgeladen, auseinander genommen oder verbrannt werden. Befolgen Sie zum Entsorgen verbrauchter Lithiumbatterien die Anweisungen des Herstellers und die örtlichen Bestimmungen.

# Pautas de Seguridad

- La seguridad de este producto se basa en pruebas y aprobaciones del diseño original y componentes específicos. El fabricante no es responsable de la seguridad en caso de uso de piezas de repuesto no autorizadas.
- La información sobre el mantenimiento de este producto está dirigida exclusivamente al personal cualificado de mantenimiento.
- Existe mayor riesgo de descarga eléctrica y de daños personales durante el desmontaje y la reparación de la máquina. El personal cualificado debe ser consciente de este peligro y tomar las precauciones necesarias.



#### PRECAUCIÓN: POSIBLES DAÑOS PERSONALES

La batería de litio de este producto no debe reemplazarse. Existe riesgo de explosión si se sustituye incorrectamente una batería de litio. No recargue, desmonte ni incinere una batería de litio. Deseche las baterías de litio según las instrucciones del fabricante y las normativas locales.

# Informações de Segurança

- A segurança deste produto baseia-se em testes e aprovações do modelo original e de componentes específicos. O fabricante não é responsável pela segunrança, no caso de uso de peças de substituição não autorizadas.
- As informações de segurança relativas a este produto destinam-se a profissionais destes serviços e não devem ser utilizadas por outras pessoas.
- Risco de choques eléctricos e ferimentos graves durante a desmontagem e manutenção deste produto. Os profissionais destes serviços devem estar avisados deste facto e tomar os cuidados necessários.



#### ATENÇÃO — RISCO DE FERIMENTO

A bateria de lítio neste produto não deve ser substituída. Existe o risco de explosão se uma bateria de lítio for substituída incorretamente. Não recarregue, desmonte ou incinere uma bateria de lítio. Descarte as baterias de lítio usadas de acordo com as instruções do fabricante e regulamentos locais.

# Informació de Seguretat

- La seguretat d'aquest producte es basa en l'avaluació i aprovació del disseny original i els components específics. El fabricant no es fa responsable de les güestions de seguretat si s'utilitzen peces de recanvi no autoritzades.
- La informació pel manteniment d'aquest producte està orientada exclusivament a professionals i no està destinada a ningú que no ho sigui.
- El risc de xoc elèctric i de danys personals pot augmentar durant el procés de desmuntatge i de servei d'aquest producte. El personal professional ha d'estar-ne assabentat i prendre les mesures convenients.



#### **ATENCIÓ**

La bateria de liti d'aquest producte no ha estat dissenyada perquè es substitueixi. Hi ha perill d'explosió si no es substitueix correctament la bateria de liti. No recarregueu, desmunteu o incinereu una bateria de liti. Desfeu-vos de les bateries de liti usades d'acord amb les instruccions del fabricant i les regulacions locals.

# 안전 사항

- 본 제품은 원래 설계및특정 구성에 대한 테스트 결과로 안정 성이 입증된 것입니다. 따라서 무허가 교체부품을 사용하는 경 우 에는 제조업체에서 안전에 대한 책임을 지지 않습니다.
- 본 제품에 관한 유지 보수 설명 서는 전문 서비스 기술자 용으로 작성된 것이므로, 비 전문가는 사용할 수 없습니다.
- 본 제품을 해체하거나 정비할 경우, 전 기전 인 충 경을 받거나 상 처를 입을 위험이 커집니다. 전문 서비스 기술자는 이 사실을 숙지하고, 필요한 예방조치를 취하도록 하십시오.



#### 주의 - 부상 위험

이 제품에 들어 있는 리튬 배터리는 교체할 수 없습니다. 리튬 배터리를 잘못 교체하면 폭발할 위험이 있습니다. 리튬 배터리를 재충전하거나, 분해하거나, 태우지 마십시오. 제조업체의 지침과 지역규정에 따라 다 쓴 리튬 배터리를 폐기하십시오.

# 安全信息

- 本**产**品的安全性以原来**设计**和特定**产**品的**测试结**果和**认证为基础**。万一使用来**经许**可的替**换**部件,制造商不**对**安全性**负责**。
- 本产品的维护信息仅供专业服务人员使用,并不打算证其他人使用。
- 本产品在拆卸、维修时,遭受电击或人员受伤的危险性会增高,专业服务人员对这点必须有所了触,并采取必要的预防措施。

# 当心一可能的**伤**害:

本产品中的**锂电**池不可更**换**。如果不正确更**换锂电**池,可能会有爆炸危**险**。不要再 充**电**、拆解或 焚**烧锂电**池。**丢**弃旧的**锂电**池**时应**按照制造商的指导及当地法**规进**行**处**理。

# **Preface**

This manual contains maintenance procedures for service personnel.

It is divided into the following chapters:

- General information contains a general description of the printer. Special tools and test equipment are discussed.
- Diagnostic information contains diagnostic aids you can use to isolate failing FRUs. These diagnostic aids include error code tables, symptom tables, and service checks.
- Service menus contains descriptions of the printer interface, the user and service menus.
- Repair information provides instructions for making printer adjustments and removing and installing FRUs.
- Component locations uses illustrations to identify the basic printer parts.
- Maintenance contains the lubrication specifications and recommendations to prevent problems.
- Parts catalog contains illustrations and part numbers for individual FRUs.
- Appendix A contains detailed specifications about the product.
- Appendix B contains the available options and other features of the product.
- Appendix C contains the theory of operation.
- Appendix D contains the list of acronyms in the manual and their meanings.

# Service manual conventions

**Note:** A *note* provides additional information.

Warning—Potential Damage: A warning identifies something that might damage the product hardware or software.

This service manual uses several different types of caution statements:



**CAUTION—POTENTIAL INJURY:** A *caution* identifies something that might cause the service technician harm.



CAUTION—SHOCK HAZARD: This type of caution indicates a danger from hazardous voltage in the area of the product where you are working. Unplug the product before you start working, or use caution if the product must receive power to perform the task.



**CAUTION—HOT SURFACE:** This type of caution indicates a hot surface.

# **General information**

The Lexmark<sup>TM</sup> MS310d and MS310dn are single-function monochrome laser printers designed for small and mid-sized workgroups. All information in this service manual pertains to all models unless explicitly noted.

The printers are available in the following models:

Model	Configurations	Machine type / model
MS310d	Duplex printer	4514-220
MS310dn	Duplex printer, network capable	4514-230

The diagnostic information in this manual leads you to the correct field replaceable unit (FRU) or part. Use the error code charts, symptom index, and service checks to determine the symptom and then repair the failure. After you complete the repair, perform tests as needed to verify the repair.

To begin diagnosing a problem, go to "Diagnostic information" on page 31. See "Repair information" on page 127 for information about removing and reinstalling parts. See "Parts catalog" on page 224 to help identify parts.

# Media guidelines

# Paper guidelines

Selecting the correct paper or specialty media reduces printing problems. For the best print quality, try a sample of the paper or specialty media before buying large quantities.

## **Paper characteristics**

The following paper characteristics affect print quality and reliability. Consider these characteristics when evaluating new paper stock.

#### Weight

The standard printer trays can automatically feed paper weights up to  $90\text{-g/m}^2$  (24-lb) bond grain long paper. The optional trays can automatically feed paper weights up to  $120\text{-g/m}^2$  (32-lb) bond grain long paper. The multipurpose feeder can automatically feed paper weights up to  $163\text{-g/m}^2$  (43-lb) bond grain long paper. Paper lighter than  $60\text{ g/m}^2$  (16 lb) might not be stiff enough to feed properly, causing jams. For best performance, use  $75\text{-g/m}^2$  (20-lb) bond grain long paper. For paper smaller than  $182 \times 257 \text{ mm}$  (7.2 x 10.1 inches), it is recommended to use  $90 \text{ g/m}^2$  (24 lb) or heavier paper.

Note: Two-sided printing is supported only for 60–90-g/m<sup>2</sup> (16–24-lb) bond paper.

#### Curl

Curl is the tendency for paper to curl at its edges. Excessive curl can cause paper feeding problems. Curl can occur after the paper passes through the printer, where it is exposed to high temperatures. Storing paper unwrapped in hot, humid, cold, or dry conditions, even in the trays, can contribute to paper curling prior to printing and can cause feeding problems.

#### **Smoothness**

Paper smoothness directly affects print quality. If paper is too rough, toner cannot fuse to it properly. If paper is too smooth, it can cause paper feeding or print quality issues. Always use paper between 100 and 300 Sheffield points; smoothness between 150–250 Sheffield points produces the best print quality.

#### Moisture content

The amount of moisture in paper affects both print quality and the ability of the printer to feed the paper correctly. Leave paper in its original wrapper until it is time to use it. This limits the exposure of paper to moisture changes that can degrade its performance.

Condition paper before printing by storing it in its original wrapper in the same environment as the printer for 24–48 hours before printing. Extend the time to several days if the storage or transportation environment is very different from the printer environment. Thick paper may also require a longer conditioning period.

#### **Grain direction**

Grain refers to the alignment of the paper fibers in a sheet of paper. Grain is either *grain long*, running the length of the paper, or *grain short*, running the width of the paper.

For 60–90-g/m<sup>2</sup> (16–24-lb) bond paper, grain long paper is recommended.

#### Fiber content

Most high-quality xerographic paper is made from 100% chemically treated pulped wood. This content provides the paper with a high degree of stability resulting in fewer paper feeding problems and better print quality. Paper containing fibers such as cotton can negatively affect paper handling.

### Unacceptable paper

The following paper types are not recommended for use with the printer:

- Chemically treated papers used to make copies without carbon paper, also known as carbonless papers, carbonless copy paper (CCP), or no carbon required (NCR) paper
- Preprinted papers with chemicals that may contaminate the printer
- Preprinted papers that can be affected by the temperature in the printer fuser
- Preprinted papers that require a registration (the precise print location on the page) greater or lesser than +/-2.5 mm (+/-0.10 inch), such as optical character recognition (OCR) forms

In some cases, registration can be adjusted with a software application to successfully print on these forms:

- Coated papers (erasable bond), synthetic papers, thermal papers
- Rough-edged, rough or heavily textured surface papers, or curled papers
- Recycled papers that fail EN12281:2002 (European)
- Paper weighing less than 60 g/m² (16 lb)
- Multiple-part forms or documents

### **Selecting paper**

Using the appropriate paper prevents jams and helps ensure trouble-free printing.

To help avoid paper jams and poor print quality:

- Always use new, undamaged paper.
- Before loading paper, know the recommended printable side of the paper. This information is usually indicated on the paper package.
- Do not use paper that has been cut or trimmed by hand.
- Do not mix paper sizes, types, or weights in the same tray; mixing results in jams.
- Do not use coated papers unless they are specifically designed for electrophotographic printing.

## Selecting preprinted forms and letterhead

Use these guidelines when selecting preprinted forms and letterhead:

- Use grain long for 60 to 90 g/m<sup>2</sup> (16 to 24 lb) weight paper.
- Use only forms and letterhead printed using an offset lithographic or engraved printing process.
- Avoid papers with rough or heavily textured surfaces.

Use papers printed with heat-resistant inks designed for use in xerographic copiers. The ink must be able to withstand temperatures up to 230°C (446°F) without melting or releasing hazardous emissions. Use inks that are not affected by the resin in toner. Inks that are oxidation-set or oil-based generally meet these requirements; latex inks might not. When in doubt, contact the paper supplier.

Preprinted papers such as letterhead must be able to withstand temperatures up to 230°C (446°F) without melting or releasing hazardous emissions.

## **Storing paper**

Use these paper storage guidelines to help avoid jams and uneven print quality:

- For best results, store paper where the temperature is 21°C (70°F) and the relative humidity is 40 percent. Most label manufacturers recommend printing in a temperature range of 18–24°C (65–75°F) with relative humidity between 40 and 60 percent.
- Store paper in cartons, on a pallet or shelf, rather than on the floor.
- Store individual packages on a flat surface.
- Do not store anything on top of individual paper packages.
- Take paper out of the carton or wrapper only when you are ready to load it in the printer. The carton and wrapper help keep the paper clean, dry, and flat.

# Using recycled paper and other office papers

As an environmentally conscious company, Lexmark supports the use of recycled office paper produced specifically for use in laser (electrophotographic) printers. In 1998, Lexmark presented to the US government a study demonstrating that recycled paper produced by major mills in the US fed as well as non-recycled paper. However, no blanket statement can be made that *all* recycled paper will feed well.

Lexmark consistently tests its printers with recycled paper (20–100% post-consumer waste) and a variety of test paper from around the world, using chamber tests for different temperature and humidity conditions. Lexmark has found no reason to discourage the use of today's recycled office papers, but generally the following property guidelines apply to recycled paper.

• Low moisture content (4–5%)

Suitable smoothness (100–200 Sheffield units, or 140–350 Bendtsen units, European)

**Note:** Some much smoother papers (such as premium 24 lb laser papers, 50–90 Sheffield units) and much rougher papers (such as premium cotton papers, 200–300 Sheffield units) have been engineered to work very well in laser printers, despite surface texture. Before using these types of paper, consult your paper supplier.

- Suitable sheet-to-sheet coefficient of friction (0.4–0.6)
- Sufficient bending resistance in the direction of feed

Recycled paper, paper of lower weight (<60 g/m² [16 lb bond]) and/or lower caliper (<3.8 mils [0.1 mm]), and paper that is cut grain-short for portrait (or short-edge) fed printers may have lower bending resistance than is required for reliable paper feeding. Before using these types of paper for laser (electrophotographic) printing, consult your paper supplier. Remember that these are general guidelines only and that paper meeting these guidelines may still cause paper feeding problems in any laser printer (for example, if the paper curls excessively under normal printing conditions).

## Using specialty media

## Tips on using card stock

Card stock is heavy, single-ply specialty media. Many of its variable characteristics, such as moisture content, thickness, and texture, can significantly impact print quality. Print samples on the card stock being considered for use before buying large quantities.

When printing on card stock:

- Make sure the Paper Type is Card Stock.
- Select the appropriate Paper Texture setting.
- Be aware that preprinting, perforation, and creasing may significantly affect the print quality and cause jams or other paper handling problems.
- Check with the manufacturer or vendor to ensure that the card stock can withstand temperatures up to 240°C (464°F) without releasing hazardous emissions.
- Do not use preprinted card stock manufactured with chemicals that may contaminate the printer. Preprinting introduces semi-liquid and volatile components into the printer.
- Use grain short card stock when possible.

### Tips on using envelopes

Print samples on the envelopes being considered for use before buying large quantities.

- Use envelopes designed specifically for laser printers. Check with the manufacturer or vendor to ensure that the envelopes can withstand temperatures up to 230°C (446°F) without sealing, wrinkling, curling excessively, or releasing hazardous emissions.
- For best performance, use envelopes made from 90-g/m² (24-lb bond) paper or 25% cotton. All-cotton envelopes must not exceed 70-g/m² (20-lb bond) weight.
- Use only new envelopes from undamaged packages.
- To optimize performance and minimize jams, do not use envelopes that:
  - Have excessive curl or twist
  - Are stuck together or damaged in any way
  - Have windows, holes, perforations, cutouts, or embossing

- Have metal clasps, string ties, or folding bars
- Have an interlocking design
- Have postage stamps attached
- Have any exposed adhesive when the flap is in the sealed or closed position
- Have bent corners
- Have rough, cockle, or laid finishes
- Adjust the width guides to fit the width of the envelopes.

Note: A combination of high humidity (over 60%) and high printing temperature may wrinkle or seal envelopes.

## Tips on using labels

Print samples on the labels being considered for use before buying large quantities.

Note: Use only paper label sheets. Vinyl, pharmacy, and two-sided labels are not supported.

For more information on label printing, characteristics, and design, see the *Card Stock & Label Guide* available at <a href="http://support.lexmark.com">http://support.lexmark.com</a>.

When printing on labels:

- Use labels designed specifically for laser printers. Check with the manufacturer or vendor to verify that:
  - The labels can withstand temperatures up to 240°C (464°F) without sealing, excessive curling, wrinkling, or releasing hazardous emissions.
  - Label adhesives, face sheet (printable stock), and topcoats can withstand up to 172-kPa (25-psi) pressure without delaminating, oozing around the edges, or releasing hazardous fumes.
- Do not use labels with slick backing material.
- Use full label sheets. Partial sheets may cause labels to peel off during printing, resulting in a jam. Partial sheets also contaminate the printer and the cartridge with adhesive, and could void the printer and toner cartridge warranties.
- Do not use labels with exposed adhesive.
- Do not print within 1 mm (0.04 inch) of the edge of the label, of the perforations, or between die-cuts of the label.
- Make sure the adhesive backing does not reach to the edge of the sheet. Zone coating of the adhesive should be at least 1 mm (0.04 inch) away from edges. Adhesive material contaminates the printer and could void the warranty.
- If zone coating of the adhesive is not possible, then remove a 2-mm (0.08-inch) strip on the leading and driver edge, and then use a non-oozing adhesive.
- Portrait orientation is recommended, especially when printing bar codes.

### Tips on using transparencies

- Print a test page on the transparencies being considered for use before buying large quantities.
- Feed transparencies from the standard tray, or the multipurpose feeder.
- Use transparencies designed specifically for laser printers. Transparencies must be able to withstand temperatures up to 185°C (365°F) without melting, discoloring, offsetting, or releasing hazardous emissions.

**Note:** If the transparency weight is set to Heavy and the transparency texture is set to Rough in the Paper menu, then transparencies can be printed at a temperature up to 195°C (383°F).

- Avoid getting fingerprints on the transparencies to prevent print quality problems.
- Before loading transparencies, flex, fan, and straighten the stack to prevent sheets from sticking together.

# Supported paper sizes, types, and weights

## Supported paper sizes

**Note:** For an unlisted paper size, select the closest *larger* listed size. For information on card stock and labels, see the *Card Stock & Label Guide*.

Paper size	Standard tray	Optional 250- or 550-sheet tray	Multipurpose feeder	Duplex mode
A4	<b>✓</b>	<b>✓</b>	<b>✓</b>	<b>│</b>
210 x 297 mm (8.3 x 11.7 in.)				
<b>A5</b> 148 x 210 mm (5.8 x 8.3 in.)	<b>\</b>	<b>✓</b>	<b>√</b>	X
A6 105 x 148 mm (4.1 x 5.8 in.)	<b>✓</b>	x	<b>✓</b>	x
JIS B5 182 x 257 mm (7.2 x 10.1 in.)	<b>√</b>	<b>√</b>	<b>√</b>	х
<b>Letter</b> 216 x 279 mm (8.5 x 11 in.)	<b>√</b>	<b>√</b>	<b>✓</b>	<b>✓</b>
<b>Legal</b> 216 x 356 mm (8.5 x 14 in.)	<b>✓</b>	<b>✓</b>	<b>✓</b>	<b>✓</b>
Executive 184 x 267 mm (7.3 x 10.5 in.)	<b>✓</b>	<b>✓</b>	<b>✓</b>	х
Oficio (Mexico) <sup>1</sup> 216 x 340 mm (8.5 x 13.4 in.)	<b>✓</b>	<b>✓</b>	<b>✓</b>	<b>✓</b>
Folio 216 x 330 mm (8.5 x 13 in.)	<b>√</b>	<b>√</b>	<b>√</b>	<b>✓</b>
<b>Statement</b> 140 x 216 mm (5.5 x 8.5 in.)	<b>√</b>	<b>√</b>	<b>✓</b>	x
Universal <sup>2</sup> 76.2 x 127 mm (3 x 5 in.) up to 216 x 356 mm (8.5 x 14 in.)	<b>✓</b>	<b>✓</b>	<b>√</b>	<b>√</b>
<b>7 3/4 Envelope (Monarch)</b> 98 x 191 mm (3.9 x 7.5 in.)	х	х	<b>√</b>	х
<b>9 Envelope</b> 98 x 225 mm (3.9 x 8.9 in.)	х	х	<b>✓</b>	х

<sup>&</sup>lt;sup>1</sup> This size setting formats the page for 216 x 356 mm (8.5 x 14 in.) unless the size is specified by the software application.

 $<sup>^2</sup>$  Universal is supported only in the standard tray if the paper size is at least 105 x 148 mm (4.1 x 5.8 in.). Universal is supported only in the optional 250- or 550-sheet tray if the paper size is at least 148 x 210 mm (5.8 x 8.3 in.). Universal is only supported in duplex mode if the width is at least 210 mm (8.3 in.) and length is at least 279 mm (11 in.). The smallest supported Universal size is only supported in the multipurpose feeder.

Paper size	Standard tray	Optional 250- or 550-sheet tray	Multipurpose feeder	Duplex mode
<b>10 Envelope</b> 105 x 241 mm (4.1 x 9.5 in.)	х	х	<b>✓</b>	x
<b>DL Envelope</b> 110 x 220 mm (4.3 x 8.7 in.)	х	х	<b>✓</b>	х
<b>C5 Envelope</b> 162 x 229 mm (6.4 x 9 in.)	х	х	<b>✓</b>	х
<b>B5 Envelope</b> 176 x 250 mm (6.9 x 9.8 in.)	х	х	<b>✓</b>	x
Other Envelope 229 x 356 mm (9 x 14 in.)	Х	х	<b>✓</b>	x

 $<sup>^{1}</sup>$  This size setting formats the page for 216 x 356 mm (8.5 x 14 in.) unless the size is specified by the software application.

## Supported paper types and weights

The standard tray supports  $60-90-g/m^2$  (16-24-lb) paper weights. The optional tray supports  $60-120-g/m^2$  (16-32-lb) paper weights. The multipurpose feeder supports  $60-163-g/m^2$  (16-43-lb) paper weights.

Paper type	250- or 550-sheet tray	Multipurpose feeder	Duplex mode
Plain paper	<b>√</b>	<b>/</b>	<b>✓</b>
Card stock	х	<b>✓</b>	х
Transparencies	<b>✓</b>	<b>✓</b>	х
Recycled	<b>√</b>	<b>✓</b>	<b>√</b>
Glossy paper	X	х	x
Paper labels <sup>1</sup>	✓	<b>✓</b>	x
Vinyl labels	X	х	х
Bond <sup>2</sup>	✓	<b>/</b>	<b>✓</b>
Envelope	х	<b>✓</b>	х
Rough envelope	х	<b>✓</b>	х
Letterhead	<b>✓</b>	<b>✓</b>	<b>✓</b>

 $<sup>^2</sup>$  Universal is supported only in the standard tray if the paper size is at least 105 x 148 mm (4.1 x 5.8 in.). Universal is supported only in the optional 250- or 550-sheet tray if the paper size is at least 148 x 210 mm (5.8 x 8.3 in.). Universal is only supported in duplex mode if the width is at least 210 mm (8.3 in.) and length is at least 279 mm (11 in.). The smallest supported Universal size is only supported in the multipurpose feeder.

Paper type	250- or 550-sheet tray	Multipurpose feeder	Duplex mode
Preprinted	<b>✓</b>	<b>/</b>	<b>✓</b>
Colored Paper		<b>✓</b>	<b>✓</b>
Light Paper		<b>✓</b>	<b>✓</b>
Heavy Paper <sup>2</sup>		<b>✓</b>	<b>✓</b>
Rough/Cotton		<b>✓</b>	х

<sup>&</sup>lt;sup>1</sup> One-sided paper labels designed for laser printers are supported for occasional use. It is recommended to print 20 or fewer pages of paper labels per month. Vinyl, pharmacy, and two-sided labels are not supported.

# **Data security notice**

This printer contains various types of memory that are capable of storing device and network settings, information from embedded solutions, and user data. The types of memory, along with the types of data stored by each, are described below.

- Volatile memory—This device utilizes standard Random Access Memory (RAM) to temporarily buffer user data during simple print and copy jobs.
- Non-volatile memory—This device may utilize two forms of non-volatile memory: EEPROM and NAND (flash memory). Both types are used to store the operating system, device settings, network information, scanner and bookmark settings, and embedded solutions.
- Hard disk memory—Some devices have a hard disk drive installed. The printer hard disk is designed for device-specific functionality and cannot be used for long term storage for data that is not print-related. The hard disk does not provide the capability for users to extract information, create folders, create disk or network file shares, or transfer FTP information directly from a client device. The hard disk can retain buffered user data from complex print jobs, as well as form data and font data.

To erase volatile memory, turn off the printer.

To erase non-volatile memory, see the menu item under "Configuration menu" on page 119 pertaining to this.

To erase the printer hard disk, see the menu item under "Configuration menu" on page 119 pertaining to this.

The printer control panel and RIP/controller board contain NVRAM. After removing the old part, it must be returned to your next level of support.

# Tools required for service

Flat-blade screwdrivers, various sizes

#1 Phillips screwdriver, magnetic

#2 Phillips screwdriver, magnetic

#2 Phillips screwdriver, magnetic short-blade

Needle-nose pliers

Diagonal side cutters

Spring hook

<sup>&</sup>lt;sup>2</sup> Bond and Heavy Paper are supported in duplex mode up to 90-g/m<sup>2</sup> (24-lb) paper weight.

Feeler gauges Analog or digital multimeter Flashlight (optional)

# **Diagnostic information**



**CAUTION—SHOCK HAZARD:** Remove the power cord from the electrical outlet before you connect or disconnect any cable or electronic card or assembly for personal safety and to prevent damage to the printer. Disconnect any connections between the printer and PCs/peripherals.



**CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching.

# **Troubleshooting overview**

# Performing the initial troubleshooting check

Before you start the troubleshooting procedures, perform the following checks:

- With the power cord unplugged from the wall outlet, check that the cord is free from breakage, short-circuits, disconnected wires, or incorrect connections.
- Make sure the printer is properly grounded. Check the power cord ground terminal.
- Make sure the power supply line voltage is within 10% of the rated line voltage.
- Make sure the machine is securely installed on a level surface in a well-ventilated area.
- Make sure the room temperature is between 16 and 32°C (60 and 90°F) and that the relative humidity is between 20 and 80%.
- Avoid sites generating ammonia gas, high temperature, high humidity (near water faucets, kettles, humidifiers), cold spaces, near open flames, and dusty areas.
- Avoid sites exposed to direct sunlight.
- Make sure the paper is the recommended paper for this printer.
- Make a trial print with paper from a newly opened package, and check the result.

# Power-on reset (POR) sequence


The printer performs a POR sequence when turned on. Check for the correct sequence by observing the following precess:

- $\mathbf{1} \stackrel{\frown}{\bigcirc}$  flashes until the device is ready.
- 2 The cooling fan turns on.
- **3** The fuser heater turns on.

**Note:** The fuser takes longer to warm up from a cold start than a warm start.

- 4 The main drive motor turns on.
- 5 The EP drive assembly drives the developer shaft located in the imaging unit.
- 6 The exit rollers turn.
- **7** When ready, the equivalent light pattern of the status of the printer is displayed. If there is a problem, the control panel lights indicate the problem.

# Using the printer control panel

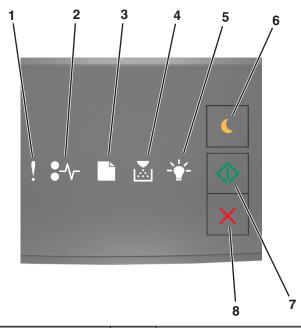

	Light or button		Color	Description
1	Error light	•	Yellow	An error has occurred.
2	Paper jam light		Yellow	A paper jam has occurred.
3	Load or remove paper light		Yellow	Paper must be loaded in the tray or removed from the bin.
4	Toner low or replace imaging unit light		Yellow	The toner cartridge is low on toner, or the imaging unit needs to be replaced.
5	Ready or data light		Green	The printer is in Ready state.
6	Sleep button and light		Amber	Use this to enable Sleep mode or Hibernate mode.
7	Start button and light		Green	Use this to initiate a print job.

	Light or button		Color	Description
8	Stop or cancel button	X	Red	Use this to cancel a print job.

# Light sequences and error messages

# Light sequences and error messages

User attendance messages, paper jam messages, and service errors display a light sequence. If is quickly pressed twice (the button is pressed and released twice within 0.5 seconds), a secondary pattern may appear with more detailed

information. If is again quickly pressed twice, the primary pattern usually returns. Not all primary light sequences

have secondary patterns. In which case, quickly pressing twice does not change the pattern.

All service errors are indicated by all lights flashing as the primary light sequence. The secondary sequence indicates an area or function which has the error. Additional tertiary sequences are used to indicate specific errors.

# **Light sequences**


### Legend

Symbol	Meaning
•	Light on
	Light off
*	Light blinking
х	Light blinking slowly

#### Status screens

Each screen of information provides various status information to the user. Each status screen includes the capability to display a warning message.


#### Status screens

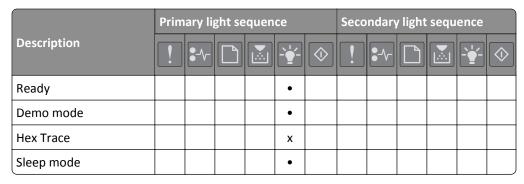

	Prim	ary li	ght se	quen	се	Secondary light sequence						
Description	!	<b>\$</b> - <b>\</b> -				$\bigcirc$	!	<b>\$</b> - <b>\</b> -				$\bigcirc$
Busy					*							
Resolution reduced	*				*							
Resolution reduced while canceling job	*	•	•	•	*	•						
Waiting					•	•						
Check config ID												
MICR cartridge empty				х								
Cartridge low				•		•						
Replace imaging unit	•			*		•						

# **Status messages**

These provide information on the current state of the printer. Generally, no user intervention is required.

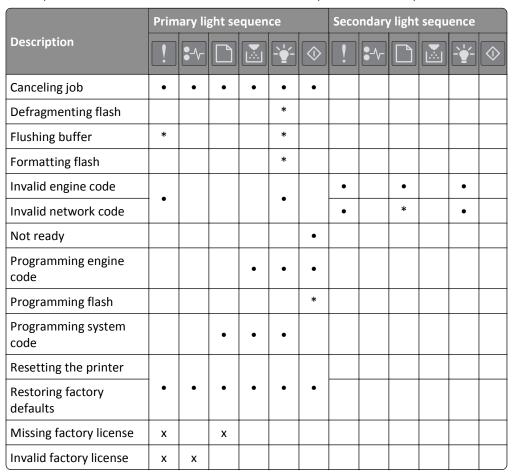

# User attendance messages

	Prim	ary li	ght se	quen	ce		Seco	ndary	/ light	sequ	ence		
Description	!	<b>\$-</b> \-				$\bigcirc$		<b>♣</b>				$\bigcirc$	Action
Cartridge region mismatch	•			•			•		*	•			Go to:  • "Replace cartridge, printer region mismatch[42.xy]" on page 43  • "User attendance messages (0-99.99)" on page 84
Cartridge, imaging unit mismatch	•	•	х	х									Go to "Cartridge, imaging unit mismatch[41.xy]" on page 42.
Cartridge nearly low	х			•		•							Go to:  "Cartridge nearly low[88.xy]" on page 42  "User attendance messages (0-99.99)" on page 84
Cartridge low				•		•							Go to:  • "Cartridge low[88.xx]" on page 42  • "User attendance messages (0-99.99)" on page 84
Cartridge very low	*			•		•							Go to:  • "Cartridge very low[88.xy]" on page 42  • "User attendance messages (0-99.99)" on page 84
Replace cartridge	•			•			•	*			•		Go to:  • "Replace cartridge, 0 estimated pages remain[88.xy]" on page 42  • "User attendance messages (0-99.99)" on page 84

	Primary light sequence							ndary	/ light	sequ	ence		
Description	!	<b>\$-</b> \-		Ž.		$\bigcirc$	!	<b>\$-</b> \-				$\bigcirc$	Action
Defective or missing cartridge	•			•			•	•		•			Go to:  • "Reinstall missing or unresponsive cartridge[31.xy]" on page 43  • "User attendance messages (0-99.99)" on page 84
Imaging unit early wear	х			*		•							Go to:  "Imaging unit nearly low[84.xy]" on page 43  "User attendance messages (0-99.99)" on page 84
Imaging unit wear				*		•							Go to:  "Imaging unit low[84.xy]" on page 43  "User attendance messages (0-99.99)" on page 84
Imaging unit near end of life	*			*		•							Go to:  "Imaging unit very low[84.xy]" on page 44  "User attendance messages (0-99.99)" on page 84
Replace imaging unit	•			*		•							Go to:  "Replace imaging unit, 0 estimated pages remain[84.xy]" on page 44  "User attendance messages (0-99.99)" on page 84

	Prim	ary li	ght se	quen	ce		Seco	ndary	/ light	sequ	ence		
Description	!	<b>*</b> - <b>/</b> -		×.		$\bigcirc$	!	<b>\$-</b> \-				$\bigcirc$	Action
Defective or missing imaging unit	•			*			•	•		*			Go to:  • "Reinstall missing or unresponsive imaging unit[31.xy]" on page 44  • "User attendance messages (0-99.99)" on page 84
Non-genuine Lexmark cartridge installed	*	*	*	•									Go to:  "Non-Lexmark cartridge, see User's Guide[33.xy]" on page 42  "User attendance messages (0-99.99)" on page 84
Non-genuine Lexmark imaging unit installed	*	*	*	*									Go to:  • "Non-Lexmark imaging unit, see User's Guide[33.xy]" on page 44  • "User attendance messages (0-99.99)" on page 84
Close front door	•												Close the front door.
Complex page	•					•	•				•	•	Go to "Complex page, some data may not have printed[39]" on page 48.
Defective flash	•					•	•		•			•	
Flash full	•					•	•	•			•	•	
Insufficient collation area	•					•	•			•		•	Go to:  • "Insufficient memory to collate job[37]" on page 47  • "User attendance messages (0-99.99)" on page 84
Insufficient defrag memory	•					•	•		*			•	
Load media			•			•							Go to "Load media" on page 45.

	Prim	ary li	ght se	quen	ce		Seco	ndary	/ light	sequ	ence		
Description	!	<b>*</b> -\-		×.		$\bigcirc$	!	<b>\$-</b> ^-				$\bigcirc$	Action
Change media			*			•							Go to "Change media" on page 44.
Memory full	•					•	•			•	•	•	Go to "Memory full[38]" on page 47.
Network interface errors	•					•	•	•				•	Go to "Standard network software error[54]" on page 46.
Remove paper from output bin			*										Go to "Remove paper from standard output bin" on page 46.
Insufficient memory to support resource save feature	•					•	•				*	•	Go to "Insufficient memory to support Resource Save feature[35]" on page 47.
Short paper	•					•	•		•		•	•	Go to:  • "Incorrect paper size, open[paper source] [34]" on page 45  • "User attendance messages (0-99.99)" on page 84
Too many trays attached	•					•	•		•	•		•	Go to "Too many trays attached[58]" on page 48.
Unformatted flash	•					•	•	•		•		•	
Unsupported cartridge	•	•	•	•									Go to:  • "Replace unsupported cartridge[32.xy]" on page 43  • "User attendance messages (0-99.99)" on page 84
Unsupported imaging unit	•	•	•	*									Go to:  • "Replace unsupported imaging unit[32.xy]" on page 44  • "User attendance messages (0-99.99)" on page 84
Standard USB port disabled	•					•	•	*	*			•	Go to "Standard USB port disabled[56]" on page 47.

Description	Primary light sequence						Seco	ndary	/ light	seque	ence		
	!	<b>\$-</b> ^-				$\bigcirc$	!	<b>\$</b> - <b>\</b> -				$\bigcirc$	Action
Standard parallel port disabled	•					•	•	х	х			•	Go to "Standard parallel port disabled[56]" on page 46.
Unsupported USB device	•					•	•	х	•			•	
Auto reboot IR	*		*		*	•							Press to continue printing.

# Paper jams


	Prim	ary li	ght se	quen	ce		Seco	ndary	/ light	sequ	ence		
Description	!	<b>*</b> -^-				$\bigcirc$	!	<b>*</b> - <b>\</b> -		i.i.		$\bigcirc$	Action
200 paper jam Printer input sensor								•			•	•	Go to "202 paper jam messages" on page 68.
202 paper jam Printer exit sensor								•	•			•	Go to "202 paper jam messages" on page 68.
230 paper jam Duplex								•		•		•	Go to "23y.xx paper jam messages" on page 71.
231 paper jam Duplex—rear								•	*			•	
232 paper jam Duplex								•		•		•	
233 paper jam Duplex								•	*	*		•	
234 paper jam Duplex—unknown location		•				•		•			*	•	
235 paper jam Duplex—unsupported size								•	*		*	•	
241 paper jam Tray 1								•	•	•		•	Go to "24y.xx paper jam messages" on page 74.
242 paper jam Tray 2								•	•		•	•	
250 paper jam MPF								•			*	•	Go to "25y.xx paper jam messages" on page 82.
251 paper jam Manual feeder								•		•	•	•	

#### **Service errors**

All service errors are indicated by all lights flashing as the primary light sequence. The secondary light sequence indicates an area or function which has the error. Tertiary light sequence indicates a specific device error. When all lights flash, quickly press twice to see the secondary light sequence. Quickly press twice again to see the tertiary light

sequence. Quickly press twice a third time to return to the primary light sequence.

### **Primary light sequence**

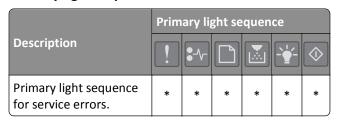

## Secondary and tertiary light sequences

	Secondary light sequence Tertian						iary li	ght se	quen	ce			
Description	!	<b>*</b> - <b>/</b> -		Ž.		$\bigcirc$	!	<b>*</b> -^-				$\bigcirc$	Action
900 RIP software error	*							*					Go to "9xx error messages"
900 Watchdog		*		*		*	*		*		*		on page 96.
901 Engine flash	*							*					
902-906		*		*		*	*		*		*		
910-914	*					*		*					
917	*					*		*		*	*	*	
920-926	*				*			*					
Fan stalled	*				*			*		*	*	*	
928	*				*			*	*				
929	*				*			*	*			*	
930-935	*				*	*		*					
936-937	*				*	*		*		*	*		
939	*				*	*		*	*		*		
950-951	*			*		*		*					
952-954	*			*		*		*		*			
955	*			*		*		*		*		*	
956-957	*			*		*		*		*	*		
958	*			*		*		*	*				
960-963	*			*	*			*					
970-979	*			*	*	*		*					

# Understanding the printer messages

### **Toner cartridge messages**

#### Cartridge, imaging unit mismatch [41.xy]

- 1 Check if the toner cartridge and imaging unit are both MICR or non-MICR supplies.
- **2** Change the toner cartridge or imaging unit so that both are MICR or non-MICR supplies.

#### Notes:

- Use a MICR toner cartridge and imaging unit for printing checks and other similar documents.
- Use a non-MICR toner cartridge and imaging unit for regular print jobs.

#### Cartridge low [88.xx]

You may need to order a toner cartridge. If necessary, press on the printer control panel to continue printing.

### Cartridge nearly low [88.xy]

Press on the printer control panel, if necessary, to continue printing.

## Cartridge very low [88.xy]

You may need to replace the toner cartridge very soon. If necessary, press on the printer control panel to continue printing.

#### Non-Lexmark cartridge, see User's Guide [33.xy]

The printer has detected a non-Lexmark supply or part installed in the printer.

Your Lexmark printer is designed to function best with genuine Lexmark supplies and parts. Use of third-party supplies or parts may affect the performance, reliability, or life of the printer and its imaging components.

**Warning—Potential Damage:** Use of third-party supplies or parts may affect warranty coverage. Damage caused by the use of third-party supplies or parts are not covered by the warranty.

All life indicators are designed to function with Lexmark supplies and parts, and may deliver unpredictable results if third-party supplies or parts are used. Imaging component usage beyond the intended life may damage your Lexmark printer or associated components.

To accept any and all of these risks and to proceed with the use of non-genuine supplies or parts in your printer,

press and simultaneously for at least three seconds to clear the light sequence.

#### Replace cartridge, 0 estimated pages remain [88.xy]

Replace the toner cartridge. For more information, see the instruction sheet that came with the supply.

#### Replace cartridge, printer region mismatch [42.xy]

Install a toner cartridge that matches the region number of the printer. x indicates the value of the printer region. y indicates the value of the cartridge region. x and y can have the following values:

#### Printer and toner cartridge regions

Region number (x)	Region (y)
0	Global
1	United States, Canada
2	European Economic Area (EEA), Switzerland
3	Asia Pacific, Australia, New Zealand
4	Latin America
5	Africa, Middle East, rest of Europe
9	Invalid

#### **Notes:**

- The x and y values are the .xy of the error code displayed on the Embedded Web Server.
- The x and y values must match for printing to continue.

#### Reinstall missing or unresponsive cartridge [31.xy]

Try one or more of the following:

- Remove the toner cartridge, and then reinstall it.
- Remove the toner cartridge, and then install a new one. For more information, see the instruction sheet that came with the supply.

### Replace unsupported cartridge [32.xy]

Remove the toner cartridge, and then install a supported one. For more information, see the instruction sheet that came with the supply.

## **Imaging unit messages**

#### Imaging unit low [84.xy]

You may need to order an imaging unit. If necessary, press on the printer control panel to continue printing.

#### Imaging unit nearly low [84.xy]

Press on the printer control panel, if necessary, to continue printing.

#### Imaging unit very low [84.xy]

You may need to replace the imaging unit very soon. If necessary, press on the printer control panel to continue printing.

#### Non-Lexmark imaging unit, see User's Guide [33.xy]

The printer has detected a non-Lexmark supply or part installed in the printer. Your Lexmark printer is designed to function best with genuine Lexmark supplies and parts. Use of third-party supplies or parts may affect the performance, reliability, or life of the printer and its imaging components.

**Warning—Potential Damage:** Use of third-party supplies or parts can affect warranty coverage. Damage caused by the use of third-party supplies or parts is not covered by the warranty.

All life indicators are designed to function with Lexmark supplies and parts, and may deliver unpredictable results if third-party supplies or parts are used. Imaging component usage beyond the intended life may damage your Lexmark printer or associated components.

To accept any and all of these risks and to proceed with the use of non-genuine supplies or parts in your printer,

press and simultaneously for at least four seconds to clear the light sequence.

### Replace imaging unit, 0 estimated pages remain [84.xy]

Replace the imaging unit. For more information, see the instruction sheet that came with the supply.

#### Reinstall missing or unresponsive imaging unit [31.xy]

Try one or more of the following:

- Remove the imaging unit, and then reinstall it.
- Remove the imaging unit, and then install a new one. For more information, see the instruction sheet that came with the supply.

### Replace unsupported imaging unit [32.xy]

Remove the imaging unit, and then install a supported one. For more information, see the instruction sheet that came with the supply.

## Paper loading messages

#### **Change media**

Try one or more of the following:

- Load the tray or feeder with the correct size and type of paper, and then press on the printer control panel to continue printing.
- Make sure the correct paper size and type are specified in the Paper menu:
  - If the printer is on a network, then access the Embedded Web Server.
    - 1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- Print a network setup page or menu settings page, and then locate the IP address in the TCP/IP section.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Paper Menu.
- If the printer is connected to a computer by a USB or parallel cable, then access the Paper menu through the Local Printer Settings Utility for Windows or through Printer Settings for Macintosh.
- Press X to cancel the print job.

#### Incorrect paper size, open [paper source] [34]

Try one or more of the following:

- Load the correct size of paper.
- From the printer control panel, press  $\bigcirc$  to clear the light sequence and print using a different tray.
- Check the length and width guides and make sure the paper is loaded properly in the tray.
- Make sure the correct paper size and type are specified in Print Properties or the Print dialog settings.
- Make sure the correct paper size and type are specified in the Paper menu on the printer control panel:
  - If the printer is on a network, then access the Embedded Web Server.
    - 1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- Print a network setup page or menu settings page, and then locate IP address in TCP/IP section.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Paper Menu.
- If the printer is connected to a computer by a USB or parallel cable, then access the Paper menu through the Local Printer Settings Utility for Windows or through Printer Settings for Macintosh.

**Note:** Make sure the paper size is correctly set. For example, if the MP Feeder Size is set to Universal, then make sure the paper is large enough for the data being printed.

#### Load media

Try one or more of the following:

- Load the tray or feeder with the correct size and type of paper.
- From the printer control panel, press to continue printing.

**Note:** If the printer finds a tray that has the correct size and type of paper, then it feeds from that tray. If the printer cannot find a tray that has the correct size and type of paper, then it prints from the default paper source.

• From the printer control panel, press to cancel the print job.

#### Remove paper from standard output bin

Do the following:

- 1 Remove the paper stack from the standard output bin.
- **2** From the printer control panel, press to continue printing.

### **Printer communication error messages**

#### Network [x] software error [54]

Try one or more of the following:

- From the printer control panel, press to continue printing.
- Unplug the router, then wait for 30 seconds, and then plug the router back again.
- Turn off the printer, wait for about 10 seconds, and then turn the printer back on.
- Update the network firmware in the printer or print server. For more information, contact customer support.

#### Standard network software error [54]

Try one or more of the following:

- From the printer control panel, press to continue printing.
- Turn off the printer, and then turn it back on.
- Update the network firmware in the printer or on the print server. For more information, contact customer support.

#### Standard parallel port disabled [56]

Try one or more of the following:

• From the printer control panel, press to continue printing.

**Note:** The printer discards any data received through the parallel port.

- Set the Parallel Buffer to Auto.
  - If the printer is on a network, then access the Embedded Web Server.
    - 1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- Print a network setup page or menu settings page, and then locate the IP address in the TCP/IP section.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Network/Ports > Parallel.
- **3** In the Parallel Buffer field, enter **2**.
- 4 Click Submit.
- If the printer is connected to a computer by a USB or parallel cable, then access the Parallel menu through the Local Printer Settings Utility for Windows or through Printer Settings for Macintosh.

#### Standard USB port disabled [56]

Try one or more of the following:

• From the printer control panel, press to continue printing.

**Note:** The printer discards any data received through the USB port.

- Set the USB Buffer to Auto:
  - If the printer is on a network, then access the Embedded Web Server.
    - 1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- Print a network setup page or menu settings page, and then locate the IP address in the TCP/IP section.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Network/Ports > Standard USB.
- 3 In the USB Buffer field, enter 2.
- 4 Click Submit.
- If the printer is connected to a computer by a USB or parallel cable, then access the Standard USB menu through
  the Local Printer Settings Utility for Windows or through Printer Settings for Macintosh.

### **Insufficient memory error messages**

#### Insufficient memory to collate job [37]

Try one or more of the following:

- From the printer control panel, press to print the portion of the job already stored and begin collating the rest of the print job.
- From the printer control panel, press X to cancel the print job.

# Insufficient memory to support Resource Save feature [35]

Press on the printer control panel to clear the light sequence.

The job will be printed without using Resource Save.

### Memory full [38]

Try one or more of the following:

- From the printer control panel, press to continue printing. A data loss will occur.
- From the printer control panel, press X to cancel the print job.
- Install additional printer memory.
- Decrease the resolution setting.

### Miscellaneous messages

#### Complex page, some data may not have printed [39]

Try one or more of the following:

- From the printer control panel, press to continue printing. A data loss may occur.
- From the printer control panel, press to cancel the print job.
- Install additional printer memory.
- Reduce the number and size of fonts, the number and complexity of images, and the number of pages in the print
  job.

#### Too many trays attached [58]

Do the following:

- **1** Turn off the printer.
- **2** Unplug the power cord from the electrical outlet.

**Note:** Optional trays lock together when stacked. Remove stacked trays one at a time from the top to the bottom.

- **3** Remove the extra tray or trays.
- **4** Connect the power cord to a properly grounded electrical outlet.
- 5 Turn the printer back on.

# Fixing print quality issues

- "Initial print quality check" on page 48
- "Print quality checks" on page 49

The symptoms described in this chapter might require replacement of one or more CRUs (Customer Replaceable Units) designated as supplies or maintenance items, which are the responsibility of the customer. With the customer's permission, you might need to install a toner cartridge.

## Initial print quality check

Before troubleshooting specific print problems, complete the following initial print quality check:

- 1 The printer must be in a location that follows the recommended operating environment specifications. See "Operating environment" on page 239.
- **2** Check the life status of all supplies. Any supply that is low should be replaced.
- **3** Load 20-lb plain letter or A4 paper. Make sure the paper guides are properly set and locked. From the control panel, set the paper size and type to match the paper loaded in the tray.
- **4** Print a Menu settings page. Be sure to keep the original Menu settings page to restore the customer's custom settings if needed.

**5** Verify on the Menu settings page if the following are set to their default values:


• Print resolution: 600 dpi

• Toner darkness: 8

- **6** Inspect the transfer roll for damage. Replace if damaged.
- 7 Inspect the toner cartridge and imaging unit for damage. Replace if damaged.
- 8 Print the Print quality pages to see if the problem remains. Use Tray 1 to test print quality problems.
- **9** Check to ensure the correct printer driver for the installed software is being used. An incorrect printer driver for the installed software can cause problems. Incorrect characters could print, and the copy may not fit the page correctly.

# **Print quality checks**


## Gray background or toner fog on prints






Actions	Yes	No
Step 1 Check the cartridge plunger.	Go to step 2.	Replace the cartridge plunger. See "Cartridge plunger removal" on
Is the cartridge plunger properly attached to the front door and is the spring functioning properly?		page 170.
Step 2	Go to step 3.	The problem is solved.
Remove any contamination from the CTLS contacts. Perform a print test.		
Does the problem remain?		
Step 3	Go to step 4.	Replace the printer.
Check the CTLS for damage.		
Is it free of damage?		
Step 4	Go to step 5.	Replace the transfer
Check the transfer roll for surface contamination or excessive wear.		roll. See "Transfer roll removal" on page
Is it free of contamination and wear?		169.
Step 5	Replace the power	Replace the printer.
Check the transfer roll left contact spring for damage.	supply. See "Power supply removal" on	
Is it free of damage?	page 190.	

# Printer is printing blank pages




Actions	Yes	No
Step 1	Replace the toner	Go to step 2.
Check the toner cartridge level.	cartridge.	
Is the toner level low?		
Step 2	Go to step 3.	Replace the cartridge
Check the cartridge plunger.		plunger. See "Cartridge plunger removal" on
Is the cartridge plunger properly attached to the front door and is the spring functioning properly?		page 170.
Step 3	Go to step 4.	Replace the imaging
Check the imaging unit for wear or damage.		unit.
Is it free of wear or damage?		
Step 4	Go to step 5.	Replace the transfer
Check the transfer roll for surface contamination or excessive wear.		roll. See "Transfer roll removal" on page
Is it free of contamination and wear?		169.
Step 5	Go to step 6.	Replace the printer.
Check the transfer roll left contact spring for damage.		
Is it free of damage?		
Step 6	Replace the power	The problem is solved.
Reseat the cables JGLV1 and JVIDEO1 or JUICC1 on the controller board.	supply. See "Power supply removal" on	
Does the problem remain?	page 190.	

# Printer is printing solid black pages




Actions	Yes	No
Step 1 Check the imaging unit for damage.	Go to step 2.	Replace the imaging unit.
Is it free of damage?		
Step 2	Go to step 3.	The problem is solved.
Remove any contamination from the imaging unit contacts.		
Does the problem remain?		
Step 3	Replace the power	Replace the printer.
Check the imaging unit contacts for damage.	supply. See "Power supply removal" on	
Are they free of damage?	page 190.	

# Repeating defects

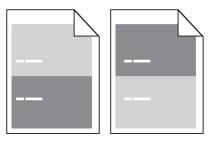

Actions	Yes	No
Step 1	Replace the imaging	Go to step 2.
Measure the distance between defects. Is the distance between defects equal to any of the following?	unit.	
• 3.82 in. (97 mm)		
• 1.85 in. (47 mm)		
• 1.5 in. (38 mm)		
Step 2 Is the distance between defects equal to 3.15 in. (80 mm)?	Replace the fuser. See "Fuser removal" on page 210.	Contact the next level of support.

# **Shadow images appear on prints**





Actions	Yes	No
Step 1	Go to step 2.	Go to step 3.
Does the shadow image appear every two pages?		
Step 2	Go to step 3.	Replace the redrive
Check the redrive assembly for wear or damage.		assembly. See "Redrive assembly removal" on
Is it free of wear or damage?		page 209.
Step 3	Go to step 4.	Replace the transfer
Check the transfer roll for surface contamination or excessive wear.		roll. See "Transfer roll removal" on page
Is it free of contamination and wear?		169.
Step 4	Go to step 5.	Replace the fuser. See
Check the following fuser components for wear or damage:		"Fuser removal" on
• Gears		page 210.
Exit rollers		
Belt fuser		
Are they free of damage?		
Step 5	The problem is solved.	Replace the fuser. See
a Turn off the printer.		"Fuser removal" on
<b>b</b> Remove the rear door and cover.		page 210.
<b>c</b> Disconnect the fuser cable connected to PCN5 of the power supply.		
<b>d</b> Check for approximate correct resistance on the fuser cable:		
• 220V fuser—43 ohms		
• 110V fuser—10 ohms		
• 100V fuser—8 ohms		
Is the resistance equal to any of the above values?		

# **Skewed print**




Actions	Yes	No
Step 1	Go to step 8.	Go to step 2.
Does the skew appear every two pages?		
Step 2		
a Check the media source.		
<b>b</b> If the media is from tray 1, go to step 3.		
If the media is from the MPF, go to step 5.		
Step 3	Go to step 4.	Replace the pick tires.
Make sure the pick tires are free of debris. Check for wear or damage.		
Are they free of wear or damage?		
Step 4	Go to step 11.	Replace the input tray.
If applicable, check the lift plate on the input tray for damage.		
Is it free of damage?		
Step 5  Make sure the MPF pick roller and separator pad are free of debris. Check for wear or damage.  Are they free of wear or damage?	Go to step 6.	Replace the MPF pick roller and separator pad. See "MPF pick roller removal" on page 180 and "Separator pad removal" on page 188.
Step 6 Check the MPF gearbox for wear or damage. Is it free of wear or damage?	Go to step 7.	Replace the MPF gearbox. See "MPF gearbox removal" on page 149.
Step 7	Go to step 11.	Replace the front input
Make sure the front input guide rollers are free of debris. Check for wear or damage.	•	guide. See "Front input guide removal" on page 186.
Are they free of wear or damage?		

Actions	Yes	No
Step 8  Make sure the redrive rollers are free of debris. Check for wear or damage.  Are they free of wear or damage?	Go to step 9.	Replace the redrive assembly. See "Redrive assembly removal" on page 209.
Step 9  a Remove the left cover.  b Perform a duplex print test:     Diagnostics Menu > Cont Prt Duplex Tray 1  Note: Press when the first page picks to prevent printing additional pages.  c Observe the reverse solenoid for proper operation.  Does it properly operate?	Go to step 10.	Replace the reverse solenoid. See "Reverse solenoid removal" on page 152.
Step 10  Make sure the input roller/deskew assembly is free of debris. Check for wear or damage.  Are they free of wear or damage?	Contact the next level of support.	Replace the printer.

# Streaked horizontal or vertical lines appear on prints









Actions	Yes	No
Step 1	Go to step 2.	Replace the imaging
Check the imaging unit for wear or damage.		unit.
Is it free of wear or damage?		
Step 2	Go to step 3.	The problem is solved.
Make sure the paper path is free of debris or toner contamination.		
Does the problem remain?		
Step 3	Go to step 4.	Replace the transfer
Check the transfer roll for contamination or excessive wear.		roll. See "Transfer roll removal" on page
Is it free of contamination or wear?		<b>169</b> .
Step 4	Go to step 5.	Replace the fuser. See
Remove the fuser and check for damage or debris on the rollers and belts.		"Fuser removal" on page 210.
Is it free of damage and debris?		
Step 5	Replace the LSU. See	The problem is solved.
Reseat the cables JVIDEO1 and JGLV on the controller board.	"Laser scanning unit (LSU) removal" on	
Does the problem remain?	page 212.	

# Toner rubs off

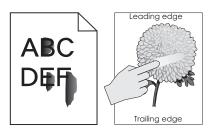

Actions	Yes	No
Step 1	Go to step 2.	Tighten the screws.
Check if the fuser screws are tightly fastened.		
Are they tightly fastened?		
Step 2	Go to step 3.	Replace the fuser. See
a Turn off the printer.		"Fuser removal" on
<b>b</b> Remove the rear door and cover.		page 210.
<b>c</b> Disconnect the fuser cable connected to PCN5 of the power supply.		
<b>d</b> Check for approximate correct resistance on the fuser cable:		
• 220V fuser—43 ohms		
• 110V fuser—10 ohms		
• 100V fuser—8 ohms		
Is the resistance equal to any of the above values?		
Step 3	Replace the power	Replace the fuser. See
Check the following fuser components for wear or damage:	supply. See "Power	"Fuser removal" on
Gears	supply removal" on page 190.	page 210.
Exit rollers	page 230.	
Belt fuser		
Are they free of damage?		

# Toner specks appear on prints



Actions	Yes	No
Step 1 Check the imaging unit for wear or damage.	Go to step 2.	Replace the imaging unit.
Is it free of wear or damage?		
Step 2  Make sure the paper path is free of debris or toner contamination.	Go to step 3.	The problem is solved.
Does the problem remain?		


Actions	Yes	No
Step 3 Check the transfer roll for contamination or excessive wear.  Is it free of contamination or wear?	Go to step 4.	Replace the transfer roll. See "Transfer roll removal" on page 169.
Step 4 Remove the fuser and check for damage or debris on the rollers and belts.  Is it free of damage and debris?	Go to step 5.	Replace the fuser. See "Fuser removal" on page 210.
Step 5 Reseat the cables JVIDEO1 and JGLV on the controller board.  Does the problem remain?	Replace the LSU. See "Laser scanning unit (LSU) removal" on page 212.	The problem is solved.

# Paper jams

# **Avoiding jams**

### Load paper properly

• Make sure paper lies flat in the tray.

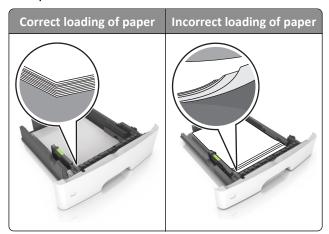

- Do not remove a tray while the printer is printing.
- Do not load a tray while the printer is printing. Load it before printing, or wait for a prompt to load it.
- Do not load too much paper. Make sure the stack height is below the maximum paper fill indicator.

• Do not slide the paper into the tray. Load paper as shown in the illustration.



- Make sure the guides in the tray or the multipurpose feeder are properly positioned and are not pressing tightly against the paper or envelopes.
- Push the tray firmly into the printer after loading paper.

#### Use recommended paper

- Use only recommended paper or specialty media.
- Do not load wrinkled, creased, damp, bent, or curled paper.
- Flex, fan, and straighten paper before loading it.




- Do not use paper that has been cut or trimmed by hand.
- Do not mix paper sizes, weights, or types in the same tray.
- Make sure the paper size and type are set correctly on the Embedded Web Server or the computer.

**Note:** Depending on your operating system, access the Paper menu using Local Printer Settings Utility or Printer Settings.

• Store paper according to manufacturer recommendations.

## Accessing jam areas

Open the doors and pull out the trays to access jam areas.

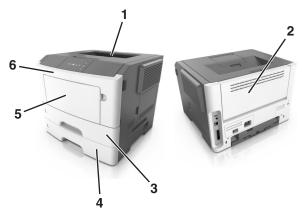

Access area	Description
1	Standard bin
2	Rear door
3	Standard 250-sheet tray (Tray 1)
4	Optional 250- or 550-sheet tray (Tray 2)
5	Multipurpose feeder door
6	Front door

#### **Notes:**

- When Jam Assist is set to On, the printer automatically flushes blank pages or pages with partial prints to the standard bin after a jammed page has been cleared. Check your printed output stack for discarded pages.
- When Jam Recovery is set to On or Auto, the printer reprints jammed pages. However, the Auto setting does not guarantee that the page will print.

# 200 paper jams

### 200 paper jam messages


Error code	Description	Action
200.01	Input sensor covered during warm-up sequence.	Go to "Sensor (input) static jam service check" on page 63.
200.02	Input sensor covered too quickly.	Go to "Sensor (input) early/late arriving service
200.03	Media did not reach input sensor from MPF.	check" on page 64.
200.05	Input sensor covered too long.	
200.07	Input sensor failed to become uncovered from sheet ahead.	
200.08	Page arrive at input senor at unexpected time.	

Error code	Description	Action
200.09	Printhead did not receive proper motor feedback to start laser servo.	Go to "Sensor (input) jam service check" on page 65.
200.10	Printhead motor not locked when media reaches the input sensor.	
200.11	Printhead motor fell out of lock after page reaches the input sensor.	
200.12	Printhead was not ready for media.	
200.13	Media at input sensor is not the next media to be imaged.	
200.14	Media reached the input sensor before EP was ready.	
200.15	Image data did not start on time.	
200.16	Fuser motor stalled.	Go to "Main drive motor control jam service check" on page 66.
200.19	Page that was successfully picked from option tray never reached the input sensor.	Go to "Sensor (input) early/late arriving service check" on page 64.
200.21	No response from paper port driver while waiting for the source to deactivate the Input Source Ready flag to indicate it has initiated picking.	
200.23	Laser servo never started due to potential conflict with the transfer servo.	Go to "Sensor (input) jam service check" on page 65.
200.24	Measured gap at input sensor too small to meet video delivery requirements. (Not enough time since prior image finished to start new image).	
200.29	Printhead drive control out of range due to an external event beyond what the control is designed to handle.	
200.30	Invalid printhead NVRAM.	
200.31	Paper, in the middle of a job, at input sensor before interrupt occurred.	Go to "Sensor (input) early/late arriving service check" on page 64.
200.32	Detected cover switch bounce.	
200.33	Input sensor covered too quickly.	
200.38	Interpage servo gap smaller than expected for galvo offset target evaluation.	Go to "Sensor (input) early/late arriving service check" on page 64.
200.42	Rogue sheet at ACM sensor while flushing the paper path prior to declaring tray 1 source empty.	
200.44	Page from tray 1 did not reach the input sensor (or the manual feed sensor, if present) after multiple pick attempts. Page did make it out of the tray at least as far as the ACM sensor.	
200.45	During warm up flush, sheet detected too long over input sensor.	

### [x]-page jam, open front door. [20y.xx]

**CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.

**1** Press the button on the right side of the printer, and then open the front door.

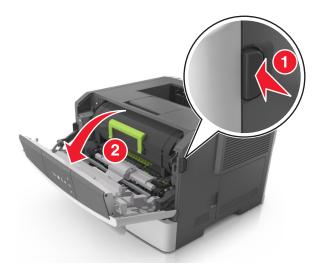


**2** Pull out the toner cartridge using the handle.



**3** Lift the green handle, and then pull out the imaging unit from the printer.




**Warning—Potential Damage:** Do not touch the photoconductor drum. Doing so may affect the print quality of future print jobs.

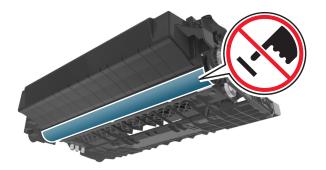

**4** Place the imaging unit aside on a flat, smooth surface.


**Warning—Potential Damage:** Do not expose the imaging unit to direct light for more than 10 minutes. Extended exposure to light can cause print quality problems.

**5** Lift the green flap in front of the printer.

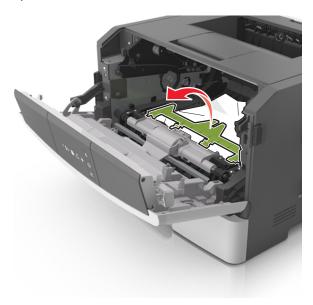


**6** Firmly grasp the jammed paper on each side, and then gently pull it out.

**Note:** Make sure all paper fragments are removed.

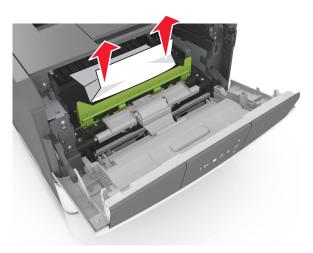


Diagnostic information

7 Insert the imaging unit by aligning the arrows on the side rails of the unit with the arrows on the side rails inside the printer, and then insert the imaging unit into the printer.

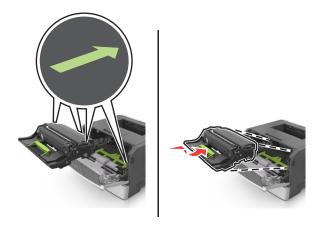

**8** Insert the toner cartridge by aligning the side rails of the cartridge with the arrows on the side rails inside the printer, and then insert the cartridge into the printer.

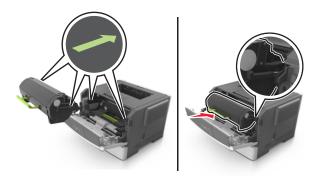

- **9** Close the front door.
- **10** From the printer control panel, press to clear the message and continue printing.

### Sensor (input) static jam service check

Action	Yes	No
Step 1 Check the input sensor area for jammed media fragments.	Go to step 2.	Clear the paper path of any media fragments.
Is the paper path free of partially fed or jammed media?		
Step 2 Check the jam access cover if it is blocking the input sensor.	Replace the jam access cover. See "Jam access cover removal" on	
Is it blocking the input sensor?	page 181.	

Action	Yes	No
Step 3	Go to step 4.	Reseat the cable.
Check the input sensor cable for proper connection to the controller board.		
Is it properly connected?		
Step 4	Go to step 5.	Replace the input
Check the input sensor.		sensor. See "Duplex sensor and input
Is it free of damage?		sensor removal" on page 193.
Step 5	Contact the next level	The problem is solved.
Does the error remain?	of support.	

# Sensor (input) early/late arriving service check

Action	Yes	No
Step 1	Go to step 2.	Go to step 5.
Check the paper source.		
Is the paper from the MPF?		
Step 2	Go to step 3.	Replace the MPF pick
Check the MPF pick roller and separator pad for damage and contamination.		roller and separator pad. See "MPF pick roller removal" on page 180 and
Are they free of damage and contamination?		"Separator pad removal" on page 188.
Step 3	Go to step 4.	Replace the MPF
Check the MPF solenoid for proper operation:		solenoid. See "MPF solenoid removal" on
a Remove the left cover.		page 147.
<b>b</b> Perform a print job from the MPF.		p 00 = 111
<b>c</b> Check if the MPF solenoid moves when doing the feed test.		
Does it move when doing the feed test?		
Step 4	Go to step 5.	Replace the MPF
Make sure the MPF gearbox spring is properly installed and free of damage. Check the MPF gearbox for wear or damage.		gearbox. See "MPF gearbox removal" on page 149.
Are they free of wear or damage?		
Step 5	Go to step 6.	Clear the paper path of
Check the input sensor area for jammed media fragments.		any media fragments.
Is the paper path free of partially fed or jammed media?		

Action	Yes	No
Step 6 Check the jam access cover if it is blocking the input sensor.  Is it blocking the input sensor?	Replace the jam access cover. See "Jam access cover removal" on page 181	Go to step 7.
Step 7 Check the input sensor cable for proper connection to the controller board.  Is it properly connected?	Go to step 8.	Reseat the cable.
Step 8 Check the input sensor. Is it free of damage?	Go to step 9.	Replace the input sensor. See "Duplex sensor and input sensor removal" on page 193.
Step 9 Does the error remain?	Contact the next level of support.	The problem is solved.

# Sensor (input) jam service check

Action	Yes	No
Step 1	Go to step 2.	Reseat the cables.
Check the LSU cables for proper connection.		
Are they properly connected to the LSU and to the controller board?		
Step 2 Inspect the LSU cables and connectors.	Go to step 3.	Replace the LSU. See "Laser scanning unit (LSU) removal" on
Are they free of damage?		page 212.
Step 3	Go to step 4.	Reseat the cable.
Check the input sensor cable for proper connection to the controller board.		
Is it properly connected?		
Step 4 Check the input sensor.	Go to step 5.	Replace the input sensor. See "Duplex sensor and input sensor removal" on
Is it free of damage?		page 193.
Step 5	Go to step 6.	Replace the controller
Check the controller board for any damage.		board. See "Controller board removal" on
Is it free of damage?		page 162.

Action	Yes	No
Step 6	Contact the next level	The problem is solved.
Does the error remain?	of support.	

# Main drive motor control jam service check

Action	Yes	No
Step 1  a Remove the main drive gearbox.  b Check the main drive gearbox cable for proper connection.	Go to step 2.	Reseat the cable.
Is it properly connected?		
<ul> <li>Step 2</li> <li>a Remove the main drive gearbox.</li> <li>b Check the gears of main drive gearbox for wear or damage.</li> </ul> Are they free of wear or damage?	Go to step 3.	Replace the main drive gearbox. See "Main drive gearbox removal" on page 145.
Step 3 Check the main drive motor for proper operation:  a Remove the main drive gearbox.  Note: Do not disconnect the main drive gearbox cable.  b Perform a print job.  c Check if the main drive motor rotates when printing.  Does it rotate when printing?	Go to step 4.	Replace the main drive gearbox. See "Main drive gearbox removal" on page 145.
Step 4 Check the fuser gear for damage or toner contamination. Is it free of damage and contamination?	Replace the controller board. See "Controller board removal" on page 162.	Replace the fuser. See "Fuser removal" on page 210.

# 201 paper jams

# [x]-page jam, clear standard bin. [20y.xx]

1 Firmly grasp the jammed paper on each side, and then gently pull it out.

**Note:** Make sure all paper fragments are removed.



Diagnostic information

2 From the printer control panel, press to clear the message and continue printing.



## 201 paper jam messages

Error code	Description	Action
201.01	Narrow media sensor is covered during warm up. Input sensor is not covered.	Go to "Sensor (narrow media) jam service check" on page 67.

# Sensor (narrow media) jam service check

Action	Yes	No
Step 1 Check the narrow media sensor cable JNRW1 for proper connection. Is it properly connected?	Go to step 2.	Reseat the cable.
Step 2 POR into the Diagnostics menu and perform a sensor test: Diagnostics Menu > Base Sensor Test > Narrow Media  Does the sensor state on the control panel display change when it is toggled?	Go to step 3.	Replace the narrow media sensor. See "Narrow media/bin full sensor removal" on page 207.
Step 3 Check the redrive rollers for damage. Are they free of damage?	Go to step 4.	Replace the redrive assembly. See "Redrive assembly removal" on page 209.
Step 4 Does the error remain?	Contact the next level of support.	The problem is solved.


# 202 paper jams

# 202 paper jam messages

Error code	Description	Action	
202.01	Exit sensor is covered during warm up.	Go to "Sensor (fuser exit) jam service check" on	
202.03	Media did not reach the fuser exit sensor.	page 70.	
202.05	Fuser exit sensor covered too long by the current sheet.		
202.07	Fuser exit sensor covered too long by the previous sheet.		
202.13	Restart attempted after an internal jam without cover open. Close event. Likely that the jam was not actually cleared.		
202.14	Expected banner sheet ( assumed wide ) not detected by narrow media sensor, possible accordion jam, unsupported narrow banner media, or missing signal.		
202.16	Page at fuser nip before fuser started ramping toward desired. Indicates code may be receiving more hall interrupts than intended.		
202.17	Page at fuser nip before fuser reached acceptable operating temperature. Page arrived at fuser earlier than expected, so it was probably staged.		
202.22	Cartridge Motor - Motor Underspeed Error. Motor made it to closed loop steady state, but then detected speed was below threshold.		
202.28	Exit sensor bounce issue.		
202.32	The sheet is too long to be duplexed. The blow through is enabled.	Go to "Duplex service check" on page 73.	
202.36	Long paper or shingled multi feed stopped before sending to duplex.		
202.43	During warm up flush, media that passed the input sensor failed to reach the exit sensor.	Go to "Sensor (fuser exit) jam service check" on page 70.	
202.45	During warm up flush, sheet detected too long over exit sensor.		

### [x]-page jam, open rear door. [20y.xx]


**1** Press the button on the right side of the printer, and then open the front door.

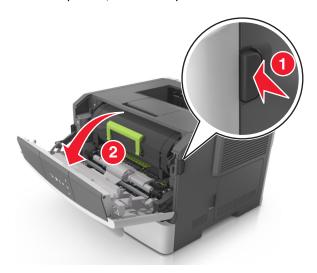

**2** Gently pull down the rear door.



**CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.

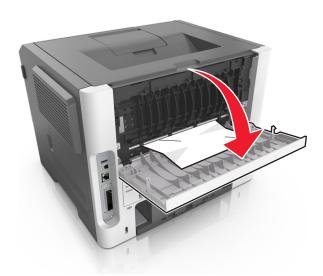

**3** Firmly grasp the jammed paper on each side, and then gently pull it out.

Note: Make sure all paper fragments are removed.



- **4** Close the rear and front doors.
- **5** From the printer control panel, press to clear the message and continue printing.

# Sensor (fuser exit) jam service check

Action	Yes	No
Step 1	Go to step 2.	Clear the paper path of
Check the input sensor area for jammed media fragments.		any media fragments.
Is the paper path free of partially fed or jammed media?		
Step 2	Go to step 3.	Reseat the cable.
Check the fuser exit sensor cable JEXIT1 for proper connection to the controller board.		
Is it properly connected?		
Step 3	Go to step 4.	Replace the fuser. See
Check the fuser exit sensor for damage.		"Fuser removal" on page 210.
Is it free of damage?		
Step 4	Go to step 5.	Replace the fuser. See
Check the fuser gears and rollers for damage.		"Fuser removal" on page 210.
Are they free of damage?		
Step 5	Contact the next level	The problem is solved.
Does the error remain?	of support.	

# 230 paper jams

## 23y.xx paper jam messages

Error code	Description	Action
230.01	Sheet covering internal duplex sensor during warm up.	Go to "Duplex service check" on page 73.
230.02	Paper jam around internal duplex.	
230.03	Internal duplex sensor never made by leading edge of page.	
230.04	Page in duplexer ahead of current reversing page never staged.	
230.05	Internal duplex sensor never broke on the trailing edge of the sheet.	
230.07	Internal duplex sensor never broke from sheet ahead of page.	
230.09	Page in duplexer never picked.	
230.10	Narrow page reversing into duplexer.	
230.28	Bouncy duplex sensor never made.	
232.03	Input sensor never detected sheet from internal duplex path.	
232.10	Feed error picking from the duplexer.	

## [x]-page jam, remove tray 1 to clear duplex. [23y.xx]




**CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.

1 Pull out the tray completely.




**2** Locate the blue lever, and then pull it down to release the jam.

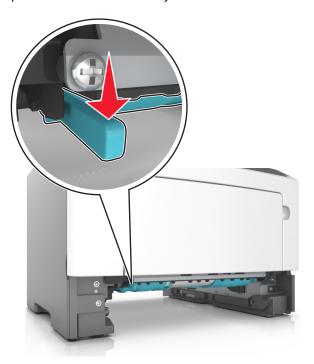

**Note:** If the jammed paper is not visible in the duplex area, then open the rear door, and then gently remove the jammed paper. Make sure all paper fragments are removed.

**3** Firmly grasp the jammed paper on each side, and then gently pull it out.

**Note:** Make sure all paper fragments are removed.

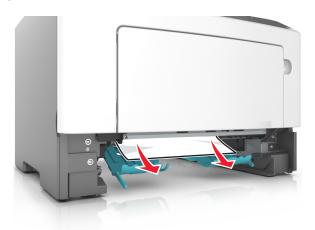

- 4 Insert the tray.
- **5** From the printer control panel, press to clear the message and continue printing.

#### **Duplex service check**

Action	Yes	No
<ul> <li>Step 1</li> <li>a Remove the rear cover. See "Rear door and cover removal" on page 206.</li> <li>b Check the redrive rollers for wear or damage.</li> </ul>	Go to step 2.	Replace the redrive assembly. See "Redrive assembly removal" on page 209.
Are they free of wear or damage?		
a Remove the left cover. See "Left cover removal" on page 144.  b Perform a duplex print test:     Diagnostics Menu > Cont Prt Duplex Tray 1  c Check the reverse solenoid for proper operation.	Go to step 3.	Replace the reverse solenoid. See "Reverse solenoid removal" on page 152.
Does it function properly?	Ca ta atau 4	Davidson the develop
<ul> <li>Step 3</li> <li>a Remove the input tray.</li> <li>b From under the printer, check the duplex gear assembly and duplex link for wear and damage.</li> </ul>	Go to step 4.	Replace the duplex gear assembly. See "Duplex gear assembly removal" on page 158.
Are the they free of wear and damage?		
Step 4 From under the printer, check the duplex, belt, and roller for wear and damage.	Go to step 5.	Replace the duplex. See "Duplex removal" on page 192.
Are they free of wear and damage?		
<ul> <li>Step 5</li> <li>a Remove the input tray.</li> <li>b Check the duplex sensor for damage.</li> </ul>	Go to step 6.	Replace the duplex sensor. See "Duplex sensor and input sensor removal" on page 193.
Step 6 Does the error remain?	Contact the next level of support.	The problem is solved.

## 240 paper jams

#### 24y.xx paper jam messages

Error code	Description	Action
241.01	Paper over tray 1 pass thru sensor on warmup.	Go to "Tray 1 jam service check" on page 80.
241.02	Sensor (input) early arriving jam.	
241.03	Tray 1 pass thru sensor never became covered when feeding a sheet from an option below.	
241.07	Option tray 1 pass thru sensor never became uncovered when feeding a sheet from an option below.	
241.13	The media is late reaching the sensor (input) within the specified time from tray 1.	
241.14	The media is late reaching the sensor (input) within the specified time from tray 1.	Go to "Tray 1 jam service check" on page 80.
241.15	Media tray 1, tray pulled jam.	
241.16	The engine timed out waiting for the tray 1 to report 'ready' before the 1st pick attempt.	
241.17	Page was not properly picked from tray 1. Have not exhausted all pick retry attempts as there are sheets committed to the paper path from below.	
241.18	Failed to feed from tray 1. Exhausted all pick retries. Paper present sensing indicates media is in the tray.	Go to "Tray 1 jam service check" on page 80.
241.20	Took too long to ramp up media feeder motor in tray 1.	
241.21	Media feeder motor stall in tray 1.	
241.22	Media feeder motor pick motor underspeed in tray 1.	
241.24	Media feeder motor stalled on the last pick attempt in tray 1.	Go to "Tray 1 jam service check" on page 80.
241.29	Tray 1 lift plate failed to make the index sensor while elevating.	
241.32	Media tray not ready.	
241.33	The media tray was pulled during the media pick process.	
241.41	Media feeder motor stall in tray 1.	Go to "Tray 1 jam service check" on page 80.
241.42	Media feeder motor pick motor under-speed in tray 1.	
241.43	Media feeder motor stalled on the last pick attempt in tray 1.	
241.44	Motor 2 (Separator/Passthru) motor stalled.	

Error code	Description	Action
241.45	Motor 2 (Separator/Passthru) motor PWM overflow error (underspeed). Motor underspeed (max PWM and motor underspeed, typical accordion jam).	Go to "Tray 1 jam service check" on page 80.
241.46	Motor 2 (Separator/Passthru) motor ramp (end ramp - did not reach speed, typical pack feed paper jam).	
241.47	Motor 3 motor stalled.	
241.48	Motor 3 motor PWM overflow error (underspeed). Motor underspeed (max PWM and motor underspeed, typical accordion jam).	
241.49	Motor 3 motor ramp (end ramp - did not reach speed, typical pack feed paper jam).	
242.01	Paper over tray 2 pass thru sensor on warmup.	Go to "Option tray jam service check" on page 81.
242.02	Input sensor detected late feed during a pick retry from tray 2.	
242.03	Tray 2 pass thru sensor never became covered when feeding a sheet from an option below.	
242.06	Failed to feed from tray. Paper present sensing supported and indicates media still in tray.	
242.07	Option tray 2 pass thru sensor never became uncovered when feeding a sheet from an option below.	
242.09	Tray 2 pick motor lost encoder.	Go to "Option tray jam service check" on page 81.
242.11	Autocomp Pick/Lift Motor—Encoder Never Detected in tray 2.	
242.12	Motor ramp up error in tray 2.	
242.13	Page to be stapled failed to feed from tray.	
242.14	Sheets flushed from paper path either due to feed error or cartridge error.	Go to "Option tray jam service check" on page 81.
242.15	One or more trays located above the source tray 2 has been pulled.	
242.16	The engine timed out waiting for the tray 2 to report ready before the 1st pick attempt.	
242.17	Page was not properly picked from tray 2. Have not exhausted all pick retry attempts as there are sheets committed to the paper path from below.	
242.19	Tray 2 fail to feed error. Detected while trying to pick a sheet, and that leading edge was not detected by tray sensor.	Go to "Option tray jam service check" on page 81.
242.20	Took too long to ramp up dc feed motor in tray 2.	
242.21	Pick motor stall in tray 2.	
242.22	Tray 2 pick motor underspeed.	

Error code	Description	Action
242.24	DC Feed autocompensator stalled on the last pick attempt in tray 2.	Go to "Option tray jam service check" on page 81.
242.32	Tray not ready.	
242.33	Pick received but detected a tray pulled.	
242.41	Motor 1 (Pick/Lift) Elevator motor stalled.	
242.42	Motor 1 (Pick/Lift) Elevator motor PWM overflow error (underspeed). Motor underspeed (max PWM and motor underspeed, typical accordion jam).	Go to "Option tray jam service check" on page 81.
242.43	Motor 1 (Pick/Lift) motor ramp (end ramp - did not reach speed, typical pack feed paper jam).	
242.44	Motor 2 (Separator/Passthru) motor stalled.	
242.45	Motor 2 (Separator/Passthru) motor PWM overflow error (underspeed). Motor underspeed (max PWM and motor underspeed, typical accordion jam).	
242.46	Motor 2 (Separator/Passthru) motor ramp (end ramp - did not reach speed, typical pack feed paper jam).	
242.47	Motor 3 motor stalled.	Go to "Option tray jam service check" on page 81.
242.48	Motor 3 motor PWM overflow error (underspeed). Motor underspeed (max PWM and motor underspeed, typical accordion jam).	
242.49	Motor 3 motor ramp (end ramp - did not reach speed, typical pack feed paper jam).	
243.01	Paper over tray 3 pass thru sensor on warmup.	
243.02	Input sensor detected late feed during a pick retry from tray 3.	Go to "Option tray jam service check" on page 81.
243.03	tray 3 pass thru sensor never became covered when feeding a sheet from an option below.	
243.06	Failed to feed from tray. Paper present sensing supported and indicates media still in tray.	
243.07	Option tray 3 pass thru sensor never became uncovered when feeding a sheet from an option below.	
243.09	Tray 3 pick motor lost encoder.	Go to "Option tray jam service check" on page 81.
243.10	Failed to feed from tray.	
243.11	Autocomp Pick / Lift Motor - Encoder never detected in tray 3.	
243.12	Motor ramp up error in tray 3.	

Error code	Description	Action
243.13	Page to be stapled failed to feed from tray.	Go to "Option tray jam service check" on page 81.
243.14	Sheets flushed from paper path either due to feed error or cartridge error.	
243.15	One or more trays located above the source tray 3 has been pulled.	
243.16	The engine timed out waiting for the tray 3 to report 'ready' before the 1st pick attempt.	
243.17	Page was not properly picked from tray 3. Have not exhausted all pick retry attempts as there are sheets committed to the paper path from below.	Go to "Option tray jam service check" on page 81.
243.19	Tray 3 fail to feed error. Detected while trying to pick a sheet, and that leading edge was not detected by tray sensor.	
243.20	Took too long to ramp up dc feed motor in tray 3.	
243.21	Pick motor stall in tray 3.	
243.22	Tray 3 pick motor underspeed.	Go to "Option tray jam service check" on page 81.
243.24	DC Feed autocompensator stalled on the last pick attempt in tray 3.	
243.32	Tray not ready.	
243.33	Pick received but detected a tray pulled.	
243.41	Motor 1 (Pick/Lift) Elevator motor stalled.	Go to "Option tray jam service check" on page 81.
243.42	Motor 1 (Pick/Lift) Elevator motor PWM overflow error (underspeed). Motor underspeed (max PWM and motor underspeed, typical accordion jam).	
243.43	Motor 1 (Pick/Lift) motor ramp (end ramp - did not reach speed, typical pack feed paper jam).	
243.44	Motor 2 (Separator/Passthru) motor stalled.	
243.45	Motor 2 (Separator/Passthru) motor PWM overflow error (underspeed). Motor underspeed (max PWM and motor underspeed, typical accordion jam).	Go to "Option tray jam service check" on page 81.
243.46	Motor 2 (Separator/Passthru) motor ramp (end ramp - did not reach speed, typical pack feed paper jam).	
243.47	Motor 3 motor stalled.	
243.48	Motor 3 motor PWM overflow error (underspeed). Motor underspeed (max PWM and motor underspeed, typical accordion jam).	

Error code	Description	Action	
243.49	Motor 3 motor ramp (end ramp - did not reach speed, typical pack feed paper jam).	Go to "Option tray jam service check" on page 8	
244.01	Paper over tray 4 pass thru sensor on warmup.		
244.02	Input sensor detected late feed during a pick retry from tray 4.		
244.03	Tray 4 pass thru sensor never became covered when feeding a sheet from an option below.		
244.06	Failed to feed from tray. Paper present sensing supported and indicates media still in tray.	Go to "Option tray jam service check" on page 81.	
244.07	Option tray 4 pass thru sensor never became uncovered when feeding a sheet from an option below.		
244.09	Tray 4 pick motor lost encoder.		
244.11	Autocomp Pick / Lift Motor - Encoder Never Detected in tray 4.		
244.12	Motor ramp up error in tray 4.	Go to "Option tray jam service check" on page 83	
244.13	Page to be stapled failed to feed from tray.		
244.14	Sheets flushed from paper path either due to feed error or cartridge error.		
244.15	One or more trays located above the source tray 4 has been pulled.		
244.16	The engine timed out waiting for the tray 4 to report 'ready' before the 1st pick attempt.	Go to "Option tray jam service check" on page 81.	
244.17	Page was not properly picked from tray 4. Have not exhausted all pick retry attempts as there are sheets committed to the paper path from below.		
244.19	Tray 4 fail to feed error. Detected while trying to pick a sheet, and that leading edge was not detected by tray sensor.		
244.20	Took too long to ramp up dc feed motor in tray 4.		
244.21	Pick motor stall in tray 4.	Go to "Option tray jam service check" on page 81.	
244.22	Tray 4 pick motor underspeed.		
244.24	DC Feed autocompensator stalled on the last pick attempt in tray 4.		
244.32	Tray not ready.		

Error code	Description	Action
244.33	Pick received but detected a tray pulled.	Go to "Option tray jam service check" on page 81.
244.41	Motor 1 (Pick/Lift) Elevator motor stalled.	
244.42	Motor 1 (Pick/Lift) Elevator motor PWM overflow error (underspeed). Motor underspeed (max PWM and motor underspeed, typical accordion jam).	
244.43	Motor 1 (Pick/Lift) motor ramp (end ramp - did not reach speed, typical pack feed paper jam).	
244.44	Motor 2 (Separator/Passthru) motor stalled.	Go to "Option tray jam service check" on page 81.
244.45	Motor 2 (Separator/Passthru) motor PWM overflow error (underspeed). Motor underspeed (max PWM and motor underspeed, typical accordion jam).	
244.46	Motor 2 (Separator/Passthru) motor ramp (end ramp - did not reach speed, typical pack feed paper jam).	
244.47	Motor 3 motor stalled.	
244.48	Motor 3 motor PWM overflow error (underspeed). Motor underspeed (max PWM and motor underspeed, typical accordion jam).	
244.49	Motor 3 motor ramp (end ramp - did not reach speed, typical pack feed paper jam).	


#### [x]-page jam, remove tray [x]. [24y.xx]

1 Pull out the tray completely.



2 Firmly grasp the jammed paper on each side, and then gently pull it out.

**Note:** Make sure all paper fragments are removed.

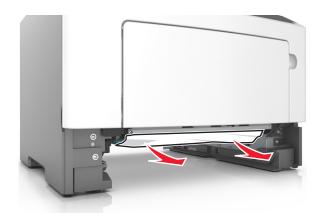

- **3** Insert the tray.
- **4** From the printer control panel, press to clear the message and continue printing.

### Tray 1 jam service check

Action	Yes	No
Step 1	Go to step 2.	Replace the pick tires.
Check the pick tires.		
Are they free of wear or damage?		
Step 2	Go to step 3.	Replace the tray insert.
Check the tray guides and wear strips.		
Are they free of wear or damage?		
Step 3	Go to step 7.	Go to step 4.
<b>a</b> POR into the Diagnostics menu and perform a print test:		
Diagnostics Menu > Cont Prt Simplex Tray 1		
<b>b</b> Cancel the test after five pages.		
Does the printer successfully feed the five pages into the output bin?		
Step 4	Go to step 5.	Replace the trailing
Observe the location of the jammed paper.		edge sensor. See "Trailing edge sensor
Are the first page fed to the output bin, the second page jammed in the rear door, and the third page jammed in the input tray?		removal" on page 196.
Step 5	Go to step 6.	Replace the ACM
Check the ACM assembly.		assembly. See "ACM assembly removal" on
Is it free of wear or damage?		page 201.

Action	Yes	No
Step 6 Check the MPF gearbox. Is it free of wear or damage?	Go to step 7.	Replace the MPF gearbox. See "MPF gearbox removal" on page 149.
Step 7 Check the main drive gearbox. Is it free of wear or damage?	Go to step 8.	Replace the main drive gearbox. See"Main drive gearbox removal" on page 145.
Step 8 Does the error remain?	Contact the next level of support.	The problem is solved.

### Option tray jam service check

Action	Yes	No
Step 1	Replace the option	Go to step 2.
Restart the printer.	tray.	
Does it fail to complete the POST sequence and display a 242.01 error?		
Step 2	The problem is solved.	Go to step 3.
<b>a</b> POR into the Diagnostics menu and perform a print test:		
Diagnostics Menu > Cont Prt Simplex Tray 2		
<b>b</b> Cancel the test after five pages.		
Does the printer successfully feed the five pages into the output bin?		
Step 3	Replace the ACM	Go to step 4.
Does the printer display a 242.06 error?	assembly. See "ACM assembly removal" on page 216.	
Step 4	Go to step 5.	Replace the pick roller
Check the pick roller assembly.		assembly. See "Pick roller removal" on
Is it free of wear or damage?		page 213.
Step 5	Go to step 6.	Replace the separator
Check the separator roll assembly.		roll assembly. See  "Separator roll
Is it free of wear or damage?		assembly removal" on page 214.
Step 6	Go to step 7.	Replace the tray insert.
Check the tray guides and wear strips.		
Are they free of wear or damage?		

Action	Yes	No
Step 7 Check the ACM assembly. Is it free of wear or damage?	Go to step 8.	Replace the ACM assembly. See "ACM assembly removal" on page 216.
Step 8  POR into the Diagnostics menu and perform a print test:  Diagnostics Menu > Cont Prt Simplex Tray 2  Does the pick/lift motor gearbox pass the test?	Go to step 9.	Replace the option tray.
Step 9 Does the error remain?	Contact the next level of support.	The problem is solved.

### 250 paper jams


#### 25y.xx paper jam messages

Error code	Description	Action
250.06	Input sensor did not detect sheet picked from MPF. No other sheets should be in the path.	Go to "MPF service check" on page 83.
250.10	Input sensor did not detect sheet picked from MPF. No other sheets should be in the path.	
250.13	Input sensor did not detect sheet picked from MPF. Sheet also last page of stapled job.	
250.14	Input sensor did not detect sheet picked from MPF. Other sheets should have been flushed.	
250.17	Input sensor did not detect sheet picked from MPF. No other sheets should be in the path.	
250.18	Input sensor did not detect sheet picked from MPF. Other sheets could be in the path.	


#### [x]-page jam, clear manual feeder. [250.xx]

1 From the multipurpose feeder, firmly grasp the jammed paper on each side, and then gently pull it out.

**Note:** Make sure all paper fragments are removed.

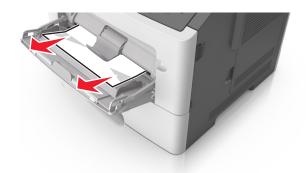

**2** Flex the sheets of paper back and forth to loosen them, and then fan them. Do not fold or crease the paper. Straighten the edges on a level surface.



**3** Reload paper into the multipurpose feeder.



**Note:** Make sure the paper guide lightly rests against the edge of the paper.

**4** From the printer control panel, press to clear the message and continue printing.

#### MPF service check

Action	Yes	No
Step 1 Check the springs, links, and tray guides on the MPF assembly for damage. Are they free of damage?	Go to step 2.	Replace the MPF assembly. See "MPF assembly removal" on page 177.
Step 2 Check the MPF sensor cable for proper connection to the controller board.  Is it properly connected?	Go to step 3.	Reseat the cable.

Action	Yes	No
Step 3 Check the MPF sensor for damage.	Go to step 4.	Replace the front input guide. See "Front input guide removal" on page 186.
Is it free of damage?		
Step 4  Make sure the MPF pick roller and separator pad are free of debris. Check both for wear or damage.  Are they free of damage?	Go to step 5.	Replace the MPF pick roller and separator pad. See "MPF pick roller removal" on page 180 and "Separator pad removal" on page 188.
Step 5	Go to step 6.	Replace the MPF
a Remove the left cover.		solenoid. See "MPF
<b>b</b> Run a print job from the MPF.		solenoid removal" on page 147.
<b>c</b> Check the MPF solenoid for proper operation.		page 147.
Does it function properly?		
Step 6	Go to step 7.	Replace the MPF gearbox. See "MPF
<ul><li>a Make sure the MPF gearbox is free of debris.</li><li>b Check the gears and spring of the MPF gearbox for wear or damage.</li></ul>		gearbox removal" on page 149.
Are they free of damage?		
Step 7	Contact the next level	The problem is solved.
Does the error remain?	of support.	

# User attendance messages (0-99.99)

## User attendance messages (0-99.99)

#### User attendance messages

Error code	Description	Action
31.21	Capactive Toner Level Sensing (CTLS) reading out of range.	Go to "CTLS service check" on page 95.
31.22	Excessive CTLS noise.	
31.23	Abrupt change detected in CTLS reading.	
31.25	CTLS calibration capacitor reading is too low	

Error code	Description	Action
31.40	Toner cartridge smart chip error	1 Make sure that the toner cartridge is properly
31.41	Toner cartridge I2C packet timeout	installed.
31.42	Toner cartridge I2C packet has been sent but code timed-out on receiving the data (callback)	<ul> <li>2 Check if the toner cartridge is supported. Replace with a supported toner cartridge if necessary.</li> <li>3 If the problem remains, go to "Toner cartridge"</li> </ul>
31.43	Toner cartridge security error in the send challenge sequence	smart chip contact service check" on page 87.
31.44	Toner cartridge ROM signature error	
31.45	Toner cartridge stuck busy (Status register and/or CRI Arbiter register report busy)	
31.46	Toner failed to replenish into the imaging unit	Make sure that the toner cartridge is properly installed.
		2 Check if the toner cartridge is supported. Replace
		with a supported toner cartridge if necessary.  3 If the problem remains, go to "Cartridge gearbox"
		service check" on page 96.
31.60	Imaging unit smart chip error	1 Make sure that the imaging unit is properly
31.61	Imaging unit I2C packet timeout	installed. <b>2</b> Check if the imaging unit is supported. Replace
31.62	Imaging unit I2C packet has been sent but code timedout on receiving the data (callback)	with a supported imaging unit is supported. Replace with a supported imaging unit if necessary.  3 If the problem remains, go to "Imaging unit smart"
31.63	Imaging unit security error in the send challenge sequence	chip contact service check" on page 87.
31.64	Imaging unit ROM signature error	
31.65	Imaging unit stuck busy (status register and/or CRI Arbiter register report busy)	
31.66	Toner failed to replenish into the imaging unit	Make sure that the toner cartridge is properly installed.
		2 Check if the toner cartridge is supported. Replace
		with a supported toner cartridge if necessary.  3 If the problem remains, go to "Cartridge gearbox"
		service check" on page 96.
32.01	Capacity Class/ Model compatibility mismatch. The supplies CC/MC is not compatible with the printer's	1 Check if the toner cartridge is supported. Replace
	CC/MC setting.	with a supported toner cartridge if necessary.  2 Check if the firmware level is compatible with the
32.05	OEM Mismatch. The supplies OEM ID is not compatible with the printer's machine class.	printer serial number. Flash with the correct firmware level if necessary.
32.10	Toner cartridge smart chip compatibility error	<b>3</b> If problem remains, contact next level of support.
32.11	Imaging unit smart chip compatibility error	Check if the imaging unit is supported. Replace with a supported imaging unit if necessary.
		<b>2</b> Check if the firmware level is compatible with the printer serial number. Flash with the correct firmware level if necessary.
		<b>3</b> If problem remains, contact next level of support.

Error code	Description	Action
34	Media size mismatch (too short or too narrow)	<ol> <li>Make sure the media size setting matches the paper in the tray.</li> <li>Restore the engine settings to their defaults:         <ul> <li>Diagnostics Menu &gt; Printer Setup &gt; Defaults</li> </ul> </li> <li>Restore the EP setup settings to their defaults:         <ul> <li>Diagnostics Menu &gt; EP Setup &gt; Defaults</li> </ul> </li> <li>If the problem remains, go to "Media size mismatch service check" on page 88.</li> </ol>
35	Res save off deficient memory	1 Disable the Resource save feature:
37	Insufficient collation area	Settings > Print Settings > Setup Menu > Resource Save > Off
38	Memory full	2 If the problem remains, go to "Insufficient memory service check" on page 89.
41.xy	Bottle/IU toner type mismatch	1 Check if the toner cartridge is supported. Replace
42	Printer/cartridge mismatch	<ul> <li>with a supported toner cartridge if necessary.</li> <li>If the problem remains, go to "Printer/cartridge mismatch service check" on page 88.</li> </ul>
52	Flash full	Format the flash memory:  Settings > Print Settings > Utilities > Format Flash  If the problem remains:  1 Remove the installed memory, and reset the printer. If the problem does not reoccur, replace the memory card.  2 If the problem remains, replace the controller board.
54	Network error	<ul> <li>Make sure the printer is properly setup on the network.</li> <li>If the problem remains:</li> <li>1 Remove the wireless network option, and reset the printer. If the problem does not reoccur, replace the wireless network option.</li> <li>2 If the problem remains, replace the controller board.</li> </ul>
80	Maintenance kit (MS510 and MS610 only)	Replace the maintenance kit, and then reset the Maintenance counter.
84	Imaging unit low	<ol> <li>Replace the imaging unit.</li> <li>Make sure the imaging unit smart chip contact cable is properly connected to the controller board.</li> <li>Make sure the contacts are free of debris.</li> <li>Check the contacts for damaged pins. If damaged, replace the printer.</li> <li>If the contacts are free of damage, contact your next level of support.</li> </ol>

Error code	Description	Action
88	Toner cartridge low	Make sure the toner cartridge smart chip contact cable JARW1 is properly connected to the controller board.
		2 Make sure the contacts are free of debris.
		<b>3</b> Check the contacts for damaged pins. If damaged, replace the toner cartridge smart chip contact.
		<b>4</b> If the contacts are free of damage, contact your next level of support.

## Toner cartridge smart chip contact service check

Action	Yes	No
Step 1	Go to step 2.	Reseat the cable.
Check the cable JARW1 for proper connection to the controller board.		
Is it properly connected?		
Step 2	Replace the controller	Replace the toner
Check the toner cartridge smart chip contact for damaged pins.	board. See "Controller board removal" on	cartridge smart chip contact. See "Toner
Is it free of damage?	page 162.	cartridge smart chip contact removal" on page 164.

## Imaging unit smart chip contact service check

Action	Yes	No
Step 1	Go to step 2.	Reseat the cables.
Check the cable JARW2 for proper connection to the controller board.		
Is it properly connected?		
Step 2	Replace the controller	Replace the printer.
Check the imaging unit smart chip contact for damaged pins.	board. See "Controller board removal" on	
Is it free of damage?	page 162.	

#### Media size mismatch service check

Action	Yes	No
Step 1	Go to step 2.	Replace the input tray.
Check the input tray for damage.		
Is it free of damage?		
Step 2	Go to step 3.	Replace the trailing
<b>a</b> Make sure the trailing edge sensor is free of debris.		edge sensor. See "Trailing edge sensor
<b>b</b> Check it for damage.		removal" on page
Is it free of damage?		190.
Step 3	Go to step 4.	Replace the input
<b>a</b> Make sure the input sensor is free of debris.		sensor. See "Duplex sensor and input
<b>b</b> Check the input sensor for damage.		sensor and input sensor removal" on page 193.
Is it free of damage?		page 133.
Step 4	Go to step 5.	Replace the narrow
Check the narrow media/bin full sensor for damage.		media/bin full sensor. See "Narrow
Is it free of damage?		media/bin full sensor
is three of dumage.		removal" on page 207.
Step 5	Go to step 6.	Replace the main drive
<b>a</b> Remove the main drive gearbox.		gearbox. See "Main
<b>b</b> Check the gears for wear or damage.		drive gearbox removal" on page
<b>c</b> Check the main drive motor for rotation.		145.
Are the gears free of wear or damage and does the main drive motor rotate?		
Step 6	Problem is solved.	Contact the next level
Replace the controller board.		of support.
Does the error remain?		

## Printer/cartridge mismatch service check

Action	Yes	No
<ul> <li>Step 1</li> <li>a Make sure the toner cartridge smart chip contact cable JARW1 is properly connected to the controller board.</li> <li>b Make sure the toner cartridge smart chip contact is free of debris.</li> <li>c Check the toner cartridge smart chip contact for damaged pins.</li> <li>Is it free of damage?</li> </ul>	Go to step 2.	Replace the toner cartridge smart chip contact. See "Toner cartridge smart chip contact removal" on page 164.

Action	Yes	No
Step 2 Check if the firmware level matches the serial number.  Do they match?	Replace the controller board. See "Controller board removal" on page 162.	Reflash the firmware.

# Insufficient memory service check

Action	Yes	No
Step 1 Check the memory card for proper installation.	Go to step 2.	Reseat the memory card.
Is it properly installed?		
Step 2 a POR into the Configuration menu and reset the printer's settings to factory default: Configuration Menu > Restore Base b Remove the memory card. c Restart the printer.	Replace the controller board. See "Controller board removal" on page 162.	Replace the memory card.
Does the error remain?		

## **Printer hardware errors**

### 1xx error messages

Funo u cardo	Description	A chian
Error code	Description	Action
111.00	Pel clock check failed.	Go to "111.xx LSU service check" on page 93.
111.01	Downlevel ASIC detected.	
111.31	Printhead never delivered HSYNCs.	
111.32	Printhead lost HSYNCs.	
111.40	Wrong printhead installed	
111.50	Open-loop printhead error, open-loop sweep state.	
111.51		
111.52	Open-loop printhead error, check prelim amp state.	
111.53	Open-loop printhead error, enable amp Kp state.	
111.54	Closed-loop printhead error, amp Kp failed to converge.	
111.55	Closed-loop printhead error while waiting for amp Kp to converge.	
111.56	Closed-loop printhead error, amp Ki failed to converge.	
111.57	Closed-loop printhead error while waiting for amp Ki to converge.	
111.58	Closed-loop printhead error, load scan regs state.	
111.59	Closed-loop printhead error, forward and reverse capture times differ by too much.	
111.60	Closed-loop printhead sweep error, check sweep accuracy state.	
111.61	Printhead drive control out of range due to an external event beyond what the control is designed to handle.	
111.62	Closed-loop printhead error, off-resonant PI effort state.	
111.63	Timed out on POR sweep.	
111.64	Attempted to exceed open loop drive limits.	
111.65		
111.66	Failed alignment of printhead.	
111.67		
111.68	Too many fake HSYNCs while aligning printhead.	
111.69	:	

Error code	Description	Action
121.07	Fuser has been on for more than allowed after a gap blowout, and the temperature is still too cold.	1 Restore the engine settings to their defaults Diagnostics Menu > Printer Setup > Default
121.08	Fuser was under temp when page was in fuser.	<b>2</b> Restore the EP setup settings to their defaults:
121.20	Fuser undertemp during steady state control. Can ocurr in printing or standby modes.	Diagnostics Menu > EP Setup > Defaults  3 If the problem remains, go to "Fuser service
121.22	Fuser did not warm enough to start line voltage detection.	check" on page 93.
121.23	Fuser took too long to heat to line detection temp.	
121.24	Fuser never reached detection temperature.	
121.25	After line voltage detection, control did not roll over to steady state control in time.	
121.26	Failed to reach temperature during warm up.	
121.28	Failed to reach EP warm up temperature in time.	
121.29	Fuser failed to reach pre-heat temperature for motor start during warm up.	
121.30	Fuser failed to reach printing temperature by the time a page reached the fuser.	
121.31	Fuser is too hot. Global overtemp check.	
121.32	Open fuser main thermistor.	
121.33	Open fuser edge thermistor.	
121.34	Open fuser backup roll thermistor.	
121.35	Attempting to POR after receiving a 121.34.	
121.36	Fuser did not heat to allow compression jog.	
121.37	Fuser heated faster than allowed during line voltage detection.	
126.01	Line frequency outside operating range of device.	1 Check the power cord for continuity. Replace
126.02	No line frequency detected.	<ul> <li>if necessary.</li> <li>2 Make sure the nominal voltage source is within specification. See "Electrical specifications" on page 237.</li> <li>3 If the problem remains, go to "LVPS service check" on page 94.</li> </ul>

Error code	Description	Action
132.01	TDS baseline too low.	Go to "Toner density sensor service check" on
132.02	TDS baseline too high.	page 94.
132.03	TDS baseline excessive range.	
132.16	TDS calibration at maximum.	
132.17	TDS calibration too low.	
132.18	TDS calibration too close to baseline.	
132.32	PC drum measurement too high.	
132.33	PC drum measurement too different from calibration.	
132.34	PC drum measurement too close to baseline.	
133.05	CTLS reading above maximum expected value.	Go to "CTLS service check" on page 95.
133.06	CTLS reading below minimum expected value.	
133.08	Excessive CTLS noise.	
140.10	Transport motor halls not detected.	Go to "Main drive gearbox service check" on
140.20	Transport motor took too long to stop.	page 95.
140.30	Transport motor unable to lock (before motor ID).	
140.40	Transport motor overspeed detected.	
140.60	Transport motor unable to lock (after motor ID).	
140.70	Transport motor out of lock detected.	
140.80	Transport motor excessive PWM or overtemp.	
155.00	No encoder received from auger motor.	Go to "Cartridge gearbox service check" on page 96.
171.03	Fuser fan error.	Go to "Cooling fan service check" on page 109.
171.04		
171.05		
171.06		
171.07		

#### 111.xx LSU service check

Action	Yes	No
Step 1 Check the LSU cables JVIDEO1 and JGLV1 for proper connection.	Go to step 2.	Reseat the cables.
Are they properly connected?		
Step 2 Inspect the LSU cables and connectors.	Replace the controller board. See "Controller board removal" on	Replace the LSU. See "Laser scanning unit (LSU) removal" on
Are they free of damage?	page 162.	page 212.

### **Fuser service check**

Action	Yes	No
<ul> <li>Step 1</li> <li>Check the fuser cables JTHERM1 and JEXIT for proper connection to the controller board.</li> <li>Check the cable PCN5 for proper connection to the power supply.</li> </ul> Are they properly connected?	Go to step 2.	Reseat the cables.
Step 2 Are the cables JTHERM1, JEXIT and PCN5 free of damage?	Go to step 3.	Replace the fuser. See "Fuser removal" on page 210.
<ul> <li>Step 3</li> <li>a Turn off the printer.</li> <li>b Remove the rear door and cover.</li> <li>c Disconnect the fuser cable connected to PCN5 of the power supply.</li> <li>d Check for approximate correct resistance on the fuser cable: <ul> <li>220V fuser—43 ohms</li> <li>110V fuser—10 ohms</li> <li>100V fuser—8 ohms</li> </ul> </li> <li>Is the resistance equal to any of the above values?</li> </ul>	Perform an LVPS service check. See "LVPS service check" on page 94.	Replace the fuser. See "Fuser removal" on page 210.
Step 4 Check the fuser rollers, belts and gears for damage and debris.  Are they free of damage and debris?	Perform a cooling fan service check and LVPS service check. See "Cooling fan service check" on page 109 and "LVPS service check" on page 94.	Replace the fuser. See "Fuser removal" on page 210.

#### **LVPS** service check

Action	Yes	No
Step 1 Check if the power supply cable is properly connected to the controller board.	Go to step 2.	Reseat the cables.
Is it properly connected?		
Step 2 a Turn off the printer. b Remove the power cord. c Measure the resistance between terminals A and D of the power supply socket.	Contact your next level of support.	Replace the power supply. See "Power supply removal" on page 190.
Is the resistance approximately 30 ohms?		

## Toner density sensor service check

Action	Yes	No
Step 1 Remove the transfer roll, and check for loose toner blocking the toner density sensor. Is it free of loose toner?	Go to step 2.	Clean the sensor.
Step 2 Check the toner density sensor for proper operation: a Lower the ACM assembly. b Move the toner density sensor wiper from left to right.  Does it move freely?	Go to step 3.	Reinstall the wiper properly. If it still cannot move freely, replace the toner density sensor. See "Toner density sensor removal" on page 195.
Step 3 Check the toner density sensor cable for proper connection to the controller board.  Is it properly connected?	Go to step 4.	Reseat the cable.
Step 4 Check the toner density sensor cable for damage and pinch points. Is it free of damage?	Replace the controller board. See "Controller board removal" on page 162.	Replace the toner density sensor. See "Toner density sensor removal" on page 195.

#### **CTLS** service check

Action	Yes	No
Step 1	Go to step 2.	Clean the CTLS.
Check for loose toner blocking the CTLS.		
Is it free of any loose toner?		
Step 2	Go to step 3.	Reseat the cables.
Check the cable PCN3 for proper connection to the power supply.		
Check the CTLS cable for proper connection to the controller board.		
Are they properly connected?		
Step 3	Replace the controller	Replace the printer.
Check the cable PCN3 and CTLS cable for damage.	board. See "Controller board removal" on	
Are they free of damage?	page 162.	

## Main drive gearbox service check

Action	Yes	No
Step 1 Remove the main drive gearbox and check for any debris.	Go to step 2.	Remove the debris.
Is it free of debris?		
Step 2	Go to step 3.	Replace the main drive
Check the gears of main drive gearbox for wear or damage.		gearbox. See "Main drive gearbox
Are they free of wear or damage?		removal" on page 145.
Step 3	Replace the controller	Replace the main drive
Check the main drive motor for proper operation:	board. See "Controller	gearbox. See "Main
<b>a</b> Remove the main drive gearbox.	board removal" on page 162.	drive gearbox removal" on page
<b>Note:</b> Do not disconnect the main drive gearbox cable.	page aca.	145.
<b>b</b> Perform a print job.		
<b>c</b> Check if the main drive motor rotates when printing.		
Does it rotate when printing?		

# Cartridge gearbox service check

Action	Yes	No
Step 1 Check the gear on the toner cartridge for wear or damage.	Go to step 2.	Replace the toner cartridge.
Is it free of wear or damage?		
Step 2 Check the gears on the cartridge gearbox for proper rotation and for wear or damage.	Go to step 3.	Replace the cartridge gearbox. See "Cartridge gearbox removal" on page 158.
Does it rotate properly and is it free of wear or damage?		130.
Step 3 Check the cartridge gearbox cable for proper connection to the controller board.	Go to step 4.	Reseat the cable.
Is it properly connected?		
Step 4 Check the cartridge gearbox cable for damage.	Replace the controller board. See "Controller board removal" on page 162.	Replace the cartridge gearbox. See "Cartridge gearbox removal" on page
Is it free of damage?		158.

## 9xx error messages

Error code	Description	Action
900.xx	RIP firmware errors	Go to "System software error service check" on page 99.
912.xx	Unrecoverable Engine firmware error	POR the machine. If the error re-occurs, then update the firmware. If the error continues occurring, then replace the controller board. Go to "Controller board removal" on page 162.
940.xx	RIP to engine communication failure—the zero crossing signal used for fuser control in the low voltage (LV) power supply has failed, or the wrong low voltage power supply has been installed.	Check the LVPS. Go to "LVPS service check" on page 94.
948.xx	Failed engine card—pel clock check failed.	Replace the controller board. Go to "Controller
949.xx	Failed engine card—delay line calibration failure.	board removal" on page 162.

Error code	Description	Action
950.xx	NVRAM mismatch failure—mismatch between controller board EEPROM and control panel mirror.	Warning—Potential Damage: When replacing any of the following components:
	".xx" codes:	Control panel assembly
	• 00-29— mismatch between system and mirror	Controller board assembly
	• 30-60—mismatch between secure and system	Replace only one component at a time. Replace the required component and perform a POR before replacing a second component listed above. If this procedure is not followed, the printer will be rendered inoperable. Never replace two or more of the components listed above without a POR after installing each one or the printer will be rendered inoperable.
		Never install and remove components listed above as a method of troubleshooting components. Once a component has been installed in a machine, it can not be used in another machine. It must be returned to the manufacturer.
		Go to "NVRAM mismatch failure service check" on page 104.
952.xx	A recoverable NVRAM Cyclic Redundancy Check (CRC) error occurred—n is the offset at which the error occurred.	POR the printer.
953.xx	NVRAM chip failure with mirror part	Replace the controller board. Go to "Controller
954.xx	NVRAM chip failure with system part	board removal" on page 162.
955.xx	The Code ROM or NAND flash failed the Cyclic Redundancy Check (CRC) or the NAND experienced an uncorrectible multi-bit failure.	
956.xx	RIP card failure—processor failure	
956.01	Processor Overtemp	
957.xx	RIP card failure—ASIC failure	
958.xx	Controller Board NAND Failure—printer has performed more than 100 shift and reflash operations as a result of ECC bit corrections.	
959.01	Controller verification failure of pensive boot code	Upgrade firmware. If that fails, replace the controller
959.02	Failure to authenticate Signature Verification Code	board. Go to "Controller board removal" on page 162.
959.03	Signature Verification Code failed to authenticate a code partition	
959.04	Jump to unverified address	
959.05	Unknown Boot Failure	
959.20	Pensive hardware failure	Replace the controller board. Go to "Controller board removal" on page 162.

Error code	Description	Action
959.21	Pensive did not respond to command request	Replace the controller board. Go to "Controller
959.22	Challenge Secret Failure	board removal" on page 162.
959.23	Pensive self test failed during initialization	
959.24	EEPROM Retention Error (Write failure)	
959.25	Insufficient device space during HW prog	
959.26	Incremental counter reset exceeds maximum value	
959.27	Increment count failed due to max value limit	
959.28	Invalid SP Memory Configuration	
959.30	Pensive library flagged an invalid argument(s)	Replace the controller board. Go to "Controller
959.31	Pensive library flagged an invalid device address	board removal" on page 162.
959.32	Failure to init physical interface	
959.33	Unknown/unexpected Error	
959.34	System Pensive Bus Busy Error	
959.35	Transmission Error	
959.36	Pensive command is invalid due to unlocked device status	
959.37	Pensive command is invalid due to locked device status	
959.38	Incremental counter id(s) are invalid	
959.39	Invalid NV address	
959.40	Invalid Pensive command	Replace the controller board. Go to "Controller
960.xx	RAM Memory Error—RAM soldered on the card is bad	board removal" on page 162.
961.xx	RAM Memory Error—optional DRAM is bad	Replace the bad memory card.
964.xx	Download Emulation Cyclic Redundancy Check (CRC)	<b>1</b> Disable the Download Emulation.
	Error—checksum failure detected in the emulation header or emulation file.	2 Program the download emulation into the firmware card again.
		<b>3</b> If the above steps do not resolve the problem, then replace the firmware card and download the emulation again.
975.xx	Network Error—unrecognizable network port	Call the next level of support.
976.xx	Network Error—unrecoverable software error in network port	
978.xx	Network Error—bad checksum while programming network port	
979.xx	Network Error—flash parts failed while programming network port	

Error code	Description	Action
980.xx	Engine experiencing unreliable communication with the specified device	Call the next level of support.
981.xx	Engine protocol violation detected by the specified device	
982.xx	Communications error detected by the specified device—device can be:	
	Engine, Duplex, Tray x, Env Feeder	
	Output Bin x (Note: Used for single bin devices)	
	Bins x to y (Note: Used for multiple bin devices)	
983.xx	Invalid command received by the specified device	
984.xx	Invalid command parameter received by the specified device	
990.xx	An equipment check condition has occurred in the specified device, but the device is unable to identify the exact component failure—device can be:	Call the next level of support.
	Engine, Duplex, Tray x, Env Feeder	
	Output Bin x (Note: Used for single bin devices)	
	Bins x to y (Note: Used for multiple bin devices)	
991.xx	The specified device has detected an equipment check in its controller board—device can be:	
	Engine, Duplex, Tray x, Env Feeder	
	Output Bin x (Note: Used for single bin devices)	
	Bins x to y (Note: Used for multiple bin devices)	

#### System software error service check

There are different types of 900.xx errors that can occur. There may be a communication problem (bad cable, network connection, and so on) software issue, or a hardware problem with the controller board, or ISP (internal solutions port). The communication and software aspects should be checked first. Determine if the problem is constant or intermittent. Use the troubleshooting procedure below to isolate the issue. Take any notes as instructed. You will need that information in the event you need to contact your next level of support.

**Note:** Before troubleshooting, determine the operating system used when the error occurred. If possible determine whether a PostScript or PCL file was sent to the device when the error occurred. Ask the customer which Lexmark Solutions applications are installed on the device.

Action	Yes	No
Step 1	Go to step 2.	The problem is solved.
POR the printer.		
Does the error remain?		
Step 2	Go to step 3.	Go to step 6.
<ul><li>a Write down the exact 900.xx error code displayed on the device.</li><li>b Turn off the printer.</li></ul>		
c Clear the print queues.		
d Disconnect all communication cables, and remove all memory options.		
e Remove any installed ISP.		
<b>f</b> POR the printer into the Diagnostics menu.		
Does the error remain during startup?		
Step 3	Go to step 5.	Go to step 4.
Check all the cables connected to the controller board for proper connectivity.		
Are the cables properly connected?		
Step 4	Go to step 5.	Go to step 6.
<b>a</b> Properly connect the cables to the controller board.		
<b>b</b> POR the printer into the Diagnostics menu.		
Does the error remain during startup?		
Step 5	Go to step 31.	The problem is solved.
<b>a</b> Replace the controller board.	·	·
<b>b</b> POR the printer.		
Does the error remain during startup?		
<b>Note:</b> If an error different from the original 900.xx is displayed, consult the service check for that error.		
Step 6	Go to step 31.	Go to step 7.
Print the following:		
Error log		
Menu settings page		
Network settings page		
Does the error remain while these pages were printing?		

Action	Yes	No
Step 7	Go to step 8.	Go to step 10.
<b>Note:</b> Before performing this step, write down the following information about the file being sent to the printer:		
Application used		
Operating system		
Driver type		
File type (PCL, PostScript, XPS, etc.)		
<b>a</b> Reattach the communications cable.		
<b>b</b> POR the printer.		
<b>c</b> Send the printer a print job.		
Does the error remain?		
Step 8	Go to step 9.	Go to step 10.
a POR the printer.		
<b>b</b> Send a different print job to the printer.		
Does the error remain?		
Step 9	Go to step 31.	Go to step 10.
<b>a</b> Upgrade the firmware.		
<b>Note:</b> Contact your next level of support for the correct firmware level to use.		
<b>b</b> POR the printer.		
<b>c</b> Send the printer a print job.		
Does the error remain?		
Step 10	Go to step 11.	Go to step 13.
Is the device an MFP?		
Step 11	Go to step 31.	Go to step 12.
Run a copy job.		
Does the error remain?		
Step 12	Go to step 31.	Go to step 13.
Run a scan to PC job.		
Does the error remain?		
Step 13	Go to step 14.	Go to step 16.
Is there optional memory installed?		
Step 14	Go to step 15.	Go to step 16.
a Reinstall the memory.		
<b>b</b> Send a print job to the printer.		
Does the error remain?		

Action	Yes	No
Step 15	Go to step 31.	The problem is solved.
a Install a Lexmark recommended memory option.		
<b>b</b> Send a print job to the printer.		
Does the error remain?		
Step 16	Go to step 17.	Go to step 21.
Is there a modem installed?		
Step 17	Go to step 18.	Go to step 20.
<b>a</b> Reinstall the modem.		
<b>b</b> POR the printer.		
Does the error remain?		
Step 18	Go to step 19.	The problem is solved.
<b>a</b> Upgrade the firmware if it was not upgraded in a previous step.		
<b>Note:</b> Contact your next level of support for the correct firmware level to use.		
<b>b</b> POR the printer.		
<b>c</b> Send the printer a print job.		
Does the error remain?		
Step 19	Go to step 31.	The problem is solved.
a Replace the modem.		
<b>b</b> POR the printer.		
Does the error remain?		
Step 20	Go to step 31.	Go to step 21.
Run a fax job.		
Does the error remain?		
Step 21	Go to step 22.	The problem is solved.
Is there an ISP option installed?		
Step 22	Go to step 24.	Go to step 23.
a Reinstall the first ISP option.		
<b>b</b> POR the printer.		
Does the error remain?		
Step 23	Go to step 24.	Go to step 26.
Run a job to test the option.		
Does the error remain?		

Action	Yes	No
Step 24	Go to step 25.	The problem is solved.
<b>a</b> Upgrade the firmware if it was not upgraded in a previous step.		
Note: Contact your next level of support for the correct firmware		
level to use.		
<ul><li>b POR the printer.</li><li>c Send the printer a print job.</li></ul>		
Send the printer a print job.		
Does the error remain?		
Step 25	Go to step 31.	Go to step 26.
a Replace the faulty ISP option.		
<b>b</b> POR the printer.		
Does the error remain?		
Step 26	Go to step 27.	The problem is solved.
Are there any more ISP options to install?		
Step 27	Go to step 29.	Go to step 28.
a Install the next ISP option.		
<b>b</b> POR the printer.		
Does the error remain?		
Step 28	Go to step 29.	Go to step 26.
Run a job to test the option.		
Does the error remain?		
Step 29	Go to step 30.	Go to step 26.
<b>a</b> Upgrade the firmware if it was not upgraded in a previous step.		
<b>Note:</b> Contact your next level of support for the correct firmware level to use.		
<b>b</b> POR the printer.		
<b>c</b> Send the printer a print job.		
Does the error remain?		
Step 30	Go to step 31.	Go to step 26.
a Replace the faulty ISP option.		
<b>b</b> POR the printer.		
Does the error remain?		

Action	Yes	No

#### Step 31

Contact your next level of support. You will need the following information:

- Exact 900.xx error digits and complete error message
- Printed menu settings page
- Printed network settings page
- Device error log
- A sample print file if the error appears to be isolated to a single file
- File/Application used if the error is related to specific print file
- Device operating system
- Driver used (PCL/PS)
- Frequency of the occurrence of the error

#### **NVRAM** mismatch failure service check

Warning—Potential Damage: When replacing any of the following components:

- Control panel assembly
- Controller board assembly

Replace only one component at a time. Replace the required component and perform a POR before replacing a second component listed above. If this procedure is not followed, the printer will be rendered inoperable. Never replace two or more of the components listed above without a POR after installing each one or the printer will be rendered inoperable.

**Warning—Potential Damage:** These components can be used as a method of troubleshooting as long as the machine is booted into diagnostic mode or is operating in diagnostic mode. Once a component has been installed in a machine and powered up into user mode, it cannot be used in another machine. It must be returned to the manufacturer.

Action	Yes	No
Step 1	Go to step 3.	Go to step 2.
Check the control panel assembly.		
Was the control panel assembly recently replaced?		
Step 2	Go to step 4.	Contact next level of
Check the controller board assembly.		support.
Was the controller board assembly recently replaced?		
Step 3	Go to step 5.	The problem is solved.
Replace the current control panel assembly with the control panel assembly. Go to "Control panel assembly removal" on page 174.		
Does the error remain?		

Action	Yes	No
Step 4 Replace the current controller board assembly with the original controller board assembly. Go to "Controller board removal" on page 162.  Does the problem continue?	Go to step 6.	The problem is solved.
Step 5 Replace the original control panel assembly with a new and not previously installed control panel assembly.  Does the error continue?	Contact the next level of support.	The problem is solved.
Step 6 Replace the original control panel assembly with a new and not previously installed control panel door assembly.  Does the error continue?	Contact the next level of support.	The problem is solved.

# **Input option errors**

#### **3xx error messages**

Error code	Description	Action
321.51	Motor 1 (Pick/Lift) motor no first encoder	Go to "Option tray pick/lift motor service check" on
321.52	Motor 1 (Pick/Lift) motor stop error	page 106.
321.53	Motor 1 (Pick/Lift) PWM underflow (motor overspeed)	
322.54	Motor 2 (Separator/Passthru) motor no first encoder	
322.55	Motor 2 (Separator/Passthru) motor stop error	service check" on page 107.
322.56	Motor 2 (Separator/Passthru) PWM underflow (motor overspeed)	
324.57	Motor 3 motor no first encoder	Go to "Option tray ACM motor service check" on
324.58	Motor 3 motor stop error	page 108.
324.59	Motor 3 PWM underflow (motor overspeed)	
325.60	Hardware error—Board ID unknown	Go to "Option tray controller card service check" on
325.61	Hardware error—Option type unknown	page 108.
325.62	Hardware error—Product ID unknown	
325.63	Hardware error—Sensors are not plugged on the board.	

Error code	Description	Action
331.51	Motor 1 (Pick/Lift) motor no first encoder	Go to "Option tray pick/lift motor service check" on
331.52	Motor 1 (Pick/Lift) motor stop error	page 106.
331.53	Motor 1 (Pick/Lift) PWM underflow (motor overspeed)	
332.54	Motor 2 (Separator/Passthru) Motor no first encoder	Go to "Option tray separator/passthrough motor
332.55	Motor 2 (Separator/Passthru) motor stop error	service check" on page 107.
332.56	Motor 2 (Separator/Passthru) PWM underflow (motor overspeed)	
334.57	Motor 3 motor no first encoder	Go to "Option tray ACM motor service check" on
334.58	Motor 3 motor stop error	page 108.
334.59	Motor 3 PWM underflow (motor overspeed)	
335.60	Hardware error—Board ID unknown	Go to "Option tray controller card service check" on
335.61	Hardware error—Option type unknown	page 108.
335.62	Hardware error—Product ID unknown	
335.63	Hardware error—Sensors are not plugged on the board.	
341.51	Motor 1 (Pick/Lift) motor no first encoder	Go to "Option tray pick/lift motor service check" on
341.52	Motor 1 (Pick/Lift) motor stop error	page 106.
341.53	Motor 1 (Pick/Lift) PWM underflow (motor overspeed)	
342.54	Motor 2 (Separator/Passthru) motor no first encoder	
342.55	Motor 2 (Separator/Passthru) motor stop error	service check" on page 107.
342.56	Motor 2 (Separator/Passthru) PWM underflow (motor overspeed)	
344.57	Motor 3 motor no first encoder	Go to "Option tray ACM motor service check" on
344.58	Motor 3 motor stop error	page 108.
344.59	Motor 3 PWM underflow (motor overspeed)	

## Option tray pick/lift motor service check

Action	Yes	No
Step 1	Go to step 2.	Replace the tray insert.
<b>a</b> Remove the option tray insert.		
<b>b</b> Check the lift plate and gears for proper operation by moving the metal plate.		
Do the lift plate and gears move freely, and are they free of wear or damage?		

Action	Yes	No
Step 2	Go to step 3.	Replace the tray.
Check the pick/lift motor for the following:		
Gear tooth breakage		
Freedom of rotation		
Is it free of wear or damage?		
Step 3	Contact the next level	Replace the tray.
Check the cable J11 on the option tray controller card.	of support.	
Is it properly connected and free of damage?		

# Option tray separator/passthrough motor service check

Action	Yes	No
Step 1	Go to step 2.	Replace the tray.
a Remove the option tray insert.		
<b>b</b> Check the separator roll assembly gear under the tray base for the following:		
Gear tooth breakage		
Freedom of rotation		
Does it move freely, and is it free of wear or damage?		
Step 2	Go to step 3.	Replace the tray.
Check the cable J10 on the option tray controller card.		
Is it properly connected and free of damage?		
Step 3	Contact the next level	Replace the separator
Check the separator roll assembly for wear or damage.	of support.	roll assembly. See
Is it free of wear or damage?		"Separator roll assembly removal" on page 214.

# Option tray ACM motor service check

Action	Yes	No
Step 1 Check the cable J11 on the option tray controller card. Is it properly connected?	Go to step 2.	Reseat the cable.
Step 2  a Remove the option tray insert and bypass the tray present sensor.  b POR into the Diagnostics Menu and perform a feed test:    Diagnostics Menu > Feed Test > choose an option tray  c Check the ACM for proper operation.  Does the ACM freely rotate three times before displaying a jam message?	Go to step 3.	Replace the ACM assembly. See "ACM assembly removal" on page 216.
Step 3 Is the ACM gear free of wear or damage?	Contact the next level of support.	Replace the ACM assembly. See "ACM assembly removal" on page 216.

### **Option tray controller card service check**

Action	Yes	No
Step 1	Go to step 2.	Reseat the cables.
Check all connections to the option tray controller card.		
Are the properly connected?		
Step 2	Go to step 3.	Update the firmware.
Check printer's firmware level.		
Is it up to date?		
Step 3	Contact the next level	The problem is solved.
Replace the option tray.	of support.	
Does the error remain?		

# **Symptoms**

#### **Base printer symptoms**

Symptom	Action
Control panel LEDs do not illuminate	Go to "Control panel service check" on page 111.
Control panel buttons do not respond	

Symptom	Action
Fan does not come on	Go to "Cooling fan service check" on page 109.
Fan is noisy	
Printer not communicating with host	Go to "USB print service check" on page 112.
Machine does not POR (no power)	<ol> <li>Check the power cord for continuity. Replace if necessary.</li> <li>Make sure the nominal voltage source is within specification. See "Electrical specifications" on page 237.</li> <li>If the problem remains, go to "Dead machine service check" on</li> </ol>
	page 110.
Print job not printing on network attached printer	Go to "Network service check" on page 112.
Network attached printer offline	

# **Cooling fan service check**

Action	Yes	No
<ul> <li>Step 1</li> <li>a Make sure that the cable JFAN1 is properly connected to the controller board.</li> <li>b Check if the cooling fan is rotating properly.</li> </ul>	Go to step 2.	Replace the cooling fan. See "Cooling fan removal" on page 161.
Step 2  a Turn off the printer, and disconnect JFAN1 from the controller board.  b Turn on the printer, and measure the voltage across JFAN1.  Is the voltage approximately 24 V?	Go to step 3.	Replace the controller board. See "Controller board removal" on page 162.
Step 3 Is the fan idle?	Replace the cooling fan. See "Cooling fan removal" on page 161.	The problem is solved.

### Dead machine service check

Action	Yes	No
Step 1 Check if the power supply cable is properly connected to the controller board.  Are they properly connected?	Go to step 2.	Reseat the cables.
<ul> <li>Step 2</li> <li>a Turn off the printer.</li> <li>b Remove the power cord.</li> <li>c Measure the resistance between terminals A and D of the power supply socket.</li> <li>Is the resistance approximately 30 ohms?</li> </ul>	Go to "Controller board service check" on page 110	Replace the power supply. See "Power supply removal" on page 190.

### **Controller board service check**

Service checks which involve measuring voltages on the power supply should be performed with the printer positioned on its rear side.

**Note:** When making voltage readings, always use frame ground unless another ground is specified. See the wiring diagram in the back of the book for more information.

**Warning—Potential Damage:** Do not replace the control panel and controller board at the same time. Each card contains the printer settings. When either of these cards is new, it obtains some of the settings from the other card. Settings are lost when both are new and replaced at the same time.

Action	Yes	No
Step 1	Go to step 2.	Go to step 3.
POR the machine.		
Did the control panel , fuser, fan and drive motor function at startup?		
Step 2	Go to step 3.	The problem is solved.
Run some print jobs.		
Does the error remain?		
Step 3	Go to step 5.	Go to step 4.
Check all cables on the controller board.		
Are they connected properly?		
Step 4	The problem is solved.	Go to step 5.
Properly connect all the cables on the controller board.		
Does the error remain?		

Action	Yes	No
Step 5	Go to step 7.	Go to step 6.
Unplug the cable JPS1 from the controller board, and verify the following voltages from the cable:		
• +5 V at pins 11, 12, 13, 14, 15, 16		
• GND at pins 18, 20		
Are the voltages correct?		
Step 6	The problem is solved.	Contact the next level
Replace the power supply.		of support.
Does the error remain?		
Step 7	Go to step 9.	Go to control panel
Is the control panel functioning properly?		service check. Go to  "Control panel service check" on page 111
Step 8	Go to step 9.	The problem is solved.
Perform the control panel service check. Go to "Control panel service check" on page 111.		
Does the error remain?		
Step 9	Go to step 6.	Replace the controller
Is the LED on the bottom of the controller board illuminating?		board. Go to  "Controller board removal" on page
		162.

# **Control panel service check**

**Warning—Potential Damage:** Do not replace the operator panel and controller board at the same time. Each card contains the printer settings. When either of these cards is new, it obtains some of the settings from the other card. Settings are lost when both are new and replaced at the same time.

Action	Yes	No
Step 1	Go to step 2.	Reseat the cable.
Check the UICC cable for proper connection to the UICC and to the controller board.		
Is it properly connected?		
Step 2 Replace the UICC. Go to "UICC removal" on page 176.	The problem is solved.	Replace the controller board. Go to "Controller board
Did this fix the problem?		removal" on page 162.

## **USB** print service check

Action	Yes	No
Step 1	Go to step 2.	Go to step 7.
Enter Diagnostic mode and perform a print test to make sure the printer		
prints correctly. Verify that the indicator light is on, then print the Diagnostics menu instruction sheet:		
Diagnostics Menu > Print Diagnostics Menu Instruction Sheet		
<b></b>		
Are the internal pages printing?		
Step 2	Go to step 4.	Go to step 3.
Verify if the user's applications are setup correctly.		
Are they setup correctly?		
Step 3	This is not a printer	Go to step 4.
Try a different application to run a print job.	issue.	Go to step
Did the output print?		
Step 4	Go to step 6.	Go to step 5.
Check the print driver.		
Is the correct driver being used and properly setup?		
Step 5	The problem is solved.	Go to step 6.
Use a different driver.		
Did this fix the issue?		
Step 6	The problem is solved.	Go to step 7.
Try a different USB cable.		·
Did this fix the issue?		
Step 7	The problem is solved.	Contact the next level
Replace the controller board. Go to "Controller board removal" on page 162.		support
Did this fix the issue?		

### **Network service check**

**Note:** Before starting this service check, print out the network setup page. This page is found under **Menu** > **Reports** > **Network Settings**. Consult the network administrator to verify that the physical and wireless network settings displayed on the network settings page for the device are properly configured. If a wireless network is used, then verify that the printer is in range of the host computer or wireless access point, and there is no electronic interference. Have the network administrator verify that the device is using the correct SSID, and wireless security protocols. For more network troubleshooting information, consult the Lexmark Network Setup Guide.

Actions	Yes	No
Step 1  If the device is physically connected to the network, verify that the Ethernet cable is properly connected on both ends.  Is the cable properly connected?	Go to step 3. If the network is wireless, then go to step 3.	Go to step 2.
	The problem is called	Co to stop 2
Step 2 Connect the Ethernet cable.	The problem is solved.	Go to step 3.
Does this fix the problem.		
Step 3 Check the printer's online status under Printers and Faxes on the host computer. Delete all print jobs in the print queue.	Go to step 5.	Go to step 4.
Is the printer online and in a Ready state?		
Step 4 Change the printer status to online.	The problem is solved.	Go to step 5.
Did this fix the issue?		
Step 5  Does the IP address displayed on the network settings page match the IP address in the port of the drivers using the printer?	Go to step 10.	Go to step 6.
Step 6 Does the LAN use DHCP? Note: A printer should use a static IP address on a network.	Go to step 7.	Go to step 9.
Step 7 Are the first two segments of the IP address 169.254	Go to step 8.	Go to step 9.
Step 8 POR the printer.	The problem is solved.	Go to step 10.
Did this resolve the issue?		
Step 9 Reset the address on the printer to match the IP address on the driver.	The problem is solved.	Go to step 10.
Did this resolve the issue?		
Step 10 Have the network admin verify that the printer and PC's IP address have identical subnet addresses.  Are the subnet addresses the same?	Go to step 12.	Go to step 11.
THE THE SUBHEL GUALESSES THE SAILE!		

Actions	Yes	No
Step 11	The problem is solved.	Go to step 12.
Using the subnet address supplied by the network administrator, assign a unique IP address to the printer.		
<b>Note:</b> The printer IP address should match the IP address on the printer driver.		
Did this fix the problem?		
Step 12	Go to step 13.	Go to step 15.
Is the device physically connected (Ethernet cable) to the network?		
Step 13	The problem is solved.	Go to step 14.
Try using a different Ethernet cable.		
Did this fix the problem?		
Step 14	Replace the controller	Contact the network
Have the network administrator check the network drop for activity.	board. See "Controller board removal" on	administrator.
Is the network drop functioning properly?	page 162.	
Step 15	Go to step 17.	Go to step 16.
Is the printer on the same wireless network as the other devices?		
Step 16	The problem is solved.	Go to step 17.
Assign the correct wireless network to the printer.		
Did this fix the problem?		
Step 17	Go to step 18.	Contact the network administrator.
Are the other devices on the wireless network communicating properly?		administrator.
Step 18	Go to step 20.	Go to step 19.
Verify that the wireless card is properly seated on the controller board.		
Is the wireless card seated correctly?		
Step 19	The problem is solved.	Go to step 20.
Properly reseat the wireless card.		
Did this fix the problem?		
Step 20	Go to step 22.	Go to step 21.
If there is an attached antenna, is the antenna damaged?		
Step 21	The problem is solved.	Go to step 22.
Replace the antenna.		
Did this fix the problem?		

Actions	Yes	No
Step 22	Go to step 24.	Go to step 23.
Verify that the antenna is properly connected to the wireless card.		
Is it connected correctly?		
Step 23	The problem is solved.	Go to step 24.
Properly connect the antenna.		
Did this fix the problem?		
Step 24	The problem is solved.	Go to step 25.
Replace the wireless card.		
Did this fix the problem?		
Step 25	The problem is solved.	Contact the next level
Replace the controller board. See "Controller board removal" on page 162.		of support.
Did this fix the problem?		

# Service menus

# Understanding the control panel and menus

## **Navigating through the Service menus**

Menus are represented by the light sequences. Menu options and their values are represented by the light sequences.

To navigate through the Service menus:

- 1 Press to advance to the desired menu.
- 2 Press to advance to the desired menu option value.
- **3** Press and hold until all of the lights cycle to perform the function or save the menu option value.
- **4** Press and hold to return to the home menu.
- **5** POR the printer to exit the Service menus.

# **Diagnostics menu**

The Diagnostics menu group consists of menus, settings, and operations that are used to diagnose printer problems.

# **Entering the Diagnostics menu**

- 1 Turn off the printer.
- 2 Open the front door.
- 3 Press and hold
- **4** Turn on the printer.
- **5** Release the button after 10 seconds.

# **Print Diagnostics Menu Instruction Sheet**

This prints a page that contains:

- Instructions on how to navigate through the Diagnostics menu settings
- The order of the Diagnostics menu settings, the LED pattern that represents each setting, the current value of each setting, and each setting's possible values

## **Prt Quality Pgs**

This enables the user to view the values of the printer settings and to test its ability to generate acceptable printed output.

### **Defaults**

**Warning—Potential Damage:** Modification of the printer setting defaults causes the NVRAM space to be restored to the printer factory settings.

This setting is used by the printer to determine whether US or non-US factory default values should be used. The following printer settings have different US and non-US values:

Printer default values	US value	Non-US value
Paper sizes setting in the General settings menu	U.S.	Metric
Default paper size (paper feeding sources which do not have hardware size-sensing capability)	Letter	A4
Default envelope size (envelope feeding sources which do not have hardware size-sensing capability)	10 Envelope	DL Envelope
Fax media size	Letter	A4
PCL symbol set	PC-8	PC-850
PPDS code page	437	850
Universal units of measure	Inches	Millimeters

#### Available options:

- U.S.
- Non-U.S.

## **Edge to Edge**

When set to On, this shifts all four margins (top, bottom, left, and right) to the physical edge of the page (printable area of a supported paper size).

## **Cont Prt Simplex Tray 1**

This initiates a continuous tray 1 simplex print test. To stop the test, press X.

# **Cont Prt Duplex Tray 1**

This initiates a continuous tray 1 duplex print test. To stop the test, press X.

## **Cont Prt Simplex Tray 2**

Note: This appears only when Tray 2 is installed.

This initiates a continuous Tray 2 simplex print test. To stop the test, press X.

## **Cont Prt Duplex Tray 2**

Note: This appears only when Tray 2 is installed.

This initiates a continuous Tray 2 duplex print test. To stop the test, press X.

### Par 1 Strobe Adj

This enables the user to adjust the amount of time the strobe is sampled to determine if valid data is available on the parallel port.

Each time this value is increased by 1, the strobe is sampled 50 ns longer. Each time this value is decreased by 1, the strobe is sampled 50 ns less. When the value of this setting is 0, the factory default value is used to determine the amount of time the strobe is sampled.

Available options: -4 to 1

## **Print Event Log**

This prints the Event Log. The Event Log tracks the occurrence of various critical events in the functional history of the printer, such as paper jams and firmware updates.

## **Auto Dark Adj**

This attempts to optimize the amount of toner used when printing with a specific operating point.

Available options:

- Disable
- Enable

# **Configuration menu**

The Configuration menu group consists of menus, settings, and operations that are used to configure a printer for operation.

## **Entering the Configuration menu**

- 1 Turn off the printer.
- 2 Open the front access cover.
- 3 Press and hold
- 4 Turn on the printer.
- **5** Release the button after 10 seconds.

## **Print Configuration Menu Instruction Sheet**

This prints a page that contains:

- 1 Instructions on how to navigate through the Configuration menu settings.
- **2** The order of the Configuration menu settings, the LED pattern that represents each setting, the current value of each setting, and the possible values of each setting.

#### **Restore Base**

Warning—Potential Damage: This operation cannot be undone.

This restores all non-critical base device NVRAM settings to their factory default settings.

#### **Restore STD NET**

Warning—Potential Damage: This operation cannot be undone.

This restores all network NVRAM settings. The printer immediately performs a POR and restores the appropriate settings to their factory default values. This option is available only on models with an integrated network adapter.

#### **Hex Trace**

Hex Trace helps in isolating printing problems when unexpected characters print or characters are missing. This helps determine if there is a problem with the language interpreter or the cable by providing information about what the printer is receiving.

Available options:

- Off
- On

To enter Hex Trace mode, select On and then POR the printer.

To exit this mode, POR the printer.

## **Prt Quality Pgs**

This prints a report that contains a limited set of the information that appears in the Diagnostics menu version of the Print quality pages report.

## **A5 Loading**

This determines the orientation used when printing on A5 paper.

Available options:

- Long Edge—The printer will print A5-size paper in the long-edge feed orientation from all trays.
- Short Edge—The printer will print A5-size paper in the short-edge feed orientation from all trays.

#### **Reduced Curl**

When on, this setting significantly reduces throughput and should be activated only as a last resort to solve paper curl problems. The printer uses this mode only when the media type is set to Paper.

Available options:

- Off
- On

#### **PPDS Emulation**

The value of this option determines if a printer can recognize and use the PPDS data stream.

Available options:

- Deactivate
- Activate

#### **Demo Mode**

Demo mode is often used in retail environments to highlight printer capabilities. The printer stores demonstration files in the resident demo file of the base RIP firmware and in any supported optional memory devices.

When this mode is activated, the printer ignores all print jobs sent to it other than the demo file selected by the user. Each demo file consists of one or more printed pages.

Available options:

- Activate—The printer boots into Demo mode after each power cycle.
- Deactivate—The printer boots into normal mode.

To print a demo file:

- **1** Activate Demo mode and then POR the printer.
- 2 Press to print the first demo job.
- **3** After the last page of the previous demo job has been printed, press to print the next demo job.

#### Auto CR after LF

This is used to select whether or not the printer automatically performs a carriage return after a line feed control command. The Auto CR after LF is common to both the PPDS and PCL emulations. When the setting is changed, it is changed for both emulations.

Available options:

- Off
- On

#### **Auto LF after CR**

This is used to select whether or not the printer automatically performs a line feed after a carriage return control command. The Auto LF after CR is common to both the PPDS and PCL emulations. When the setting is changed, it is changed for both emulations.

Available options:

- Off
- On

### **Energy Conserve**

This affects the values that appear in the Power saver setting in General settings menu.

Available options:

- Off—The Power saver menu displays a Disabled setting. When selected, it disables the Power saver feature.
- On—Disabled does not appear in the Power saver menu. The user cannot disable the Power saver feature.

## Wipe All Settings

This makes any sensitive information that may exist on the volatile or non-volatile storage of the device completely indecipherable. When selected, the printer performs a non-critical NVRAM reset and then reboots.

## **Font Density**

This creates microscopic holes in all black text. The holes save toner by reducing overlapping toner.

Available options: 1 to 5

# **Font Sharpening**

This allows a user to set a text point-size value below which the high-frequency screens will be used when printing font data.

Available options:

- Off
- On

### **Parallel Protocol**

This printer supports both the standard and the fastbytes parallel handshaking protocols.

Available options:

- Standard—The printer can receive information at a normal transmission rate.
- Fastbytes—The printer can receive information at a much faster transmission rate, provided that the host computer also supports the fastbytes protocol.

#### Parallel Mode 2

This determines whether the parallel port data is sampled on the leading or trailing edge of strobe.

Available options:

- On—Data is sampled on the leading edge of strobe.
- Off

## **MAC Binary PS**

This configures the printer to process Macintosh binary PostScript print jobs.

Available options:

- Off—The printer filters PostScript print jobs using standard protocol.
- On—The printer processes raw binary PostScript print jobs from computers using the Macintosh operating system. This setting often causes Windows print jobs to fail.
- Auto—The printer processes print jobs from computers using either Windows or Macintosh operating systems.

## **USB Speed**

This setting is used to set the throughput of the USB port on the printer.

Available options:

- Auto
- Full—Forces the USB port to run at full speed and also disables its high-speed capabilities.

#### **USB PnP**

In some cases, the USB port at the back of the printer may be incompatible with the chipset in a user's PC. This setting lets the user change the USB driver mode to improve its compatibility with these PCs.

Available options:

- 1
- 2

## **Set Network Card Speed**

**Note:** This setting appears only on models that support a network connection.

This determines whether the printer automatically detects or manually detects the network speed.

Available options:

Auto—The network card attempts to detect the speed and duplex mode value of the network.

**Note:** A user may have to assign specific values to these settings since Auto may not function correctly in some network environments.

- 10Mbps, half duplex—Forces the printer to try to connect to the network only at 10 Mbps, half duplex
- 10Mbps, full duplex—Forces the printer to try to connect to the network only at 10 Mbps, full duplex

- 100Mbps, half duplex—Forces the printer to try to connect to the network only at 100 Mbps, half duplex
- 100Mbps, full duplex—Forces the printer to try to connect to the network only at 100 Mbps, full duplex

# **Entering Invalid engine mode**

This mode is used if the printer has an invalid code and needs the correct code loaded. After entering this mode, the firmware code can be updated.

- 1 Turn off the printer.
- 2 Press and hold and .
- 3 Turn on the printer.
- 4 Release the buttons after 10 seconds.

# **Entering Recovery mode**

This mode will allow the printer to boot from a secondary set of instructions to allow a code flash to the printer. Code can be flashed from a PC using a USB connection.

- 1 Turn off the printer.
- 2 Press and hold
- 3 Turn on the printer.
- 4 Release the button after 10 seconds.

# Service engineer menu

# Accessing the service engineer (SE) menu

From a Web browser on a host PC, add /se to the printer IP address.

# Service engineer (SE) menu

This menu should be used as directed by the next level of support.

Top level menu	Intermediate menu
Print SE Menus	
General	Copyright — Displays copyright information
Code Revision Info	Network code level — Displays network code level
	Network Compile Info — Displays network compile information
	Printer Code Level — Displays printer code information
	Printer Compile Info — Displays compile information

Top level menu	Intermediate menu
History	Print History
	Mark History
	History Mode
MAC	Set Card Speed
	• LAA
	Keep Alive
NVRAM	Dump NVRAM
	Reinit NVRAM
TCP/IP	• netstat-r
	• arp-a
	Allow SNMP Set
	• MTU
	Meditech Mode
	RAW LPR Mode
	Gather Debug
	Enable Debug

# **Repair information**

# **Removal precautions**



**CAUTION—SHOCK HAZARD:** For personal safety and to prevent damage to the printer, remove the power cord from the electrical outlet before you connect or disconnect any cable, electronic board, or assembly. Disconnect any connections between the printer and the PCs/peripherals.

## **Data security notice**

This printer contains various types of memory that are capable of storing device and network settings, information from embedded solutions, and user data. The types of memory, along with the types of data stored by each, are described below.

- Volatile memory—This device utilizes standard Random Access Memory (RAM) to temporarily buffer user data during simple print and copy jobs.
- Non-volatile memory—This device may utilize two forms of non-volatile memory: EEPROM and NAND (flash memory). Both types are used to store the operating system, device settings, network information, scanner and bookmark settings, and embedded solutions.
- Hard disk memory—Some devices have a hard disk drive installed. The printer hard disk is designed for device-specific functionality and cannot be used for long term storage for data that is not print-related. The hard disk does not provide the capability for users to extract information, create folders, create disk or network file shares, or transfer FTP information directly from a client device. The hard disk can retain buffered user data from complex print jobs, as well as form data and font data.

To erase volatile memory, turn off the printer.

To erase non-volatile memory, see the menu item under "Configuration menu" on page 119 pertaining to this.

To erase the printer hard disk, see the menu item under "Configuration menu" on page 119 pertaining to this.

The printer control panel and RIP/controller board contain NVRAM. After removing the old part, it must be returned to your next level of support.

## **Handling ESD-sensitive parts**

Many electronic products use parts that are known to be sensitive to electrostatic discharge (ESD). To prevent damage to ESD-sensitive parts, use the following instructions in addition to all the usual precautions, such as turning off power before removing logic boards:

- Keep the ESD-sensitive part in its original shipping container (a special "ESD bag") until you are ready to install the part into the machine.
- Make the least-possible movements with your body to prevent an increase of static electricity from clothing fibers, carpets, and furniture.
- Put the ESD wrist strap on your wrist. Connect the wrist band to the system ground point. This discharges any static electricity in your body to the machine.
- Hold the ESD-sensitive part by its edge connector shroud (cover); do not touch its pins. If you are removing a pluggable module, use the correct tool.

- Do not place the ESD-sensitive part on the machine cover or on a metal table; if you need to put down the ESD-sensitive part for any reason, first put it into its special bag.
- Machine covers and metal tables are electrical grounds. They increase the risk of damage, because they make a
  discharge path from your body through the ESD-sensitive part. (Large metal objects can be discharge paths without
  being grounded.)
- Prevent ESD-sensitive parts from being accidentally touched by other personnel. Install machine covers when you are not working on the machine, and do not put unprotected ESD-sensitive parts on a table.
- If possible, keep all ESD-sensitive parts in a grounded metal cabinet (case).
- Be extra careful while working with ESD-sensitive parts when cold-weather heating is used, because low humidity increases static electricity.

## RIP board/operator panel replacement

This procedure should be followed only if both the RIP board and the operator panel fail. If you need to replace only one of the FRUs, follow the startup procedure described in the FRU's removal procedure.



#### CAUTION—POTENTIAL INJURY

The lithium battery in this product is not intended to be replaced. There is a danger of explosion if a lithium battery is incorrectly replaced. Do not recharge, disassemble, or incinerate a lithium battery. Discard used lithium batteries according to the manufacturer's instructions and local regulations.

**Warning—Potential Damage:** If the operator panel and the RIP board are being replaced at the same time, replace the parts in this order to avoid damage to the machine.

**1** Replace the RIP card.

Note: Do not replace the new operator panel and RIP card in the machine at the same time.

- **2** After installing the new RIP card, and before installing the new operator panel, start the printer into diagnostics mode.
- **3** After the printer has completed startup, turn off the printer and replace the operator panel.

**Note:** If the operator panel display has failed, the printer's startup cycle is complete when the driver motor and fans shut down, and the machine is quiet.

- **4** After installing the new operator panel, start the printer into diagnostics mode, and allow the printer to go through a complete startup cycle and the display to go to Ready.
- 5 If the problems persist, leave the new operator panel in the machine, place the old RIP card back in the machine, and start it up. After the machine startup, shut down the machine, and install the new RIP card. After installing the new RIP card, restart the machine, and let it go through the startup cycle.

After this procedure is completed successfully, there is no need to adjust any settings.

If the above procedure fails, you must contact the technical support center for further instructions.

#### Ribbon cable connectors

#### **Zero Insertion Force (ZIF) connectors**

Zero Insertion Force (ZIF) connectors are used on the boards and cards used in this printer. Before inserting or removing a cable from these connectors, read this entire section. Great care must be taken to avoid damaging the connector or cable when inserting or removing the cable.

**Warning—Potential Damage:** Do not insert the cable so that the contacts are facing the locking actuator. The contacts always face away from the actuator.

**Warning—Potential Damage:** Do not insert the cable diagonally into the ZIF socket. This can cause damage to the contacts on the cable.

**Warning—Potential Damage:** Avoid using a fingernail, or sharp object to open the locking mechanism. This could damage the cable.

**Warning—Potential Damage:** Avoid pressing against the cable when opening the locking mechanism. This can also damage the cable.

These are the types of ZIF connectors used in this printer:

- Horizontal top contact connector
- Horizontal bottom contact connector
- Vertical mount contact connector
- Horizontal sliding connector

#### Horizontal top contact connector


This FRU contains a horizontal top contact cable connector. Read the instructions before proceeding.

The horizontal top contact connector uses a back flip locking actuator to lock the ribbon cable into the Zero Insertion Force (ZIF) connector. The cable is inserted horizontally into the connector.

**Warning—Potential Damage:** When opening or closing this type of actuator, gently lift or close the two tabs located on each end of the actuator. The two tabs should be moved simultaneously. Do not close the actuator from the center of the actuator.

#### Removing a cable from the horizontal top contact connector


**1** Place a finger at each end of the locking actuator, and then gently lift the actuator to the unlocked position.

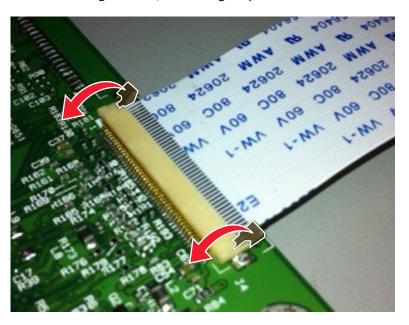

**2** Slide the cable out of the connector.


### Inserting a cable into the horizontal top contact connector

**1** When installing the cable, check the locking actuator to ensure it is in the unlocked position. The tabs on the ends of the actuator are vertical when the actuator is unlocked.

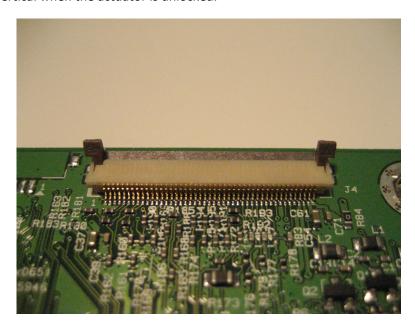


2 Insert the cable with the contacts on the cable facing up. Insert the cable on top of the actuator.

**Note:** Verify that the cable is installed squarely into the connector. If the cable is not squarely installed, then intermittent failures could occur.

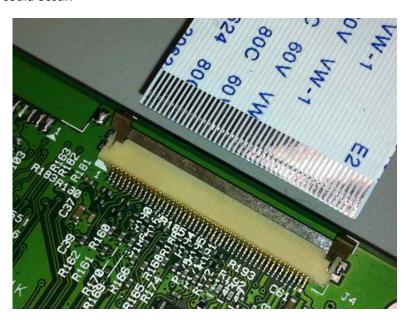

**3** Rotate the locking actuator to the locked position. The cable should not move while this step is performed. If the cable moves, open the actuator, reposition the cable, and then close the actuator to the down position.

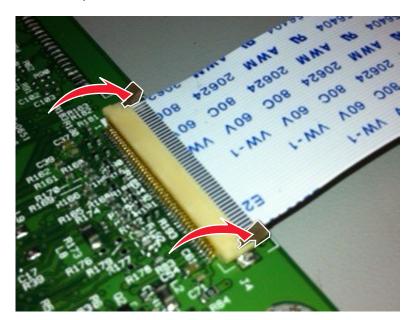

#### Horizontal bottom contact connector

This FRU contains a horizontal bottom contact cable connector. Read the instructions before proceeding.

The horizontal bottom contact connector uses a flip locking actuator to lock the ribbon cable into the Zero Insertion Force (ZIF) connector. The cable is inserted horizontally into the connector.

**Warning—Potential Damage:** When opening or closing this type of actuator, gently lift the center of the actuator using your finger. Do not use a fingernail or screwdriver to open the actuator. This could damage the ribbon cable. Do not close the actuator from the ends of the actuator.

#### Removing a cable from the horizontal bottom contact connector

1 Place two fingers towards each end of the locking actuator, and then gently lift the actuator to the unlocked position.



2 Slide the cable out of the connector.

### Inserting a cable into the horizontal bottom contact connector

**1** Check the actuator to verify it is in the open position.



2 Insert the cable into the ZIF connector with the contacts facing downward and away from the locking actuator. The cable needs to be inserted below the actuator.

**Note:** Verify that the cable is installed squarely into the connector. If the cable is not squarely installed, then intermittent failures could occur.



**3** Place your finger in the middle of the actuator, and then rotate the locking actuator to the locked position.



#### **Vertical mount contact connector**


This FRU contains a vertical mount contact connector. Read the instructions before proceeding.

The vertical mount contact connector uses a back flip locking actuator to lock the ribbon cable into the Zero Insertion Force (ZIF) connector. The cable is inserted vertically into the connector.

**Warning—Potential Damage:** When opening or closing this type of actuator, gently lift the center of the actuator using your finger. Do not use a fingernail or screwdriver to open the actuator. This could damage the ribbon cable. Do not close the actuator from the ends of the actuator.

#### Removing a cable from the vertical mount contact connector

**1** Gently rotate the locking actuator from the center of the actuator to the unlocked position.

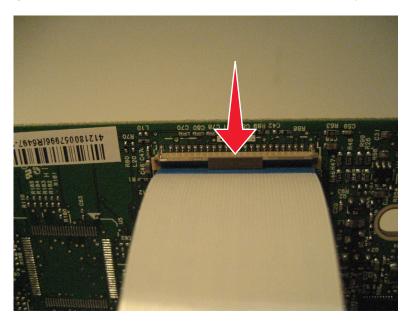

**2** Slide the cable out of the connector.

### Inserting a cable into the vertical mount contact connector

**1** When installing the cable, check the locking actuator to verify it is in the open position.




2 Insert the cable with the contacts on the cable away from the locking actuator. Insert the cable on top of the actuator.

**Note:** Verify that the cable is installed squarely into the connector. If the cable is not squarely installed, then intermittent failures could occur.



**3** Rotate the locking actuator to the locked position by pressing down on both ends of the actuator. The cable should not move when this step is performed. If the cable moves, open the actuator, reposition the cable, and then close the actuator to the down position.

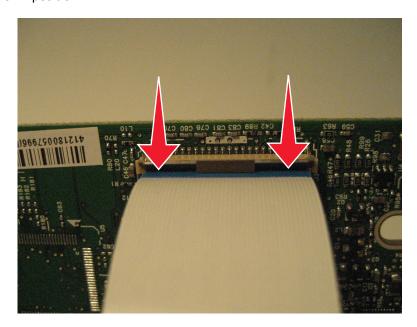

#### **Horizontal sliding contact connector**


This FRU contains a horizontal sliding contact connector. Read the instructions before proceeding.

The horizontal sliding contact connector uses a slide locking actuator to lock the ribbon cable into the Zero Insertion Force (ZIF) connector. The cable is inserted horizontally into the connector.

**Warning—Potential Damage:** When opening or closing this type of actuator, gently push or pull the two tabs located on each end of the actuator. Do not close the actuator from the center of the actuator. Do not use a screwdriver to open or close the actuator. Damage to the cable or connector could occur.

#### Removing a cable from the horizontal sliding contact connector


1 Simultaneously slide the two tabs located on the ends of the locking actuator away from the connector.

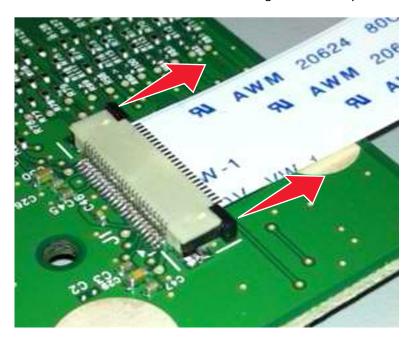

2 Slide the cable out of the connector.

#### Inserting a cable into the horizontal sliding contact connector


**1** When installing the cable, check the locking actuator to verify it is in the open position. If you are opening the connector, pull back on both end tabs using equal force to avoid breaking the connector.

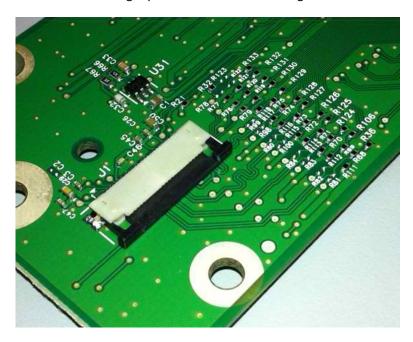

2 Insert the cable with the contacts on the cable facing away from the locking actuator. Insert the cable on top of the actuator.



**3** Slide the locking actuator towards the connector, locking the cable into place. The cable should not move when this step is performed. If the cable moves, open the actuator, reposition the cable, and then close the actuator to the down position.

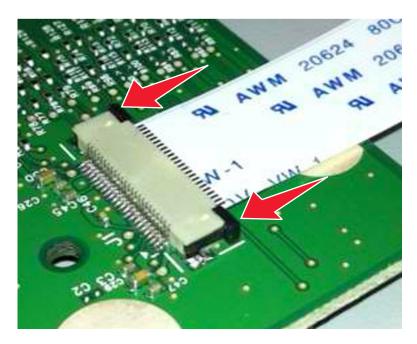


#### **Low Insertion Force (LIF) connector**

This FRU contains a Low Insertion Force (LIF) connector. Read the instructions before proceeding.

**Warning—Potential Damage:** When installing a cable into an LIF connector, care must be taken to avoid bending the edges of the cables and damaging the contacts on the cables.

#### Inserting a cable into the LIF connector

1 Looking at the connector, take note on which side the contacts are located. Many boards will have the word "contacts" stamped on them to indicate which side of the LIF has the contacts. When looking at the board, take note that the contacts from the board to the connector are located on the side of the connector with the contacts.

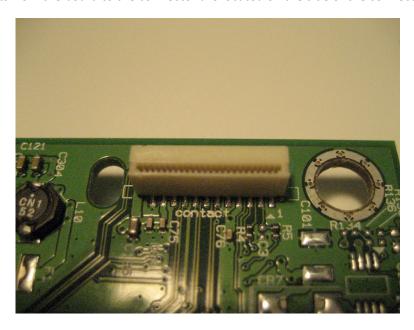

**2** Insert the cable squarely into the connector.

**Note:** Verify that the cable is installed straight into the connector. If the cable is not installed properly, then intermittent failures could occur.




Repair information

## Printhead assembly mechanical adjustment

A printhead needs to be correctly positioned after it has been removed. Use a pencil to mark the screw locations of the old printhead on the metal frame. Align the new printhead relative to the location of the old printhead.

**Note:** Skew is caused by a sheet being fed through the printer while misaligned. The entire image is rotated relative to the sheet edges. However, a mechanically misaligned printhead causes the horizontal lines to appear skewed, while the vertical lines remain parallel to the vertical edges. There are no adjustments for skew. Check the pick tires for wear, the paper path for obstructions, the fuser for proper setting, and the tray paper guides for fit to the media.

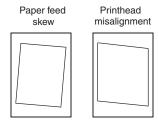


To adjust the printhead:

1 POR into the Diagnostics menu, and print a Quick test page:


#### Diagnostics Menu > Cont Prt Simplex Tray 1

**Note:** Press immediately after the paper picks to avoid printing more pages.

- **2** Fold the printed test page on the left side so that a few millimeters of grid lines wrap around the outside of the fold.
- **3** Fold a second vertical fold near the center so that the left side top edge aligns with the right side top edge.

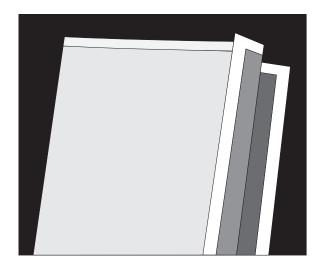

**4** If the grid lines of the right flap align below the corresponding lines on the left flap, then adjust the printhead clockwise relative to the printer, and recheck. If the grid lines of the left flap align below the corresponding lines of the right side, then adjust the printhead counterclockwise.

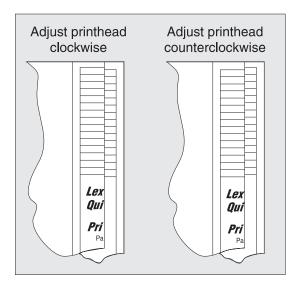

- **5** Print again a Quick test page, and check if adjustments are still needed.
- **6** After obtaining a properly adjusted image on the paper, tighten all the screws.

# **Removal procedures**

Keep the following tips in mind as you replace parts:


- Some removal procedures require removing cable ties. You must replace cable ties during reassembly to avoid pinching wires, obstructing the paper path, or restricting mechanical movement.
- Remove the toner cartridges, imaging unit, and media tray before removing other printer parts. The imaging unit should be carefully set on a clean, smooth, and flat surface. It should also be protected from light while out of the device.
- Disconnect all external cables from the printer to prevent possible damage during service.
- Unless otherwise stated, reinstall the parts in reverse order of removal.
- When reinstalling a part held with several screws, start all screws before the final tightening.

# Left side removals

### Left cover removal


- **1** Position the printer so that it sits on its right side.
- **2** Open the front door.
- 3 Remove the two screws (A) securing the left cover.

**4** Release the latches, and swing the left cover upward to remove.

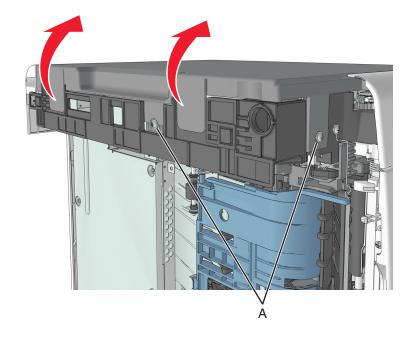


## Main drive gearbox removal

- 1 Remove the left cover. See "Left cover removal" on page 144.
- **2** Squeeze the latch, and then detach the link from the front door.

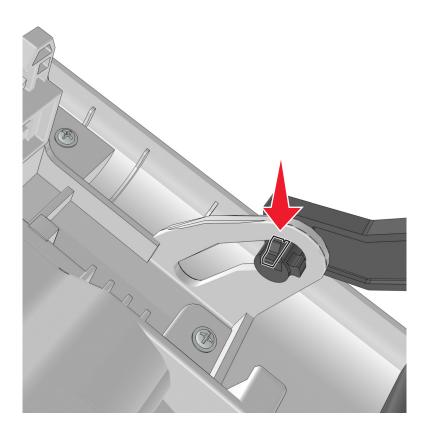


Repair information

**3** Remove the 4 screws (A), and then remove the main drive gearbox.

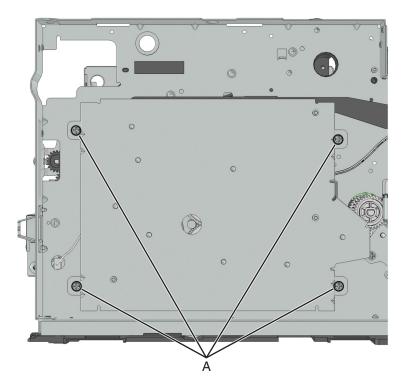

**4** Disconnect the cable from the main drive gearbox.


**5** Remove the spring (B) and the fuser gear (C).

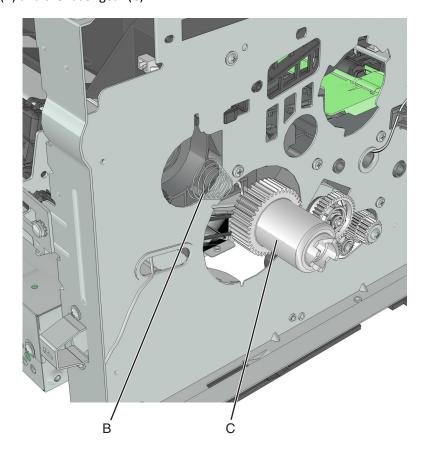

### MPF solenoid removal

- 1 Remove the left cover. See "Left cover removal" on page 144.
- 2 Remove the main drive gearbox. See "Main drive gearbox removal" on page 145.
- **3** Remove the screw (A).

4 Cut the cable (B) not less than 1 inch from the solenoid.

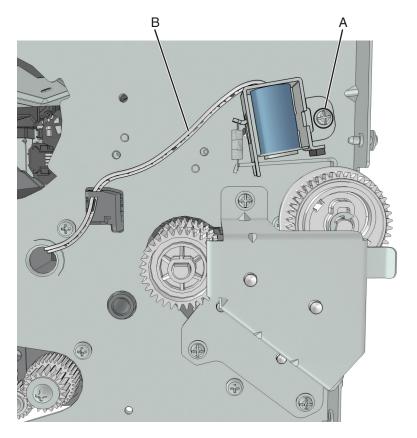

#### **Installation notes:**

- **a** Cut the replacement solenoid cable not less than 1 inch from the solenoid.
- **b** Strip a 1/8-in. length of insulation from the ends of all cables.
- c Insert a wire from the printer into one end of the insulated displacement connector (IDC).

**Note:** Make sure the stripped end of the wire is positioned under the contact element.


- **d** Insert a wire of the same color from the solenoid into the other end of the IDC.
  - **Note:** Make sure the stripped end of the wire is positioned under the contact element.
- e Squeeze the IDC to partially lock the wires in place, and then use a pair of pliers to crimp the IDC.
- **f** Repeat steps c–e for the other wire.
- **g** Reinstall the MPF solenoid.

**h** Secure the cable to the holder.




## MPF gearbox removal

- 1 Remove the left cover. See "Left cover removal" on page 144.
- 2 Remove the main drive gearbox. See "Main drive gearbox removal" on page 145.
- 3 Remove the front door. See "Front door removal" on page 182.
- **4** Disconnect the spring from the printer (A).

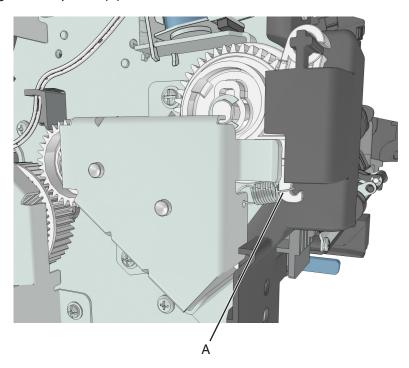


Repair information


**5** Remove the three screws (B), and then remove the left front mount.

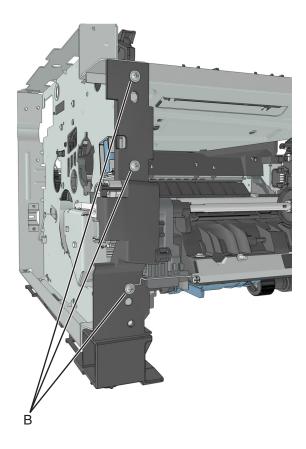

**6** Remove the three screws (C), and then remove the MPF gearbox.

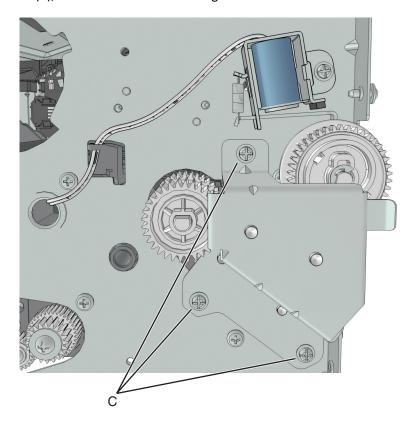


7 Release the two latches (D), and then remove the main input drive gears.

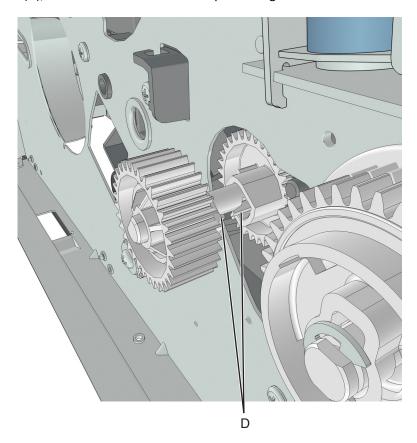

Repair information


**8** Remove the E-clip (E), and then remove the MPF sector gear (F).

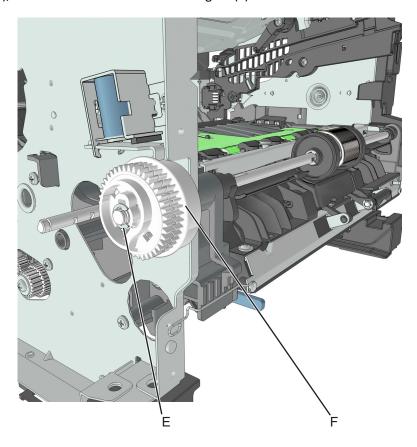

#### Reverse solenoid removal

- 1 Remove the right cover. See "Right cover removal" on page 160.
- 2 Remove the left cover. See "Left cover removal" on page 144.
- 3 Remove the rear door and cover. See "Rear door and cover removal" on page 206.
- 4 Remove the top cover. See "Top cover removal" on page 211.
- **5** Remove the cooling fan. See "Cooling fan removal" on page 161.
- **6** Disconnect cable JDRSOL1 from the controller board.


**7** Remove the two screws (A) securing the reverse solenoid.

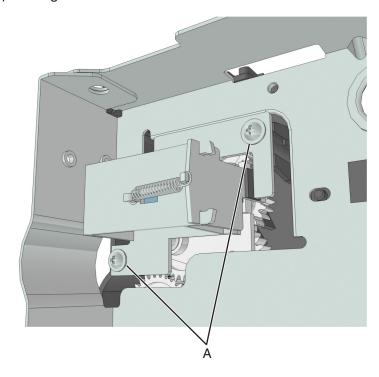

### **ACM** clutch removal

- 1 Remove the left cover. See "Left cover removal" on page 144.
- 2 Remove the main drive gearbox. See "Main drive gearbox removal" on page 145.
- **3** Position the printer on its rear.
- 4 Use a small flat-head screwdriver to block the roller (A) and prevent the shaft from rotating.

**5** While blocking the roller, remove the screw (B).

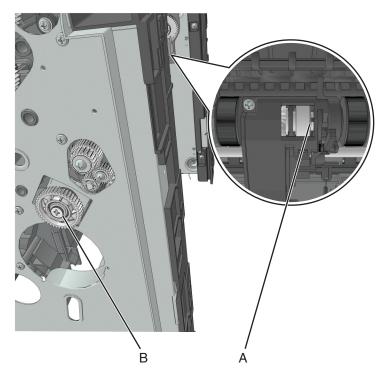


**6** Pull out the ACM clutch, and cut cable close to the clutch to detach it.

#### **Installation notes:**


**a** Pull the cable to remove any slack, and remove any shrink tubing holding the wires together.



**b** On the replacement clutch, measure 4 inches from the clutch, and then cut the cable.

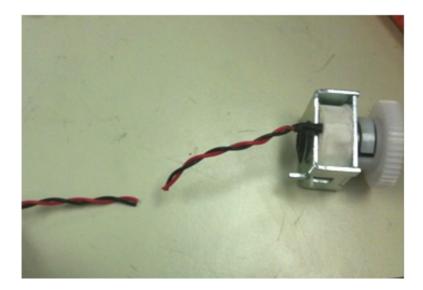


**c** Pull out the shaft.

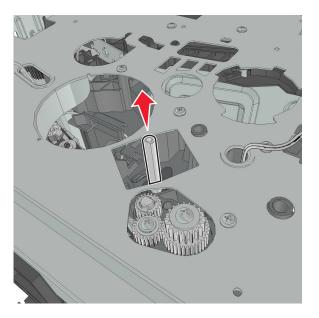


- **d** Install the replacement clutch on the shaft.
- **e** Insert the red wire from the printer into the insulated displacement connector (IDC).

**Note:** Make sure that the wire is positioned under the contact element.

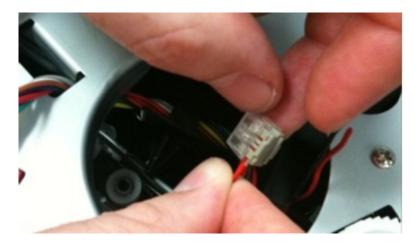


**f** Insert the red wire from the clutch into the IDC.

**Note:** Make sure that the wire is positioned under the contact element.

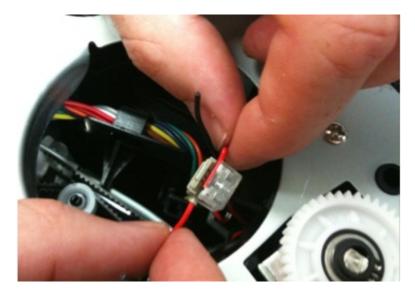

**g** Squeeze the IDC to partially lock the wires in place, and then use a pair of pliers to crimp the IDC.

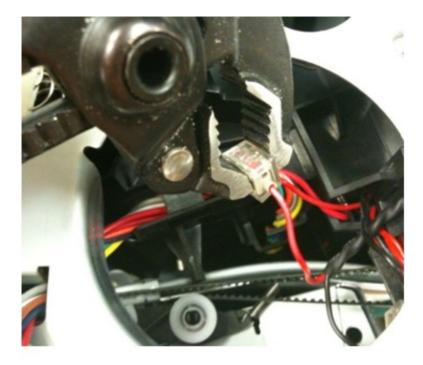

- **h** Repeat steps e–g for the black wire.
- i Tuck the IDCs securely above the duplex.


**Note:** If needed, use a cable tie to secure the cable in place. Make sure cable tie does not obstruct the paper path.



**j** Print the menu pages to test the printer.

### Cartridge gearbox removal

- 1 Remove the left cover. See "Left cover removal" on page 144.
- **2** Remove the four screws (A) securing the cartridge gearbox.

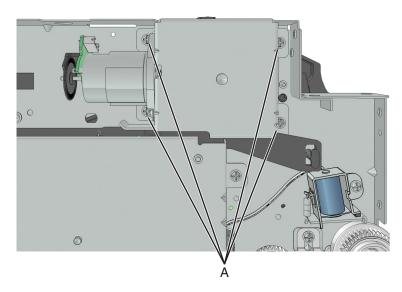


**3** Disconnect the cable from the cartridge gearbox.


### **Duplex gear assembly removal**

- 1 Remove the left cover. See "Left cover removal" on page 144.
- 2 Remove the rear door and cover. See "Rear door and cover removal" on page 206.
- **3** Remove the power supply. See "Power supply removal" on page 190.
- 4 Remove the power supply shield. See "Power supply shield removal" on page 191.
- 5 Remove the duplex. See "Duplex removal" on page 192.
- **6** Position the printer so that it sits on its right side.
- **7** Remove the E-clip (A).
- **8** Remove the screw (B).
- 9 Remove the screw (C).

### **10** Remove the three gears.

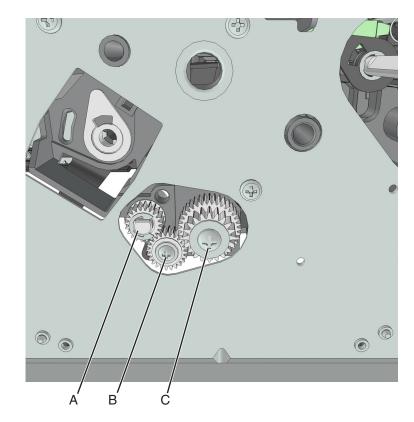


11 From behind the three gears, remove the duplex coupling (D).

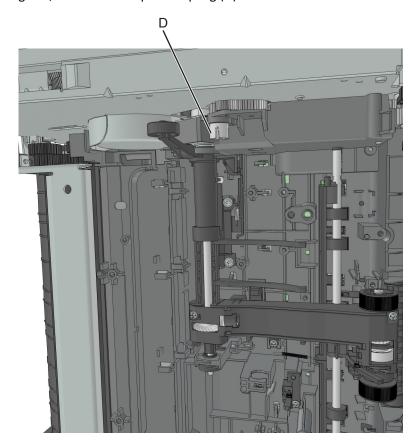

Repair information


**12** Remove the duplex link (E) from the duplex.

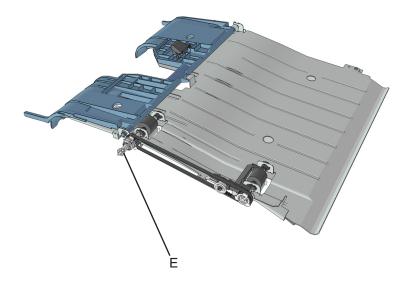

# **Right side removals**

## **Right cover removal**


- **1** Open the front door.
- **2** Position the printer so that it sits on its left side.
- **3** Remove the two screws (A) securing the right cover.
- **4** Release the latches (B) to remove the right cover.

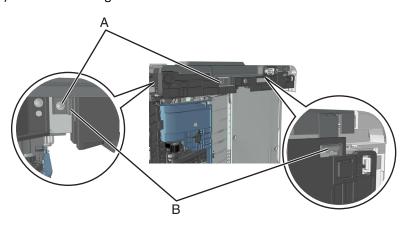

## **Cooling fan duct removal**


**Note:** This is not a FRU.

- 1 Remove the right cover. See "Right cover removal" on page 160.
- **2** Remove the screw (A), and then remove the cooling fan duct.

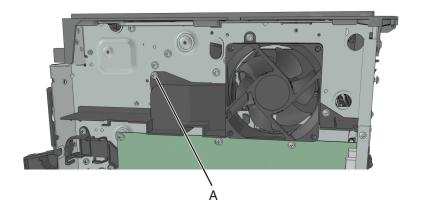


### **Cooling fan removal**

- 1 Remove the right cover. See "Right cover removal" on page 160.
- 2 Remove the cooling fan duct. See "Cooling fan duct removal" on page 161.
- **3** Disconnect the cable JFAN1 or JFAN2 from the controller board.
- **4** Remove the two screws (A) securing the fan mount to the printer.

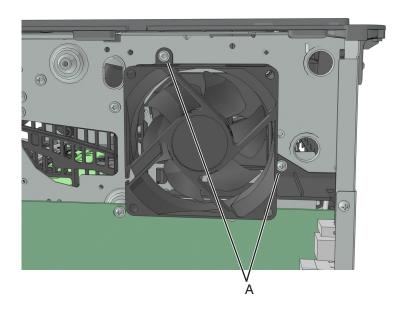


**5** Remove the two screws (B) securing the fan to the fan mount.

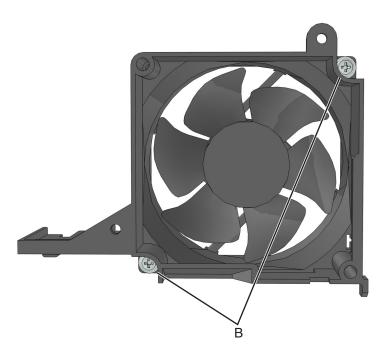


### **Controller board removal**

- 1 Remove the right cover. See "Right cover removal" on page 160.
- **2** Disconnect all cables from the controller board.

**3** Remove the three screws (A) from the rear side of the printer.

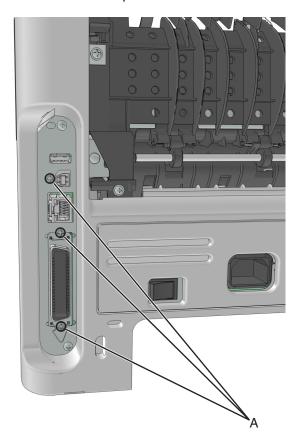


**4** Remove the five screws (B) securing the controller board.

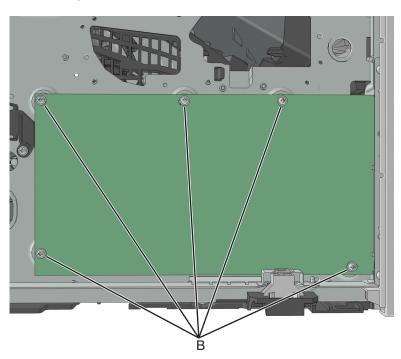


### Toner cartridge smart chip contact removal

- 1 Remove the right cover. See "Right cover removal" on page 160.
- **2** Disconnect the cable JARW1 from the controller board.
- **3** Remove the two screws (A).

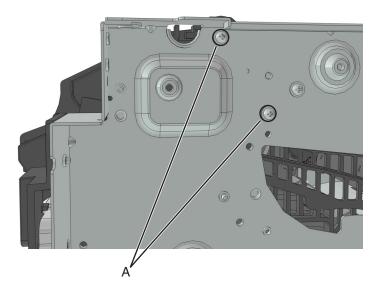


**4** Remove the two screws (B), and then detach the right cartridge guide.

**Warning—Potential Damage:** Do not cut or disconnect the cable at the rear of the right cartridge guide. Leave the right cartridge guide dangling while performing the rest of the steps.

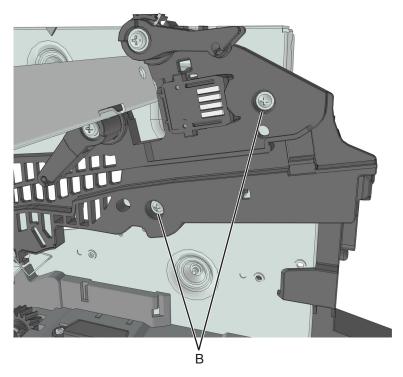


**5** From behind the right cartridge guide, release the 4 latches (C) to detach the toner cartridge smart chip contact. **Note:** Pay attention to the original position of the spring and the actuators.

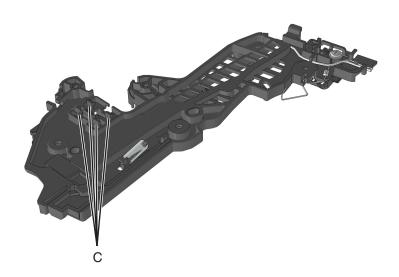

#### **Installation notes:**

- **a** Test for proper installation of the spring and the actuators.
- **b** Press the cartridge actuator. The cartridge lock should move up.

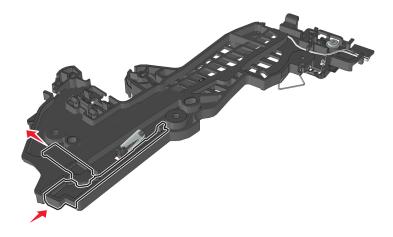


**c** Release the cartridge actuator. The cartridge lock should move back to its original position.

### **Front removals**

#### Left front mount removal

- 1 Remove the left cover. See "Left cover removal" on page 144.
- 2 Remove the front door. See "Front door removal" on page 182.


**3** Remove the three screws (A), and then remove the left front mount.

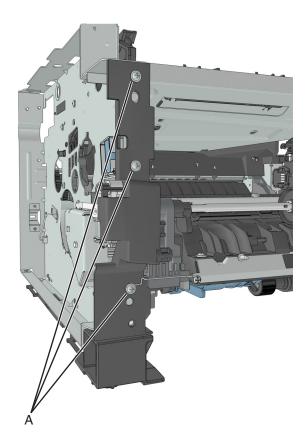


## Right front mount removal

- 1 Remove the right cover. See "Right cover removal" on page 160.
- **2** Disconnect all control panel cables from the controller board.
- **3** Disconnect the cable JCVR1 from the controller board.

**4** Remove the screw (A) to disconnect the ground wire.

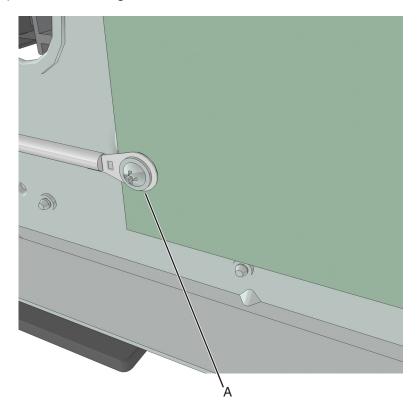

**5** Remove the four screws (B), and then remove the right front mount.

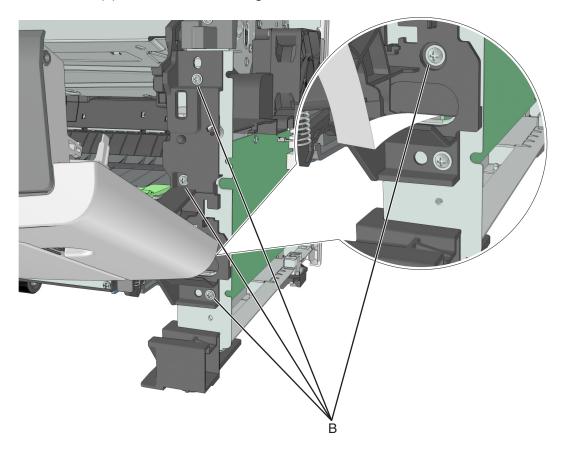


Repair information

### **Transfer roll removal**


Warning—Potential Damage: Do not touch the transfer roll with bare hands. Oil from the skin can damage it.

**1** Squeeze the latches at each end of the transfer roll.

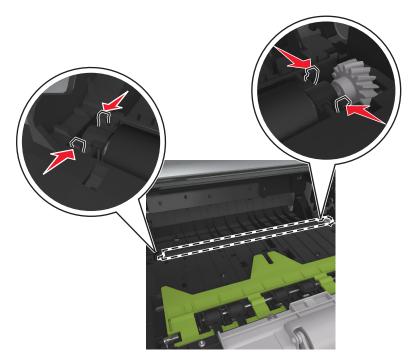

**2** Lift to remove the transfer roll.


Warning—Potential Damage: Do not remove the spring under the left latch. Doing so will damage the printer.

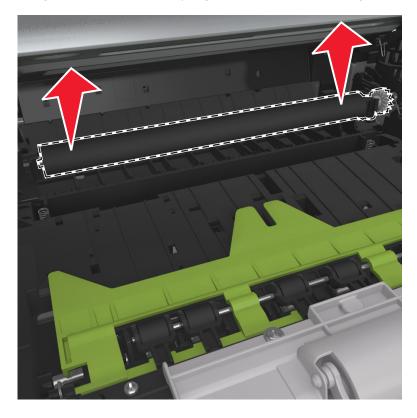


Repair information

## **Cartridge plunger removal**

- **1** Open the front door.
- 2 Tilt the cartridge plunger.

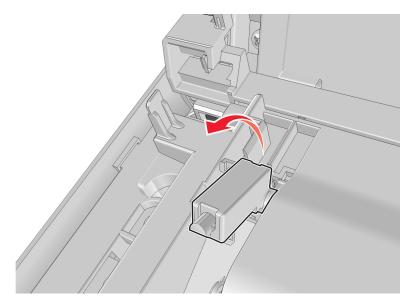


**3** Twist and then remove the cartridge plunger.

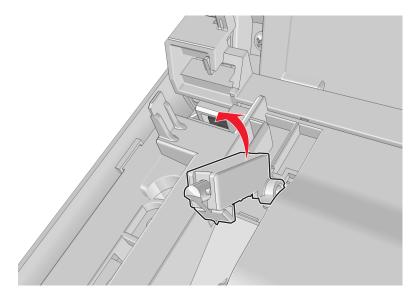


#### Installation notes:

**a** Use a spring hook to hold the spring, and then reinstall the cartridge plunger.

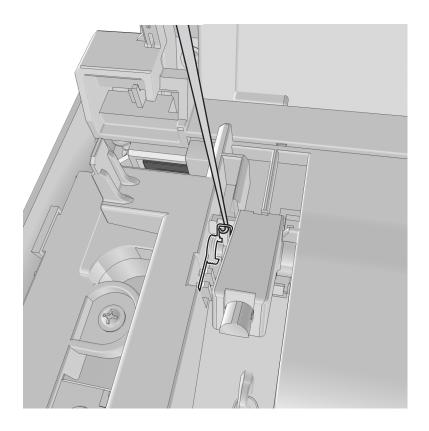


**b** Set the spring over the plunger.

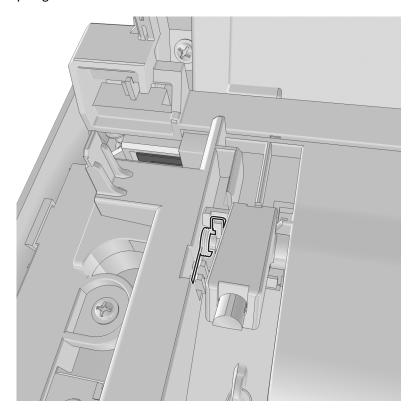


### **Bezel removal**

- **1** Open the front door.
- **2** Push the latches (A) at the left side to remove the bezel.

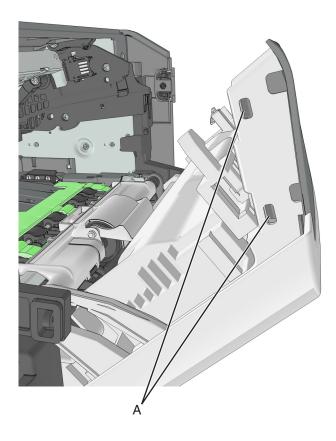

## Nameplate removal


- **1** Open the front door.
- **2** Remove five screws (A) securing the nameplate.

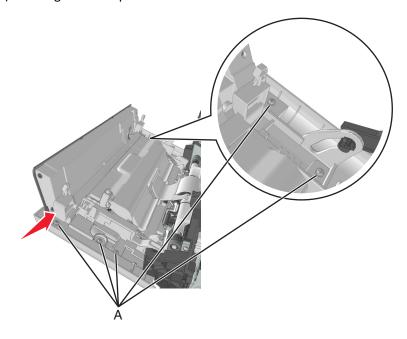


### **Control panel assembly removal**

- 1 Remove the right cover. See "Right cover removal" on page 160.
- 2 Remove the nameplate. See "Nameplate removal" on page 174.
- **3** Remove the bezel. See "Bezel removal" on page 173.


Remove the screw (A) securing the ground connector to the controller board.

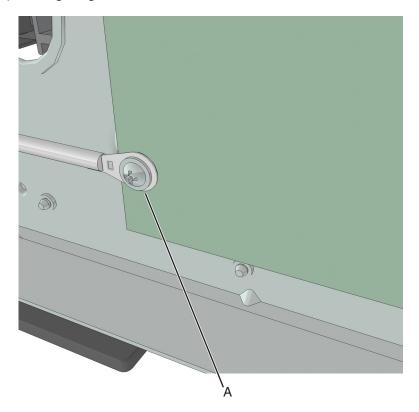

- Disconnect the cable JOPP1 or JOPP2 from the controller board.
- Remove the screw (B) from the right front mount, and route the cable through the slot.

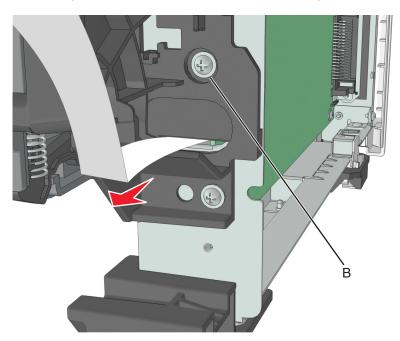

7 Remove the two screws (C) securing the control panel assembly.

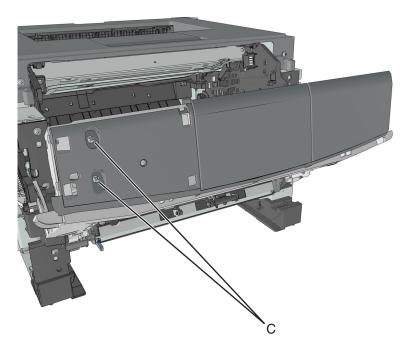


**8** Route all cables off the printer to completely remove the control panel assembly.

### **UICC** removal

- 1 Remove the right cover. See "Right cover removal" on page 160.
- 2 Remove the nameplate. See "Nameplate removal" on page 174.
- **3** Remove the bezel. See "Bezel removal" on page 173.
- 4 Remove the control panel assembly. See "Control panel assembly removal" on page 174.
- **5** Remove the three screws (A), and then remove the UICC.


Note: The control panel buttons must remain with the control panel assembly.

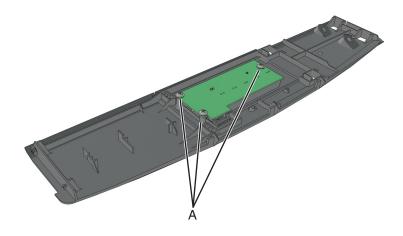


Repair information

## MPF assembly removal


- 1 Remove the nameplate. See "Nameplate removal" on page 174.
- **2** Remove the two springs (A).

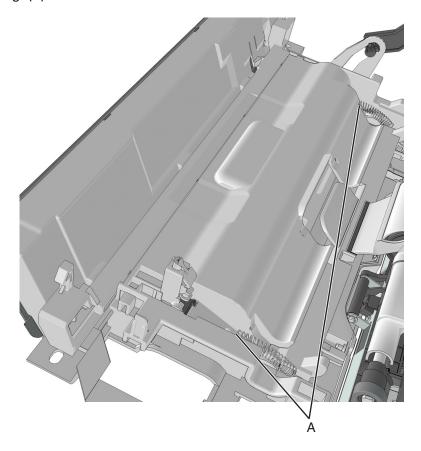


**3** Squeeze the latches (B) to release the left and right links.

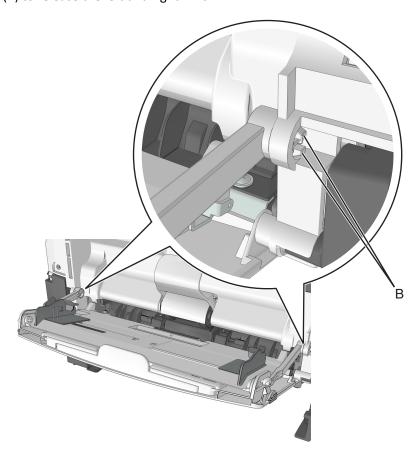

4 Release the lock (C) remove the MPF link. Do the same on the other MPF link.

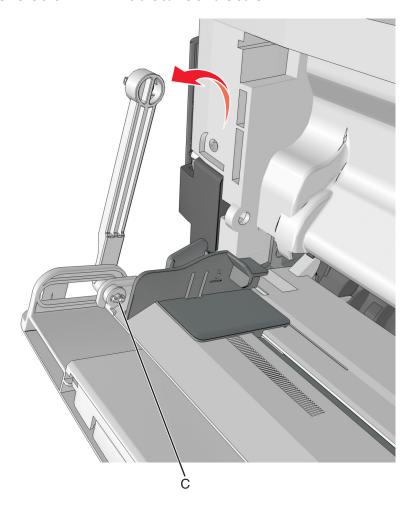


- **5** Release the right tab (D) of the MPF.
- **6** Slide the MPF assembly to remove.

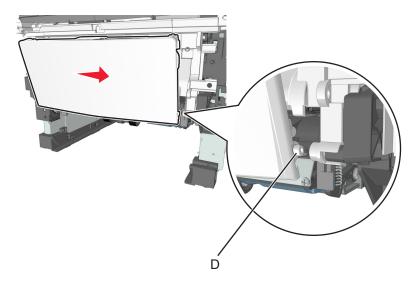

## MPF pick roller cover removal


- **1** Open the front door.
- 2 Remove the two screws (A), and then remove the MPF pick roller cover.

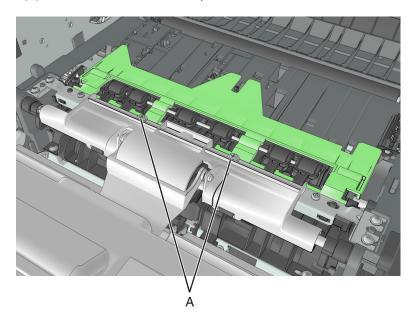

## MPF pick roller removal


- 1 Remove the MPF pick roller cover. See "MPF pick roller cover removal" on page 180.
- **2** Remove the two screws (A).

**Note:** Use a #1 Phillips screwdriver.

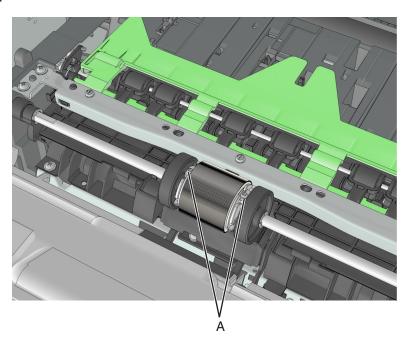


**3** Pull the MPF pick roller outward to remove.

Warning—Potential Damage: Do not touch the pick tire with bare hands, as this can damage the pick roller.

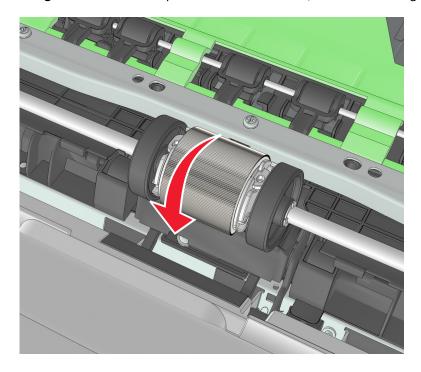

#### **Bail removal**


- 1 Remove the MPF pick roller cover. See "MPF pick roller cover removal" on page 180.
- 2 Rotate the bail.
- **3** Squeeze the latches, and then remove the bail.

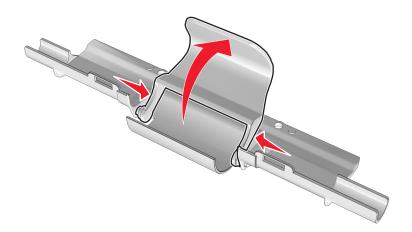

#### Jam access cover removal

- 1 Remove the MPF pick roller cover. See "MPF pick roller cover removal" on page 180.
- 2 Remove the MPF pick roller. See "MPF pick roller removal" on page 180.

**3** Remove the four screws (A), and then remove the jam access cover.

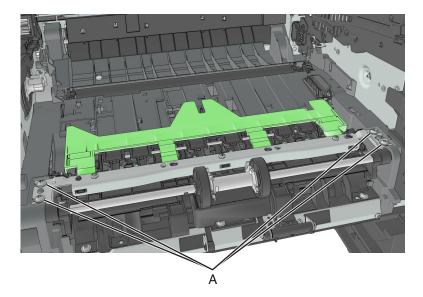


#### Front door removal


**Note:** This is not a FRU.

- 1 Remove the right cover. See "Right cover removal" on page 160.
- **2** Disconnect the cable JOPP1 or JOPP2 from the controller board.
- **3** Disconnect the cable JCVR1 from the controller board.

**4** Squeeze the latch, and then detach the link from the front door.

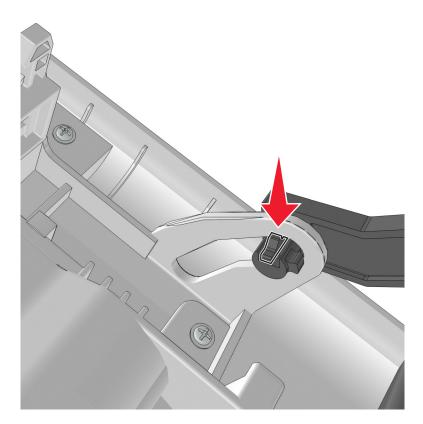


**5** Remove the screw (A) to disconnect the ground wire.

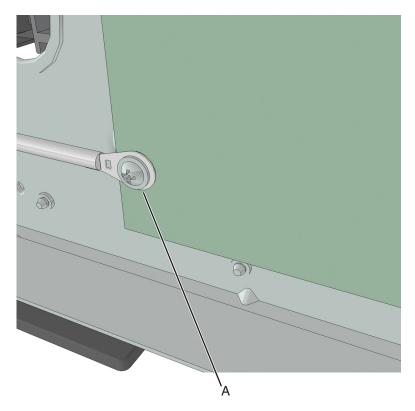

Repair information

**6** Remove the four screws (B).

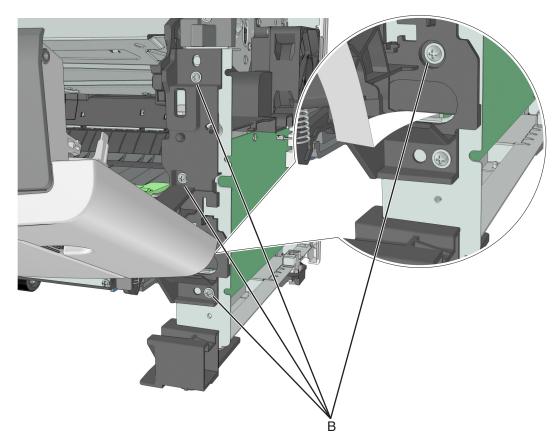

**7** Remove the right front mount, and then remove the front door. Below are the front door and the right front mount.




#### **Installation notes:**

- **a** Mount the left side of the front door to the printer.
- **b** Attach the right front mount to the front door.

**c** Install the right front mount to the printer.

#### Front access cover removal


- 1 Remove the right cover. See "Right cover removal" on page 160.
- 2 Remove the front door. See "Front door removal" on page 182.
- 3 Remove the nameplate. See "Nameplate removal" on page 174.
- 4 Remove the MPF assembly. See "MPF assembly removal" on page 177.
- **5** Remove the bezel. See "Bezel removal" on page 173.
- 6 Remove the control panel assembly. See "Control panel assembly removal" on page 174.
- **7** The front access cover remains.

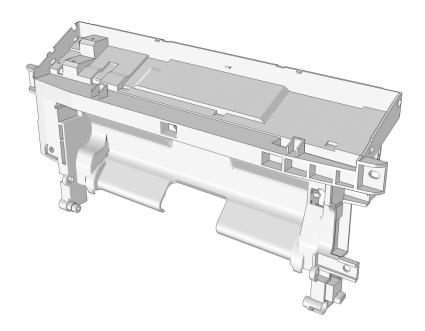

#### Front door sensor removal


- 1 Remove the front door. See "Front door removal" on page 182.
- **2** From under the right front mount, remove the screw (A).

**Note:** Use a #1 Phillips screwdriver.

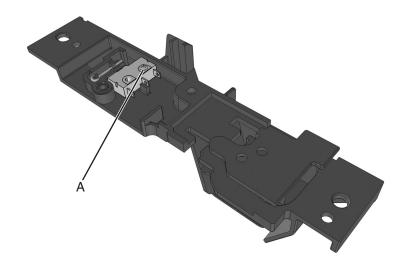


## Front input guide removal

- 1 Remove the right cover. See "Right cover removal" on page 160.
- 2 Remove the front door. See "Front door removal" on page 182.
- 3 Remove the MPF pick roller cover. See "MPF pick roller cover removal" on page 180.
- 4 Remove the MPF pick roller. See "MPF pick roller removal" on page 180.
- **5** Remove the jam access cover. See "Jam access cover removal" on page 181.
- **6** Disconnect cable JMPF1 from the controller board.
- 7 Remove the four screws (A).

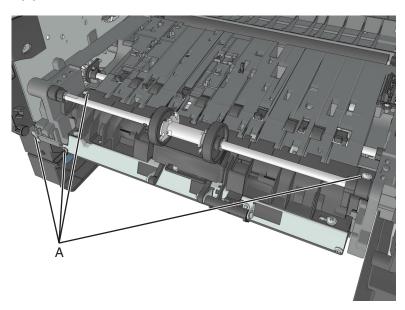


**8** Push and hold the cam restraint to release the MPF shaft.

**9** Rotate the MPF shaft inward so that the cams at each end point up.

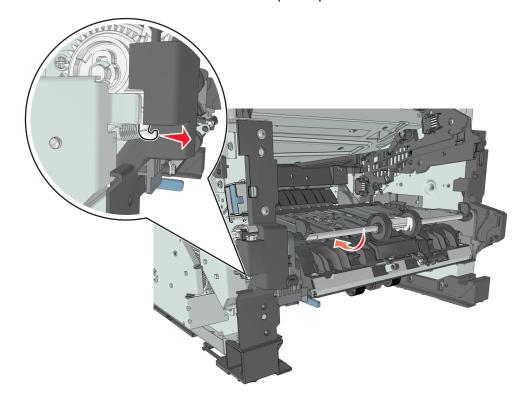


**10** Release the front guide from the guides at each end.

**Installation note:** The cams at each end of the MPF shaft must point down.

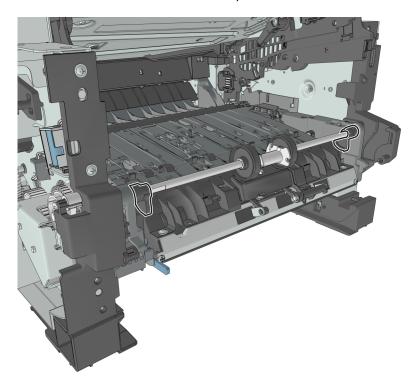


#### Separator pad removal

- 1 Remove the right cover. See "Right cover removal" on page 160.
- 2 Remove the front door. See "Front door removal" on page 182.
- 3 Remove the MPF pick roller cover. See "MPF pick roller cover removal" on page 180.
- 4 Remove the MPF pick roller. See "MPF pick roller removal" on page 180.
- **5** Remove the jam access cover. See "Jam access cover removal" on page 181.
- **6** Remove the E-clip (A).
- 7 While pressing down the MPF sensor flag (B) and separator pad (C), move the restraint roller (D) and MPF pick roller hub (E) to the right.

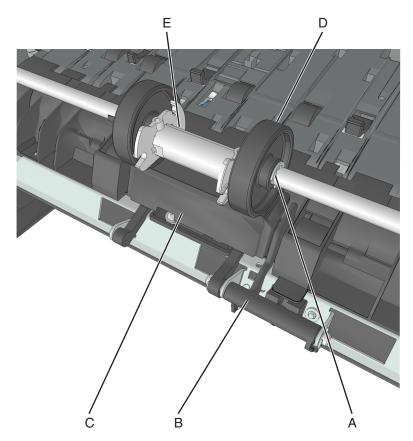


**8** Remove the pin (F).

**9** While pressing down the MPF sensor flag and separator pad, move the restraint roller (G) to the right.

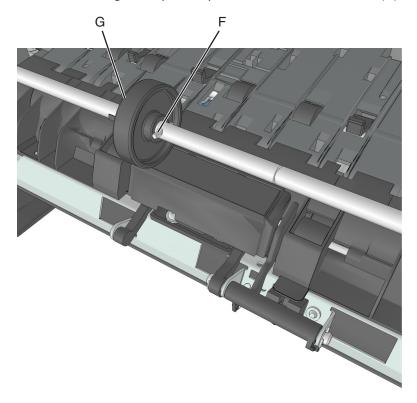

**10** Remove the E-clip (H), and then move the shaft (I) to the right.

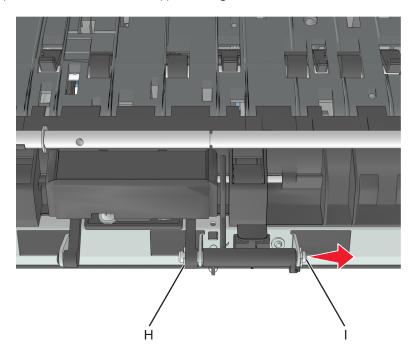


**11** Remove the separator pad and the spring underneath.


# **Bottom removals**

### Power supply removal


- 1 Remove the left cover. See "Left cover removal" on page 144.
- 2 Remove the rear door and cover. See "Rear door and cover removal" on page 206.
- 3 Disconnect the cable (A) from the rear, and disconnect the cable (B) from the left side.

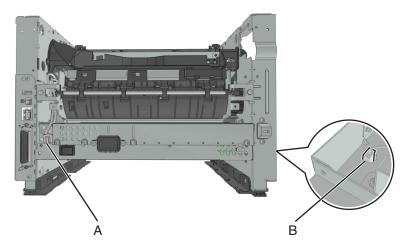

- **4** Position the printer so that it sits on its right side.
- **5** Remove the three screws (C), and then remove the right tray guide.

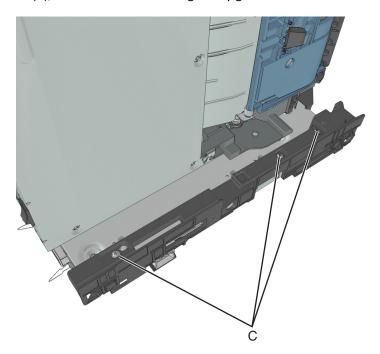

**6** Remove the five metal screws (D) and the plastic screw (E) securing the power supply.

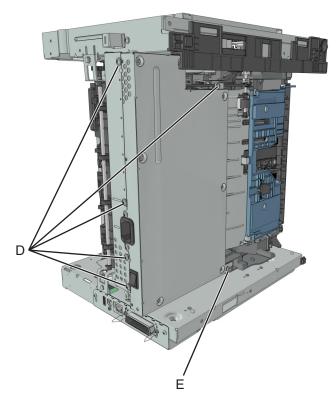


**7** Remove the power supply, and then disconnect all cables from the power supply.

# Power supply shield removal

- 1 Remove the left cover. See "Left cover removal" on page 144.
- 2 Remove the rear door and cover. See "Rear door and cover removal" on page 206.
- **3** Remove the power supply. See "Power supply removal" on page 190.
- **4** Position the printer so that it sits on its right side.


**5** Remove the three screws (A), and then remove the power supply shield.

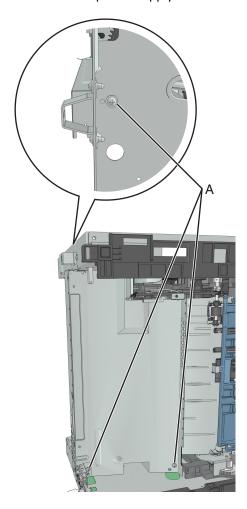


## **Duplex removal**

- 1 Remove the left cover. See "Left cover removal" on page 144.
- 2 Remove the rear door and cover. See "Rear door and cover removal" on page 206.
- 3 Remove the power supply. See "Power supply removal" on page 190.
- 4 Remove the power supply shield. See "Power supply shield removal" on page 191.
- **5** Position the printer so that it sits on its right side.

**6** Remove the four screws (A) securing the duplex.

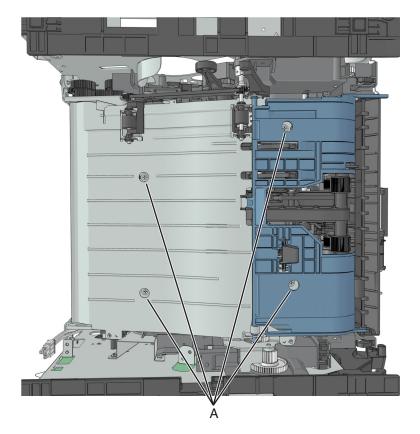


**Note:** The duplex link (B) is part of the FRU.

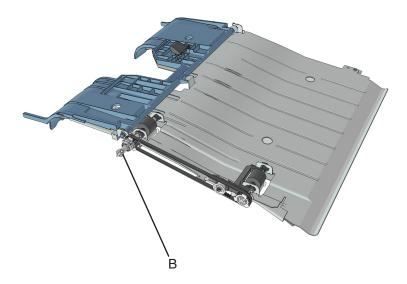

# **Duplex sensor and input sensor removal**


- 1 Remove the left cover. See "Left cover removal" on page 144.
- 2 Remove the right cover. See "Right cover removal" on page 160.

- 3 Remove the rear door and cover. See "Rear door and cover removal" on page 206.
- 4 Remove the power supply. See "Power supply removal" on page 190.
- **5** Remove the power supply shield. See "Power supply shield removal" on page 191.
- 6 Remove the duplex. See "Duplex removal" on page 192.
- **7** Disconnect the cable JDUPPI 1 from the controller board.
- **8** Remove the two screws (A), and cut the cable near the frame to detach the sensors.

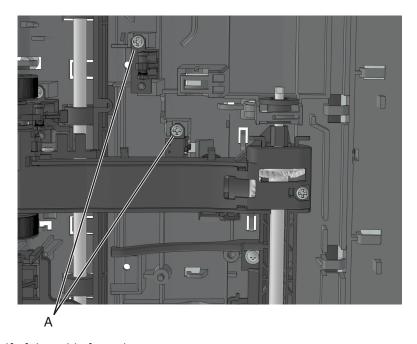

**9** Remove the other half of the cable from the printer.


**Installation note:** Route the cable using the new path, and secure it with a cable tie (A).

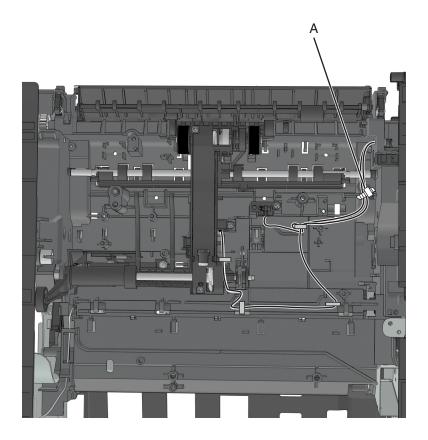

#### Toner density sensor removal

- 1 Remove the left cover. See "Left cover removal" on page 144.
- 2 Remove the main drive gearbox. See "Main drive gearbox removal" on page 145.
- 3 Remove the rear door and cover. See "Rear door and cover removal" on page 206.
- 4 Remove the power supply. See "Power supply removal" on page 190.
- 5 Remove the power supply shield. See "Power supply shield removal" on page 191.
- 6 Remove the duplex. See "Duplex removal" on page 192.
- **7** Disconnect the spring (A) from the printer.

**8** Remove the two screws (B), and then remove the sensor.

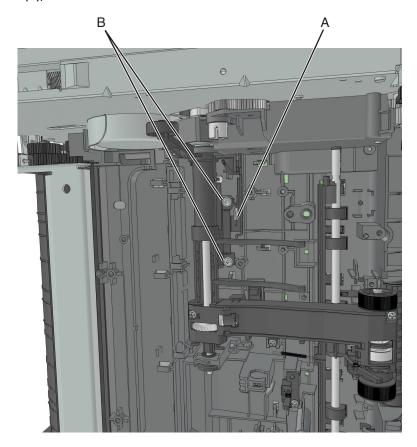


**9** Disconnect the cable from the sensor.

## Trailing edge sensor removal

- 1 Remove the left cover. See "Left cover removal" on page 144.
- 2 Remove the right cover. See "Right cover removal" on page 160.
- 3 Remove the rear door and cover. See "Rear door and cover removal" on page 206.
- 4 Remove the power supply. See "Power supply removal" on page 190.
- 5 Remove the power supply shield. See "Power supply shield removal" on page 191.
- 6 Remove the duplex. See "Duplex removal" on page 192.
- 7 Disconnect the cable JACM1 from the controller board, and cut it near the frame.

**8** Remove the screw (A), and then remove the sensor.

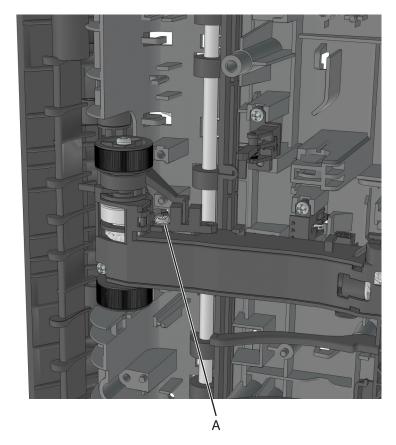


**9** Remove the other half of the cable from the printer.

#### **Installation notes:**

- a Install the sensor to the ACM.
- **b** Route the cable along the two cable holders on the side of the ACM.


Note: Make sure that the cable is not loose.

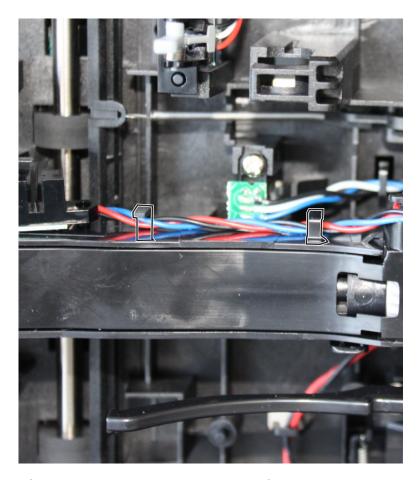


**c** Bring the cable in front of the two cable holders near the ACM shaft.



**d** Loop the cable behind the right cable holder.

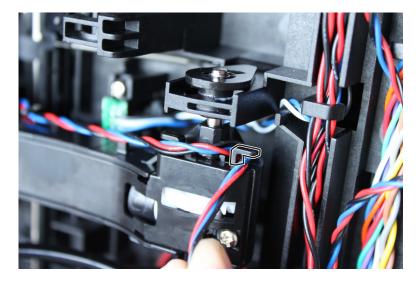

**e** Twist the cable so that it forms a loop.

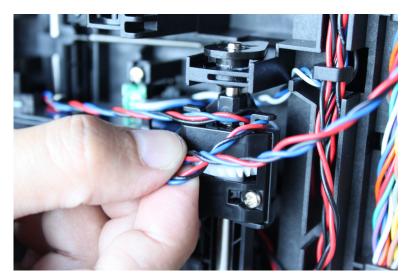


**f** Place the loop over the left cable holder.



**g** Pull the free end to make sure that the cable is tightly looped around the cable holders.



**h** Route the cable using the new path, and secure it with a cable tie (A).

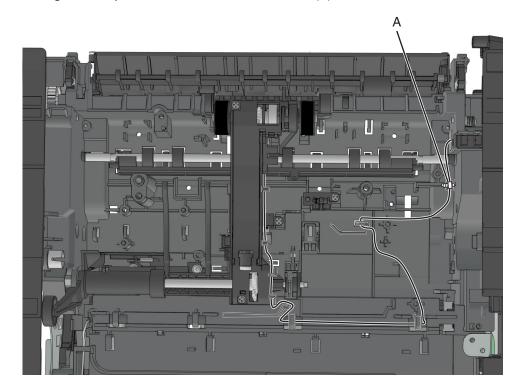


#### **ACM** assembly removal


- 1 Remove the left cover. See "Left cover removal" on page 144.
- 2 Remove the main drive gearbox. See "Main drive gearbox removal" on page 145.
- 3 Remove the rear door and cover. See "Rear door and cover removal" on page 206.
- 4 Remove the power supply. See "Power supply removal" on page 190.
- 5 Remove the power supply shield. See "Power supply shield removal" on page 191.
- 6 Remove the duplex. See "Duplex removal" on page 192.
- 7 Remove the ACM clutch. See "ACM clutch removal" on page 153.


Warning—Potential Damage: Do not cut the cable (leave the ACM clutch hanging).

**8** Remove the screw (A) and then detach the trailing edge sensor.

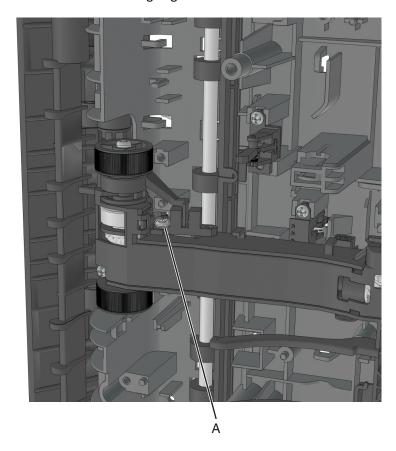


#### **9** Disconnect the two springs (B).

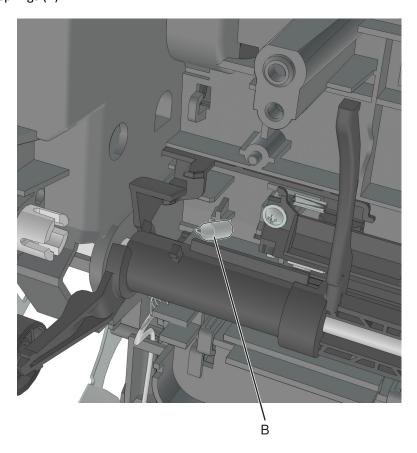

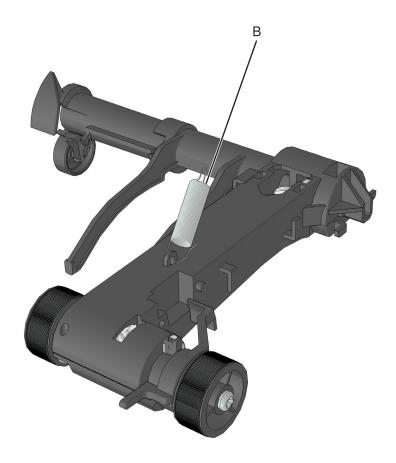


- Pry the pointed end of the ACM bushing to release the locking pin underneath.
- Rotate, and then remove the ACM bushing.

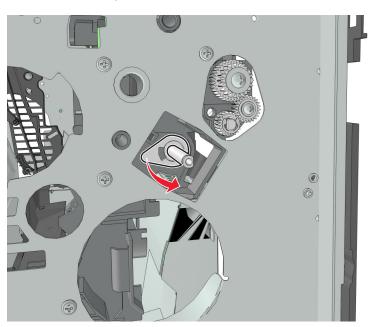

Pry the pointed end of the 2nd pickup pushing to release the locking pin underneath.

**13** Rotate, and then remove the 2nd pickup bushing.

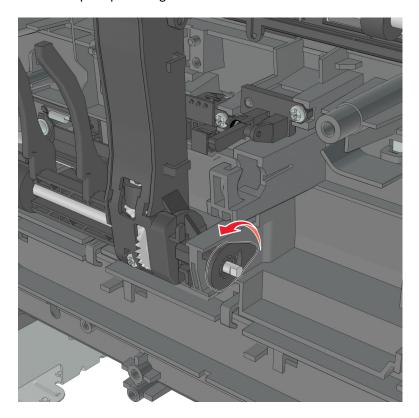


**14** Pull out the shaft, and remove the ACM.

# Rear side removals

#### **Dust cover removal**


- 1 Press the latches on each side of the dust cover.
- **2** Remove the dust cover.

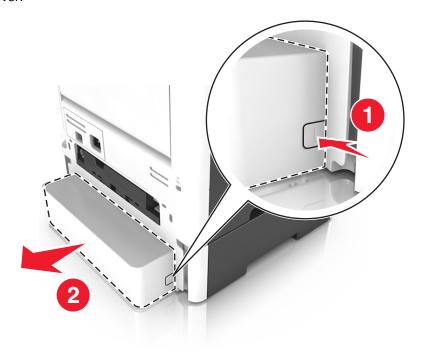


#### Rear door and cover removal

- 1 Position the printer so that it sits on either its left or right side.
- 2 Open the rear door at an angle of 45 degrees.

**3** Pull the rear door to remove.

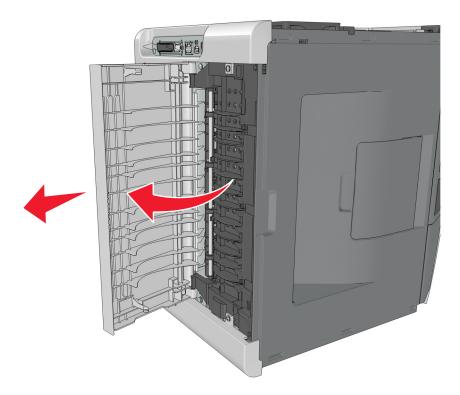

- **4** Remove the two screws (A) securing the rear cover.
- **5** Press the two latches to release the rear cover.

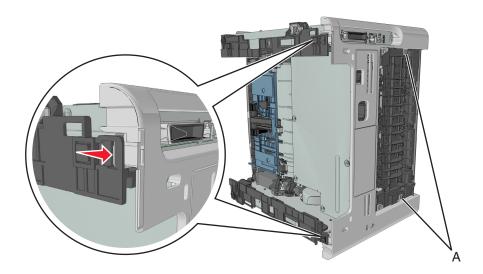


#### Narrow media/bin full sensor removal


- 1 Remove the right cover. See "Right cover removal" on page 160.
- 2 Remove the left cover. See "Left cover removal" on page 144.
- 3 Remove the rear door and cover. See "Rear door and cover removal" on page 206.

Repair information

- 4 Remove the top cover. See "Top cover removal" on page 211.
- **5** Disconnect the cable JNRW1 from the controller board.
- **6** Remove the six screws (A) securing the sensor and upper exit guide to the redrive assembly.

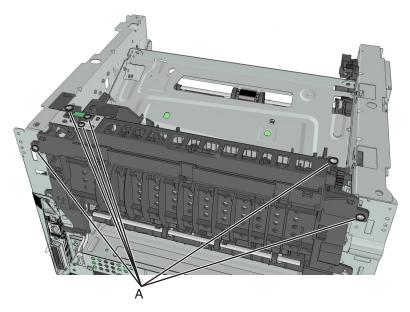


7 Remove the ground (B), sensor (C), and sensor flag (D).

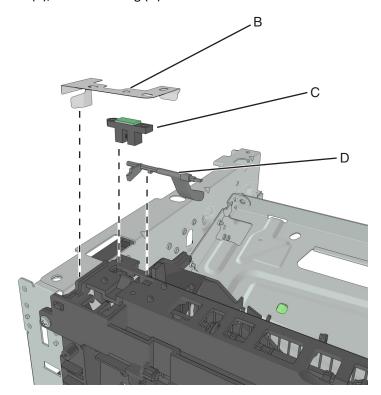


### **Redrive assembly removal**

- 1 Remove the right cover. See "Right cover removal" on page 160.
- 2 Remove the left cover. See "Left cover removal" on page 144.
- 3 Remove the rear door and cover. See "Rear door and cover removal" on page 206.
- 4 Remove the top cover. See "Top cover removal" on page 211.
- **5** Disconnect the cable JNRW1 from the controller board.
- **6** Remove the two screws (A), and then detach the reverse solenoid.

**Note:** Do not disconnect the reverse solenoid cable from the controller board.

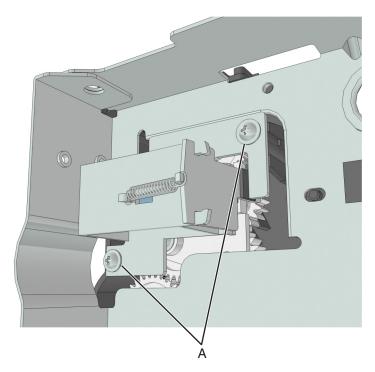


**7** Remove the six screws (B) securing the redrive assembly.

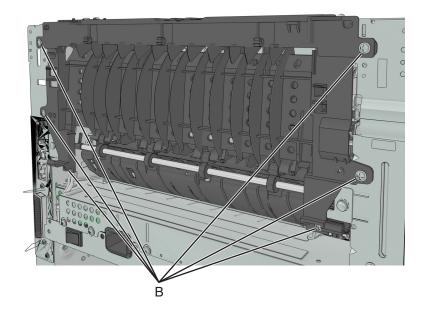

#### **Fuser removal**

- 1 Remove the right cover. See "Right cover removal" on page 160.
- 2 Remove the rear door and cover. See "Rear door and cover removal" on page 206.
- 3 Remove the redrive assembly. See "Redrive assembly removal" on page 209
- **4** Disconnect the cable JEXIT1 from the controller board.
- **5** Disconnect the two cables (A).

**6** Remove the two screws (B) securing the fuser.

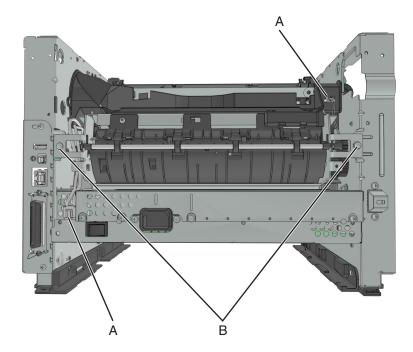


# Top side removals


### Top cover removal

- 1 Remove the right cover. See "Right cover removal" on page 160.
- 2 Remove the left cover. See "Left cover removal" on page 144.
- 3 Remove the rear door and cover. See "Rear door and cover removal" on page 206.
- **4** Open the front door.

**5** Remove the two screws (A) in front.

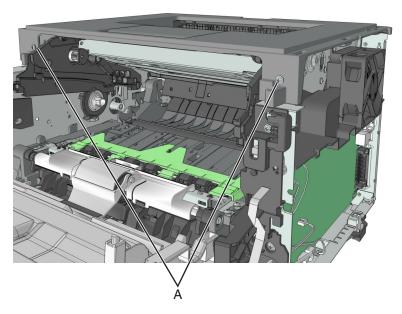

6 Remove the two screws (B) at the rear.

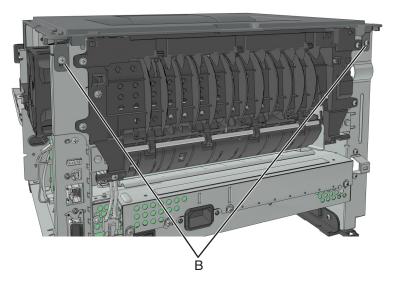


**7** Lift the top cover to remove.

## Laser scanning unit (LSU) removal

- 1 Remove the right cover. See "Right cover removal" on page 160.
- 2 Remove the left cover. See "Left cover removal" on page 144.
- 3 Remove the rear door and cover. See "Rear door and cover removal" on page 206.
- 4 Remove the top cover. See "Top cover removal" on page 211.
- **5** Remove the cooling fan. See "Cooling fan removal" on page 161.
- 6 Disconnect the cable (A) from the LSU.

- 7 Disconnect the cable JGLV1 or J6 from the controller board.
- **8** Remove the three screws (B) securing the LSU.

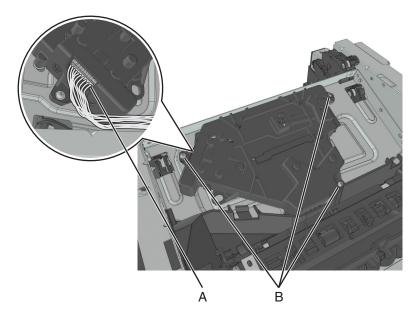


9 Align the printhead. See "Printhead assembly mechanical adjustment" on page 143.

# 250/550-sheet tray removals

### Pick roller removal


Press the latches, and then remove the pick roller.

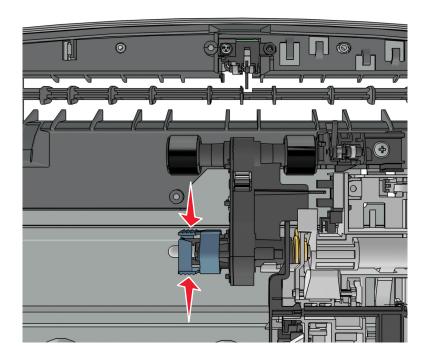


Repair information

# Separator roll assembly removal


1 Remove the screw (A) from under the tray insert.

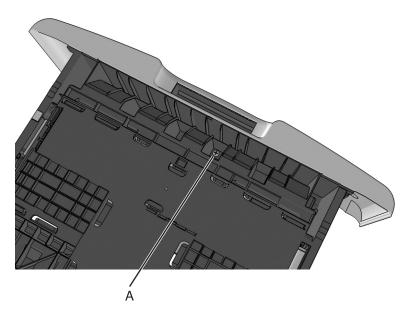


**2** Remove the E-clip, and then remove the gear.

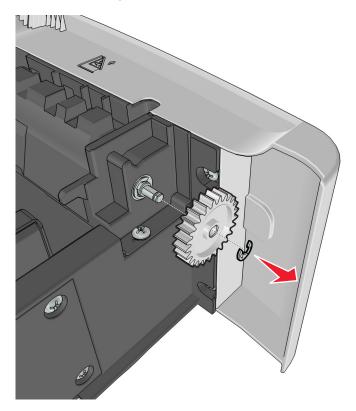

**3** Remove the four screws (B).

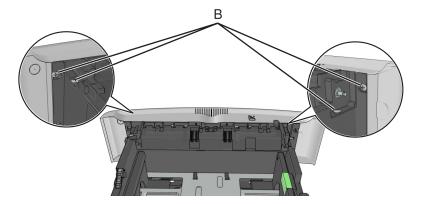


**4** Push out the top part of the drawer cover, and then remove the separator roll assembly.

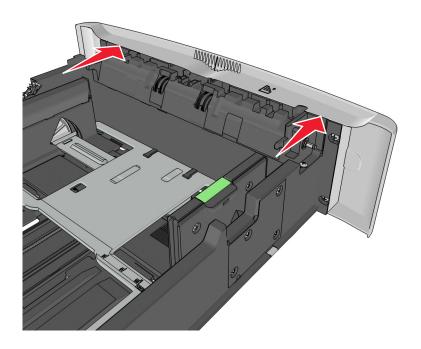


# **ACM** assembly removal


1 Remove the seven screws (A), and release the two latches (B) from the top of the drawer.

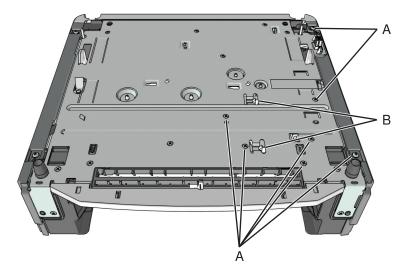


**2** Remove the two screws (C), and then release the two latches under the screws.

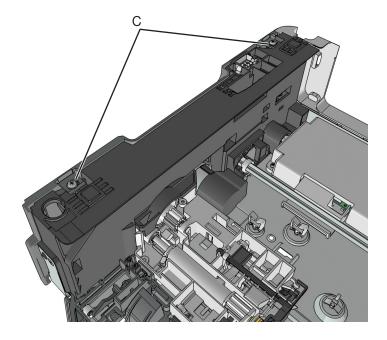


**3** Swing the right cover backward to remove.

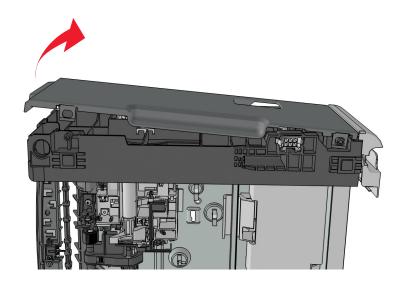


4 Remove the screw (D).

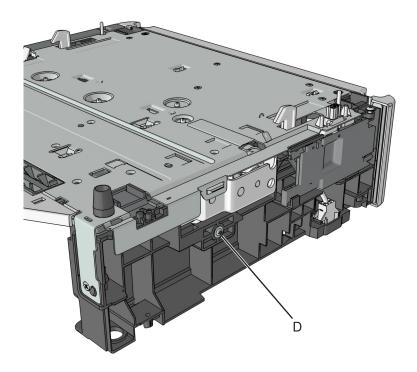

**5** Disconnect the spring (E).

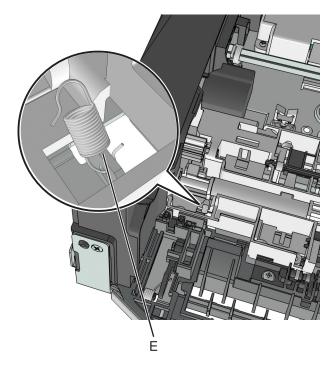

**6** Remove the two screws (F), and then remove the controller card cover.

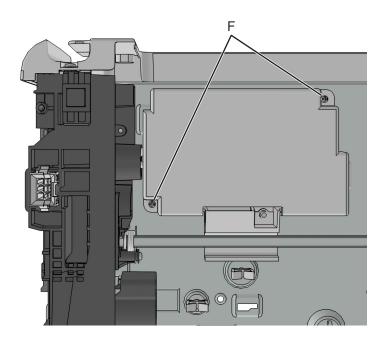


- 7 Disconnect the cable J11 from the controller card.
- **8** Unroute the cable, and then remove the ACM assembly.

# **Component locations**


## **Exterior locations**

### **Front view**

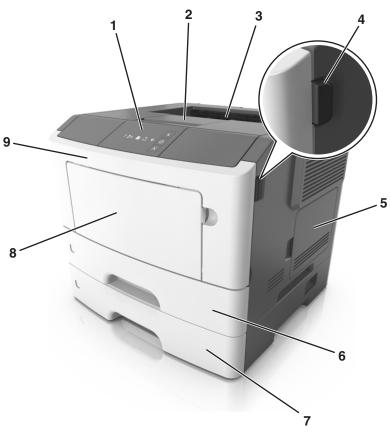

	Part name
1	Control panel
2	Paper stop
3	Standard bin
4	Front door release button
5	Controller board access door
6	Standard 250-sheet tray
7	Optional 250- or 550-sheet tray
8	50-sheet multipurpose feeder
9	Front door

## **Rear view**

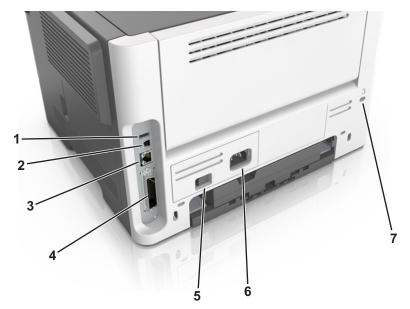

	Part name		
1	USB port*		
2	USB printer port		
3	Ethernet port*		
4	Parallel port*		
5	<b>5</b> Power switch		
6	Power cord socket		
7	Security slot		
* These ports are available only in select printer models.			

## **Maintenance**

## Inspection guide

The purpose of this inspection guide is to aid you in identifying the intervals, based on page count, at which parts must be inspected (for visible physical damage), cleaned, or replaced.

If any unsafe conditions exist, find out how serious the hazard could be and if you can continue before you correct the hazard.

As you service the machine, check for the following:

- Damaged, missing, or altered parts, especially in the area of the On/Off switch and the power supply
- Damaged, missing, or altered covers, especially in the area of the top cover and the power supply cover
- Possible safety exposure from any non-Lexmark attachments

Use the following table to determine when specified parts should be inspected:

	EVERY SERVICE CALL	EVERY 100K	EVERY 200K	NOTES				
MEDIA TRAY—ALL	MEDIA TRAY—ALL							
Tray insert	Inspect	Inspect	Replace					
Media side guides	Inspect	Inspect		Check for correct positioning.				
Media end guide	Inspect	Inspect		Check for correct positioning.				
Separation pad	Inspect	Clean		Damp cloth				
MEDIA FEEDERS—ALL	•	•	•					
Pick roller	Inspect	Inspect	Replace	Verify page count before replacing.				
MPF feed rollers	Inspect	Inspect	Replace					
Sensor		Clean	Clean	Brush or blower brush				
TRANSFER ROLL	•	•	•					
Transfer roll	Inspect	Inspect	Replace					
FUSER	•							
Fuser	Inspect	Inspect	Replace					
Sensor (fuser exit)		Clean	Clean	Blower brush				
REDRIVE ASSEMBLY	REDRIVE ASSEMBLY							
Redrive assembly		Inspect	Replace					

## **Lubrication specification**

Lubricate only when parts are replaced or as needed, not on a scheduled basis. Use of lubricants other than those specified in this service manual can cause premature failure. Some unauthorized lubricants might chemically attack polycarbonate parts. Use Grease P/N 99A0394 Nyogel 744.

## **Cleaning the printer**

**Note:** You may need to perform this task after every few months.

**Warning—Potential Damage:** Damage to the printer caused by improper handling is not covered by the printer warranty.

**1** Make sure that the printer is turned off and unplugged from the electrical outlet.



**CAUTION—SHOCK HAZARD:** To avoid the risk of electrical shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.

- 2 Remove paper from the standard bin and multipurpose feeder.
- **3** Remove any dust, lint, and pieces of paper around the printer using a soft brush or vacuum.
- **4** Dampen a clean, lint-free cloth with water, and use it to wipe the outside of the printer.
  - **Warning—Potential Damage:** Do not use household cleaners or detergents to prevent damage to the exterior of the printer.
- **5** Make sure all areas of the printer are dry before sending a new print job.

# **Parts catalog**

## Legend


The following column headings are used in the parts catalog:

- Asm-index—Identifies the item in the illustration.
- Part number—Identifies the unique number that correlates with the part.
- Units/mach—Refers to the number of units actually used in the base machine or product.
- Units/FRU—Refers to the number of units in a particular FRU.
- **Description**—A brief description of the part.

The following abbreviations are used in the parts catalog:

- NS (not shown) in the Asm-index column indicates that the part is procurable but is not pictured in the illustration.
- PP (parts packet) in the Description column indicates that the part is contained in a parts packet.


# **Assembly 1: Covers**

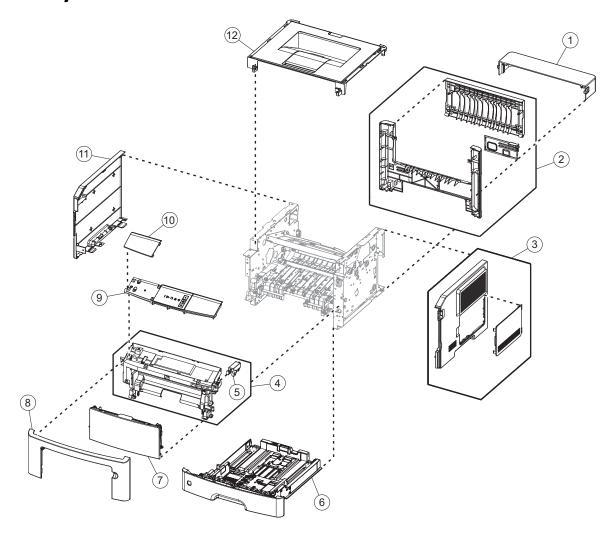

# **Assembly 1: Covers**

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	40X8520	1	1	Dust cover (250-sheet tray)	"Dust cover removal" on page 206
2	40X8054	1	1	Rear door and cover	"Rear door and cover removal" on page 206
3	40X8052	1	1	Right cover	"Right cover removal" on page 160
4	40X8056	1	1	Front access cover	"Front access cover removal" on page 185
5	40X9148	1	1	Cartridge plunger	"Cartridge plunger removal" on page 170
6	40X8303	1	1	250-sheet tray	N/A
7	40X8302	1	1	MPF assembly (50 sheets)	"MPF assembly removal" on page 177
8	40X8051	1	1	Nameplate	"Nameplate removal" on page 174
9	40X8058	1	1	Control panel cover and buttons  Note: Does not include the UICC.	"Control panel assembly removal" on page 174 "UICC removal" on page 176
10	40X8062	1	1	Bezel (MS310d)	"Bezel removal" on page 173
10	40X8063	1	1	Bezel (MS310dn)	"Bezel removal" on page 173
11	40X8053	1	1	Left cover	"Left cover removal" on page 144
12	40X8055	1	1	Top cover	"Top cover removal" on page 211


# **Assembly 2: Electronics 1**

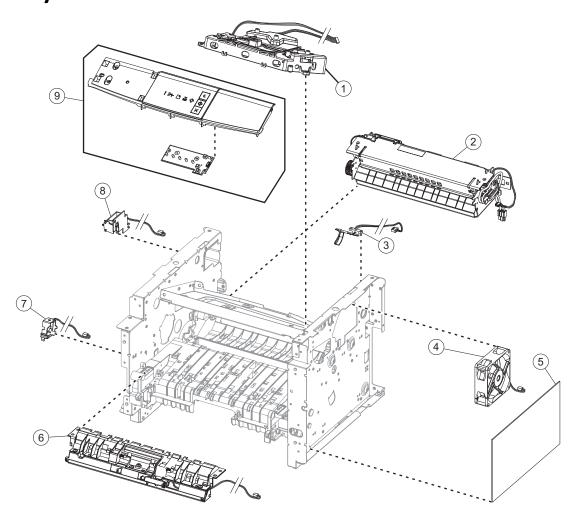

# **Assembly 2: Electronics 1**

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	40X8082	1	1	Laser scanning unit	"Laser scanning unit (LSU) removal" on page 212
2	40X8343	1	1	Fuser, 100 V	"Fuser removal" on page 210
2	40X8023	1	1	Fuser, 110 V	"Fuser removal" on page 210
2	40X8024	1	1	Fuser, 220 V	"Fuser removal" on page 210
3	40X8050	1	1	Narrow media/bin full sensor	"Narrow media/bin full sensor removal" on page 207
4	40X8276	1	1	Cooling fan	"Cooling fan removal" on page 161
5	40X8025	1	1	Controller board (MS310d)	"Controller board removal" on page 162
5	40X8026	1	1	Controller board (MS310dn)	"Controller board removal" on page 162
6	40X8280	1	1	Front input guide	"Front input guide removal" on page 186
7	40X8300	1	1	MPF solenoid	"MPF solenoid removal" on page 147
8	40X8301	1	1	Reverse solenoid	"Reverse solenoid removal" on page 152
9	40X8290	1	1	Control panel assembly	"Control panel assembly removal" on page 174


# **Assembly 3: Electronics 2**

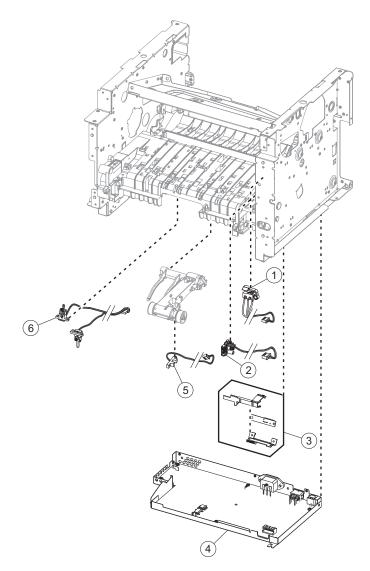

# **Assembly 3: Electronics 2**

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	40X8048	1	1	Front door sensor	"Front door sensor removal" on page 185
2	40X8266	1	1	Toner cartridge smart chip contact	"Toner cartridge smart chip contact removal" on page 164
3	40X8046	1	1	Toner density sensor	"Toner density sensor removal" on page 195
4	40X7795	1	1	Power supply, 100 V/110 V	"Power supply removal" on page 190
4	40X7796	1	1	Power supply, 220 V	"Power supply removal" on page 190
5	40X8047	1	1	Trailing edge sensor	"Trailing edge sensor removal" on page 196
6	40X8043	1	1	Duplex sensor and input sensor	"Duplex sensor and input sensor removal" on page 193

# **Assembly 4: Frame**

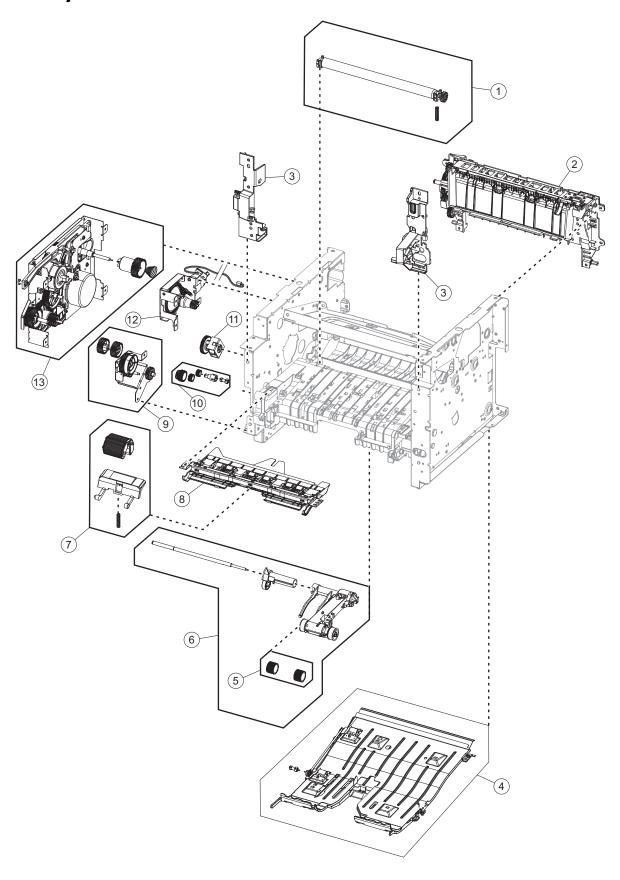


Parts catalog

# **Assembly 4: Frame**

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	40X8393	1	1	Transfer roll	"Transfer roll removal" on page 169
2	40X8298	1	1	Redrive assembly	"Redrive assembly removal" on page 209
3	40X8299	1	1	Front mounts	"Left front mount removal" on page 166
					"Right front mount removal" on page 167
4	40X8275	1	1	Duplex assembly	"Duplex removal" on page 192
5	40X8296	2	1	Pick tire	N/A
6	40X8260	1	1	ACM assembly	"ACM assembly removal" on page 201
7	40X8295	1	1	MPF pick roller and Separator pad	"MPF pick roller removal" on page 180
					"Separator pad removal" on page 188
8	40X8279	1	1	Jam access cover	"Jam access cover removal" on page 181
9	40X8278	1	1	MPF gearbox	"MPF gearbox removal" on page 149
10	40X8277	1	1	Duplex gear assembly	"Duplex gear assembly removal" on page 158
11	40X8265	1	1	ACM clutch	"ACM clutch removal" on page 153
12	40X8083	1	1	Cartridge gearbox	"Cartridge gearbox removal" on page 158
13	40X8085	1	1	Main drive gearbox	"Main drive gearbox removal" on page 145
NS	40X8394	1	1	Screw kit	N/A

# **Assembly 5: Option trays**

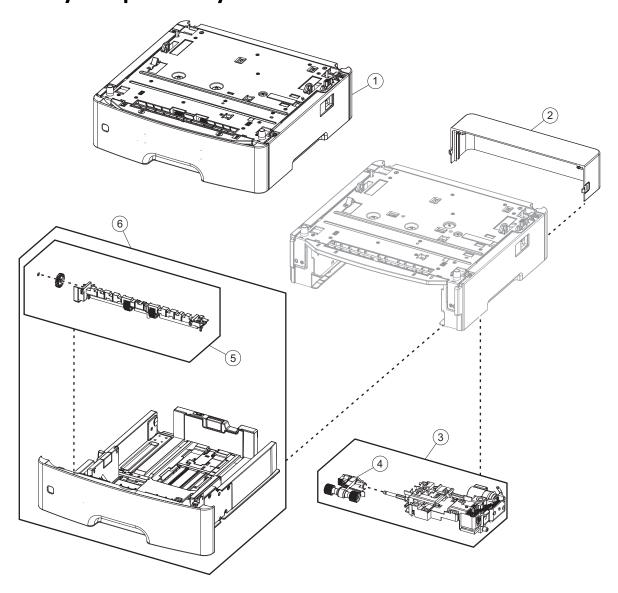

# **Assembly 5: Option trays**

Asm-index	P/N	Units/opt	Units/FRU	Description	Removal procedure
1	40X8287	1	1	250-sheet tray	N/A
1	40X8286	1	1	550-sheet tray	N/A
2	40X8520	1	1	Dust cover, 250-sheet tray	"Dust cover removal" on page 206
2	40X8521	1	1	Dust cover, 550-sheet tray	"Dust cover removal" on page 206
3	40X8262	1	1	ACM assembly	"ACM assembly removal" on page 216
4	40x8443	1	1	Pick roller assembly	"Pick roller removal" on page 213
5	40X8444	1	1	Separator roll assembly	"Separator roll assembly removal" on page 214
6	40X8305	1	1	250-sheet tray insert	N/A
6	40X8086	1	1	550-sheet tray insert	N/A

# **Assembly 6: Power cords**

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
NS	40X0269	1	1	Power cord, 2.5 m (straight)—USA, Canada	N/A
NS	40X3141	1	1	Power cord, 2.5 m (straight)—Europe and others	N/A
NS	40X0288	1	1	Power cord, 2.5 m (straight)—Argentina	N/A
NS	40X0271	1	1	Power cord, 2.5 m (straight)—United Kingdom	N/A
NS	40X0275	1	1	Power cord, 2.5 m (straight)—Israel	N/A
NS	40X1772	1	1	Power cord, 2.5 m (straight)—Switzerland	N/A
NS	40X1773	1	1	Power cord, 2.5 m (straight)—South Africa	N/A
NS	40X0273	1	1	Power cord, 2.5 m (straight)—Traditional Italy	N/A
NS	40X1774	1	1	Power cord, 2.5 m (straight)—Denmark	N/A
NS	40X4596	1	1	Power cord, 2.5 m (straight)—Brazil	N/A
NS	40X0303	1	1	Power cord, 2.5 m (straight)—China	N/A
NS	40X0270	1	1	Power cord, 2.5 m (straight)—Japan	N/A
NS	40X1792	1	1	Power cord, 2.5 m (straight)—Korea	N/A
NS	40X1791	1	1	Power cord, 2.5 m (straight)—Taiwan	N/A
NS	40X0301	1	1	Power cord, 2.5 m (straight)—Australia	N/A

# **Appendix A: Printer specifications**

## **Product power consumption**

The following table documents the power consumption characteristics of the product.

Note: Some modes may not apply to your product.

Mode	Description	Power consumption (Watts)
Printing	The product is generating hard-copy output from electronic inputs.	520
Сору	The product is generating hard-copy output from hard-copy original documents.	N/A
Scan	The product is scanning hard-copy documents.	N/A
Ready	The product is waiting for a print job.	8
Sleep Mode	The product is in a high-level energy-saving mode.	5
Hibernate	The product is in a low-level energy-saving mode.	1
Off	The product is plugged into an electrical outlet, but the power switch is turned off.	0

The power consumption levels listed in the previous table represent time-averaged measurements. Instantaneous power draws may be substantially higher than the average.

Values are subject to change. See www.lexmark.com for current values.

## **Electrical specifications**


#### Low-voltage models

- 100 to 127 V ac at 47 to 63 Hz nominal
- 90 to 137 V ac, steady state operational extremes

#### **High-voltage models**

- 220 to 240 V ac at 47 to 63 Hz nominal (not available in all countries)
- 198 to 254 V ac, steady state operational extremes

# **Operating clearances**

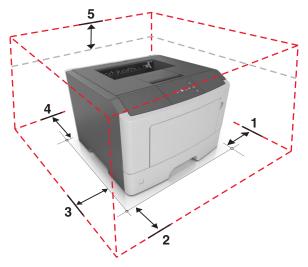

1	Right	305 mm (12 in.)		
2	Front	508 mm (20 in.)		
3	Left	203 mm (8 in.)		
4	Rear	203 mm (8 in.)		
5	Тор	305 mm (12 in.)		
Allow additional clearance around the printer for adding the entired input trave				

Allow additional clearance around the printer for adding the optional input trays.

## **Acoustics**

All measurements are made in accordance with ISO 7779 and conform with ISO 9296.

Status	1 meter average sound pressure dBA	Declared sound power level (Bels)			
Idle (Standby)	Inaudible	Inaudible			
Quiet Mode	49 dBA	6.3 Bels			
Simplex Printing	52 dBA	6.7 Bels			
Sleep/Hibernate Mode	Inaudible	Inaudible			
Measurements apply to 300 dpi, 600 dpi and 1200 dpi printing.					

# **Operating environment**

Environment		Specification
Printer operating	Temperature	60 to 90 °F (16 to 32 °C)
	Relative humidity	8 to 80%
	Maximum wet bulb temperature	73 °F (23 °C)
Printer off	Temperature	50 to 110 °F (10 to 43 °C)
	Relative humidity	8 to 80%
	Maximum wet bulb temperature	80 °F (27 °C)
Ambient operating environment*	Temperature	60 to 90 °F (16 to 32 °C)
	Relative humidity	8 to 80%
Storage and shipping (packaged printer) with or without print cartridge	Temperature	-40 to 110 °F (-40 to 43 °C)
Altitude		10,000 ft (0 to 3,048 m)
Atmospheric pressure		74.6 kPa
Tilt		2°

<sup>\*</sup>In some cases, performance specifications (such as paper OCF, EP cartridge usage) are measured at an ambient condition.

# **Appendix B: Options and features**

## **Available internal options**

### **Memory cards**

- Printer memory
- Flash memory
- Fonts

## Media handling options

**Note:** Only one optional tray can be installed.

- 250-sheet tray
- 550-sheet tray

## **Appendix C: Theory of operation**

### **POR** sequence

At power on, the engine code goes through a series of tests to verify hardware integrity. If a hardware failure is detected, it will be reported to the printer. If the POR sequence cannot be completed successfully, the printer may post an error message identifying service may be needed.


### **Printer control**

The printer uses a single processor for both RIP and engine functions. The raster image processor (RIP) code performs system responsibilities such as PC connection, LAN, ISP attachments, and bitmap generation. The engine code performs tasks related to the operation of the electrical and mechanical device systems such as motors, lasers, power supplies, and fusers. The NVRAMs are located on the controller board and control panel, replacement of either the controller board or control panel will pull or mirror NVRAM data from each other.

### Paper path information

### Input tray


When feeding media, the ACM lowers to come into contact with the media. The pick rollers on the ACM rotate to push the media to the wear strips at the front of the tray. The wear strips provide a fixed resistance to ensure that sheets are fed one at a time. The media is then fed to the secondary input roller and then to the first input roller.

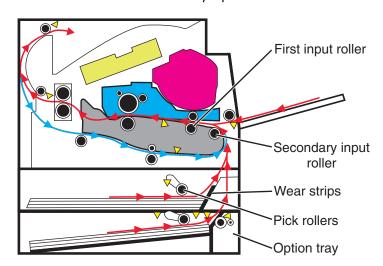

### Multipurpose feeder (MPF)

The driving force from the main drive motor is transmitted through the MPF gearbox. When the MPF solenoid activates, it allows the MPF sector gear linked to the MPF gearbox to rotate. The MPF pick roll shaft is connected to the MPF sector gear.

The MPF can be accessed by opening the MPF tray on the front door. In an MPF paper feed, the MPF paper present sensor detects the media. The instant the MPF pick roll shaft rotates, the cams on each end of the shaft disengage the MPF tray. Each side of the tray is connected to the front access cover by springs. When disengaged from the shaft, the springs pull the tray causing the media to come into contact with the MPF pick roller. At the same time the pick roller rotates, pushing the media to the separator pad. The media does not pass through the secondary input roller, but directly to the first input roller.

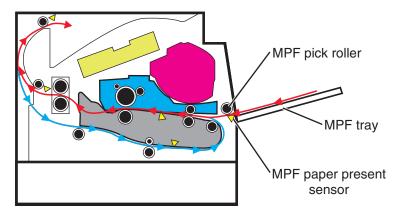


### Simplex printing

Situated along the first input roller, is the deskew shutter. It subjects the media to a deskewing force based on the media width. The direction of the force is transverse to the feed direction. The leading edge of the media then passes though the input sensor.

After the edge of the media is aligned, the first input roller feeds the media to the transfer roll for toner transfer. At this point, the toner image is already on the photoconductor drum surface. As the media passes between the photoconductor drum and transfer roll, the toner image is transferred to the media.


The media with the embedded toner image goes through the fuser assembly to permanently bond the toner to the media. When it passes between the heat belt and pressure roll of the fuser assembly, the combination of heat and pressure fuses the toner image to the media. The fuser exit roller feeds the media to the paper exit roller and then to the output bin.

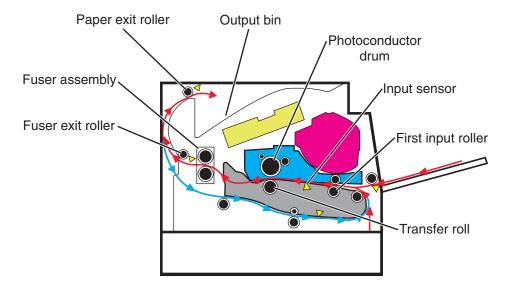

Appendix C: Theory of operation

### **Duplex printing**

After the first side of the media has been printed on and is partially fed out to the output bin, the duplex solenoid activates. This causes the exit roller to reverse its rotation and feed the media, with its trailing edge first, back into the redrive assembly and then to the duplex paper path. The duplex front and rear deliver rollers move the media through the duplex paper path, the diverter, the first input roller, and back to the primary paper path. The same process for printing on the first side of the media repeats, this time for the second side of the media.

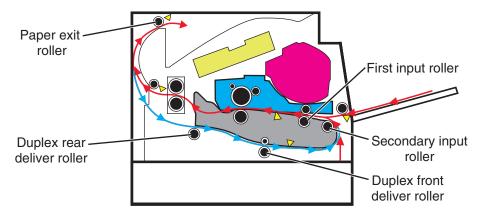

## Media handling components

### Main drive gearbox

The gearbox supplies all mechanical power requirements of the printer. Its motor, through several gears, transfers power to following paths: photoconductor drum, transfer roll, fuser, paper exit, input, duplex, and MPF.

Aside from providing rotational motion to rollers and feeders, the gearbox must also ensure that the print image is not distorted during the whole process. It must also provide easy and effective means to cut or break the transfer of motion when taking the cartridge unit out of the machine, or when clearing jammed sheets through its linkage system.


### Autocompensator mechanism (ACM)

The fundamental function of the ACM is to pick and feed a single sheet of media and accurately deliver it to the downstream paper path. The pick arm is counterbalanced to provide a priming force throughout the entire range of paper levels in the tray. When media is picked, a subsequent sheet is not picked until the previous sheet's trailing edge is detected by the trailing edge sensor. Once the trailing edge of the media is detected, and the minimum interpage gap is satisfied, the next sheet will be picked.


## **Key components**

#### **Sensors**

### MS310/MS410 sensors

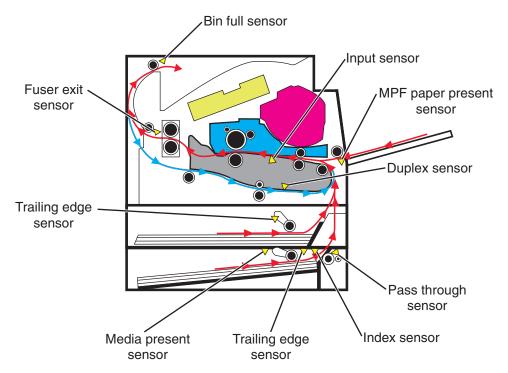

### MS510/MS610 sensors

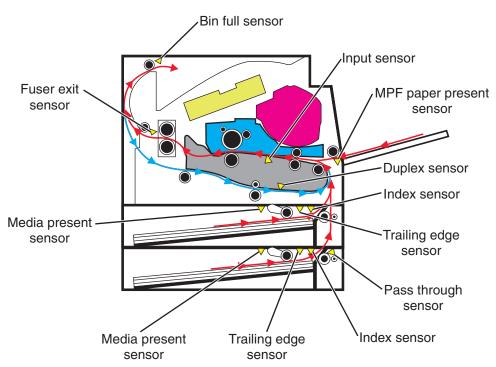

Appendix C: Theory of operation

#### Trailing edge sensor

Detects the media's trailing edge as it passes the pick tires. Among other capabilities, this sensor can be used to determine the paper size sensor and the media stack height.

#### MPF sensor

Detects the presence of media in the MPF tray.

#### Media present sensor

Detects the presence of media in the tray.

#### Tray present sensor

Detects the presence of the tray in the printer.

#### Bin full sensor

Detects whether the standard bin is full by moving the actuator up and down.

#### **Toner density sensor**

Detects a pre-placed toner patch and image on the photoconductor (drum) and outputs pulses when the central line of the patch image aligns with the central line of the detector. The sensor outputs pulses at the timing the patch image passes the sensor. Therefore, observing changes of intervals at which pulses are output leads to toner density detection.

#### Pass through sensor (option tray)

Detects when the media from the option tray passes. This will trigger the pick roller to pick the next media.

### **Capactive Toner Level Sensor (CTLS)**

Detects the amount of toner in the imaging unit. If the toner level is low, the cartridge auger motor is triggered to add toner from the toner cartridge to the imaging unit.

#### Front door sensor

Is a safety switch that cuts off a 5 V DC supply from the controller board to the LSU to prevent the laser from activating when the front door is opened.

### Other key components

#### **Cooling fan**

Discharges air from the printer to prevent excessive temperature increase.


#### **Power supply**

The power supply has two main sections: the HVPS and LVPS. The HVPS card assembly generates AC power and feeds it to the developer roll, the transfer roll assembly and the charge roll assembly. The LVPS card assembly generates low voltages: 5 V DC for logic circuits, 5 V DC for laser diodes and 24 V DC for cooling fans.


#### **Controller board**

Controls the printing operation based on the communication with the RIP controller and optional peripherals. It also controls the fuser, toner dispensing, sensor switch feedback, drive motors, clutches and solenoids

#### MS310/MS410 rollers

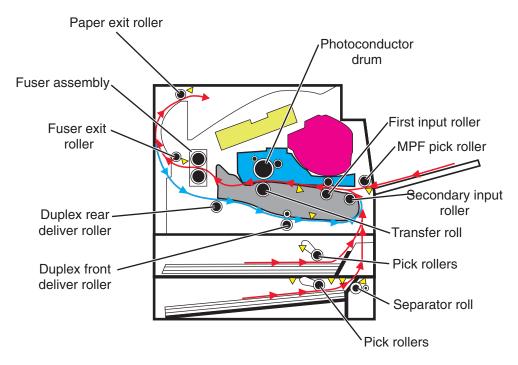

#### MS510/MS610 rollers

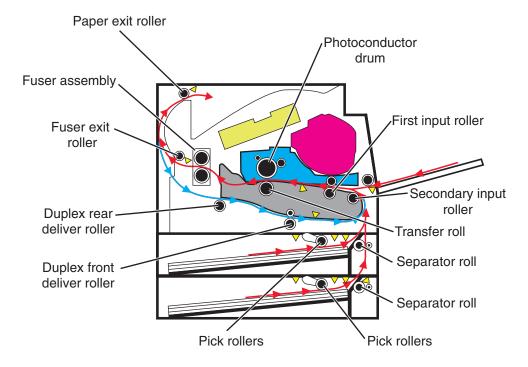

Appendix C: Theory of operation

## **Electrophotographic process (EP process)**

#### **Printhead**


The printhead scans the photo conductor drum surface with a laser beam. It consists of the following components:

- Laser diode (LD) card assembly
- Oscillator
- Start of scan card assembly

When a laser beam is scanned across the photoconductor drum surface from one end to the other while turning on and off the beam, one line of latent image is created. If the scanning by the laser beam is repeated while rotating the drum, a two-dimensional image is created. The resolution in the scanning direction (from right to left) is determined by the rotational speed of the printhead motor, depending on how quickly the laser is adjusted. The resolution in the process direction (from top to bottom) is determined by the rotational speed of the printhead motor. The higher the scanning speed becomes, the sooner the scanning of the next row can be started.


### Step 1: Charge

During the charge step, voltage is sent from the HVPS to the charge roll beside the photoconductor. The charge roll applies a uniform negative charge over the entire surface of the photoconductor to prepare it for the laser beam.

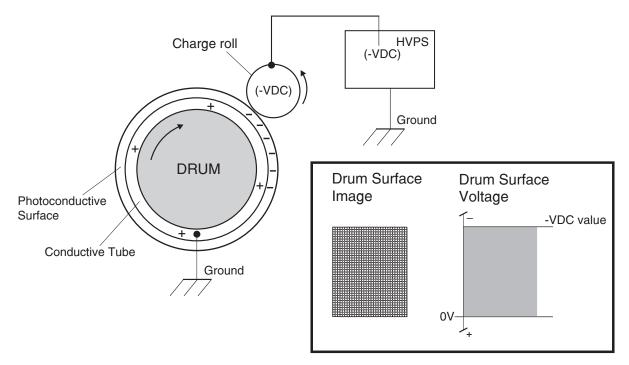

### Step 2: Expose


The laser fires a focused beam of light at the surface of the photoconductor and writes an invisible image, called a latent image. The laser beam only discharges the surface where the beam hits the photoconductor. This creates a difference in charge potential between the exposed area and the rest of the photoconductor surface.

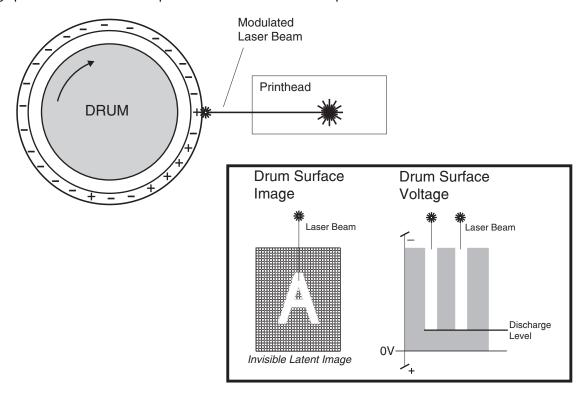

### Step 3: Develop


Once the laser exposes the photoconductor, the HVPS sends charge to the developer roll. Because of the charge difference between the toner on the developer roller and the electrostatic image created by the laser, the toner is attracted to areas of the photoconductor surface exposed by the laser.

This process would be similar to using glue to write on a can and then rolling it over glitter. The glitter sticks to the glue but not to the rest of the can.

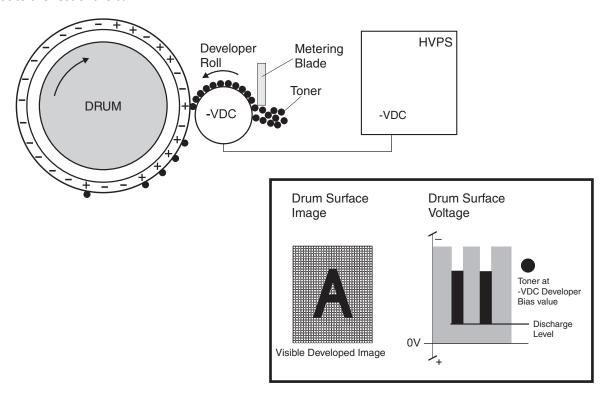

### **Step 4: Transfer**


As the paper travels between the transfer roll and the photoconductor, the transfer roll applies a positive charge to the back of the media. This positive charge attracts the negatively charged toner image from the photoconductor to the top surface of the media.

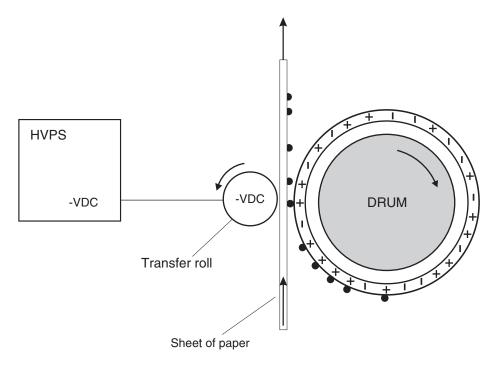

Appendix C: Theory of operation

## **Step 5: Clean**

The cleaning blade removes any toner that remains on the photoconductor after the transfer process. The toner removed is collected inside the imaging unit.

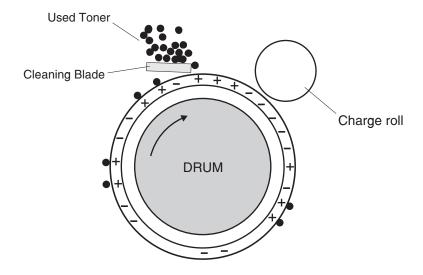

#### **Appendix D: Acronyms**

#### **Acronyms**

ASIC Application-Specific Integrated Circuit

BLDC Brushless DC Motor
BOR Black Only Retract

C Cyan

CCD Charge Coupled Device
CCP Carbonless Copy Paper
CRC Cyclic Redundancy Check

CSU Customer Setup

CTLS Capacitance Toner Level Sensing
DIMM Dual Inline Memory Module

DRAM Dynamic Random Access Memory

EDO Enhanced Data Out

EP Electrophotographic Process

EPROM Erasable Programmable Read-Only Memory

ESD Electrostatic Discharge FRU Field Replaceable Unit

GB Gigabyte

HCF High-Capacity Feeder
HCIT High-Capacity Input Tray

HCOF High-Capacity Output Finisher
HVPS High Voltage Power Supply

ITU Image Transfer Unit

K Black

LCD Liquid Crystal Display

LDAP Lightweight Directory Access Protocol

LED Light-Emitting Diode

LVPS Low Voltage Power Supply

M Magenta
MB Megabyte

MFP Multi-Function Printer
MPF Multipurpose Feeder

MROM Masked Read Only Memory

Appendix D: Acronyms

MS Microswitch

NVM Nonvolatile Memory

NVRAM Nonvolatile Random Access Memory

OEM Original Equipment Manufacturer

OPT Optical Sensor

PC Photoconductor

pel, pixel Picture element

POR Power-On Reset

POST Power-On Self Test

PSD Position Sensing Device

PWM Pulse Width Modulation
RIP Raster Imaging Processor

ROM Read Only Memory

SDRAM Synchronous Dual Random Access Memory

SIMM Single Inline Memory Module
SRAM Static Random Access Memory

TPS Toner Patch Sensing
UPR Used Parts Return

V ac Volts alternating current

V dc Volts direct current

VTB Vacuum Transport Belt

Y Yellow

# Index

Symbols	PPDS emulation 121
[x]-page jam, clear manual feeder. [250.xx] 82	prt quality pgs 120
[x]-page jam, clear standard bin. [20y.xx] 66	reduced curl 121
[x]-page jam, open front door. [20y.xx] <b>61</b>	restore base 120
[x]-page jam, open rear door. [20y.xx] 69	restore STD NET 120
[x]-page jam, remove tray 1 to clear duplex.	set network card speed 123
[23y.xx] <b>71</b>	USB pnp 123
[x]-page jam, remove tray [x]. [24y.xx] 79	USB speed 123
[N] page jamy remove any [N], [= 17mm]	wipe all settings 122
Α	control panel, printer
	buttons 32
ACM, theory 245	lights <b>32</b>
acronyms 253	
available internal options 241	D
avoiding paper iams 57	data security notice 28
avoiding paper jams 57	diagnostics menu
n	accessing 117
В	auto dark adj 119
blank pages 50	defaults 118
	edge to edge 118
C	instruction sheet 117
card stock	parallel strobe adjustment 119
tips 24	print event log 119
Cartridge low [88.xx] 42	print test, tray 1 continuous duplex 118
Cartridge nearly low [88.xy] 42	print test, tray 1 continuous simplex 118
Cartridge very low [88.xy] 42	print test, tray 2 continuous duplex 119
Cartridge, imaging unit mismatch [41.xy] 42	print test, tray 2 continuous simplex 118
Change [paper source] to [custom type name], load	prt quality pgs 118
[orientation] 44	
cleaning	E
exterior of the printer 222	electrical specifications 237
cleaning the printer 222	electrophotographic process, theory <b>249</b>
Complex page, some data may not have printed	electrostatic-sensitive parts 127
[39] 48	envelopes .
configuration menu	tips on using 24
A5 loading 120	environment specifications 239
accessing 119	EP process, theory 249
auto CR after LF 121	error codes
auto LF after CR 122	0-99.99 <mark>84</mark>
demo mode 121	1xx error messages 90
energy conserve 122	200 paper jam messages 59
font density 122	201 paper jam messages 67
font sharpening 122	202 paper jam messages 68
hex trace 120	23y.xx paper jam messages 71
instruction sheet 120	24y.xx paper jam messages 74
Mac binary PS 123	25y.xx paper jam messages 82
parallel mode 2 123	3xx error messages 105
parallel protocol 122	9xx errror messages 96

ESD-sensitive parts 127 exterior of the printer	mpf, theory 243
cleaning 222	N
	Network [x] software error [54] 46
Н	Non-Lexmark cartridge, see User's Guide [33.xy] 42
horizontal bottom contact connector 133	Non-Lexmark imaging unit, see User's Guide [33.xy] 44
horizontal sliding contact connector 139	notices 237
horizontal top contact connector 130	
	0
1	operating clearances 238
Imaging unit low [84.xy] 43	operator panel
Imaging unit nearly low [84.xy] 43	RIP board, removing with 128
Imaging unit very low [84.xy] 44	options
Incorrect paper size, open [paper source] [34] 45	media handling options 241
input tray, theory 243	
inspection guide 221	P
Insufficient memory to collate job [37] 47	paper
Insufficient memory to support Resource Save feature	characteristics <b>21</b>
[35] 47	letterhead 23
invalid code, fixing 124	preprinted forms 23
invalid engine mode 124	recycled 23
	selecting 22
J	storing 23
jams	unacceptable 22
accessing jam areas 58	paper jams
avoiding 57	accessing jam areas 58
jams, clearing	avoiding 57
behind front door 61	light sequences 40
behind rear door 69	paper jams, clearing
in duplex area 71	behind front door 61 behind rear door 69
in multipurpose feeder 82 in standard bin 66	
in Tray 1 79	in duplex area <b>71</b> in multipurpose feeder <b>82</b>
in Tray 2 79	in standard bin 66
111 11dy 2 73	in Tray 1 79
I	in Tray 2 <b>79</b>
labala manan	paper messages
labels, paper tips on using 25	[x]-page jam, remove tray 1 to clear duplex.
laser notices 11	[23y.xx] <b>71</b>
Load [paper source] with [custom type string] 45	paper sizes
locations	supported by the printer 26
front view 219	paper types
rear view 220	duplex support 27
low insertion force (LIF) connector 142	supported by printer 27
lubrication	where to load 27
guidelines 221	parts catalog legend 224
-	ports 220
M	print quality
main drive gearbox, theory 245	initial check 48
Memory full [38] 47	print quality troubleshooting
	blank pages 50

gray background on prints 49 repeating defects 51	Too many trays attached [58] 48
shadow images appear on prints 52	R
skewed print 53	recovery mode, accessing 124
solid black pages 51	recycled paper
streaked vertical lines appear on prints 54	using 23
toner rubs off 55	Reinstall missing or unresponsive cartridge [31.xy] 43
toner specks appear on prints 56	Reinstall missing or unresponsive cartridge [51.xy] 45
printer control panel	[31.xy] 44
buttons 32	removal procedures
lights 32	tips 144
printer messages	removals
[x]-page jam, clear manual feeder. [250.xx] 82	ACM assembly 201
[x]-page jam, clear standard bin. [20y.xx] 66	ACM assembly, option tray 216
[x]-page jam, open front door. [20y.xx] 61	ACM clutch 153
[x]-page jam, open rear door. [20y.xx] 69	bail 181
[x]-page jam, remove tray [x]. [24y.xx] 79	bezel 173
Cartridge low [88.xx] 42	cartridge gearbox 158
Cartridge nearly low [88.xy] 42	cartridge gearbox 136
Cartridge very low [88.xy] 42	control panel assembly 174
Cartridge, imaging unit mismatch [41.xy] 42	controller board 162
Change [paper source] to [custom type name], load	cooling fan 161
[orientation] 44	cooling fan duct 161
Complex page, some data may not have printed	duplex 192
[39] <b>48</b>	duplex gear assembly 158
Imaging unit low [84.xy] 43	duplex sensor 193
Imaging unit nearly low [84.xy] 43	dust cover 206
Imaging unit very low [84.xy] 44	front access cover 185
Incorrect paper size, open [paper source] [34] 45	front access sensor 185
Insufficient memory to collate job [37] 47	front door 182
Insufficient memory to support Resource Save feature	front input guide 186
[35] <b>47</b>	fuser 210
Load [paper source] with [custom type string] 45	input sensor 193
Memory full [38] 47	jam access cover 181
Network [x] software error [54] 46	laser scanning unit 212
Non-Lexmark cartridge, see User's Guide [33.xy] 42	left cover 144
Non-Lexmark imaging unit, see User's Guide	left front mount 166
[33.xy] <b>44</b>	main drive gearbox 145
Reinstall missing or unresponsive cartridge [31.xy] 43	MPF assembly 177
Reinstall missing or unresponsive imaging unit	MPF gearbox 149
[31.xy] 44	MPF pick tire 180
Remove paper from standard output bin 46	MPF pick tire cover 180
Replace cartridge, 0 estimated pages remain	MPF sensor 186
[88.xy] 42	MPF solenoid 147
Replace cartridge, printer region mismatch [42.xy] 43	nameplate 174
Replace imaging unit, 0 estimated pages remain	narrow media/bin full sensor 207
[84.xy] 44	pick roller 213
Replace unsupported cartridge [32.xy] 43	power supply 190
Replace unsupported imaging unit [32.xy] 44	power supply shield 191
Standard network software error [54] 46	rear cover 206
Standard Parallel Port Disabled [56] 46	rear door 206
Standard USB port disabled [56] 47	redrive assembly 209

reverse solenoid 152 right cover 160 right front mount 167 separator pad 188 separator roll assembly 214 toner cartridge smart chip contact 164 toner density sensor 195 top cover 211 trailing edge sensor 196 transfer roll 169	electrophotographic process 249 input tray 243 main drive gearbox 245 mpf 243 other key components 247 POR sequence 243 printer control 243 sensors 246 simplex printing 244 tips
UICC 176 Remove paper from standard output bin 46 Replace cartridge, 0 estimated pages remain [88.xy] 42 Replace cartridge, printer region mismatch [42.xy] 43 Replace imaging unit, 0 estimated pages remain [84.xy] 44 Replace unsupported cartridge [32.xy] 43 Replace unsupported imaging unit [32.xy] 44	card stock 24 on using envelopes 24 on using labels 25 transparencies 25 tips on using envelopes 24 Too many trays attached [58] 48 tools, required 28 transparencies
RIP board operator panel, removing with 128	tips 25 troubleshooting initial check 31
safety information 14, 31 selecting paper 22 service checks troubleshooting network service check 112 service engineer (SE) menu 124 accessing 124 service manual conventions 19 service menus, navigating 117 shadow images appear on prints 52 solid black pages 51 specifications acoustics 238 electrical 237 environment 239 operating clearances 238	troubleshooting, print quality blank pages 50 gray background on prints 49 repeating defects 51 shadow images appear on prints 52 skewed print 53 solid black pages 51 streaked vertical lines appear on prints 54 toner rubs off 55 toner specks appear on prints 56 troubleshooting, service checks network service check 112  U unacceptable paper 22
Standard network software error [54] 46 Standard Parallel Port Disabled [56] 46 Standard USB port disabled [56] 47 storing paper 23 supported paper sizes 26 supported paper types and weights 27 symptoms printer 108	<ul> <li>V</li> <li>vertical mount contact connector 136</li> <li>Z</li> <li>zero insertion force (ZIF) connectors 129</li> </ul>
T theory of operation ACM 245 duplex printing 245	

# Part number index

P/N	Part name	Page
40X0269	Power cord, 2.5 m (straight)—USA, Canada	235
40X0270	Power cord, 2.5 m (straight)—Japan	235
40X0271	Power cord, 2.5 m (straight)—United Kingdom	235
40X0273	Power cord, 2.5 m (straight)—Traditional Italy	235
40X0275	Power cord, 2.5 m (straight)—Israel	235
40X0288	Power cord, 2.5 m (straight)—Argentina	235
40X0301	Power cord, 2.5 m (straight)—Australia	235
40X0303	Power cord, 2.5 m (straight)—China	235
40X1772	Power cord, 2.5 m (straight)—Switzerland	235
40X1773	Power cord, 2.5 m (straight)—South Africa	235
40X1774	Power cord, 2.5 m (straight)—Denmark	235
40X1791	Power cord, 2.5 m (straight)—Taiwan	235
40X1792	Power cord, 2.5 m (straight)—Korea	235
40X3141	Power cord, 2.5 m (straight)—Europe and others	235
40X4596	Power cord, 2.5 m (straight)—Brazil	235
40X7795	Power supply, 100 V/110 V	230
40X7796	Power supply, 220 V	230
40X8023	Fuser, 110 V	228
40X8024	Fuser, 220 V	228
40X8025	Controller board (MS310d)	228
40X8026	Controller board (MS310dn)	228
40X8043	Duplex sensor and input sensor	230
40X8046	Toner density sensor	230
40X8047	Trailing edge sensor	230
40X8048	Front door sensor	230
40X8050	Narrow media/bin full sensor	228
40X8051	Nameplate	226
40X8052	Right cover	226
40X8053	Left cover	226
40X8054	Rear door and cover	226
40X8055	Top cover	226
40X8056	Front access cover	226

P/N	Part name	Page
40X8058	Control panel cover and buttons	226
40X8062	Bezel (MS310d)	226
40X8063	Bezel (MS310dn)	226
40X8082	Laser scanning unit	228
40X8083	Cartridge gearbox	232
40X8085	Main drive gearbox	232
40X8086	550-sheet tray insert	234
40X8260	ACM assembly	232
40X8262	ACM assembly	234
40X8265	ACM clutch	232
40X8266	Toner cartridge smart chip contact	230
40X8275	Duplex assembly	232
40X8276	Cooling fan	228
40X8277	Duplex gear assembly	232
40X8278	MPF gearbox	232
40X8279	Jam access cover	232
40X8280	Front input guide	228
40X8286	550-sheet tray	234
40X8287	250-sheet tray	234
40X8290	Control panel assembly	228
40X8295	MPF pick roller and Separator pad	232
40X8296	Pick tire	232
40X8298	Redrive assembly	232
40X8299	Front mounts	232
40X8300	MPF solenoid	228
40X8301	Reverse solenoid	228
40X8302	MPF assembly (50 sheets)	226
40X8303	250-sheet tray	226
40X8305	250-sheet tray insert	234
40X8343	Fuser, 100 V	228
40X8393	Transfer roll	232
40X8394	Screw kit	232
40x8443	Pick roller assembly	234
40X8444	Separator roll assembly	234

P/N	Part name	Page
40X8520	Dust cover (250-sheet tray)	226
40X8520	Dust cover, 250-sheet tray	234
40X8521	Dust cover, 550-sheet tray	234
40X9148	Cartridge plunger	226

### Part name index

P/N	Part name	Page
40X8303	250-sheet tray	226
40X8287	250-sheet tray	234
40X8305	250-sheet tray insert	234
40X8286	550-sheet tray	234
40X8086	550-sheet tray insert	234
40X8260	ACM assembly	232
40X8262	ACM assembly	234
40X8265	ACM clutch	232
40X8062	Bezel (MS310d)	226
40X8063	Bezel (MS310dn)	226
40X8083	Cartridge gearbox	232
40X9148	Cartridge plunger	226
40X8290	Control panel assembly	228
40X8058	Control panel cover and buttons	226
40X8025	Controller board (MS310d)	228
40X8026	Controller board (MS310dn)	228
40X8276	Cooling fan	228
40X8275	Duplex assembly	232
40X8277	Duplex gear assembly	232
40X8043	Duplex sensor and input sensor	230
40X8520	Dust cover (250-sheet tray)	226
40X8520	Dust cover, 250-sheet tray	234
40X8521	Dust cover, 550-sheet tray	234
40X8056	Front access cover	226
40X8048	Front door sensor	230
40X8280	Front input guide	228
40X8299	Front mounts	232
40X8343	Fuser, 100 V	228
40X8023	Fuser, 110 V	228
40X8024	Fuser, 220 V	228
40X8279	Jam access cover	232
40X8082	Laser scanning unit	228

P/N	Part name	Page
40X8053	Left cover	226
40X8085	Main drive gearbox	232
40X8302	MPF assembly (50 sheets)	226
40X8278	MPF gearbox	232
40X8295	MPF pick roller and Separator pad	232
40X8300	MPF solenoid	228
40X8051	Nameplate	226
40X8050	Narrow media/bin full sensor	228
40x8443	Pick roller assembly	234
40X8296	Pick tire	232
40X0288	Power cord, 2.5 m (straight)—Argentina	235
40X0301	Power cord, 2.5 m (straight)—Australia	235
40X4596	Power cord, 2.5 m (straight)—Brazil	235
40X0303	Power cord, 2.5 m (straight)—China	235
40X1774	Power cord, 2.5 m (straight)—Denmark	235
40X3141	Power cord, 2.5 m (straight)—Europe and others	235
40X0275	Power cord, 2.5 m (straight)—Israel	235
40X0270	Power cord, 2.5 m (straight)—Japan	235
40X1792	Power cord, 2.5 m (straight)—Korea	235
40X1773	Power cord, 2.5 m (straight)—South Africa	235
40X1772	Power cord, 2.5 m (straight)—Switzerland	235
40X1791	Power cord, 2.5 m (straight)—Taiwan	235
40X0273	Power cord, 2.5 m (straight)—Traditional Italy	235
40X0271	Power cord, 2.5 m (straight)—United Kingdom	235
40X0269	Power cord, 2.5 m (straight)—USA, Canada	235
40X7795	Power supply, 100 V/110 V	230
40X7796	Power supply, 220 V	230
40X8054	Rear door and cover	226
40X8298	Redrive assembly	232
40X8301	Reverse solenoid	228
40X8052	Right cover	226
40X8394	Screw kit	232
40X8444	Separator roll assembly	234
40X8266	Toner cartridge smart chip contact	230

Part name	Page
Toner density sensor	230
Top cover	226
Trailing edge sensor	230
Transfer roll	232
	Trailing edge sensor

MS310d/dn MS410d/dn MS510dn **OPERATOR PANEL** MS610dn WIRING DIAGRAM TO FUSER ASSEMBLY TO SYSTEM BOARD GROUND MTG1 1 PCN1 JWL1 WIRELESS OPTION POWER SUPPLY JUSBD1 USB MALE PI TONER CARTRIDGE MOTOR J1 ETHERNET SYSTEM BOARD ... PARALLEL PORT BATTERY MPF SENSOR OPTIONS DLE DIMM SOCKET TO OPERATOR PANEL GROUND INPUT SENSOR TRANSFER ROLL SPRING DUPLEX SENSOR IMAGING UNIT CONTACTS(OPC&CHARGE) CONNECTOR LEGEND: - CONNECTOR - ZIF CONNECTOR CONNECTOR FOR MS310/MS410 COMPONENTS - CONNECTOR FOR MS510/MS610 COMPONENTS - USB CONNECTOR FOR MS610DN PINS - NOT IN USE